

Meet the Smart Cart.

Now, you can simply focus on centering the grain on the truck,
the grain cart with auto-unload technology does the rest.

Auto-Unload - Simple Operation!

1. Select the Auto Unload key
2. Engage PTO & Hydraulics, raise RPMs
3. Using the ID key, select your pre-entered weight (or specific truck) to unload, and press the Enter key, the cart will automatically begin unloading

- Upon nearing the pre-programmed weight, the cart's flow door will begin to close. The weight will then be auto-logged into the scale monitor's memory.

* Pre-load up to 150 different truck IDs using the included software and your computer.



Flow Door
Automatically Closes



Auto-Unload Technology

With many grain carts exceeding the load capacity of grain trucks, the Auto-Unload technology ensures the exact amount of grain is unloaded into each truck, every time, automatically. See your nearest Brent or Unverferth dealer today or visit us online at unverferth.com to learn more about the 520 scale.