



Header Transport

Stalk Stomper Compatibility



Compatible Stompers

- Compatible
 - Mounted under the corn head
 - Models with Quick-disconnect
- **NOT** Compatible
 - Stompers mounted on the back bar of the corn head
 - Need to remove the stompers in order to accommodate
 - Models with additional framework added to the back of the corn head





Compatible Stompers

- Mounting of stompers



Mounted underneath



Quick Disconnect