

FREQUENTLY ASKED QUESTIONS

Q My electric tarp won't open or move?

A Have we turned the electric tarp receiver on. Press and hold both the large buttons at the top of the receiver for 3 seconds to turn it on.

Q My joystick doesn't work or power on.

A Make sure you have a common power and ground. Also check to make sure you are using all the appropriate harness to get power to the joystick.

Q My joystick isn't operating or moving at all.

A Have you checked the hydraulic flow to the SCV the has the joystick. It should be set to 4-6 GPM.

Q Why does my PTO cutout clutch keep cutting out?

A We need to make sure you are operating your PTO at 1000RPM PTO speed. Any slower than that it can cause damage to the driveline. Also, make sure we are controlling the flow of grain with the flow door and not the throttle of the tractor.

Q My scales are reading the wrong weight.

A Have we calibrated the scale yet. We put in a good starting calibration number, but it needs to be adjusted when in the field.