

FREQUENTLY ASKED QUESTIONS

Q Why is my toolbar is not running level?

A Verify the toolbar leveled when the unit is in the ground and follow the leveling procedures as described in the manual.

Q Why is my boost pump not running?

A The boost pump will only run when it is needed. The RCM measures pressure and temperature coming into the cooler and determines if vapor is present, then it will turn the pump on.

Q How to correct anhydrous leaking out the cooler vapor tubes?

A Check to make sure all the bleeders are closed, Bleed the system down, and check plumbing for leaks. Next try rebuilding the cooler with a seal kit and inspect the internals for rusting/pitting if it is an old cooler.

Q I am under applying, how can I hit rate?

A Check correct orifice sizing on the cooling line to the cooler, then check tank pressure. Verify configuration of the unit and weather as these two combinations affect rate output.

Q How do I know my flow meter calibration is correct?

A Read the tag on flow meter for lbs of N and make sure the rate controller shows the correct number. Also, verify the rate is set to per 10lbs of N.