

DOUBLE-AUGER GRAIN CARTS

MODEL 1620

Serial Number B46830100 & Higher

Part No. 299048

Unverferth 1620 — Introduction

Foreword




This symbol identifies important safety messages. When you see it, read the message that follow and be alert to the possibility of personal injury.

Remember, safety instructions stated in this manual are for your protection. Read them carefully and follow them closely when working around or using this machine.

Read and study this manual completely before attempting to operate this implement. Take this manual to the field for handy reference when operating, adjusting, or servicing your machine.

When referenced, "Right-Hand" (RH) and "Left-Hand" (LH) side of the machine are determined by standing behind the machine and facing in the direction of travel.

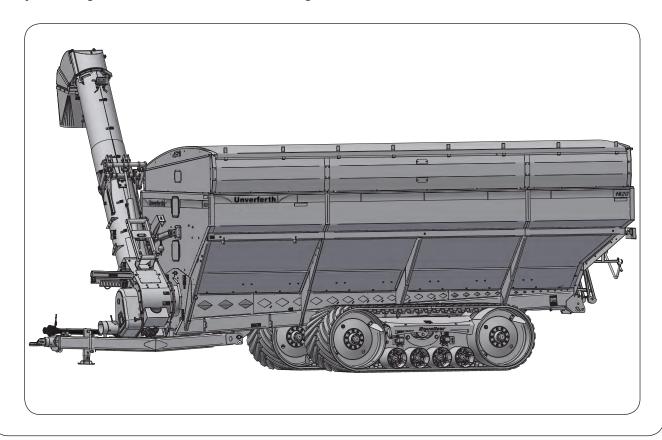

Unverferth 1620 — Introduction

Product Information


When ordering parts or when requesting further information or assistance, always give the following information:

- Machine name
- Model number
- Serial number

All products manufactured by Unverferth Mfg. Co., Inc. are warranted to be free from material and workmanship defects for one full year from time of consumer delivery. Your local dealer will gladly assist you with any warranty questions.

Please fill out and retain this portion for your records.

Purchase Date	_Model	Serial No
Dealer	City	·
Dealer Contact		Phone

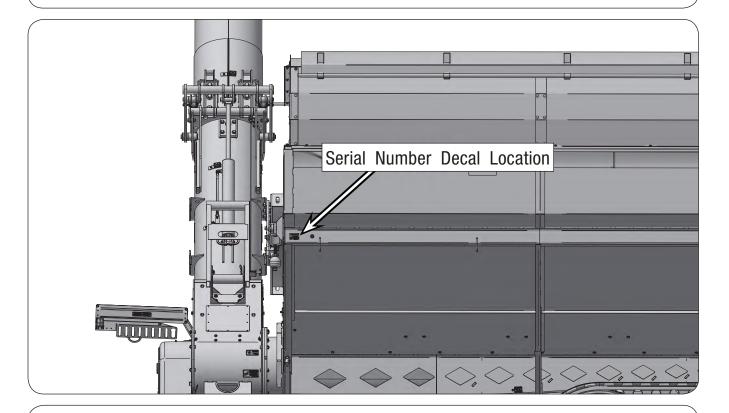

IMPORTANT

• The information, specifications, and illustrations in the manual are based on information available at the time it was written. Due to continuing improvements in the design and manufacture of Unverferth products, all specifications and information contained herein are subject to change without notice.

Section I Safety

General Hazard Information1-	2
Safety Decals1-	3
Following Safety Instructions1-	6
Before Servicing or Operating1-	
During Operation1-	
Before Transporting1-	8
During Transport	
Driveline Safety1-	9
Pressurized Oil 1-	10
Preparing for Emergencies1-	11
Wearing Protective Equipment1-	

Section II Set-Up

Set up checklist	. 2-2
Driveline Installation	. 2-3
Driveline Set-Up	. 2-3
Auger Set Up	. 2-6
7-Pin Connection & Auger Pivot Shipping Block Removal	. 2-6
Auger Spout Cylinder Stop Removal	. 2-7
Auger Transport Positions	. 2-8
Jack and Optional Hydraulic Jack	. 2-9
Jack	
Install Hydraulic Jack (Optional)	. 2-9
Upper Side Ladder Extension	. 2-11
Wheel & Tire Set-Up	. 2-12
Tire Pressure	. 2-12
Wheel Nuts	
SMV Emblem & SIS Decals	. 2-13
Video System (Optional)	. 2-13
Belt Engagement	. 2-14
Operational Check	. 2-15

FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, AND / OR WATER DELIVERY SYSTEM INFORMATION, PLEASE REFER TO THE INDIVIDUAL MANUALS.

Section III Operation

Operating Checklist	3-2
Preparing Tractor	3-3
Preparing Cart	3-4
Hardware	3-4
Pivot Pins	3-4
Hitch	3-4
Rear Drop Hitch (Optional)	3-4
Auger	3-5
Hydraulic System	3-5
Optional Hydraulic Brake System	
Tires/Wheels	
Hitching to Tractor	
Drawbar Connection	3-6
Jack Usage	
Optional Hydraulic Jack Usage	
Transport Chain Connection	
Hydraulic Connections	
Optional Implement Brake Connection	
Electrical Connections	
Towing	
Auger Operation	
PTO-Driven Auger	3-14
Vertical Auger Fold	
Auger Field Rest Position	
Auger Road Transport Position	
Upper Auger Rest Adjustments	
Auger Overload Procedure	
Electric Over Hydraulic Operation (Optional)	
Electric/Hydraulic Connection	3_21
Auger Fold & Spout Operation	
Flow Door Operation	
Auger Fold to Transport	
Cart Loading Sequence	
Vertical & Horizontal Cleanout Door Operation	5-24
Closing Vertical Cleanout Door	2 25
Opening Vertical Cleanout Door	
Horizontal Cleanout Door	
In-Line Tandem	
Optional Implement Brake System for In-Line Tandem	
Ladder Operation	
·	2 20
Side Ladder Operation	
Rear Ladder Operation	
Rear Access Door Operation	3-33
Rear Drop Hitch Operation (Optional)	2.27
Storage to Working Position	
Rear Hitch Connection	
Electrical Connection	
Rear Drop Hitch Adjustment	
Video System (Optional)	
Weather Guard Tarp	
Wireless Receiver and Control Box Location	3-43

Section IV Maintenance

Lubrication - Cart	4-2
PTO Driveshaft Lubrication - Benzi PTO	4-6
PTO Driveshaft Lubrication - GKN Walterscheid PTO	4-7
Hydraulic System	4-8
Purge Hydraulic System	4-8
Manual Override for Optional Electric Over Hydraulic System	4-9
Auger System	
Vertical Auger Height Check	4-12
Vertical Auger Folding Linkage Adjustment	4-14
Vertical Auger Timing	4-15
Horizontal Auger	4-16
Horizontal Auger Driveline Bearings	4-17
Baffle Adjustment	4-18
Horiztontal Cleanout Door Adjustment	4-20
Belt Tightener Adjustment	4-22
V-Belt Alignment	4-24
Split Tapered Bushings	4-25
Horizontal Auger Removal and Replacement	4-26
Driveline Removal	4-32
Gearbox	4-32
Verify Telescoping PTO Shaft Length	4-33
PTO Shaft Length Adjustment	4-35
PTO Shaft & Clutch - Benzi PTO	4-36
PTO Shaft & Clutch - GKN Walterscheid PTO	4-38
Wheel, Hub and Spindle Disassembly and Assembly	4-40
Wheels & Tires	
Wheel Nut Torque Requirements	4-42
Tire Pressure	4-43
Tire Warranty	4-45
Bleeding Procedure for Braking System	4-46
Hydraulic Jack Cylinder Replacement	4-47
Seasonal Storage	4-49
Troubleshooting	4-50
Auger Switch Troubleshooting	4-51
Tarp Troubleshooting Inspection & Maintenance	4-52
Electrical System Diagram	4-53
Electrical Diagram	
Electrical Over Hydraulic (EOH) System Schematic	4-63
Optional Electric Over Hydraulic Valve Electric Schematic 5 Spool	
Electrical System Schematic - Optional Wireless Electric Tarp	
Braking System Schematic	4-66
Torque Chart - Hardware Grade 5	4-67
Torque Chart - Hardware Grade 8	
Hydraulic Fittings - Torque and Installation	4-69

FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, AND / OR WATER DELIVERY SYSTEM INFORMATION, PLEASE REFER TO THE INDIVIDUAL MANUALS.

Section V Parts

Please visit www.unverferth.com/parts/ for the most current parts	_
Decals	
Touch-Up Paint	
Front End Components	
Side Ladder Components	
Rear Ladder Components	
Rear Access Door Components	
Hopper Cross Brace & Cleanout Door Components	
Sideboards	
Tandem Axle Components	
Tandem Hub Components	
Tandem Wheels & Tires	
Tandem Grease Bank Assembly	
Brake Components (Optional)	
Track Axle Components	
Track Panel Kit Components	
Hopper Flow Door Components	
Front and Rear Flow Door Components	
Flow Door Indicator Assembly	
Rear Runner Brace Components	
Vertical Auger Flighting Components	
Horizontal Auger Components	
Auger Fold Linkage Components	
Downspout Components	
Rotating Spout Components	
Lower Auger Cleanout Door, Covers & Rest Components	
Lower Auger Shields, Pulleys, Bearings, and Belt Components	
Lower Auger Idler Assembly Components	
Lower Auger Retainer Assembly Components	
Cut Out Clutch PTO Assembly - Benzi	
Cut Out Clutch Assembly - Benzi	
Cut Out Clutch PTO Assembly - Walterscheid	
Cut Out Clutch Assembly - Walterscheid	
Gearbox Components	
EOH Valve Assembly Components - Optional	
EOH Valve Functions and Wire Locations - Optional	
EOH Tractor Circuit Hydraulic Components - Optional	
EOH Spout Tilt Components	
Auger Pivot Hydraulic Components	
Auger Fild Hydraulic Components	
Flow Door Circuit Hydraulic Components	
CylindersHopper Rear Electrical Components	
Electrical Components	
End Caps, Tarp Bows & Mounting Brackets	
Weather Guard Tarp	
Hydraulic Jack - Kit #296288B (Optional)	
Rear Drop Hitch (Optional)	
Video System (Ontional)	5-85

Section I Safety

General Hazard Information	1-2
Safety Decals	1-3
Following Safety Instructions	1-6
Before Servicing or Operating	1-7
During Operation	
Before Transporting	1-8
During Transport	
Driveline Safety	1-9
Pressurized Oil	
Preparing for Emergencies	1-11
Nearing Protective Equipment	1-11

General Hazard Information

No accident-prevention program can be successful without the wholehearted cooperation of the person who is directly responsible for the operation of the equipment.

A large number of accidents can be prevented only by the operator anticipating the result before the accident is caused and doing something about it. No power-driven equipment, whether it be transportation or processing, whether it be on the highway, in the field, or in the industrial plant, can be safer than the person who is at the controls. If accidents are to be prevented--and they can be prevented--it will be done by the operators who accept the full measure of their responsibility.

It is true that the designer, the manufacturer, and the safety engineer can help; and they will help, but their combined efforts can be wiped out by a single careless act of the operator.

It is said that, "the best kind of a safety device is a careful operator." We, at Unverferth Mfg. Co., Inc. ask that you be that kind of operator.



REMEMBER:

THINK SAFETY A CAREFUL OPERATOR IS THE BEST INSURANCE AGAINST AN ACCIDENT!

SIGNAL WORDS



INDICATES AN EXTREMELY HAZARDOUS SITUATION OR ACTION THAT WILL RESULT IN SERIOUS INJURY OR DEATH.

A WARNING

INDICATES A HAZARDOUS SITUATION OR ACTION THAT COULD RESULT IN SERIOUS INJURY OR DEATH.



INDICATES AN UNSAFE SITUATION OR ACTION THAT MAY RESULT IN PERSONAL INJURY.


IMPORTANT

Is used for instruction on operating, adjusting, or servicing a machine.


Safety Decals

A WARNING

• REPLACE LOST, DAMAGED, PAINTED, OR UNREADABLE DECALS IMMEDIATELY. IF PARTS THAT HAVE DECALS ARE REPLACED, ALSO MAKE SURE TO INSTALL NEW DECALS. THESE DECALS INFORM AND REMIND THE OPERATOR WITH OPERATIONAL INFORMATION AND SAFETY MESSAGES.

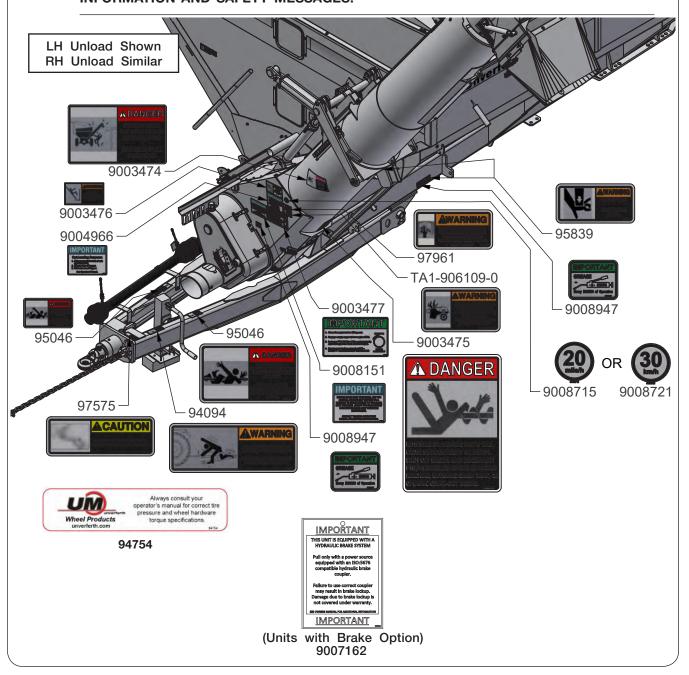


Unverferth 1620 — Safety

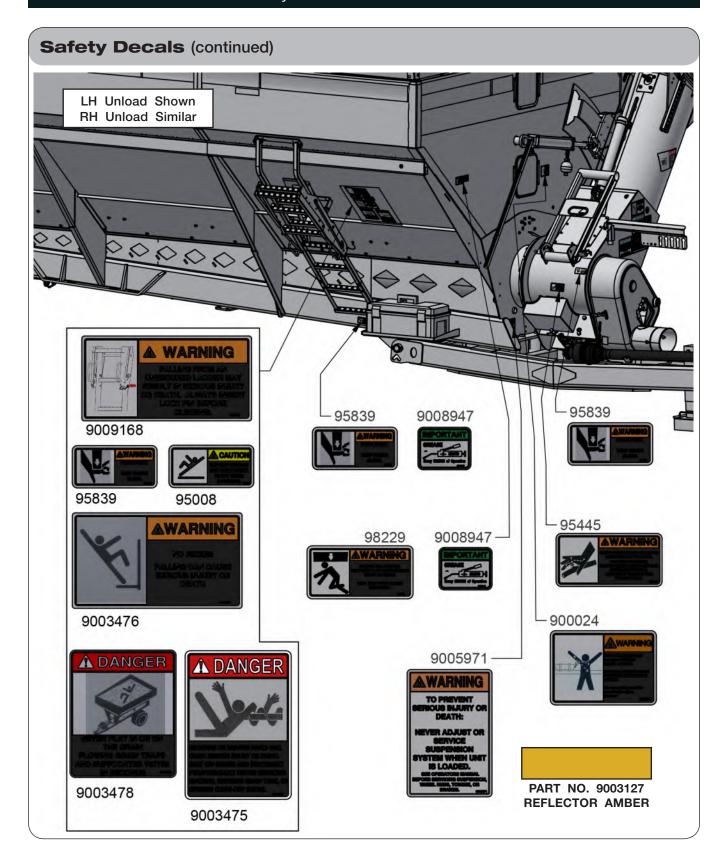

Unverferth 1620 — Safety

Safety Decals (continued)

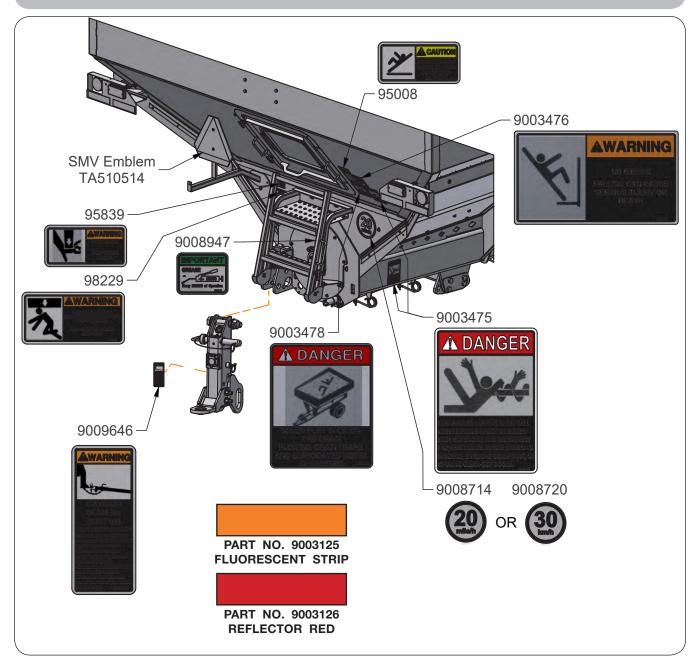

Following Safety Instructions

Read and understand this operator's manual before operating.



- All machinery should be operated only by trained and authorized personnel.
- To prevent machine damage, use only attachments and service parts approved by the manufacturer.
- Always shut tractor engine off and remove key before servicing.



- Avoid personal attire such as loose fitting clothing, shoestrings, drawstrings, pants cuffs, long hair, etc., that may become entangled in moving parts.
- Do not allow anyone to ride on the implement. Make sure everyone is clear before operating machine or towing vehicle.



- Never attempt to operate implement unless you are in the driver's seat.
- Never enter a cart containing grain. Flowing grain traps and suffocates victims in seconds.



 This unit may be equipped with a hydraulic brake system. Pull only with a power source equipped with an ISO:5676 compatible hydraulic brake coupler. Failure to use correct coupler may result in brake lockup. Damage due to brake lockup is not covered under warranty.

Before Servicing or Operating

Avoid working under an implement; however, if it becomes absolutely unavoidable, make sure the implement is safely blocked.



- Ensure that all applicable safety decals are installed and legible.
- When working around the implement, be careful not to be cut by sharp edges.
- To prevent personal injury or death, always ensure that there are people who remain outside the cart to assist the person working inside, and that all safe workplace practices are followed. There is restricted mobility and limited exit paths when working inside the implement.
- Secure drawbar pin with safety lock and lock tractor drawbar in fixed position.
- Explosive separation of a tire and rim can cause serious injury or death. Only properly trained personnel should attempt to service a tire and wheel assembly.
- Verify that all safety shields are in place and properly secured.



- Add sufficient ballast to tractor to maintain steering and braking control at all times. Do not exceed tractor's lift capacity or ballast capacity.
- Do not stand between towing vehicle and implement during hitching.



Always make certain everyone and everything is clear of the machine before beginning operation.

During Operation

- Regulate speed to working conditions. Maintain complete control at all times.
- Never service or lubricate equipment when in operation.
- Keep away from overhead power lines. Electrical shock can cause serious injury or death.



- Use extreme care when operating close to ditches, fences, or on hillsides.
- Do not leave towing vehicle unattended with engine running.

Before Transporting

- Secure transport chain to towing vehicle before transporting. DO NOT transport without chain.
- Check for proper function of all available transport lights. Make sure that all reflectors are clean and in place on machine. Make sure the SMV emblem and SIS decals are visible to approaching traffic.
- Make sure auger is folded and vertical auger assembly is positioned in its narrowest configuration.
- This implement may not be equipped with brakes. Ensure that the towing vehicle has adequate weight and braking capacity to tow this implement.

During Transport

- Comply with all laws governing highway safety when moving machinery.
- Use transport lights as required by all laws to adequately warn operators of other vehicles.
- Regulate speed to road conditions and maintain complete control.
- Maximum transport speed of this implement should never exceed 20 m.p.h. as indicated on the
 machine. Maximum transport speed of any combination of implements must not exceed the lowest specified speed of the implements in combination. Do not exceed 10 m.p.h. during off-highway
 travel.
- Slow down before making sharp turns to avoid tipping. Drive slowly over rough ground and side slopes.
- Do not transport grain cart on roads while loaded.
- It is probable that this implement is taller, wider and longer than the towing vehicle. Become aware
 of and avoid all obstacles and hazards in the travel path of the equipment, such as power lines,
 ditches, etc.

Driveline Safety

Do not allow children near equipment that is running or engaged.



- Do not exceed 1000 r.p.m. PTO speed.
- Disengage the PTO, stop the tractor engine, and remove key from ignition before making inspections, or performing maintenance and repairs.
- Inspect the driveline, quick disconnect, overload shear-bolt limiter or clutch, and shielding often. Repair immediately. Use replacement parts and attaching hardware equivalent to the original equipment. Only alterations described in this manual for overall length adjustment are allowed. Any other alteration is prohibited.
- Avoid excessively long hardware or exposed and protruding parts which can snag and cause entanglement.
- Lubricate the driveline as recommended in the MAINTENANCE section.
- Keep hoses, wiring, ropes, etc. from dangling too close to the driveline.
- Install driveline and shields according to recommended lengths and attaching methods with recommended hardware. The driveline shield should rotate independently a full rotation and telescope freely. The retaining chain must be secured to the implement safety shield.
- Adjust drawbar to height and length recommended in the OPERATION section.
- Use caution when turning to avoid contact between tractor tires and driveline.
- Check the length of the telescoping members to insure the driveline will not bottom out or separate when turning and/or going over rough terrain. Refer to "PTO Shaft Length Adjustment" in MAINTENANCE section.
- Proper extended and collapsed lengths of the telescoping PTO shaft must be verified before first
 operation with each and every tractor. If the extended length of the PTO shaft is insufficient, it may
 become uncoupled during operation and cause serious injury or death from contact with uncontrolled flailing of PTO shaft assembly components. Refer to "PTO Shaft Length Adjustment" in
 MAINTENANCE section.

Pressurized Oil

- Relieve the hydraulic system of all pressure before adjusting or servicing. See hydraulic power unit manual for procedure to relieve pressure.
- High-pressure fluids can penetrate the skin and cause serious injury or death. Leaks
 of high-pressure fluids may not be visible. Use cardboard or wood to detect leaks in
 the hydraulic system. Seek medical treatment immediately if injured by high-pressure
 fluids.



- Accumulators used in this hydraulic system can retain fluid under pressure even after tractor hydraulic valve is placed in FLOAT. See tractor operators manual for procedure to relieve pressure.
- Hydraulic system must be purged of air before operating to prevent serious injury or death.
- Do not bend or strike high-pressure lines. Do not install bent or damaged tubes or hoses.
- Repair all oil leaks. Leaks can cause fires, personal injury, and environmental damage.
- Route hoses and lines carefully to prevent premature failure due to kinking and rubbing against other parts. Make sure that all clamps, guards and shields are installed correctly.
- Check hydraulic hoses and tubes carefully. Replace components as necessary if any of the following conditions are found:
 - End fittings damaged, displaced, or leaking.
 - Outer covering chafed/cut or wire reinforcing exposed.
 - Outer covering ballooning locally.
 - Evidence of kinking or crushing of the flexible part of a hose.

Preparing for Emergencies

• Keep a first aid kit and properly rated fire extinguisher nearby.





Keep emergency numbers for fire, rescue, and poison control personnel near the phone.



Wearing Protective Equipment

Wear clothing and personal protective equipment appropriate for the job.





Wear steel-toed shoes when operating.



Wear hearing protection when exposed to loud noises.



Do not wear additional hearing impairing devices such as radio headphones, etc.



Section II Set-Up

Set Up Checklist2-2Driveline Installation2-3Driveline Set-Up2-3Auger Set Up2-67-Pin Connection & Auger Pivot Shipping Block Removal2-6Auger Spout Cylinder Stop Removal2-7Auger Transport Positions2-8Jack and Optional Hydraulic Jack2-9Jack2-9Install Hydraulic Jack (Optional)2-9Upper Side Ladder Extension2-11Wheel & Tire Set-Up2-12
7-Pin Connection & Auger Pivot Shipping Block Removal 2-6 Auger Spout Cylinder Stop Removal 2-7 Auger Transport Positions 2-8 Jack and Optional Hydraulic Jack 2-9 Jack 2-9 Install Hydraulic Jack (Optional) 2-9 Upper Side Ladder Extension 2-11
7-Pin Connection & Auger Pivot Shipping Block Removal 2-6 Auger Spout Cylinder Stop Removal 2-7 Auger Transport Positions 2-8 Jack and Optional Hydraulic Jack 2-9 Jack 2-9 Install Hydraulic Jack (Optional) 2-9 Upper Side Ladder Extension 2-11
7-Pin Connection & Auger Pivot Shipping Block Removal 2-6 Auger Spout Cylinder Stop Removal 2-7 Auger Transport Positions 2-8 Jack and Optional Hydraulic Jack 2-9 Jack 2-9 Install Hydraulic Jack (Optional) 2-9 Upper Side Ladder Extension 2-11
Auger Spout Cylinder Stop Removal 2-7 Auger Transport Positions 2-8 Jack and Optional Hydraulic Jack 2-9 Jack 2-9 Install Hydraulic Jack (Optional) 2-9 Upper Side Ladder Extension 2-11
Auger Transport Positions
Jack and Optional Hydraulic Jack 2-9 Jack 2-9 Install Hydraulic Jack (Optional) 2-9 Upper Side Ladder Extension 2-11
Jack
Upper Side Ladder Extension2-11
Upper Side Ladder Extension2-11
which a hic actup
Tire Pressure2-12
Wheel Nuts
SMV Emblem & SIS Decals2-13
Video System (Optional)2-13
Video System (Optional)
Operational Check2-15

FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, AND / OR WATER DELIVERY SYSTEM INFORMATION, PLEASE REFER TO THE INDIVIDUAL MANUALS.

Set Up Checklist

er the cart has been completely assembled, use the following checklist and inspect the rt. Check off each item as it is found satisfactory or after proper adjustment is made.
Set or Calibrate tractor PTO control engagement to MINIMUM setting. Refer to tractor operator's manual for setting information.
Remove auger spout cylinder stop.
Remove PTO from shipping brackets, install onto gearbox input shaft and set in PTO holder. Remove PTO shipping brackets.
Move upper ladder extension from shipping to operating position. See "Upper Side Ladder Extension" in this section.
Torque wheel nuts as specified in MAINTENANCE section.
Check tire pressure and inflate tires as needed to specified air pressure. See "Tire Pressure" in MAINTENANCE section. (If applicable)
Ensure optional hydraulic brakes are bled and function properly. See "Brake Bleeding Procedure For Braking System (Optional)" in MAINTENANCE section. (If applicable)
Verify track has been aligned and is properly conditioned. Refer to 50" / 42" Equalizer Track manual (267909) or 36" x 148" Hydraulic Tension Track manual (267997) MAINTENANCE section for alignment information. (If applicable)
Lubricate all grease fittings and check gearbox oil level.
Inspect cleanout door assembly for proper adjustment, refer to "Vertical & Horizontal Clean-Out Door Operation" in the OPERATION section.
Verify all safety decals are correctly located and legible. Replace if damaged.
Verify all reflective decals are correctly located.
Check SMV decal and SIS decals are in place, clean and visible.
Verify transport lights are working properly.
Verify PTO length, see "Verify Telescoping PTO Shaft Length" in MAINTENANCE section.
Align and properly tension belts. See "Belt Tightener Adjustment" and "V-Belt Alignment" in MAIN-TENANCE section.
Ensure screens over horizontal auger are in place and properly secured.
Ensure transport chain on the grain cart is sized according to the weight that is being towed. Refer to "Transport Chain Connection" in OPERATION section for complete transport chain instructions.
Install transport chains and torque hardware to specification. See "Transport Chain Connection" in OPERATION section.
Paint all parts scratched in shipment.
Test run the augers. See "Auger Operation" in OPERATION section.
Check hydraulics for leaks and check hose routing.

Driveline Installation

Driveline Set Up

A DANGER

ENTANGLEMENT WITH THE DRIVELINE WILL CAUSE SERIOUS INJURY OR DEATH.
KEEP ALL GUARDS AND SHIELDS IN GOOD CONDITION AND PROPERLY INSTALLED
AT ALL TIMES. AVOID PERSONAL ATTIRE SUCH AS LOOSE FITTING CLOTHING, SHOE
STRINGS, DRAWSTRINGS, PANTS CUFFS, LONG HAIR, ETC. THAT CAN BECOME ENTANGLED IN A ROTATING DRIVELINE.

A WARNING

- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE IS RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE MACHINE IS SECURELY BLOCKED.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING IMPLEMENT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 30,000 LBS. SPECIFIC LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.
- 1. Remove PTO assembly from the tongue. Remove clamp cone/socket head bolt from torque cut-out clutch.
- 2. Clean and grease the Implement Gearbox splined shaft. Gearbox shaft guard has access doors for installing and removing of driveline.
- 3. Attach PTO onto the gearbox input splined shaft and use the PTO holder as shown below. (Fig. 2-1)




Driveline Install (continued)

Driveline Set Up (continued)

4. Remove the PTO brackets on the tongue, before operating the auger pivot or when connecting the driveline assembly to the tractor. Keep PTO brackets for seasonal storage. Refer to "Seasonal Storage" in MAINTENANCE section. (Fig. 2-2)

IMPORTANT

• PTO assembly and PTO brackets must be removed before operating the auger pivot or when connecting the driveline assembly to the tractor. Failure to remove PTO assembly and PTO brackets will result in damage to the PTO assembly, tongue, auger and tractor.

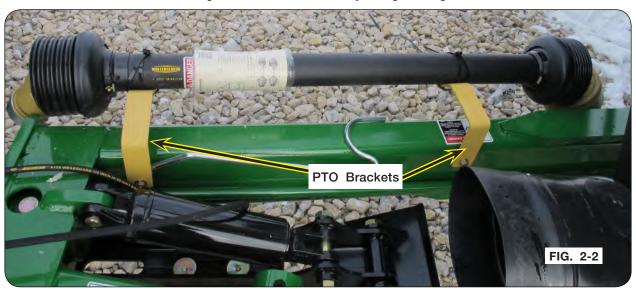


Driveline Install (continued)

Driveline Set Up (continued)


- 5. Engage PTO drive shaft onto implement PTO shaft until retaining groove of implement PTO shaft aligns with clamping cone/socket head bolt hole.
- 6. For Benzi clutch, insert socket head bolt into lock washer, collar threaded hole, and threaded insert, hand tighten. (Figs. 2-3 and 2-4)




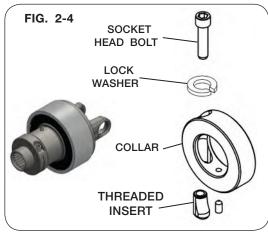

- 7. For GKN Waltersheid clutch, insert clamping cone into threaded hole, hand tighten. (Fig. 2-5)
- 8. Torque clamping cone/socket head bolt to 75 ft.-lb. (Figs. 2-4 and 2-5)

NOTE: See MAINTENANCE section - Driveline Removal - for further instructions.

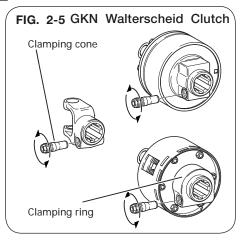

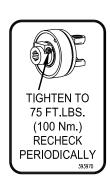

Auger Set Up


A WARNING

- HIGH-PRESSURE FLUIDS CAN PENETRATE THE SKIN AND CAUSE SERIOUS INJURY OR DEATH. LEAKS OF HIGH-PRESSURE FLUIDS MAY NOT BE VISIBLE. USE CARD-BOARD OR WOOD TO DETECT LEAKS IN THE HYDRAULIC SYSTEM. SEEK MEDICAL TREATMENT IMMEDIATELY IF INJURED BY HIGH-PRESSURE FLUIDS.
- RELIEVE THE HYDRAULIC SYSTEM OF ALL PRESSURE BEFORE ADJUSTING OR SERVICING. SEE THE HYDRAULIC POWER UNIT OPERATOR'S MANUAL FOR PROPER PROCEDURES.
- HYDRAULIC SYSTEM MUST BE PURGED OF AIR BEFORE OPERATING TO PREVENT SERIOUS INJURY OR DEATH.
- FALLING OR LOWERING EQUIPMENT CAN CAUSE SERIOUS INJURY OR DEATH. KEEP EVERYONE AWAY FROM EQUIPMENT WHEN SUSPENDED, RAISING, OR LOWERING.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING IMPLEMENT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.

7-Pin Connection & Auger Pivot Slide Shipping Block Removal

- 1. Close the vertical cleanout door.
- 2. Remove the PTO assembly from the tongue. Refer to "Driveline Install" in this section.
- 3. Hitch cart to tractor. Refer to "Hitching to Tractor" in the OPERATION section.
- 4. Park the empty cart on a firm, level surface. Block the machine to keep it from moving. Set the tractor's parking brake.
- 5. Attach the 7-pin connector to tractor. (FIG. 2-6)
- NOTE: Auger hydraulic functions will not operate without power and ground via the 7-pin connector.
- 6. Use tractor SCV to pivot auger up.
- 7. Shut-off the engine and remove the ignition key.
- 8. Remove and discard the wood block from the auger pivot. (FIG. 2-7)
- 9. Restart engine and cycle auger pivot all the way up and down to ensure movement is free.
- Check all hoses and cylinders for signs of leakage. Hoses should not be kinked, twisted or rubbing against sharp edges. Re-route hoses as necessary. Refer to SAFETY section for additional information.



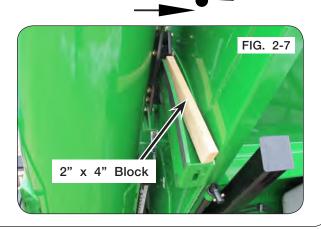

Auger Set Up (continued)

Auger Spout Cylinder Stop Removal

- 1. Extend spout cylinder before removing the shipping stop. (Figs. 2-8 and 2-9)
- 2. Support spout to prevent movement while removing the shipping stop from the spout tilt cylinder. (Figs. 2-8 and 2-9)

IMPORTANT

• Cylinder stop must be removed before operating the auger spout. Failure to remove stop will result in damage to the cylinder and spout.





Auger Set Up (continued)

Auger Transport Positions

WARNING

MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH.
 ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOORS ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.

IMPORTANT

- Upper auger must be in Road Transport Position for public road travel.
- Position vertical auger with discharge hood within hopper width for public road travel.

Auger transport rest bracket can be adjusted in two positions:

Road Transport Position





Field Rest Position






Jack & Optional Hydraulic Jack Set Up

Jack

A WARNING


 UNHITCHING A LOADED CART CAN CAUSE SERIOUS INJURY OR DEATH DUE TO TONGUE RISING OR FALLING. AL-WAYS HAVE A LOADED CART ATTACHED TO A TRACTOR. THE JACK IS INTEND-ED TO SUPPORT AN EMPTY CART ONLY.


Attach jack to left-inside frame using pin and hair pin. (FIG. 2-14) Pivot the jack 90 degrees and reinstall pin for field use.

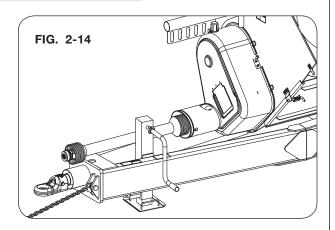

Install Hydraulic Jack (Optional)

- Park the unit on a firm, level surface. Block the machine to keep it from moving. Set the vehicle parking brake, shut off the engine and remove the ignition key and disconnect the PTO shaft from the tractor.
- Assemble hoses (9006068) and fittings to cylinder (9009047) as shown in figure 2-15. The valve needs to be attached to the hose on the base end of the cylinder. Assemble the fittings on the cylinder so they face each other, then store the hydraulic hoses on the hose caddy.

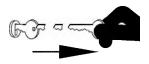

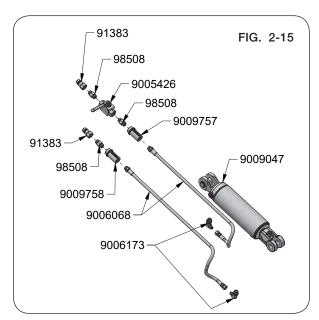

Jack & Optional Hydraulic Jack Set Up (continued)

nal) (continued)

POINT

ck foot 1712B) C x 7" ocknuts

1712B) k foot

ent and y pivot.


he lowcongue, 7" capcknuts


ent and


the lug ble the (91192)

Usage" ditional

draulic ion for

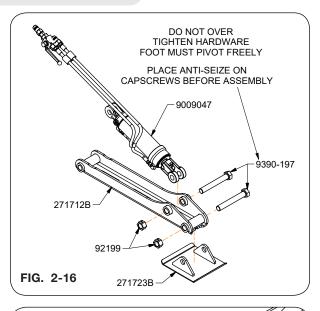

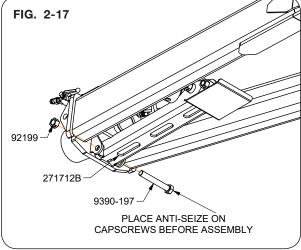

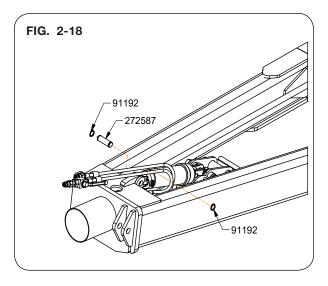

Upper Side Ladder Extension


A WARNING


- FALLING OR LOWERING EQUIPMENT CAN CAUSE SERIOUS INJURY OR DEATH. KEEP EVERYONE AWAY FROM EQUIPMENT WHEN SUSPENDED, RAISING, OR LOWERING.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- DO NOT ALLOW ANYONE TO RIDE ON THE LADDER. MAKE SURE EVERYONE IS CLEAR BEFORE OPERATING MACHINE OR TOWING VEHICLE.
- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE IS RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- NEVER ENTER A CART CONTAINING GRAIN. FLOWING GRAIN TRAPS AND SUFFO-CATES VICTIMS IN SECONDS.


<u>NOTE</u>: Ensure ladder and steps are free from snow/debris before changing ladder positions and climbing.

<u>NOTE</u>: To change ladder assembly positions, refer to "Ladder Operation" in the OPERATION section.

- Park the unit on a firm, level surface. Block the machine to keep it from moving. Set the vehicle parking brake, shut off the engine and remove the ignition key.
- Move the upper ladder extension (289707B) from shipping position by removing the 5/16"-18UNC x 3/4" carriage bolts (9388-024), 5/16" flat washers (9405-064) and 5/16"-18UNC lock nuts (9008441). Keep hardware for next step. (Fig. 2-19)
- 3. Using hardware from step 2, attach upper ladder extension to the higher set of holes to be in operating position. (Fig. 2-19, Fig. 2-20 and 2-21)
- 4. Torque hardware to 17 ft.-lbs.

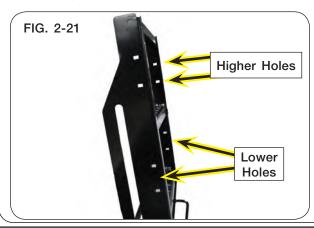

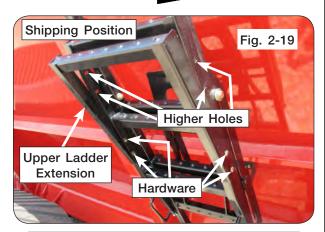

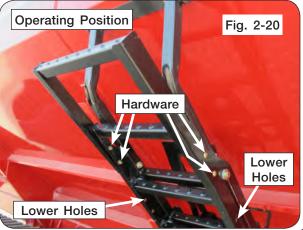

Wheel & Tire Set Up

Tire Pressure

Tire pressure must be verified before first use and adjusted as necessary. Refer to MAINTENANCE section of this manual for information on tire pressure.

Wheel Nuts



- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 30,000 LBS. SPECIFIC LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING IMPLEMENT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE MACHINE IS SECURELY BLOCKED.

A CAUTION

IMPROPERLY TORQUED WHEEL NUTS/BOLTS CAN CAUSE A LOSS OF IMPLEMENT CONTROL AND MACHINE DAMAGE. WHEEL NUTS/BOLTS MUST BE CHECKED REGULARLY.
 SEE TORQUE PAGE IN THE MAINTENANCE SECTION FOR PROPER WHEEL NUT/BOLT SPECIFICATIONS. WARRANTY DOES NOT COVER FAILURES CAUSED BY IMPROPERLY TORQUED WHEEL NUTS/BOLTS.

IMPORTANT

• Install wheels with the tires in the narrowest position. Installing wheels without the proper inset/outset could result in hub or spindle failure. This will cause substantial damage to cart and is not covered by warranty. Inset/outset will vary depending on tire size. Consult dealer for proper inset/offset.


Wheel nuts must be torqued to specification. Refer to MAINTENANCE section for proper wheel nut torque.

The wheel dish will put the tires to the narrowest or widest position.

SMV Emblem & SIS Decals

The reflective surface of the SMV must face rearward. This may require removal of film protecting the reflective surface or removing and reinstallation of the SMV. (Fig. 2-18)

Install the SMV with the wide part at the bottom and reflective surface facing outward. (FIG. 2-22)

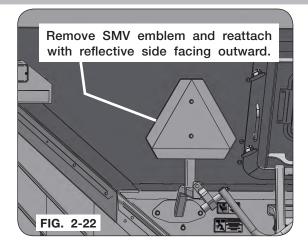

Ensure the front and rear SIS decals are clean and visible after shipping. (FIG. 2-23)

For 20 M.P.H. SIS decals, order 9008715 for the front & 9008714 for the rear.

For 30 K.P.H. SIS decals, order 9008721 for the front & 9008720 for the rear.



Video System (Optional)

The video system includes its own installation instruction sheet. Reference the provided instruction sheet.

Belt Engagement

WARNING

 MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH. ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOORS ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.

The unit is shipped without tension applied to the belts. To engage the tensioner use the belt tensioner handle, located on the front left-hand side of the grain cart, behind the first panel. Verify the belts are correctly aligned and are seated in both sheaves. If belt hangs over edge of sheave, detention idler, adjust and retention idler. (Figs. 2-24 and 2-25)

Rotate the handle downwards to engage tensioner. (Fig. 2-24)

NOTE: See MAINTENANCE section - V-Belt Alignment - for more details.





Operational Check

WARNING

MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH. EN-SURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.

IMPORTANT

Before running the auger pivot, the vertical auger cleanout door must be closed to prevent machine damage.

NOTE: The grain cart must have 12V power (blue wire) on the 7-pin plug. Without 12VDC, the auger fold and spout rotate will not operate.

Perform the clean-out door steps to prepare the cart for operation:

1. Retrieve lynch pin from toolbox for the horizontal clean-out doors.

2. Close clean-out doors. Refer to "Vertical & Horizontal Clean-Out Door Operation" in the OPERATION section.

Once set-up has been completed, run the cart to check for operation and functionality:

- 1. Lights Work, Turn, Brake
- 2. Flow Door
- 3. Flow Door Indicator
- 4. Auger Fold
- 5. Auger Pivot
- 6. Spout Rotate (if applicable)
- 7. Spout Tilt
- 8. Auger Startup & Shut-down
- 9. Brakes (if applicable)
- 10. Tarp
- 11. Video System Camera
- 12. Scale (if applicable)







Section III Operation

Operating Checklist	
Preparing Tractor	
Preparing Cart	3-4
Hardware	3-4
Pivot Pins	3-4
Hitch	3-4
Rear Drop Hitch (Optional)	3-4
Auger	3-5
Hydraulic System	3-5
Optional Hydraulic Brake System	
Tires/Wheels	
Hitching to Tractor	
Drawbar Connection	3-6
Jack Usage	
Optional Hydraulic Jack Usage	
Transport Chain Connection	
Hydraulic Connections	
Optional Implement Brake Connection	
Electrical Connections	
Towing	
· · · · · · · · · · · · · · · · · · ·	٠ ٥-١٥
Auger Operation	2 14
PTO-Driven Auger	
Vertical Auger Fold	
Auger Field Rest Position	
Auger Road Transport Position	
Upper Auger Rest Adjustments	
Auger Overload Procedure	3-20
Electric Over Hydraulic Operation (Optional)	
Electric/Hydraulic Connection	
Auger Fold & Spout Operation	
Flow Door Operation	
Auger Fold to Transport	
Cart Loading Sequence	3-24
Vertical & Horizontal Cleanout Door Operation	
Closing Vertical Cleanout Door	3-25
Opening Vertical Cleanout Door	
Horizontal Cleanout Door	3-27
In-Line Tandem	3-28
Optional Implement Brake System for In-Line Tandem	3-28
Ladder Operation	
Side Ladder Operation	3-29
Rear Ladder Operation	3-33
Rear Access Door Operation	3-35
Rear Drop Hitch Operation (Optional)	
Storage to Working Position	3-37
Rear Hitch Connection	3-38
Electrical Connection	
Rear Drop Hitch Adjustment	
Video System (Optional)	
Weather Guard Tarp	
Wireless Receiver and Control Box Location	
THOUSE HOUSE AND CONTROL DON LOVALIGHT	5
FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, AND / OR WATER DELIVERY SY INFORMATION, PLEASE REFER TO THE INDIVIDUAL MANUALS.	/STEM

Operating Checklist ☐ Read and understand all safety precautions before operating cart. R.V. antifreeze needs to be completely flushed from the Water Delivery System and disposed of properly. Make certain the Water Delivery System only contains water before placing the Water Delivery System in service. (If applicable) ☐ Set or Calibrate tractor PTO control engagement to MINIMUM setting. Refer to tractor operator's manual for setting information. ☐ Joystick power harness must be hooked to the same tractor as the 7-pin connector. Joystick will not function properly unless a common power supply and ground is shared between the joystick power harness and the grain carts 7-pin connector harness. ☐ Torque wheel nuts as specified in MAINTENANCE section. ☐ Verify track has been aligned and is properly conditioned. Refer to 50" / 42" Equalizer Track manual (267909) or 36" x 148" Hydraulic Tension Track manual (267997) MAINTENANCE section for alignment information. (If applicable) ☐ Verify track grease pump reservoir is full, if equipped. Refer to track auto grease pump instruction sheet (282986) for setting information. ☐ Check tire pressure and inflate tires as needed to specified air pressure. See "Tire Pressure" in MAINTENANCE section. (if applicable) ☐ Lubricate all grease fittings and check gearbox oil level. ☐ Inspect cleanout door assembly for proper adjustment, refer to "Vertical & Horizontal Clean-Out Door Operation" in the OPERATION section. ☐ Test operation and functionality of work lights, flow door, flow door indicator, auger fold, auger pivot, spout rotate, spout tilt, tarp, rear access door, and if equipped, rear drop hitch, hydraulic jack stand. scale, joystick, scale remote display, video system, and water delivery system. ☐ Verify all reflective decals are correctly located. Check SMV sign and SIS decals are clearly visible with the cart attached to the tractor. Verify transport lights are working properly. Check and follow all regulations before towing on a road or highway. □ Verify tractor drawbar height and length. See "Preparing Tractor" in this section. □ Verify PTO length, see "Verify Telescoping PTO Shaft Length" in MAINTENANCE section. ☐ Align and properly tension belts. See "Belt Tightener Adjustment" and "V-Belt Alignment" in MAIN-TENANCE section.

☐ Ensure transport chains are installed and properly secured. See "Transport Chain Connection" in

Ensure screens over horizontal auger are in place and properly secured.
 Ensure all cleanout doors and rear access door are closed and latched.

☐ Test run the augers. See "Auger Operation" in OPERATION section.

☐ Ensure side and rear ladders are in storage position.

OPERATION section.

Preparing Tractor

Before operating cart, read the tractor Operator's Manual and gain an understanding of its safe methods of operation.

Check the tractor brakes and transport lights. Make sure they are in proper working order.

On carts equipped with optional hydraulic brake system, make sure the tractor is equipped with components necessary for operating the cart's hydraulic brakes. This cart is compatible with ISO:5676 brake systems. Consult your tractors Operator's Manual or your tractor dealer for appropriate brake control system.

If equipped, check the tractor and cart electric tarp connection. Refer to electric roll tarp manual (26487) for details.

Set tractor PTO modulation to MINIMUM. Check that your tractor has the latest PTO engagement software from the OEM. If unsure, contact your local dealer for tractor capabilities and recommended setting for grain cart operation.

Read the tractor Operator's Manual for more information on tractor drawbar distance.

Check the tractor hydraulic oil reservoir and add oil if needed.

Verify that the tractor is adequately ballasted for drawbar operation at the anticipated draft load. See tractor manual for ballasting instructions.

If possible, adjust the tractor drawbar vertically so the topside of the drawbar is approximately 17-22 inches from the ground. Ensure that the drawbar is locked in the center position.

NOTE: The grain cart comes with a CAT 4 hitch utilizing a 2" diameter pin. A CAT 5 hitch is available for a 2 3/4" diameter pin.



 USE OF NON-MATCHING CATEGORY HITCH AND TRACTOR DRAWBAR CONNECTION WILL RESULT IN POOR HITCH PERFORMANCE AS WELL AS DAMAGE TO TRACTOR, IMPLEMENT OR BOTH.

Hitch pin sizes for each Category to help identify which Category drawbar you have.

Category 4 2" Diameter (50 mm)

Category 5 2-3/4" Diameter (70 mm)

On tractors equipped with a 3-point hitch, raise and secure the linkage to prevent interference with the cart tongue, hydraulic hoses and the hydraulic drive option during turning. It may be necessary to remove tractor 3-point quick attach to avoid damage during turning.

Unverferth 1620 — Operation

Preparing Cart

Perform the service checks below. Repair or replace any damaged or worn parts before operating.

Hardware

Check for loose bolts and nuts, and tighten as needed. Check again after the first half-day of operation.

Pivot Pins

Check that all pins are in place and in good condition. Replace any worn, damaged or missing pins.

Hitch

Check hitch wear plates for damage and wear. Ensure correct size of hitch pin adapter bushing that is being used. Select correct size for the hitch pin/drawbar you are using.

Rear Drop Hitch (Optional)

Check rear drop hitch wear plates for damage and wear. Check that the hitch pin is in place and in good condition. Replace worn, damaged or missing hitch pin.

Preparing Cart (continued)

Auger

Inspect auger for damage and wear.

Hydraulic System

Check all hoses and cylinders for signs of leakage. Hoses should not be kinked, twisted or rubbing against sharp edges. Re-route or repair hoses as necessary. Refer to SAFETY section for additional information on safe repair and inspection of hydraulic components.

Optional Hydraulic Brake System

On carts equipped with optional hydraulic brake system, ensure hose is properly connected to the tractor's hydraulic trailer brake coupler. Consult your tractor's Operator's Manual or your tractor dealer for more information.

Ensure brakes are bled before use. See "Bleeding Procedure For Braking System" in the MAINTENANCE section for additional information.

The optional hydraulic brake system is designed to comply with ISO:5676 compatible hydraulic brake coupler.

IMPORTANT

• Failure to use correct coupler or incorrect plumbing may result in brake lockup. Damage due to brake lockup is not covered under warranty.

Tires/Wheels

Check tire pressures and maintain at recommended values listed in the MAINTENANCE section of this manual.



 IMPROPERLY TORQUED WHEEL NUTS/BOLTS CAN CAUSE A LOSS OF IMPLEMENT CONTROL AND MACHINE DAMAGE. WHEEL NUTS/BOLTS MUST BE CHECKED REGU-LARLY. SEE TORQUE PAGE IN THE MAINTENANCE SECTION FOR PROPER WHEEL NUT/BOLT SPECIFICATIONS. WARRANTY DOES NOT COVER FAILURES CAUSED BY IMPROPERLY TORQUED WHEEL NUTS/BOLTS.

IMPORTANT

Install wheels with the tires in the narrowest position. Installing wheels without the proper inset/
offset could result in hub or spindle failure. This will cause substantial damage to cart and is
not covered by warranty. Inset/offset will vary depending on tire size. See SET UP section for
proper inset/offset.

For questions regarding new tire warranty, please contact your local original equipment tire dealer. **USED TIRES CARRY NO WARRANTY**. Tire manufacturers' phone numbers and web sites are listed in the MAINTENANCE section of this manual for your convenience.

Hitching to Tractor

Drawbar Connection

This cart is intended to be hitched to a tractor drawbar. Do not attempt to hitch to any other location on the tractor other than the drawbar.

The cart comes with a CAT 4 hitch for use with a 2" diameter hitch pin and designed for a clevis-type tractor drawbar. If a 1 1/2" or 1 3/4" diameter hitch pin is used, a corresponding bushing must be inserted into the hitch tang and held in place with o-rings. (Figure 3-1)

NOTE: CAT 5 tongue is available for a 2 3/4" diameter pin. Contact your dealer for a CAT 5 tongue/hitch, if required.

NOTE: Use of the proper hitch pin/bushing will prevent excessive wear and tear on both the cart and tractor.


NOTE: Bushings and o-rings to adapt the CAT 4 hitch are stored in the toolbox on the right-hand side of the cart.

- · Lock tractor drawbar in center position.
- Refer to the tractor Operator's Manual for information on tractor drawbar length.


A WARNING

- DO NOT STAND BETWEEN THE CART AND TRACTOR WHEN HITCHING. ALWAYS ENGAGE PARKING BRAKE AND STOP ENGINE BEFORE INSERTING HITCH PIN.
- Place wear shoe (281898-CAT 4; 281899-CAT 5) between tractor hitch and grain cart hitch. (Figure 3-2)
- After inserting drawbar pin, secure drawbar pin with a locking device to prevent uncoupling during use.

NOTE: Hitch tang can be flipped providing a drawbar connection height difference of 2 7/8" (Figure 3-3). Position the hitch tang to help assure a level cart when loaded, or the rear of the hopper slightly higher than the front, to maintain rear slope cleanout. Whenever the hitch tang is flipped, the driveline clearances need to be reviewed.

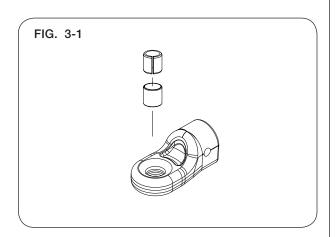



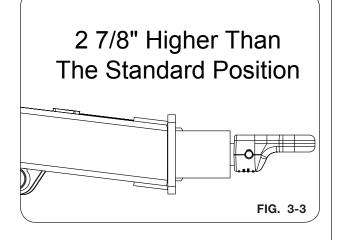

A WARNING


• UNHITCHING A LOADED CART CAN CAUSE SERIOUS INJURY OR DEATH DUE TO TONGUE RISING OR FALLING. ALWAYS HAVE A LOADED CART ATTACHED TO A TRACTOR. THE JACK IS INTENDED TO SUPPORT AN EMPTY CART ONLY.

Jack Usage

Use jack to support an empty grain cart, never a loaded grain cart. Always have a loaded grain cart hooked to tractor. Attach jack to left inside frame using pin and hair pin. Pivot the jack 90 degrees and reinstall pin for field use. (Fig. 3-4)

IMPORTANT

• After cart is hitched to tractor, pivot jack to storage location. (Fig. 3-4 and 3-5)

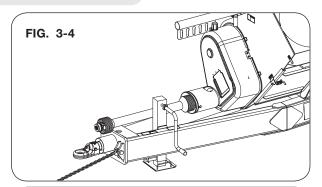



Optional Hydraulic Jack Usage

A WARNING

- HIGH-PRESSURE FLUIDS CAN PENETRATE THE SKIN AND CAUSE SERIOUS INJURY OR DEATH. LEAKS OF HIGH-PRESSURE FLUIDS MAY NOT BE VISIBLE. USE CARD-BOARD OR WOOD TO DETECT LEAKS IN THE HYDRAULIC SYSTEM. SEEK MEDICAL TREATMENT IMMEDIATELY IF INJURED BY HIGH-PRESSURE FLUIDS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- OPENING OF HYDRAULIC VALVE CAN CAUSE SUDDEN MACHINE MOVEMENT. KEEP CLEAR OF MACHINE WHEN OPENING VALVE.


IMPORTANT


• After cart is hitched to tractor, attach hydraulic hoses to tractor and retract hydraulic cylinder to store hydraulic jack between the frame rails. (FIG. 3-7)

Use hydraulic jack to support an empty grain cart, never a loaded grain cart. Always have a loaded grain cart hooked to tractor.

Always close the manual valve for the hydraulic jack for in-field use and when unhitched from the tractor.

- 1. Remove hoses from storage slots.
- 2. Attach jack cylinder hose couplers to tractor.
- 3. Open valve to allow hydraulic flow.
- 4. Use tractor hydraulic valve to extend cylinder and lift tongue.
- 5. Once attached to tractor drawbar, retract cylinder to lower tongue and to raise jack into storage position.
- 6. Close valve, relieve pressure on couplers (see tractor operators manual for procedure) and then disconnect hose couplers from tractor.
- Place hose couplers into storage caddy. Be sure to route hoses to clear PTO driveline during operation.
- 8. Check for leaks.

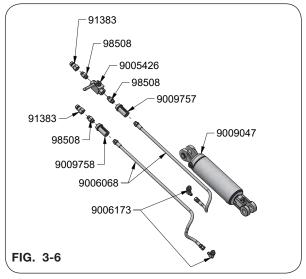

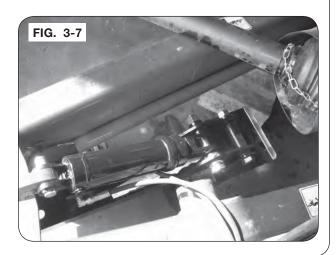

Transport Chain Connection



CAUTION

- ALWAYS USE TRANSPORT CHAIN WHEN TRANSPORTING IMPLEMENTS. FAILURE TO USE A TRANSPORT CHAIN COULD CAUSE PERSONAL INJURY IF CART BECOMES DISENGAGED.
- REPLACE TRANSPORT CHAIN IF ANY LINK OR END FITTING IS BROKEN, STRETCHED, DAMAGED OR NOT FUNCTIONING. DO NOT WELD TRANSPORT CHAIN.
- USE ONLY AN UNVERFERTH ASABE TRANSPORT CHAIN WITH A WEIGHT RATING EXCEEDING THE GROSS COMBINED WEIGHT OF ALL TOWED IMPLEMENTS. CONTACT YOUR UNVERFERTH DEALER FOR ADDITIONAL INFORMATION.

Tractor must be equipped with a transport chain support. Always use intermediate support when connecting cart directly to a tractor. DO NOT use intermediate chain support as the chain attaching point. See tractor operator's manual for proper chain attachment. FIG. 3-8 shows how the transport chain must be installed between implement and towing vehicle.

The standard transport chain is rated for towing the grain cart empty on public roads. Never tow a loaded grain cart on public roads.

If the grain cart has the rear hitch installed, the standard transport chain must be replaced with PF1238-19 61,000 LBS. transport chain. The PF1238-19 61,000 LBS. transport chain is rated for the empty grain cart plus the rear hitch capacity of 20,000 LBS.



Hydraulic Connections

Clean hydraulic hose couplers before connecting to the tractor. For convenience, this unit is equipped with sleeve hose markers attached to the hydraulic hoses. This will help in identifying the hose function and correct hook up. (FIG. 3-9)

NOTE: Hydraulic sleeve color may not match the tractor SCV color.

Color	Function
Red	Flow Door Open / Close
Yellow	Spout Tilt In / Out
Tan	Joystick / Spout Rotate (Optional)
Green	Auger Fold / Unfold
Orange	Auger Pivot Up / Down
Black	Jack Raise / Lower (Optional)
Blue	Water Pump (Optional)

After initial set-up or replacement of any hydraulic component on the cart, air must be removed from the cart's hydraulic system. Reference "Hydraulic System - Purge Hydraulic System" section in the MAINTENANCE section.

Route hoses away from areas that may cause abrasion or kinking of hoses during operation.

(Continued on next page)

Hydraulic Connections (continued)

Before disconnecting hoses from tractor, place tractor in Park and shut PTO off, operate auger fold and pivot to the lowest positions. Where possible, remove hydraulic pressure loads and avoid potential pressure buildup in the lines from long storage periods such as upper auger not in rest position. If equipped with hydraulic jack, extend jack to desired position, turn valve to closed position. See tractor operator's manual for proper procedure to relieve pressure from the lines. After SCV pressures have been relieved and tractor engine is off, disconnect hoses from tractor. Install couplers into storage slots provided. (FIG. 3-9)



Optional Implement Brake Connection


Connector must comply with ISO:5676 standards. Brake hydraulic hose is designated with blue color band. See tractor's operators manual for connection location.

Electrical Connections

This cart is equipped with a seven-pin SAE connector plug that will connect with the receptacle found on most newer tractors. If your tractor does not have this type of receptacle, an SAE J-560 seven-point socket can be purchased from your Unverferth dealer (Part number 92824). (FIG. 3-10)

NOTE: 7-pin connector must be plugged into the tractor in order for the spout system to operate.

The wiring schematic for this cart, shown in the MAINTENANCE section, complies with AS-ABE Standards. Always verify correct electrical function before using this cart.

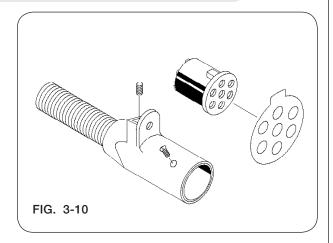

If equipped, check the tractor and cart electrical tarp connection. Refer to electric roll tarp manual (26487) for details.

This unit is equipped with Side Marker lights for enhanced visibility. These lights will have different functionality depending upon the tractor lighting selection.

- When the tractor field lights switch is on; the Side Marker lights and the amber turn signal lights are on solid and will not flash.
- When the flashers and/or turn signal is on; the Side Marker lights flash in unison with their respective side's amber turn lamp.

Compliance with all lighting and marking laws is the responsibility of the operator at the time of travel.

See federal regulation 49 CFR 562; available at www.govinfo.gov for US federal law requirements.

See your Unverferth dealer for additional brackets, reflectors, or lights to meet your requirements.

Towing

Even if the cart is equipped with brakes, ensure that the towing vehicle has adequate weight and braking capacity to tow this grain cart and up to 20,000 lbs. on the optional towed header transport. See the towing vehicle manual for towing capacity. Never tow a loaded grain cart over public roads.

IMPORTANT

• To prevent damage to the cart brake system, manually release pressure from the cart hydraulic brakes if towing without a hydraulic brake equipped vehicle.

Maximum speed of cart should never exceed 20 m.p.h. Do not exceed 10 m.p.h. during off-highway travel. Do not exceed 8 m.p.h. when cart is fully loaded.

Secure drawbar pin with a locking device and lock tractor drawbar in centered position.

The PTO drive shaft must be properly attached to the tractor during transport. See "Driveline Install" in SET UP section and "PTO Shaft and Clutch" in MAINTENANCE section before connecting the PTO drive shaft to the tractor.

Secure transport chain to tractor before towing.

Carts equipped with brakes require a tractor with rear hydraulic brake ports. If your tractor is not equipped with rear hydraulic brake ports, consult your dealer.

Verify brake operation/release before towing.



• THE STANDARD TRANSPORT CHAIN IS DESIGNED ONLY FOR AN EMPTY GRAIN CART DURING ROAD TRAVEL.

IMPORTANT

- Upper auger must be in Transport Position for public road travel.
- Position vertical auger with discharge hood within hopper width for public road travel.

Regulate speed to road conditions and maintain complete control.

It is probable that this cart is taller, wider and longer than the towing tractor. Become aware of and avoid all obstacles and hazards in the travel path of the equipment, such as power lines, ditches, etc.

Slow down before making sharp turns to avoid tipping. Drive slowly over rough ground and side slopes.

Always have auger folded into transport position when auger is not in use. (Fig. 3-11)



Auger Operation

PTO Driven Auger

▲ DANGER

ELECTROCUTION WILL CAUSE SERIOUS INJURY OR DEATH. ELECTROCUTION CAN OCCUR WITHOUT DIRECT CONTACT. KEEP AWAY FROM ALL ELECTRICAL LINES AND DEVICES.



WARNING

- NEVER ENTER CART WITH AUGER OR TRACTOR RUNNING. SERIOUS OR FATAL IN-JURY CAN OCCUR DUE TO ENTANGLEMENT WITH ROTATING COMPONENTS. ALWAYS STOP ENGINE AND REMOVE KEY BEFORE ENTERING CART.
- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE IS RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- 1. Before loading cart or operating auger, verify that the flow control door is closed.
- 2. Choose an area free from obstructions and unfold auger into unloading position. Allow sufficient time for the cylinder to fully engage the two augers and over-center latch to fully engage.
- 3. Engage PTO at low engine RPM, then increase engine RPM until 1000 PTO RPM is reached.

IMPORTANT

• Operating the PTO at less than 1000 RPM can result in damage to the PTO and driveline components in addition to excessive auger wear and cart vibration.


- 4. Open flow control door to desired unloading rate. Numbers on the auger tube provide a point of reference for operator convenience. (FIG. 3-12)
- 5. To slow or stop grain flow, close flow door, do not reduce tractor RPM. Close flow door fully when unloading is complete.


NOTE: If an overload occurs, see "Auger Overload Procedure."

NOTE: It is not recommended to disengage auger with flow control door open. Auger system will require substantially more torque to start, placing extra stress on both cart and tractor driveline.

Cart is equipped with baffles that can be adjusted to accommodate the flow of different materials and/or torque demands associated with different materials. See the MAINTENANCE section for the procedure.

6. When auger is empty, reduce PTO rpm to idle, and stop PTO.

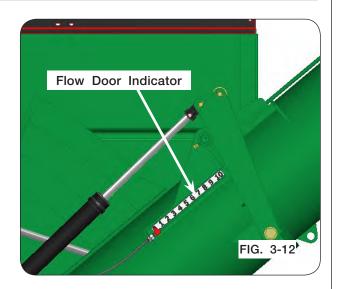

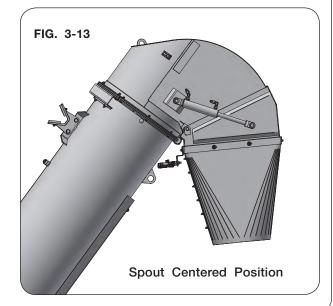

Unverferth 1620 — Operation

Auger Operation (continued)

Vertical Auger Fold

Actuate hydraulic auger fold circuit to move vertical auger between transport and operating positions. When unfolding auger, allow sufficient time for cylinder to rotate the outside fold link into an over-center position. (FIG. 3-14)


NOTE: Auger spout will not rotate until auger is fully extended.



Auger Field Rest Position


IMPORTANT

- Auger field rest is ONLY for use in the field.
 Auger must be folded to road transport position during road transport.
- 1. Extend auger to the unload position. Shut-off tractor's engine and remove the ignition key.

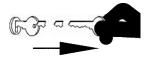


 Remove hairpin cotter from latch pin (Figure 3-15) and pull latch pin to disengage (Figure 3-16). Raise auger rest stand up to field position and release latch pin. Make sure the pin is engaged in the field position hole and re-install hairpin removed earlier in this step.



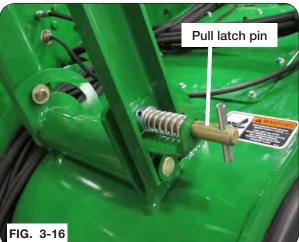


 Fold auger back to field rest position (Figure 3-17), making sure upper auger rest engages the field rest tube and activates the auger switch.

NOTE: Upper auger rest is factory adjusted. Bolts can be used for re-alignment of upper auger rest. See FIG. 3-17.

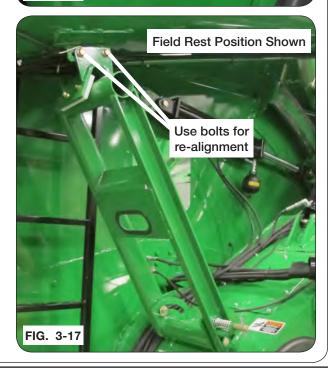

Auger Road Transport Position

1. Extend auger to the unload position. Shut-off tractor's engine and remove the ignition key.

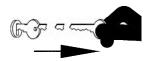

- Remove hairpin and pull latch pin towards you to disengage. Lower field rest to the road transport position and release the latch pin (Figure 3-18). Make sure the pin is engaged in the road transport position hole and re-install hairpin removed earlier in this step.
- 3. Fold auger down to road transport position. (Figure 3-19)






Upper Auger Rest Adjustments

- Loosen mounting capscrews of upper auger rest . (Figure 3-20)
- Raise auger approximately 6" out of the lower rest and install cylinder stops on the fold cylinder to prevent the auger from lowering unexpectedly.
- Position upper auger rest as needed so that it appears to be centered over the lower auger rest tube.
- 4. Hand tighten the mounting capscrews of the upper auger rest.
- 5. Remove the cylinder stops installed in step 2, and lower the auger down into the lower rest.





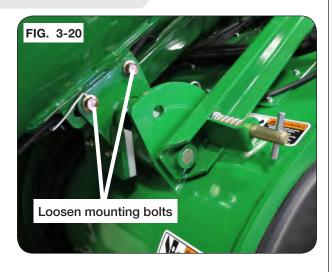

Auger Overload Procedure

IMPORTANT

• Extensive operation while the clutch is slipping may damage drive components.

NOTE: When over loading occurs, drivelines equipped with cut-out clutch will make a "clicking" noise when torque has been exceeded. Immediately shut off PTO and shut the flow door.

NOTE: Once PTO RPM has significantly decreased, cut-out clutch will automatically reset.

- 1. Close flow door.
- 2. Shut-off the engine and remove the ignition key.



- With the PTO off and driveline stopped, disengage the belt tensioner using the belt tensioner handle, this disengages the horizontal auger from the drivetrain. (FIG. 3-21)
- 4. Restart and engage the tractor PTO at low engine RPM.
- 5. Increase engine RPM until 1,000 PTO RPM is reached to empty the vertical auger.

IMPORTANT

- Operating the PTO at less than 1000 RPM can result in damage to the PTO and driveline components in addition to excessive auger wear and cart vibration.
- 6. Once vertical auger is empty, stop PTO.
- 7. Shut-off the engine and remove the ignition key.



- 8. With the tractor PTO off and driveline stopped, reengage the belt tensioner using the belt tensioner handle. Return handle to storage. (FIG. 3-22)
- 9. Restart and engage the tractor PTO at low engine RPM.
- 10. Increase engine RPM until 1,000 PTO RPM is reached to empty the drag auger.

NOTE: If the grain cannot be relieved by above method, open bottom clean out doors (see "Vertical & Horizontal Clean-Out Door Operation" in this section) to remove grain from auger before repeating these steps to clean out auger.





Electric Over Hydraulic Operation (Optional)


Electric/Hydraulic Connection

Before operating cart, familarize yourself with the functions associated with the joystick controller by operating with an empty cart.

The joystick comes with a mounting pin allowing storage inside the tractor cab when not in use.

<u>NOTE:</u> Joystick will not function properly unless a common power supply is shared between the joystick power harness and the grain carts 7-pin connector harness.

- 1. Connect the red wire from power harness (9008251) to a key-switched +12VDC power supply. (Fig. 3-23)
- 2. Connect the white wire from power harness (9008251) to ground. (Fig. 3-23)

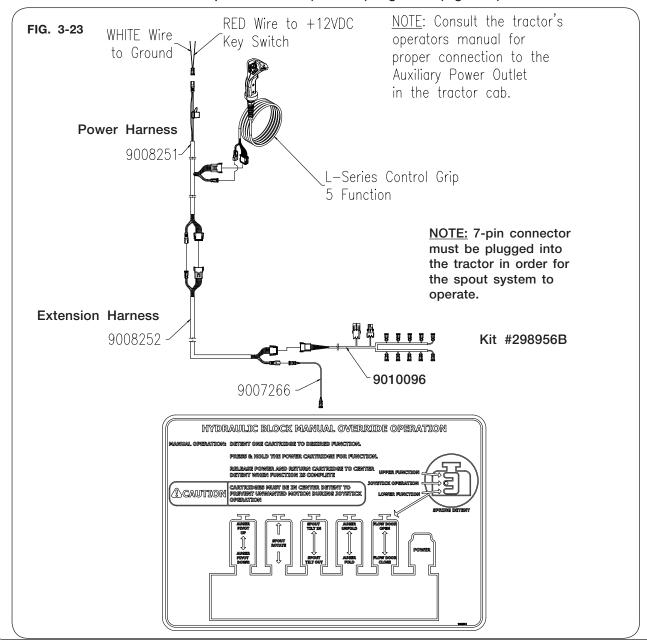

Electric Over Hydraulic Operation (Optional) (continued)


Auger Fold & Spout Operation

NOTE: Cartridge valves (9008416 and 9008463) must be locked in center position for joystick to function properly. Refer to "Manual Override for Opt. Electric Over Hydraulic System" in MAINTENANCE section.

- 1. Connect the Hydraulic Pressure and Return hoses to the tractor SCV remote so that the Pressure line is able to be put in continuous detent.
- 2. Place the remote in continuous detent so that the Hydraulic Pressure hose is pressurized and set the hydraulic flow to a maximum 6 gal/min to minimum 4 gal/min.
- To fold auger out from transport to operating position, push down the auger unfold button on joystick face until the upper and lower auger are engaged and fold linkage is over center.
 See Fig. 3-24.

NOTE: Joystick has a double tap feature, which allows the operator to quickly double tap a function in order to operate it for a set time. If the auger fold or auger unfold buttons are double tapped, the function will stay on for 60 seconds to complete the full cycle without holding the buttons down. Pressing either of those buttons during these timed cycles will CANCEL the cycle. This double tap feature only applies to auger fold and unfold functions.


- 4. To pivot spout OUT away from cart, push hat switch toward OUT. Hold the switch until desired position is achieved. See Fig. 3-24.
- 5. To pivot spout IN toward cart, push hat switch toward IN. Hold the switch until desired position is achieved. See Fig. 3-24.
- 6. To pivot the entire auger UP, press and hold the auger pivot UP button until the desired height is achieved. See Fig. 3-24.
- 7. To pivot the entire auger DOWN, press and hold the auger pivot DOWN button until the desired height is achieved. See Fig. 3-24.
- 8. To pivot the spout FORWARD, push hat switch RIGHT. Hold the switch until desired position is achieved. See Fig. 3-24.
- 9. To pivot the spout REARWARD, push hat switch LEFT. Hold the switch until desired position is achieved. See Fig. 3-24.

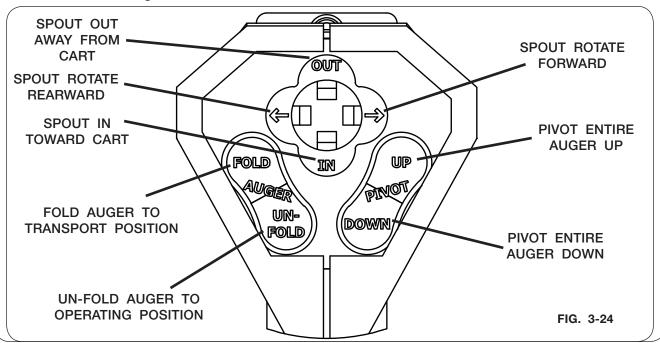


Electric Over Hydraulic Operation (Optional) (continued)

Flow Door Operation

 To open flow door, rotate the switch upwards. Observe flow door indicator to determine when to release trigger and stop flow door movement. See Fig. 3-25.

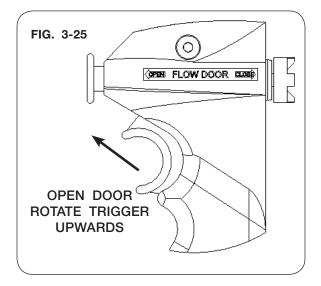


To close flow door, rotate the switch downwards.
 Observe the flow door indicator and release trigger when door is closed to desired position.
 See Fig. 3-26.

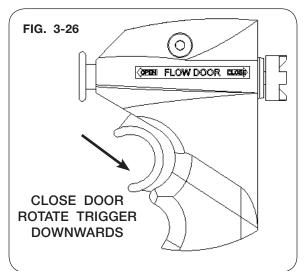

Auger Fold to Transport

- 1. To fold auger from operating position to transport position:
- A. Press auger FOLD button on joystick.
- B. Double tap FOLD button until upper auger is on field rest or in transport position.
- 2. Once unloading is complete, stop hydraulic flow. <u>ALWAYS</u> stop continuous detent when auger functions are not required or active.

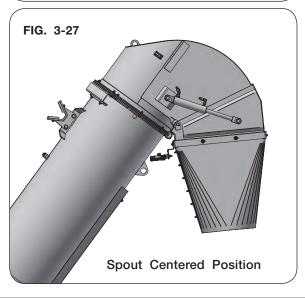

Cart Loading Sequence

A WARNING

- NEVER LOAD THE REAR OF A GRAIN CART FIRST. LOAD THE CART EVENLY TO MAINTAIN WEIGHT ON THE TRACTOR DRAWBAR. LOADING ONLY THE FRONT, OR ONLY THE REAR, CAN CAUSE A LOSS OF CONTROL.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- UNHITCHING A LOADED CART CAN CAUSE SERIOUS INJURY OR DEATH DUE TO THE TONGUE RISING OR FALLING. ALWAYS HAVE A LOADED CART ATTACHED TO A TRACTOR. THE JACK IS INTENDED TO SUPPORT AN EMPTY CART ONLY.
- NEVER ENTER A CART CONTAINING GRAIN. FLOWING GRAIN TRAPS AND SUFFO-CATES VICTIMS IN SECONDS.
- 1. Ensure auger flow door is closed before loading cart.
- 2. Fill the cart starting just forward of the axle until nearly full.

NOTE: Overfilling the front or rear area of the hopper can result in reduced control of the cart when towing.

3. Fill the rear area of the hopper before topping off the front area. This maintains proper weight on the hitch of the tractor.


Vertical & Horizontal Cleanout Door Operation

A WARNING

- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH.
 ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEANOUT DOORS ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH.
 BE SURE THE MACHINE IS SECURELY BLOCKED.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING THE IMPLEMENT.

Closing Vertical Cleanout Door

- 1. Raise the vertical auger to highest position.
- Park the empty grain cart on a clean level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shutoff the engine, remove the ignition key and disconnect the PTO shaft.
- 3. To completely close cleanout door, ensure the vertical auger cleanout door top edge clears the vertical position stop (key stop). (FIG. 3-28)
- 4. Attach eye bolt ends of over center latches to the hooks on the vertical auger. (FIG. 3-28)
- 5. Clasp the over center latch handles to lock the door in the closed position. (FIG. 3-28)
- Inspect and verify cleanout door perimeter for gaps. Ensure all grain dust and filings are removed that may prevent the door from shutting completely.
- 7. If gaps are present, unclasp the over center latch and tighten eye bolt to improve door seal contact on the vertical auger.

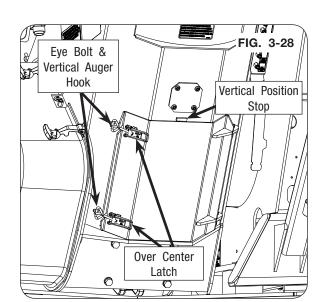

8. Rehook eye bolt to vertical auger and clasp the over center latch.

NOTE: Repeat steps 4 - 8, as necessary.


Vertical & Horizontal Cleanout Door Operation (continued)


Opening Vertical Cleanout Door

- 1. Raise the vertical auger to highest position.
- Park the empty grain cart on a clean level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shutoff the engine, remove the ignition key and disconnect the PTO shaft.


NOTE: Remove the vertical auger cleanout door to improve vertical auger cleaning.

- 3. To open and remove the vertical auger cleanout door, unclasp the over center latch. (FIG. 3-29)
- 4. Unhook the eye bolt from the vertical auger and open the cleanout door. (FIG. 3-29)

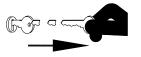

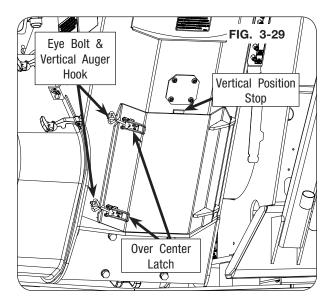

- 5. The hinge on the vertical auger cleanout door is set on a pin. Lift and remove the cleanout door from the vertical auger. Keep vertical auger cleanout door. (FIG. 3-30)
- 6. Inspect and verify all debris is removed from inside the vertical auger housing.
- 7. Reattach the vertical cleanout door to the vertical auger.

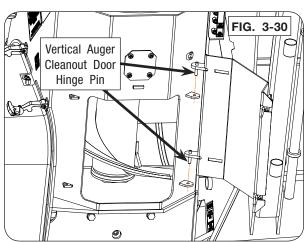


Vertical & Horizontal Cleanout Door Operation (continued)


Horizontal Cleanout Door


Use the tensioner handle, located on the left-hand side of the grain cart, behind the first panel to open and close the horizontal cleanout doors.

 Park the empty grain cart on a clean level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shutoff the engine, remove the ignition key and disconnect the PTO shaft.

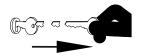

- Insert tensioner handle into the cleanout door receiver coupler on the rear panel, and remove lynch pin from rockshaft. Keep lynch pin. (FIG. 3-31)
- 3. Rotate the tensioner handle clockwise to open the cleanout doors. (FIG. 3-32)
- 4. Insert and lock lynch pin into rockshaft. (FIG. 3-32)

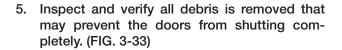

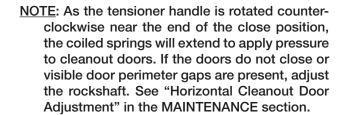

6. Remove lynch pin from rockshaft and rotate handle counter-clockwise and clockwise to check for smooth door operation.







Vertical & Horizontal Cleanout Door Operation (continued)

Horizontal Cleanout Door

7. Rotate handle counter-clockwise to close doors and ensure all doors seal. (FIG. 3-34)



8. Insert and lock lynch pin into rockshaft and return handle to storage location. (FIG. 3-35)



In-Line Tandem

Optional Implement Brake System for In-Line Tandem

This system is for tractors with hydraulic trailer brake option. Once connected and properly bled, this system sends pressure to the implement's brakes when the brake pedal is used. After the brake pedal is released, pressure is removed from the implement calipers. Always check brake operation with an empty cart and familiarize the effectiveness as the load increases in the cart.

Ladder Operation

Side Ladder Operation

A WARNING

- FALLING OR LOWERING EQUIPMENT CAN CAUSE SERIOUS INJURY OR DEATH. KEEP EVERYONE AWAY FROM EQUIPMENT WHEN SUSPENDED, RAISING, OR LOWERING.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- DO NOT ALLOW ANYONE TO RIDE ON THE LADDER. MAKE SURE EVERYONE IS CLEAR BEFORE OPERATING MACHINE OR TOWING VEHICLE.
- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE IS RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- NEVER ENTER A CART CONTAINING GRAIN. FLOWING GRAIN TRAPS AND SUFFO-CATES VICTIMS IN SECONDS.

<u>NOTE</u>: Ensure ladder and steps are free from snow/debris before changing ladder positions and climbing.

NOTE: Ensure upper ladder extension is attached to higher holes on the ladder. Reference "Upper Side Ladder Extension" section in the SET UP section.

NOTE: Always use lock pin in the working and storage position to lock the ladder extension. The lock pin can be inserted in either left-hand or right-hand ladder hole. (FIG. 3-36 & 3-37)






Ladder Operation (continued)

Storage to Working Position


- 1. Standing in front of ladder, place hands on outside ladder handles.
- 2. Keep one hand on ladder handle and with opposite hand, remove lock pin from ladder extension. Retain for future use. (FIG. 3-38)

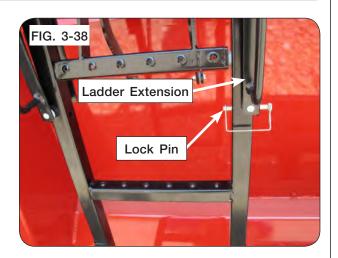


 With hands back on ladder handles, push ladder towards hopper bin and lift ladder extension to unseat ladder extension rod from the cradle. (FIG. 3-39)



• THE LADDER IS NOW FREE TO PIVOT.

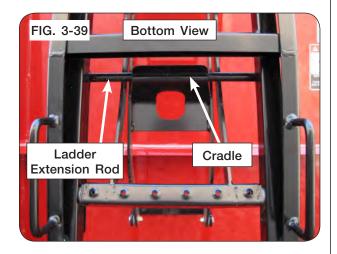

 Slowly swing ladder outward until hinge is fully extended and locks in the working position. (FIG. 3-40)

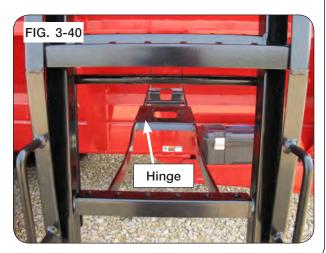


Ladder Operation (continued)

Storage to Working Position

- 5. Lift and seat ladder extension into shorter leg of "J slot". (FIG. 3-41)
- 6. Using lock pin from step 2, insert lock pin into ladder extension and ladder. (FIG. 3-41)




 FALLING FROM AN UNSECURED LADDER MAY CAUSE SERIOUS INJURY OR DEATH. ALWAYS INSERT LOCK PIN BEFORE CLIMBING.

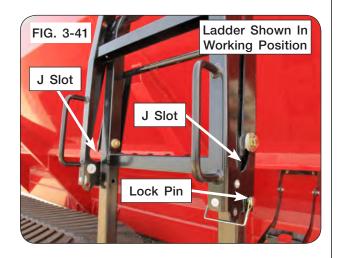


Working to Storage Position

- 7. Standing in front of ladder, place hands on outside ladder handles.
- 8. Keep one hand on ladder handle and with opposite hand, remove lock pin from ladder extension. Retain for future use. (FIG. 3-41)
- With hands back on ladder handles, lift and unseat ladder extension from shorter leg of "J slot". (FIG. 3-41)
- 10. Lower ladder extension until fully seated in longer leg of "J slot". (FIG. 3-42)

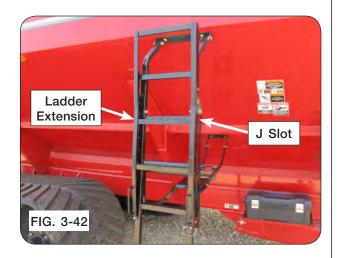

- 11. Keep one hand on ladder handle and with opposite hand, reach between ladder rungs and grab the ladder hinge hole. (FIG. 3-43)
- 12. Slowly lift ladder hinge until the ladder starts folding.
- 13. Remove hand from ladder hinge hole and place onto ladder handle.
- 14. Slowly push ladder towards hopper bin.

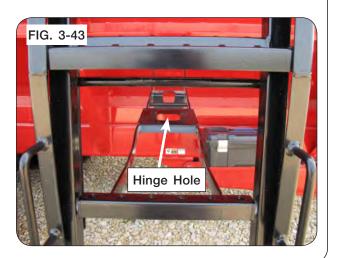


Unverferth 1620 — Operation


Ladder Operation (continued)

Working to Storage Position

15. Lower ladder extension and seat ladder extension rod onto the cradle. (FIG. 3-44)

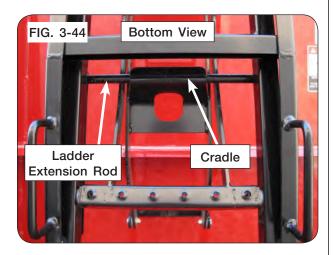

16. Using lock pin from step 8, insert lock pin into ladder extension and ladder. (FIG. 3-45)

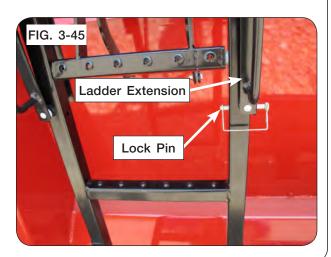

Ladder Operation (continued)

Rear Ladder Operation

A WARNING


- FALLING OR LOWERING EQUIPMENT CAN CAUSE SERIOUS INJURY OR DEATH. KEEP EVERYONE AWAY FROM EQUIPMENT WHEN SUSPENDED, RAISING, OR LOWERING.
- DO NOT ALLOW ANYONE TO RIDE ON THE LADDER. MAKE SURE EVERYONE IS CLEAR BEFORE OPERATING MACHINE OR TOWING VEHICLE.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE IS RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- NEVER ENTER A CART CONTAINING GRAIN. FLOWING GRAIN TRAPS AND SUFFO-CATES VICTIMS IN SECONDS.


<u>NOTE</u>: Ensure ladder and steps are free from snow/debris before changing ladder positions and climbing.

NOTE: The lower ladder section must be raised and locked in the storage position when not used.

Storage to Working Position


- 1. Park the empty grain cart on a firm and level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shut-off the engine, remove the ignition key and disconnect the PTO shaft.
- 2. While holding ladder handle, remove rubber latch from holder. (FIG. 3-46 and 3-47) (Continued on next page)

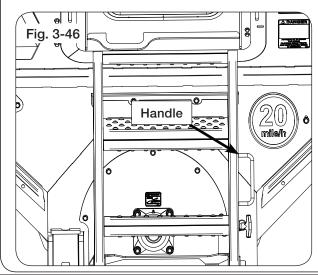

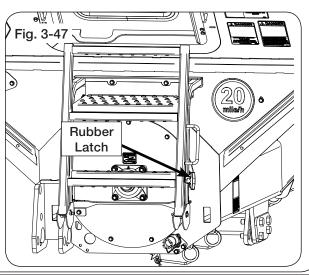


Ladder Operation (continued)


3. While holding ladder handle, slowly swing the lower ladder section completely down to working position. (FIG. 3-48)

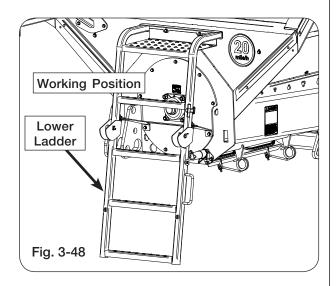


Working to Storage Position

- 1. Slowly lift and swing the lower ladder section up to storage position. (FIG. 3-49)
- 2. While holding ladder handle, attach rubber latch into holder to lock ladder in storage position. (FIG. 3-50 and 3-51)

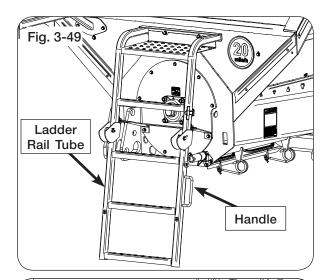

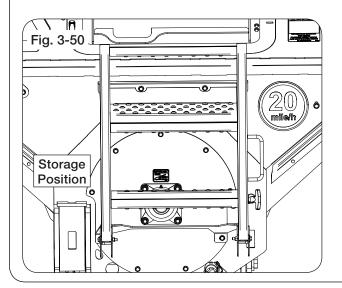


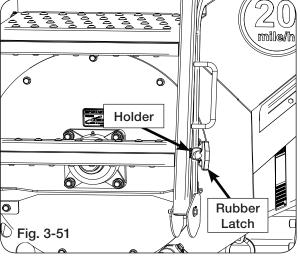

Rear Access Door Operation


A WARNING

- ENSURE SCREENS OVER HORIZONTAL AUGERS ARE IN PLACE AND PROPERLY SECURED.
- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE IS RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING THE IMPLEMENT.
- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH.
 ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEANOUT DOORS ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- NEVER ENTER A CART CONTAINING GRAIN. FLOWING GRAIN TRAPS AND SUFFO-CATES VICTIMS IN SECONDS.
- Park the empty grain cart on a firm and level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shutoff the engine, remove the ignition key and disconnect the PTO shaft.

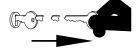


- 2. Turn both door latches 180 degrees counter clockwise. (Fig. 3-52)
- 3. Push door handle to open rear access door. (Fig. 3-52)
- 4. Push door until it stops. While maintaining contact with the outer handles, enter the grain cart. (Fig. 3-52)

(Continued on next page.)

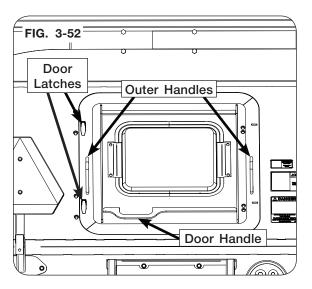


Rear Access Door Operation

5. To exit, pull inner door handle to open the rear access door, place hand on inner handle and exit grain cart. (Fig. 3-53)

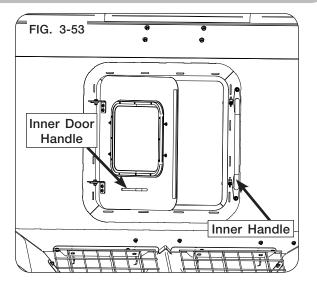

- 6. While maintaining contact with outer handles, use door handle to close the rear access door. (Fig. 3-54)
- 7. Turn both door latches 180 degrees clockwise to lock the rear access door. (Fig. 3-54)

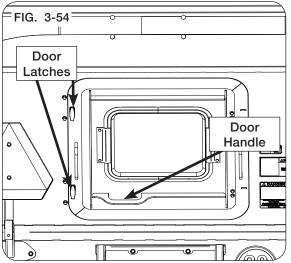

Rear Drop Hitch Operation (Optional)


A WARNING

- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING THE IMPLEMENT.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER
 THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES
 AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY
 INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 50 LBS. SPECIFIC LOAD
 RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE
 INSTRUCTIONS.

Storage to Working Position


NOTE: Keep rear drop hitch in storage position when not in use.


 Park the empty grain cart on a firm and level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shutoff the engine, remove the ignition key.

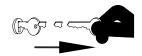

- 2. Attach a safe lifting device rated for a minimum of 50 lbs. to the rear drop hitch.
- 3. Remove the keeper from the pivot pin, then remove the pivot pin from the rear drop hitch. (Fig. 3-55)
- 4. Slowly pivot rear drop hitch to desired position. (Fig. 3-56)
- 5. Reinstall pivot pin and keeper into rear drop hitch. (Fig. 3-56)

(Continued on next page.)

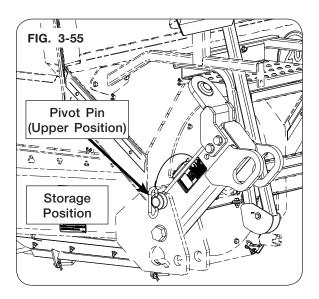

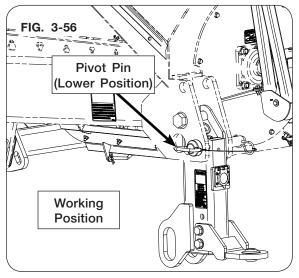

Rear Drop Hitch Operation (Optional) (continued)

Rear Hitch Connection


IMPORTANT


• The rear ladder MUST be folded into storage position to prevent damage when towing with the rear drop hitch.

The transport chain on the grain cart must be sized according to the weight that is being towed. Refer to "Transport Chain" in OPERATION section for complete transport chain instructions.

NOTE: Keep rear drop hitch in storage position when not in use.

- 1. With hitch in operating position, connect the tongue of the header transport to the rear drop hitch. (Fig. 3-57)
- 2. If header transport has brakes, attach the brake cable to the rear drop hitch. (Fig. 3-57)
- Connect transport chains and electrical connection of the header transport to the rear drop hitch. See implement operator's manual for proper transport chain instructions. (Fig. 3-58)

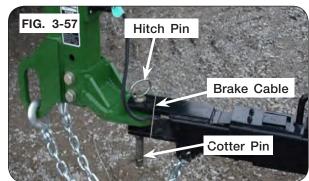

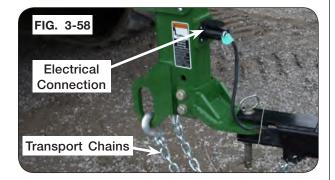


Rear Drop Hitch Operation (Optional) (continued)

Electrical Connection

The rear drop hitch is equipped with a 7-blade connector which will connect to the plug on most newer header transports to be towed behind the cart. (Fig. 3-59)

The wiring schematic for this connector is shown in the MAINTENANCE section. Verify correct electrical function before using this connector.

Compliance with all lighting and marking laws is the responsibility of the operator at the time of travel.

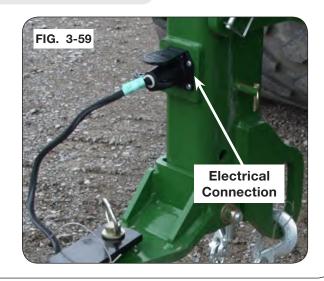

Rear Drop Hitch Operation (Optional)

A WARNING


- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING THE IMPLEMENT.


Rear Drop Hitch Adjustment


1. Park the empty grain cart on a firm and level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shut-off the engine, remove the ignition key.




- 2. Remove the nuts, washers, and bolts from the rear drop hitch.
- 3. Remove hitch tang and re-install in one of the four positions depending on the height that is needed to maintain a level trailer tongue. There will be a difference of 6 3/4" from position 1 to position 4. (Figs. 3-60 through 3-63)
- 4. Reinstall the nuts, washers, and bolts to the rear drop hitch and torque to specification.

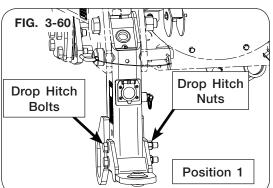

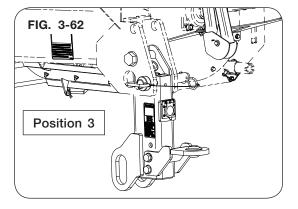

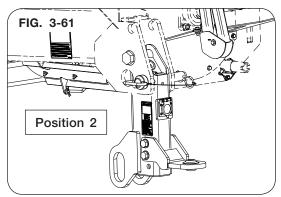

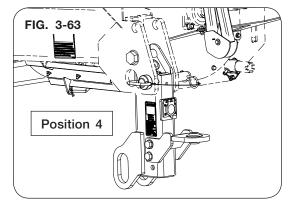

Video System (Optional)

IMPORTANT

Do not operate video system below 15°F. Damage to video system can occur.

The video system (265770) includes its own operation instruction sheet.

Weather Guard Tarp

A WARNING

- TO PREVENT PERSONAL INJURY OR DEATH, DO NOT ALLOW ANYONE ON A CLOSED TARP. TARP SYSTEM IS NOT DESIGNED TO SUPPORT A PERSON.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. REMOVE ACCUMULATED WATER/SNOW/ICE OR ANY OTHER OBJECTS FROM TARP BEFORE OPENING TARP.

IMPORTANT

- Do not open or close tarp while moving or in high wind conditions. Damage to the tarp may occur.
- Tarp should not be used if it is torn or the bungee cords are frayed or show damage. Fully close tarp with tension on the latch plate to prevent water from pooling.

Always use adequate caution when operating tarp.

If equipped, refer to electric roll tarp manual (26487) for operation details.

Open and close the tarp evenly.

Make sure tarp is open before loading.

Make sure all persons are clear of the tarp system before and during operating.

Do not operate tarp with cart hoisted in an elevated position.

If tarp is covered with snow, it is important to remove snow before operating.

End caps must be free from grain that may be piled on them. Grain should not be heaped higher than the end caps or tarp bows.

Tarp may be fully opened or completely closed while in transit. However, the closed position is recommended.

Ensure everyone who operates the tarp is familiar with the correct procedures outlined in this manual.

Weather Guard Tarp (continued)

NOTE: If equipped with wireless electric roll tarp, skip to next page. For weather guard tarp, continue to step 1.


- 1. Using both hands, carefully remove tarp handle weldment from tube holder. (FIG. 3-64)
- 2. Roll tarp to the desired location, choosing either a fully open or fully closed position.
- 3. To close the tarp, rotate the roll tube clockwise up under the latch plate.
- 4. Make sure tarp is positioned evenly over latch plate length.

NOTE: Do not tighten if tarp overlaps end of the latch plate. Tearing of the tarp may occur. Reposition tarp, as necessary.

5. Bring the tarp handle weldment down perpendicular to the ground. Continue by lifting it up into the tube holder.

NOTE: Tarp handle weldment U-joint may need to be re-indexed on roll tube to achieve correct tension.

6. To open tarp, turn the roll tube counter clockwise until the tarp is fully open. Place tarp handle weldment in tube holder.

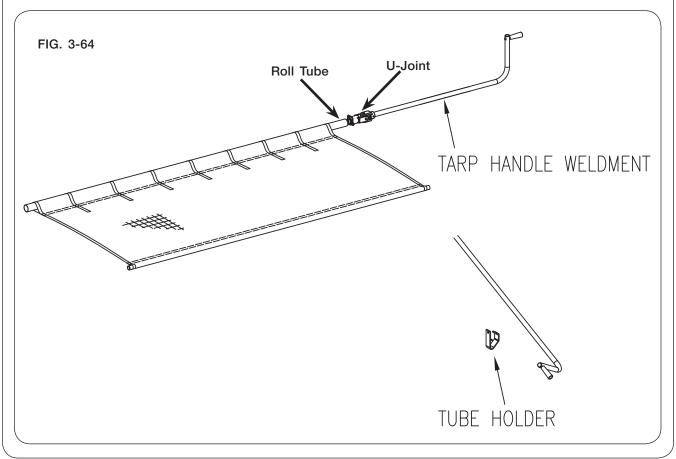


Weather Guard Tarp (continued)


Wireless Receiver and Control Box Location - For SN B43090100 & Higher

NOTE: Refer to electric roll tarp manual (26487) for wireless operation details.

1. Wireless receiver (9009632) and control box (9005398) mount to the left-hand standard behind the vertical auger as shown. (FIGS. 3-65 & 3-66)

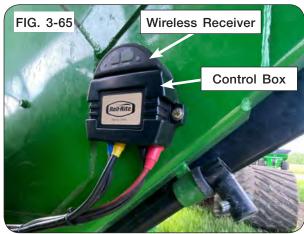

- Control box wires route along the front of the cart following the isobus harness.
- Dual connector plug (9005327) attaches to the socket on the back of the tractor as shown. (FIG. 3-67)
- 4. When electric tarp is not in use, place connector plug into storage caddy. Be sure to route connector plug harness to clear PTO driveline during operation.

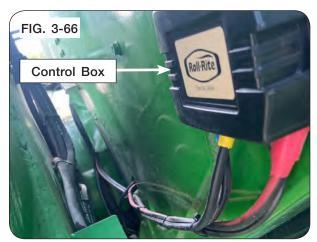



Unverferth 1620 — Operation

Notes


Section IV Maintenance


Lubrication - Cart	
PTO Driveshaft Lubrication - Benzi PTO	4-6
PTO Driveshaft Lubrication - GKN Walterscheid PTO	4-7
Hydraulic System	4-8
Purge Hydraulic System	4-8
Manual Override for Optional Electric Over Hydraulic System	4-9
Auger System	
Vertical Auger Height Check	4-12
Vertical Auger Folding Linkage Adjustment	4-14
Vertical Auger Timing	4-15
Horizontal Auger	
Horizontal Auger Driveline Bearings	4-17
Baffle Adjustment	
Horiztontal Cleanout Door Adjustment	
Belt Tightener Adjustment	4-22
V-Belt Alignment	
Split Tapered Bushings	
Horizontal Auger Removal and Replacement	
Driveline Removal	4-32
Gearbox	
Verify Telescoping PTO Shaft Length	
PTO Shaft Length Adjustment	4-35
PTO Shaft & Clutch - Benzi PTO	
PTO Shaft & Clutch - GKN Walterscheid PTO	
Wheel, Hub and Spindle Disassembly and Assembly	4-40
Wheels & Tires	
Wheel Nut Torque Requirements	
Tire Pressure	
Tire Warranty	
Bleeding Procedure for Braking System	4-46
Hydraulic Jack Cylinder Replacement	
Seasonal Storage	
Troubleshooting	4-50
Auger Switch Troubleshooting	
Tarp Troubleshooting Inspection & Maintenance	
Electrical System Diagram	
Electrical Diagram	
Electrical Over Hydraulic (EOH) System Schematic	
Optional Electric Over Hydraulic Valve Electric Schematic 5 Spool	
Electrical System Schematic - Optional Wireless Electric Tarp	
Braking System Schematic	
Torque Chart - Hardware Grade 5	
Torque Chart - Hardware Grade 8	
Hydraulic Fittings - Torque and Installation	4-69

FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, VIDEO SYSTEM OR OTHER OPTIONS, PLEASE REFER TO THE INDIVIDUAL MANUALS.

Lubrication

To keep your grain cart in top operating condition and to assure its proper performance and reliability for a long period of time, periodic inspection and lubrication is a must.

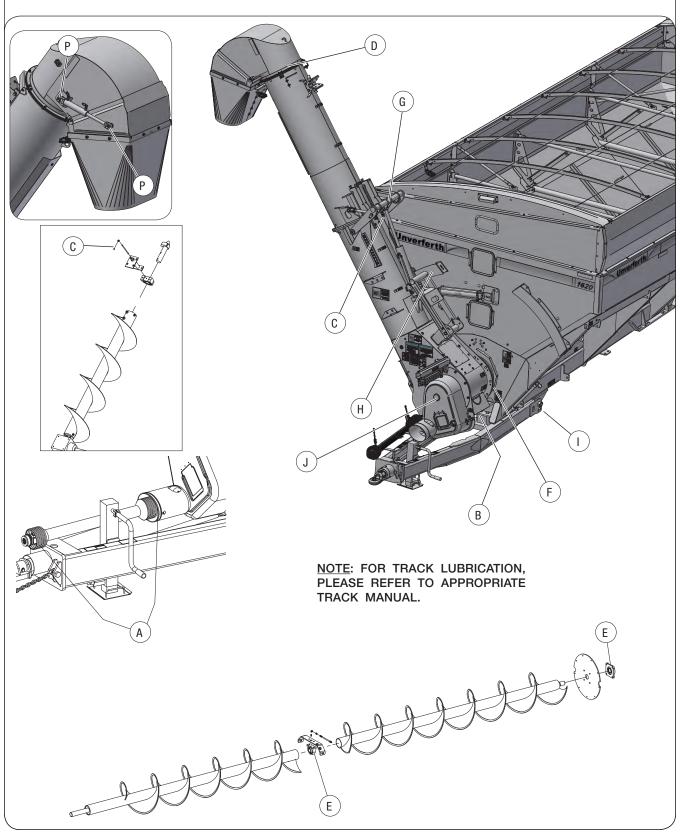

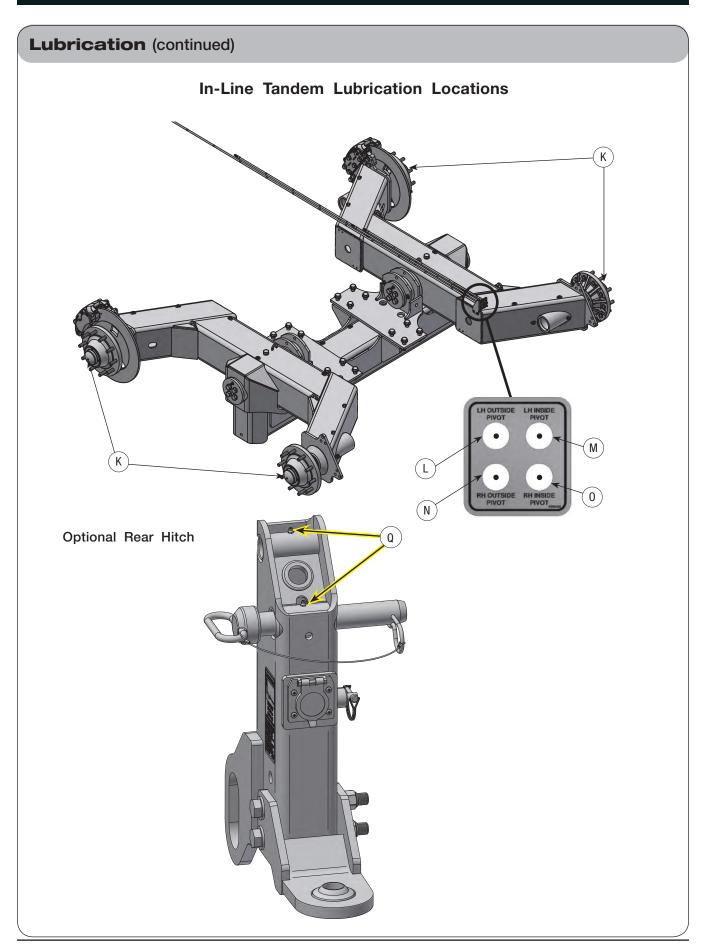

Unverferth 1620 — Maintenance

Lubrication (continued)

Lower Auger Pivot Housing Grease Points












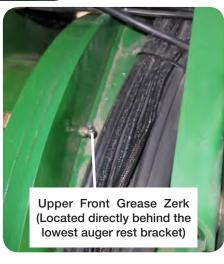

Lubrication (continued)

To keep your grain cart in top operating condition and to assure its proper performance and reliability for a long period of time, periodic inspection and lubrication is a must.

Unverferth Mfg. recommends use of NLGI #2 Extreme Pressure grease.

The lubrication locations and recommended schedule are as follows:

ITEM	DESCRIPTION	POINT	LUBRICANT	QTY.	HOURS
А	PTO Driveshaft - Benzi or GKN Walterscheid	-	EP-2	1 Shot	See Next Pages
В	Gearbox Remove Cover - Check oil level every 2 weeks. Replace oil every season. Refer to Gearbox in MAINTENANCE section.	1	EP80W90	Approx 85 oz.	Once Every Season
C*	Hanger Bearing - Vertical Lower Auger See note below*	1	EP-2	2 Shots*	Monthly
D	Top Bearing - Vertical Upper Auger	1	EP-2	1 Shot	Each Season
E	Horizontal Auger End & Center Bearings	2	EP-2	2 Shots	Monthly
F	Auger Pivot Rings - Vertical Lower Auger See previous page for zerk locations.	8	EP-2	2 Shots	Daily
G	Auger Pivot Pin - Vertical Upper Auger	2	EP-2	2 Shots	Daily
Н	Grease Slide Plate	1	EP-2	1 Shot	Each Season
I	Tongue Pivot Bushing	2 (one per side)	EP-2	2 Shots	Daily
J	Front Horizontal Auger Bearing & Gearbox Support Bearing	2	EP-2	1 Shot	Weekly
K	Hubs	4	EP-2	Repack	Annually
L	Tandem Grease Bank - LH Outside Pivot	1	EP-2	6 Shots	Daily
M	Tandem Grease Bank - LH Inside Pivot	1	EP-2	6 Shots	Daily
N	Tandem Grease Bank - RH Outside Pivot	1	EP-2	6 Shots	Daily
0	Tandem Grease Bank - RH Inside Pivot	1	EP-2	6 Shots	Daily
Р	Spout Tilt Cylinder	2	EP-2	1 Shot	Each Season
Q	Rear Hitch Pivot Pin (Optional)	2	EP-2	2 Shots	Monthly


*NOTE: Hanger bearing contains hydraulic shut-off grease zerk (9005240) with pressure relief to prevent over-greasing that could push bearing seals out. If grease is coming out of the relief on the zerk, this is normal and the bearing contains enough grease.

PTO Driveshaft Lubrication - Benzi PTO

Lubricate with NLGI grade 2 grease before starting work and every 8 operating hours. Clean and grease PTO driveshaft before each prolonged period of non-use. Molded nipples on the shield near each shield bearing are intended as grease fittings and should be lubricated every 8 hours of operation! Check and grease the guard tubes in winter to prevent freezing.

<u>NOTE:</u> Inner & outer profile tubes must have lubrication to operate successfully regardless of whether a grease fitting is provided for that purpose! Inner & outer profile tubes without fittings should be pulled apart and grease should be added manually.

- Grease the overrunning clutch on front half driveline assembly every 50 operating hours.
- The CAM Cut Out clutch on rear half driveline assembly is pre-greased for 500 operating hours.
 Contact your dealer for more greasing information.

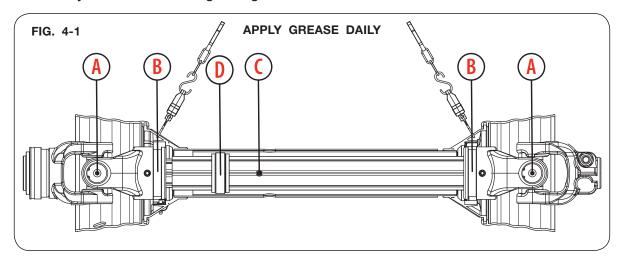


ITEM	DESCRIPTION	POINT	LUBRICANT	QTY.	HOURS
Α	U-Joint Cross Kit	1	EP-2	2 Shots	8 Hours
В	Inner & Outer Yoke Groove	1	EP-2	1 Shot	8 Hours
С	Inner & Outer Profile Tube	1	EP-2	26 Shots	Start and End of Each Season 50 Hours
D	Anti-Vibration Bushing	1	EP-2	5 Shots	Start and End of Each Season 50 Hours

PTO Driveshaft Lubrication - GKN Walterscheid PTO

Lubricate with NLGI grade 2 grease before starting work and every 8 operating hours. Clean and grease PTO driveshaft before each prolonged period of non-use. Molded nipples on the shield near each shield bearing are intended as grease fittings and should be lubricated every 8 hours of operation! Check and grease the guard tubes in winter to prevent freezing.

NOTE: Inner & outer profile tubes must have lubrication to operate successfully regardless of whether a grease fitting is provided for that purpose! Inner & outer profile tubes without fittings should be pulled apart and grease should be added manually.

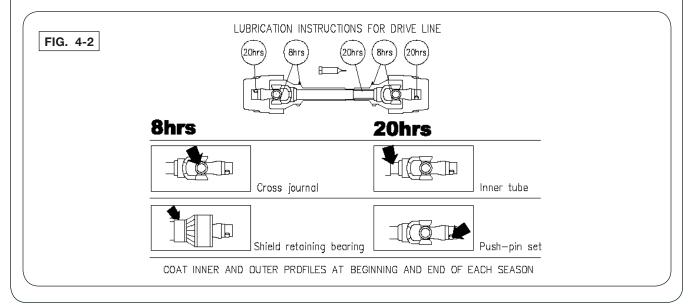

Hydraulic System

Refer to parts section for hydraulic component detail listing.

When properly assembled and maintained, the hydraulic system of the grain cart requires little maintenance.

Replacing Hoses/Fittings/Cylinders:

- 1. Use replacement hoses, fittings, and cylinders from your Unverferth Manufacturing dealer which are rated for 3000 psi.
- 2. Do not use hoses, fittings and cylinders that have pipe threads.
- 3. Do not use Teflon tape or thread sealant on JIC or O-ring fittings. Tighten fittings according to "Torque Chart" in this section.
- 4. When replacing hoses, always allow sufficient slack to permit hoses to move through the full range of motion of the cylinders.
- 5. Always purge the hydraulic system after servicing.

Purge Hydraulic System

A WARNING

- HYDRAULIC SYSTEM MUST BE PURGED OF AIR BEFORE OPERATING TO PREVENT SERIOUS INJURY OR DEATH.
- RELIEVE HYDRAULIC SYSTEM OF ALL PRESSURE BEFORE ADJUSTING OR SERVICING.
 SEE THE HYDRAULIC POWER UNIT OPERATOR'S MANUAL FOR PROPER PROCEDURES.
- HIGH-PRESSURE FLUIDS CAN PENETRATE THE SKIN AND CAUSE SERIOUS INJURY OR DEATH. LEAKS OF HIGH-PRESSURE FLUIDS MAY NOT BE VISIBLE. USE CARDBOARD OR WOOD TO DETECT LEAKS IN THE HYDRAULIC SYSTEM. SEEK MEDICAL TREATMENT IMMEDIATELY IF INJURED BY HIGH-PRESSURE FLUIDS.



KEEP CLEAR OF PINCH POINT AREAS.



Purge air from system as follows:

- A. Clear all personnel and objects from the area, including where the machine will have full range of motion during the hydraulic movement. Remove transport locks from the machine.
- B. Pressurize the system and maintain system at full pressure for at least 5 seconds after cylinder rods stop moving, or hydraulic motors have completed the required movement. Check that all movements are fully completed.
- C. Check oil reservoir in hydraulic power source and refill as needed.
- D. Pressurize system again to reverse the motion of step B. Maintain pressure on system for at least 5 seconds after cylinder rods stop moving, or hydraulic motors have completed the required movement. Check that all movements are fully completed.
- E. Check for hydraulic leaks using cardboard or wood. Tighten connections according to directions in Torque Chart in this section.
- F. Repeat steps B, C, D, and E 10-12 times.

IMPORTANT

Machine damage will occur if the cylinder is incorrectly installed.


Check for and correct any leaks. Make sure hoses are not kinked, stretched, or twisted. Secure hoses to prevent cuts or chafing during operation.

Manual Override for Optional Electric Over Hydraulic System

A WARNING

- MOVING OR ROTATING AUGER COMPONENTS CAN CAUSE SERIOUS INJURY OR MA-CHINE DAMAGE. BEFORE OPERATING MANUAL OVERRIDE(S), ENSURE EVERYONE IS AWAY FROM THE SPOUT AND THAT THE SPOUT WILL NOT CONTACT ANY OTHER PARTS OF THE GRAIN CART. ALL CONTROL SWITCHES ARE DEACTIVATED WHILE UTILIZING MANUAL OVERRIDE(S).
- MOVING OR ROTATING PTO COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH.
 DO NOT OPERATE PTO WHILE UTILIZING MANUAL OVERRIDE(S).
- FALLING OR LOWERING EQUIPMENT CAN CAUSE SERIOUS INJURY OR DEATH. KEEP EVERYONE AWAY FROM EQUIPMENT WHEN SUSPENDED, RASING, OR LOWERING.

NOTE: Manual override operation is intended for emergency use ONLY and is not intended for continuous operation.

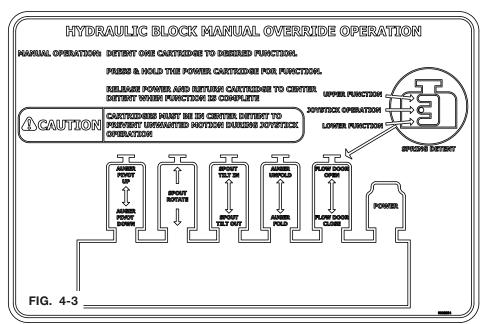

1. Park the grain cart on a firm and level surface. Block the machine to keep it from moving. Set the tractor's parking brake. Keep engine running.

Manual Override for Optional Electric Over Hydraulic System (continued)

- 2. Remove cover plate (295569B) from the bottom of the lower auger housing to access the EOH block assembly. Keep cover plate. (FIG. 4-4)
- 3. Connect the desired Hydraulic Pressure and Return hoses to the tractor SCV remote so that the Pressure line is able to be put in continuous detent.
- 4. To operate the manual override function, place the tractor SCV remote in continuous detent so that the Hydraulic Pressure hose is pressurized.




Manual Override for Optional Electric Over Hydraulic System (continued)


NOTE: Only one cartridge valve (9008416 & 9008463) must be in the top or bottom detent position at a time to function properly. All other valves must be in the middle detent postion. (FIG. 4-5 & 4-6)


- 5. Operate the desired function on valve (9008416 & 9008463) by rotating the manual override knurled knob from the locked neutral position. (FIG. 4-5, 4-6, & 4-8)
- 6. Push and hold the manual override button on valve (9008438). (FIG. 4-7)
- 7. Once the desired position is reached, release manual override button on valve (9008438).
- 8. Return knurled knob to center and lock valve (9008416) & (9008463) in position. (FIG 4-5, 4-6 & 4-8)


NOTE: Refer to "Troubleshooting" for EOH, vertical auger and/or rotating spout issues in the MAINTENANCE section.

- Turn off hydraulic circuit when done. Correct electric/hydraulic system before continued use. Consult your dealer for service and parts.
- 10. Place cover plate (295569B) from step 2 back onto the bottom of the lower auger housing.

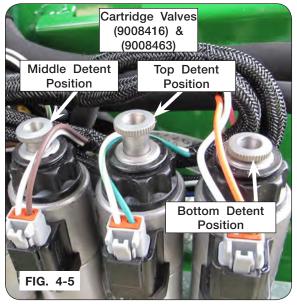

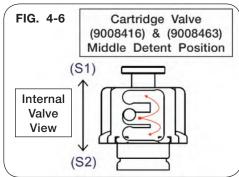

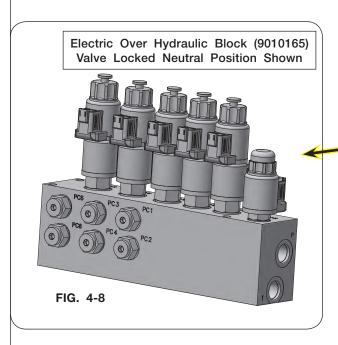

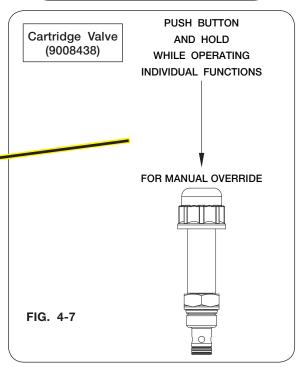

Auger System

A WARNING

- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE IS RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- NEVER ENTER CART WITH AUGER OR TRACTOR RUNNING. SERIOUS OR FATAL IN-JURY CAN OCCUR DUE TO ENTANGLEMENT WITH ROTATING COMPONENTS. ALWAYS STOP ENGINE AND REMOVE KEY BEFORE ENTERING CART.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING IMPLEMENT.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 2,000 LBS. SPECIFIC LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.
- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS IN-JURY OR DEATH. ALWAYS DISCONNECT POWER SOURCE BEFORE SERVICING. ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR(S) ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING MACHINE.




 WHEN WORKING AROUND THE IMPLEMENT, BE CAREFUL NOT TO BE CUT BY SHARP EDGES.

Vertical Auger Height Check


Before servicing the vertical auger, park the unit on a firm, level surface. Block the machine to keep it from moving. Raise vertical auger to discharge position and close horizontal auger flow door. Set the tractor parking brake, turn off tractor engine, remove ignition key, and disconnect PTO shaft and hydraulic lines from tractor.


Annually check all bolts, nuts, and set screws for tightness. Replace the vertical auger top bearing hardware, as necessary. (FIG. 4-9)

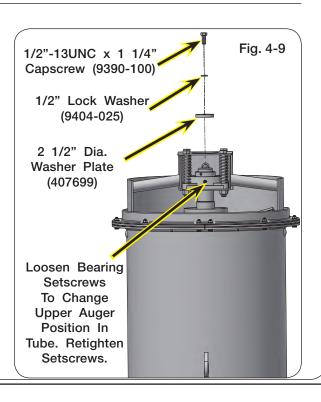


Vertical Auger Height Check (continued)

NOTE: The lower auger position is indexed from the drive dog / tube flange hinge surface as shown. (Figs. 4-11 & 4-12)

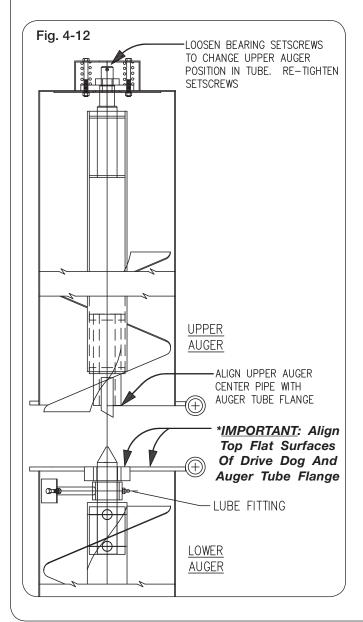

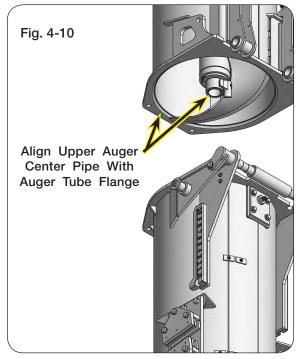


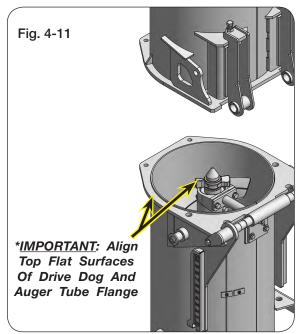

Vertical Auger Folding Linkage Adjustment


NOTE: To fold auger from operating position to transport position, refer to "Electric Over Hydraulic Operation (Optional)" in the OPERATION section.

- 1. Fold auger from operating position to transport position.
- Before adjusting the vertical auger folding linkage, park the unit on a firm, level surface. Block the wheels/tracks to keep the machine from moving. Set the tractor parking brake, turn off tractor engine, remove ignition key, and disconnect PTO shaft and hydraulic lines from tractor.

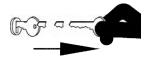

NOTE: The starting distance for the folding linkage pin center-to-center is 14 3/16". (FIG. 4-13)


- 3. At the FRONT of the auger, remove retaining rings (91192) from the pin (272587) on clevis (9006491). Keep retaining rings and pin. (FIG. 4-13)
- 4. Adjust the folding linkage by turning the clevis in or out one full turn. (FIG. 4-13)
- 5. Reinsert pin into clevis and attach retaining rings to pin.
- 6. Repeat procedure for the folding linkage on the BACK of the auger.
- 7. Reattach PTO. Refer to "Driveline Installation" in SET UP section.
- 8. Reconnect hydraulic lines to tractor. Refer to "Hitching to Tractor" in OPERATION section.
- 9. Choose an area free from obstructions and unfold auger to operating position. Allow sufficient time for the cylinder to fully engage the two augers and over-center latch to fully engage.
- 10. Verify the upper auger picture frame is flush against the lower auger picture frame.

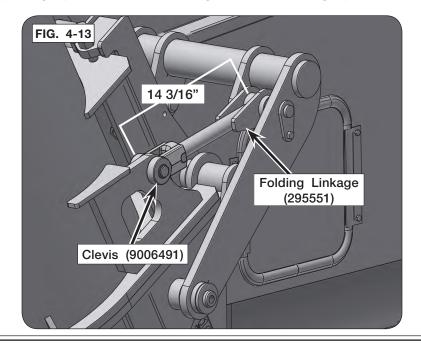


Vertical Auger Timing

1. For the lower vertical auger, use the top edge of the flighting as a 12 o'clock reference. Position the drive dog so the driving edge is at the 11 o'clock position. (FIG. 4-14)


NOTE: Looking down at the lower flighting (FIG. 4-14) the auger rotation will be counterclockwise. When looking up at the upper flighting (FIG. 4-15) the auger rotation will be clockwise.

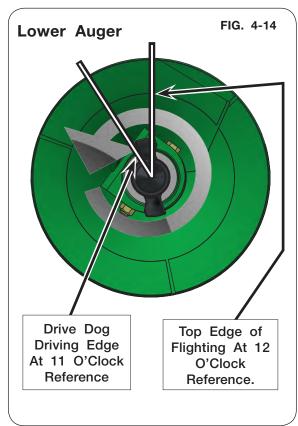

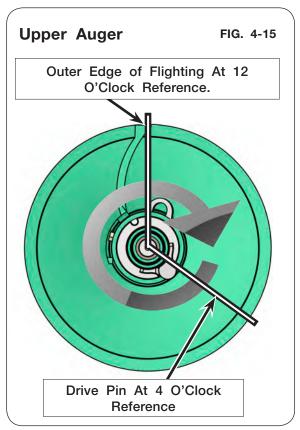

- 2. For the upper auger, use the outer edge of the flighting as a 12 o'clock reference. Postion the driven edge of the drive pin at the 4 o'clock position. (FIG. 4-15)
- 3. When engaged, the upper flighting should follow the lower flighting. (FIG. 4-16)

NOTE: Upper flighting should trail the lower flighting from minimum of 10 degrees to a maximum of 90 degrees.

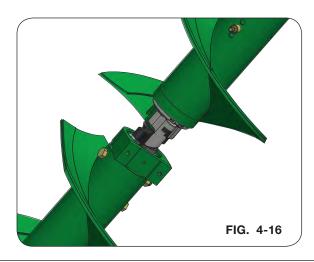


Horizontal Auger

Annually check all bolts, nuts, and set screws. Perform lubrication as specified in "Lubrication" section.

NOTE: With new flighting, the outside diameter is about 3/4" from the bottom belly pan. Always set bearing height using the flighting centerline measurement. See FIG. 4-17.

NOTE: Shims (286424B) are available from your Unverferth dealer to achieve 10 1/8" measurement.

To adjust the bearing height down, shim with washers between the bearing and the hanger bracket. To adjust the bearing height up, shim with washers between the bearing bracket and the sides of the cart. When adjusting the height up, washers will need to be placed with one on each side so the bearing stays centered.

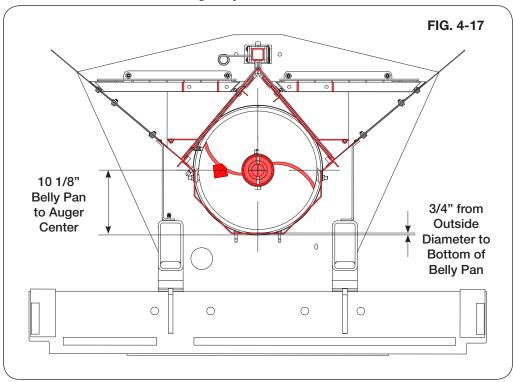


Horizontal Auger Driveline Bearings

IMPORTANT

• Periodically check set screws in all bearings at either end of the driveline for tightness. (FIGS. 4-18 & 4-19)



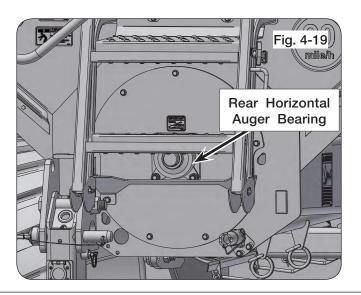

Baffle Adjustment

A WARNING

- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE THE CART, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE IS RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE CART.
- NEVER ENTER CART WITH AUGER OR TRACTOR RUNNING. SERIOUS OR FATAL IN-JURY CAN OCCUR DUE TO ENTANGLEMENT WITH ROTATING COMPONENTS. ALWAYS STOP ENGINE AND REMOVE KEY BEFORE ENTERING CART.

Refer to the following reasons for baffle adjustment:

NOTE: To unload the cart evenly from front to back the openings should increase in height from back to front.

- If higher flow is desired and torque is not the limiting factor, raise each baffle to an incremental amount and rerun.
- If more material remains at the back of the cart towards the end of the unloading cycle, the back baffles should be adjusted upward in incremental amounts and rerun.
- If more material remains at the front of the cart towards the end of the unloading cycle, the back baffles should be adjusted downward in incremental amounts and rerun.
- If the cart requires more torque than what is available at times during the unloading cycle, then all baffles should be adjusted downward in incremental amounts.

Baffle Adjustment (continued)

The horizontal auger baffles are factory-set at the lowest position. This position results in the lowest power requirements and longest flighting life. Once grain has been run through the unit, adjustments can be made to achieve the ideal unloading performance.


Before making any baffle adjustments, close horizontal auger flow door. Securely block the grain cart. Set the tractor parking brake, turn off tractor engine, remove ignition key, and disconnect PTO.

If a higher flow is desired and torque is not a factor, loosen the (2) flange nuts on each baffle, see figure 4-20. Use the lift handle to raise each baffle to the desired position, retighten both flange nuts, see figures 4-20 & 4-21.

NOTE: DO NOT REMOVE ANY SCREEN PAN-ELS. The flange nuts are best accessed using an extended socket wrench and 9/16" socket through the screen panel openings.

NOTE: Screen removed in figure 4-21 for illustration only.



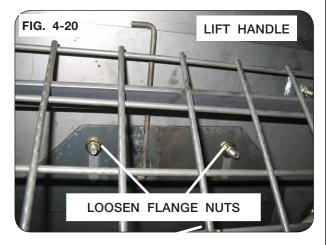



Horizontal Cleanout Door Adjustment

A WARNING

- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH. ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEANOUT DOORS ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING THE IMPLEMENT.
- Park the unit on a firm, level surface. Block the machine to keep it from moving. Set the tractor parking brake, turn off tractor engine, remove ignition key, and disconnect PTO shaft.




- 2. Loosen all the hardware in the slotted brackets connecting the cleanout door rockshaft to the grain cart tube. (Fig. 4-22)
- Starting at the front of the cart, using a jack, push the rockshaft up and toward the runner tube. (Fig. 4-22)




NOTE: Ideal distance between the runner tube and rockshaft is 3 1/4". (FIG. 4-23)

- 4. When the rockshaft is in position, torque the hardware previously loosened to 28 ft.-lbs.
- 5. Continue repositioning the rockshaft moving toward the back of the cart.

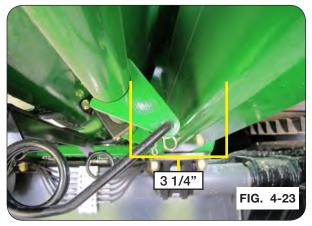


Horizontal Cleanout Door Adjustment

6. Rotate the tensioner handle counter-clockwise to close the doors allowing the plate to fit and seal into the belly pan opening. (Fig. 4-24)

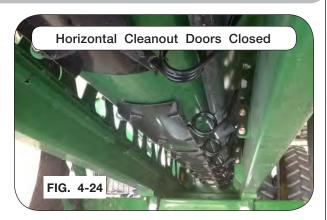

- 7. If plate insert needs adjustment, loosen the two flat head machine screws holding the plate in position. (Fig. 4-25)
- 8. Ensure the plate inserts are aligned and fit into the belly pan cut-outs. (Fig. 4-25)
- 9. Close the doors and ensure all doors seal.
- 10. Insert lynch pin into rockshaft and return handle to storage location.

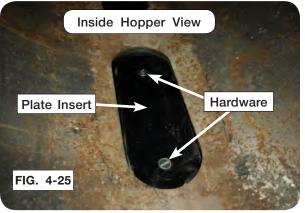

Belt Tightener Adjustment


IMPORTANT

- Do not use belt dressing.
- Keep grease and oil off of belt and pulleys.

<u>NOTE</u>: Pulleys do not need to be removed to remove/replace belt.

Due to prolonged use, belt wear may be evident causing slack. To correct this, follow these steps.

 Park the unit on a firm, level surface. Block the unit to keep it from moving. Set the vehicle parking brake, shut off the engine, remove the ignition key, and disconnect PTO shaft from tractor.

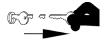

A WARNING

- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH. ALWAYS DISCONNECT POW-ER SOURCE BEFORE SERVICING. ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR(S) ARE IN PLACE AND SECURELY FAS-TENED BEFORE OPERATING UNIT.
- Remove PTO assembly from gearbox input shaft.
- 3. Detension the belt as outlined in OPERATION section. Remove belt tensioner handle.
- Remove cover and inspect belts for misalignment, loose parts and cracks. Replace if necessary with a matched set. See Fig. 4-28.








Belt Tightener Adjustment (continued)

- Belt tension is adjusted with hex nuts below the spring. All belt tension MUST be released from linkage. Loosen outer hex nut and adjust inner nut to establish a 3 1/16" pre-load dimension between the heavy washers. Tighten the outer hex nut against inner nut to lock position. (Fig. 4-29)
- 6. Check the lower belt pulley to ensure belt is aligned in their grooves and with the belt tensioner handle, engage the roller/idler linkage against the belt and over-center stop. The compressed spring should now be approximately 1 3/4" between the washers and generating a force of approximately 480 lbs. against the belt. (Fig. 4-30)
- Release and tighten belt multiple times to confirm positions and final adjustments. See Fig. 4-30 and Fig. 4-31.
- Tighten belt to reinstall the cover guard and the PTO shaft to the gearbox input shaft. Clear work area and test-run drivetrain for 3 minutes at 1000 PTO RPM.

A WARNING

- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.
- 9. Disengage PTO, turn off towing vehicle and remove the ignition key. Through the cover access door, check the compressed spring length is approximately 1 3/4" between the washers and check each belt for uniform tension. If more adjustment is needed, refer to Steps 5 through 7. If no additional spring adjustment is available, then both belts must be replaced with a new matched set.

NOTE: Always replace belts in matched sets.

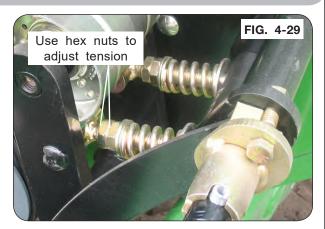






V-Belt Alignment

1. Pulleys must be aligned with the fixed idler. Belts should be centered on idler for longest belt life. (Fig. 4-32)



2. After tightening taper-lock bushing hardware, lay a straight edge across face of the drive and driven belt pulleys to ensure alignment between the grooves on the pulleys. (FIG. 4-33)

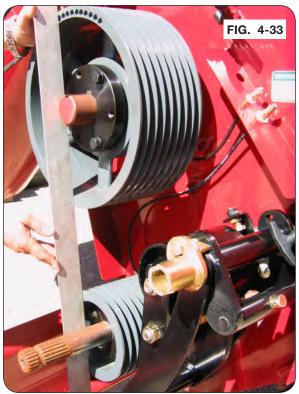

V-Belt Alignment (continued)

Split Tapered Bushings

Check annually for tight engagement to driveshaft. Torque three bolts progressively to values shown in figure 4-34.

For the smaller gearbox bushing (9007376): 3/8"-16UNC hardware. Torque to 75 ft-lbs.

For the larger horizontal auger bushing (9004813): 9/16"-12UNC hardware. Torque to 90 ft.-lbs.

Some gap must remain between flange & hub when bushing is properly tightened.

To remove from shaft, remove capscrews and insert them in tapped holes in bushing flange. Tighten progressively until bushing disengages.



Horizontal Auger Removal and Replacement

A WARNING

- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE IS RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- NEVER ENTER CART WITH AUGER OR TRACTOR RUNNING. SERIOUS OR FATAL IN-JURY CAN OCCUR DUE TO ENTANGLEMENT WITH ROTATING COMPONENTS. ALWAYS STOP ENGINE AND REMOVE KEY BEFORE ENTERING CART.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING IMPLEMENT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER
 THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES
 AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY
 INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 1,000 LBS. SPECIFIC
 LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME
 IN THE INSTRUCTIONS.


NOTE: Open the flow gates all the way.

- Park the unit on a firm, level surface. Block the machine to keep it from moving. Set the vehicle parking brake, shut off the engine and remove the ignition key and disconnect the PTO shaft from the tractor.
- 2. Remove 4 rear ladder capscrews attached to the cart. (FIG. 4-35)

NOTE: Keep all hardware for re-assembly.

 Using a safe lifting device rated for a minimum of 100 lbs. remove the rear ladder from the cart. (FIG. 4-35)




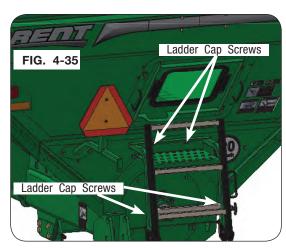

- 4. Remove the capscrews from the auger cover. (Fig. 4-36)
- 5. Pry the auger from the auger tube. (Fig. 4-37)
- 6. Using a safe lifting device rated for a minimum 1,000 lbs., pull the rear auger out of the cart. (Fig. 4-38)





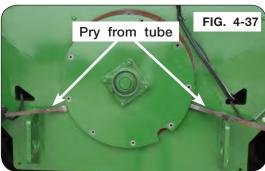


NOTE: If only servicing rear auger, skip to step 26. For 5-pin driver replacement, continue to step 8.


- 7. Remove the flange screws in both middle grates inside the cart. (Fig. 4-39)
- 8. Using a safe lifting device rated for a minimum of 100 lbs. remove the middle grates from the cart.



- 9. Remove locknuts, baffle weldments and cover plates from the middle tent. (Fig. 4-40)
- 10. Disconnect grease line. (Fig. 4-40)
- 11. Remove the bearing mount bar bolts on each side of the auger.
- 12. Remove capscrews and lock washers holding bearing onto the bearing mount bar.

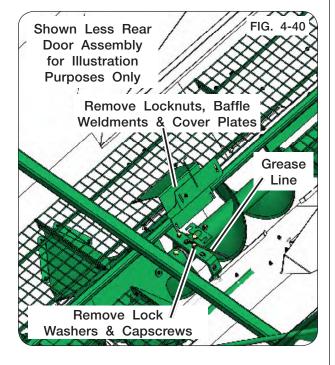


13. Remove bearing mount bar to allow access to work on the bearing and shaft. Remove two center tube connecting capscrews, spacer bushings (283895B) and locknuts from the horizontal auger. (Fig. 4-41)

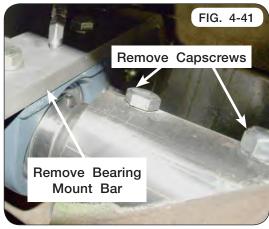

- 14. Remove the original 5-pin driver, bearing and the bushing insert. (Figs. 4-42 & 4-43)
- 15. Replace 5-pin driver and bushing insert if needed.



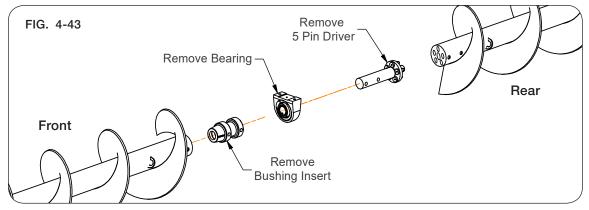


- Substantially coat bushing insert with antiseize.
- 17. Slide bushing insert into front auger and ensure tube holes are aligned. (Figs. 4-43 & 4-44)




NOTE: Make sure the set screws on bearing are towards the front of the cart. (Fig. 4-45)


- 18. Slide bearing onto 5-pin driver and hand tighten the set screw. (Fig. 4-45)
- 19. Insert 5-pin driver into front auger and ensure tube holes are aligned.
- Insert capscrews from opposite sides through auger, bushing and driver. Slide spacer bushings over threads and install locknuts. Hand tighten hardware at this time. (Fig. 4-45)

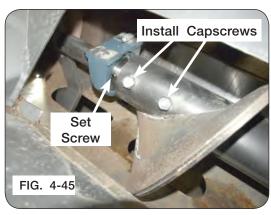

- 22. Install bearing mount bar. Leave the capscrews and lock washers loose attaching bearing mount bar to the cart. Attach bearing mount bar to the bearing. (Fig. 4-46)
- 23. Reattach grease line components. (Fig. 4-46)

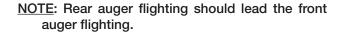


24. Slide the rear auger forward. Align the pins and holes with the rear auger pipe. (Fig. 4-47)

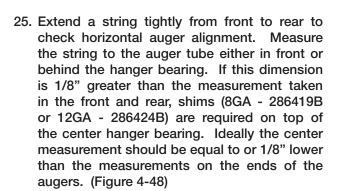



NOTE: Add shims as needed. See "Auger System - Horizontal Auger Height Measurement" in MAINTENANCE section for more details.

- 26. Torque bearing mount bar capscrews to 130 ft.-lbs. See Fig. 4-46.
- 27. Torque front auger capscrews to 200 ft.-lbs. (Fig. 4-49)

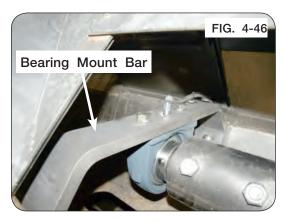




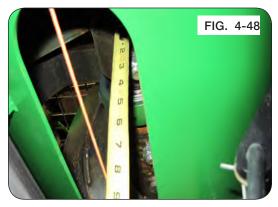

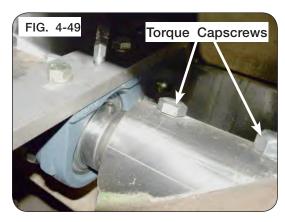

- 28. Insert hardware for rear auger cover, SMV bracket, and rear ladder, if equipped. (Figs. 4-50 and 4-51)
- 29. Torque all hardware to specification. See "Torque Chart" in this section. (Figs. 4-50 and 4-51)
- 30. Using a safe lifting device rated for a minimum of 100 lbs. reinstall ALL the grates.
- 31. Ensure all personnel and tools are removed from the cart and reconnect PTO shaft to the tractor.
- 32. Run the auger starting at a low RPM and increase speed to max RPM to ensure the auger flighting does not make contact with the belly pan or flow doors.



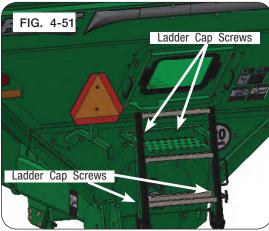

Driveline Removal

♠ DANGER


ENTANGLEMENT WITH THE DRIVELINE WILL CAUSE SERIOUS INJURY OR DEATH.
KEEP ALL GUARDS AND SHIELDS IN GOOD CONDITION AND PROPERLY INSTALLED
AT ALL TIMES. AVOID PERSONAL ATTIRE SUCH AS LOOSE FITTING CLOTHING, SHOE
STRINGS, DRAWSTRINGS, PANTS CUFFS, LONG HAIR, ETC. THAT CAN BECOME ENTANGLED IN A ROTATING DRIVELINE.

WARNING

MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH.
 ALWAYS DISCONNECT POWER SOURCE BEFORE SERVICING. ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.

Gearbox shaft guard has access doors for installing and removing of driveline.

- 1. Remove clamping cone/retaining bolt.
- 2. Use a hammer and punch, if needed, to moderately hit the end of clamping cone/retaining bolt, as shown. (FIG. 4-68)
- Once clamping cone/retaining bolt is removed, slide torque limiter off gearbox splined input shaft.

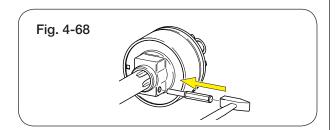


Gearbox

When checking the oil level of the gearbox, the vertical auger should be pivoted all the way down.

For adequate lubrication, the oil should be visible in the sight glass. Fill with oil to the sight glass only. (Fig. 4-52)

For Maximum gearbox life: Check oil level every 2 weeks.

Replace oil every season with approximately 85 oz. 80W90 EP lubricant.

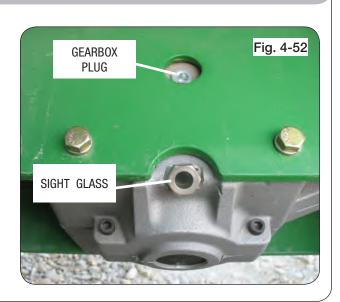

Verify Telescoping PTO Shaft Length

WARNING

PROPER EXTENDED AND COLLAPSED LENGTHS OF THE TELESCOPING PTO SHAFT MUST BE VERIFIED BEFORE FIRST OPERATION WITH EACH AND EVERY TRACTOR. IF THE EXTENDED LENGTH OF THE PTO SHAFT IS NOT SUFFICIENT, IT MAY BECOME UNCOUPLED IN OPERATION AND CAUSE SERIOUS INJURY OR DEATH FROM CONTACT WITH UNCONTROLLED FLAILING OF PTO SHAFT ASSEMBLY COMPONENTS.

IMPORTANT

Check the length of the telescoping members to ensure the driveline will not bottom out or separate when turning and/or going over rough terrain.

Consult your OEM dealer for recommended drawbar and PTO set up.

An excessive collapsed length can result in damage to the PTO driveline and attached components. This is most likely to occur during extreme turning angles and/or travel over rough terrain. Conditions are amplified on tractors with tracks operating in uneven terrain, particularly rice levies. Damaged driveline components can result in unsafe operation and severely reduced driveline component life.

Check the length of the telescoping members to ensure the driveline will not bottom out or separate when turning and/or going over rough terrain.

NOTE: Do not exceed 10 degrees beyond a straight pull line while operating the PTO. To verify proper extended and collapsed lengths, use the following procedure:

1. Fully collapse PTO shaft and measure length "L" (Fig. 4-53).

Enter here: (1)


(Verify that outer tube does not bottom out on surrounding plastic shield components).


2. Pull apart PTO telescoping shaft ends and measure lengths "T" & "C" (Fig. 4-54)

Add "T" + "C" measurments together Enter total here: (2)

- 3. Calculate maximum recommended extended length:
 - a. Subtract line 1 from line 2 Enter here:____(a)
 - b. Divide line (a) by 2 Enter here: (b)
 - c. Add line (b) to line 1. Enter here: __(c)
 - d. Subtract 3 inches from line (c)

Enter here: (d)

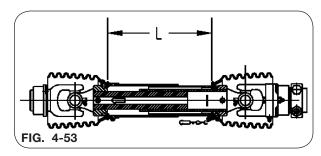


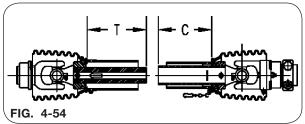


This is the maximum recommended extended length.

Verify Telescoping PTO Shaft Length (continued)

- 4. Hitch tractor drawbar to cart, ensuring that tractor and cart are on level ground and coupled as straight as practical.
- 5. Connect PTO shaft to tractor, and measure length "L" from same points as used in step 1. Ensure that this measurement does not exceed the maximum recommended extended length calculated in step 3 above. If necessary, choose a shorter drawbar position, or obtain a longer PTO shaft assembly before operating cart.
- 6. Position the tractor to obtain the tightest turning angle, relative to the cart (Fig. 4-55).
- 7. Measure the length "L" from the same points as used in step 1. This distance must be at least 1.5 inches greater than the distance measured in step 1. If necessary, adjust the length of the PTO shaft by cutting the inner and outer plastic guard tubes and inner and outer sliding profiles by the same length. Round off all sharp edges and remove burrs before greasing and reassembling shaft halves. (Fig. 4-56)

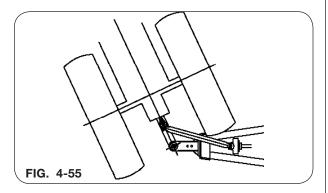

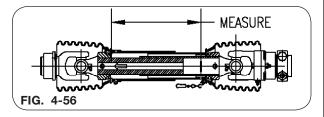


PTO Shaft Length Adjustment


A WARNING


• CHECK THE LENGTH OF THE TELESCOPING MEMBERS TO ENSURE THE DRIVELINE WILL NOT BOTTOM OUT OR SEPARATE WHEN TURNING AND/OR GOING OVER ROUGH TERRAIN.


NOTE: Maximum operating length LB. (Refer to "Verify Telescoping PTO Shaft Length" in this section for LB length.)

- 1. To adjust length, hold the half-shafts next to each other in the shortest working position and mark them.
- 2. Shorten inner and outer guard tubes equally.
- 3. Shorten inner and outer sliding profiles by the same length as the guard tubes.
- 4. Round off all sharp edges and remove burrs. Grease sliding profiles.

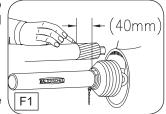

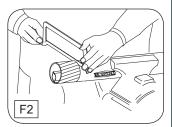

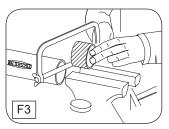

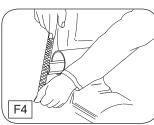

PTO Shaft and Clutch - Benzi PTO

To Dismantle Guard (Figs. J1 - J3)

1. Pull the guard tube backwards and, using a screwdriver, disengage the three bearing ring tabs by pushing them inward. (FIG. J1)



2. Remove half-guard. (FIG. J2)



3. Open the bearing ring and remove from the yoke groove. (FIG. J3)



PTO Shaft and Clutch - Benzi PTO (continued)

To Assemble Guard (Figs. K1 - K3)

1. Clean and grease the bearing ring, yoke groove and inner profile tube. (FIG. K1)



- 2. Fit bearing ring in groove with three bearing ring tabs positioned as shown. (FIG. K2)
- Slip on half-guard by aligning the holes on the cone with three bearing ring tabs and the cone inner key with the cut of the bearing ring. (FIG. K2)




- 4. Push half-guard and yoke together causing the half-guard to engage. (FIG. K3)
- <u>NOTE</u>: Ensure the three bearing ring tabs are positioned inside the grooves.
- 5. Confirm half-guard engagement by pulling backwards on the half-guard. (FIG. K3)




PTO Shaft and Clutch - GKN Walterscheid PTO


To Dismantle Guard (Figs. J1 - J4)

- 1. Remove locking screw.
- 2. Align bearing tabs with cone pockets.
- 3. Remove half-guard.
- 4. Remove bearing ring.

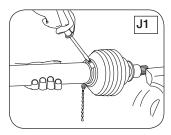



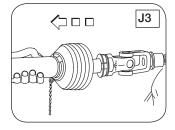


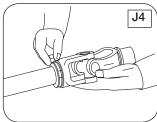



PTO Shaft and Clutch - GKN Walterscheid PTO (continued)


To Assemble Guard (Figs. K1 - K5)


- 1. Grease yoke groove and inner profile tube.
- 2. Fit bearing ring in groove with recesses facing profile tube.
- 3. Slip on half-guard.
- 4. Turn cone until it engages correctly.
- 5. Install locking screw.

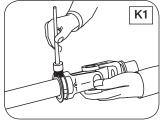

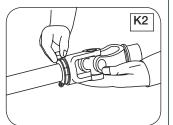

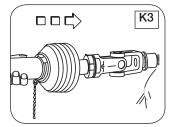


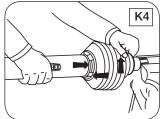


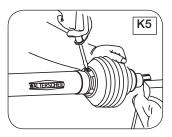


To Assemble Cone (Figs. L1 - L3)

- Dismantle guard (Figs. J1 J3). Remove old cone (e.g. cut open with knife). Take off chain. Place neck of new cone in hot water (approx 80° C / 180° F) and pull onto bearing housing (Fig. L1).
- Turn guard cone into assembly position (Fig. L2). Further assembly instructions for guard (Figs. K1 - K5).
- 3. Reconnect chain if required (Fig. L3).

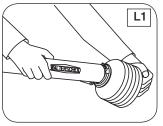

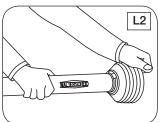

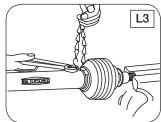

Wheel, Hub and Spindle Disassembly and Assembly

A WARNING

- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE MACHINE IS SECURELY BLOCKED.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 30,000 LBS. SPECIFIC LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.

A CAUTION

 IMPROPERLY TORQUED WHEEL NUTS/BOLTS CAN CAUSE A LOSS OF IMPLEMENT CONTROL AND MACHINE DAMAGE. TORQUE WHEEL NUTS/BOLTS TO VALUES IN TABLE. CHECK TORQUE BEFORE USE, AFTER ONE HOUR OF UNLOADED USE OR AFTER FIRST LOAD, AND EACH LOAD UNTIL WHEEL NUTS/BOLTS MAINTAIN TORQUE VALUE. CHECK TORQUE EVERY 10 HOURS OF USE THERE-AFTER. AFTER EACH WHEEL REMOVAL START TORQUE PROCESS FROM BEGINNING. WARRANTY DOES NOT COVER FAILURES CAUSED BY IMPROPERLY TORQUED WHEEL NUTS/BOLTS.

IMPORTANT

- Remove only one wheel and tire from a side at any given time in the following procedure.
- 1. Hitch cart to tractor. Park the empty cart on a firm, level surface. Set the tractor's parking brake, shut off engine and remove key.



- 2. With cart empty, use safe lifting and load holding devices rated at 30,000 lbs. to support the weight of your grain cart. Place the safe lifting device under the axle closest to the tire.
- 3. Use a 3,000 lbs. safe lifting device to support the wheel and tire during removal.
- 4. If only changing wheel and tire, skip to Step 8; otherwise continue with Step 4.


Remove the hardware retaining the hubcap. Next, remove the hubcap, gasket, cotter pin, castle nut and spindle washer. Remove hub with bearings from old spindle using a 200 lb. safe lifting device.

5. Inspect the spindle and replace if necessary. If spindle does not need to be replaced, skip to Step 6; otherwise continue with Step 5.

Remove the bolt and lock nut that retain the spindle to the axle. Using a safe lifting device rated for 200 lbs., replace the old spindle with a new spindle. Coat axle contact length of spindle shaft with anti-seize lubricant prior to installation. If installing scale spindle, install with 'top' decal facing upwards. Reuse bolt and lock nut to retain spindle to axle. Tighten as outlined in MAINTENANCE section.

Wheel, Hub and Spindle Disassembly and Assembly (continued)

6. Remove seal and inspect bearings, spindle washer, castle nut and cotter pin. Replace if necessary. Pack both bearings with approved grease and reinstall inner bearing. Install new seal in hub with garter spring facing the outside of hub by tapping on flat plate that completely covers seal while driving it square to hub. (FIG. 4-57) Install until flush with back face of hub. Using a safe lifting device rated for 200 lbs., install hub assembly onto spindle. Install outer bearing, spindle washer and castle nut.

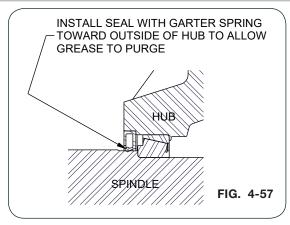

- 7. Slowly tighten castle nut while spinning the hub until drag causes the hub to stop freely spinning. Do not use an impact! Turn castle nut counterclockwise until the hole in the spindle aligns with the next notch in castle nut. Hub should spin smoothly with little drag and no end play. If play exists, tighten to next notch of castle nut. If drag exists, then back castle nut to next notch of castle nut. Spin and check again. Install cotter pin. Clean face for hub cap gasket and install gasket, grease-filled hub cap and retain hubcap with hardware removed. Tighten hubcap hardware in alternating pattern.
- 8. Attach the wheel(s) and tire(s) to the hub using the same rated safe lifting device for removal. Tighten wheel nuts to appropriate requirements and recheck as outlined in the Wheel and Tire section of this manual.
- 9. Raise cart, remove safe load holding devices and lower tire to the ground.

Wheels and Tires

Wheel Nut Torque Requirements



 IMPROPERLY TORQUED WHEEL NUTS/BOLTS CAN CAUSE A LOSS OF IMPLEMENT CONTROL AND MACHINE DAMAGE. TORQUE WHEEL NUTS/BOLTS TO VALUES IN TABLE. CHECK TORQUE BEFORE USE, AFTER ONE HOUR OF UNLOADED USE OR AFTER FIRST LOAD, AND EACH LOAD UNTIL WHEEL NUTS/BOLTS MAINTAIN TORQUE VALUE. CHECK TORQUE EVERY 10 HOURS OF USE THERE-AFTER. AFTER EACH WHEEL REMOVAL START TORQUE PROCESS FROM BEGINNING. WARRANTY DOES NOT COVER FAILURES CAUSED BY IMPROPERLY TORQUED WHEEL NUTS/BOLTS.

Failure to check torque before first load may damage wheel nut/bolt seats. Once seats are damaged, it will become impossible to keep nuts/bolts tight. Tighten nuts/bolts to applicable torque value shown in table. Start all nuts/bolts by hand to prevent cross threading. Torque nuts/bolts in the recommended sequence as shown in Diagram 1.

NOTE: Do not use anti-seize on wheel hardware.

WHEEL HARDWARE		
SIZE FOOT-POUND		
7/8-14 (UNF)	440 ftlbs.	
M22x1.5	475 ftlbs.	

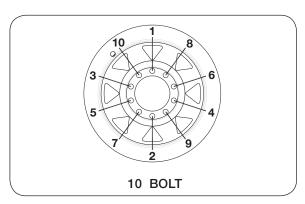


DIAGRAM 1

Wheels and Tires (continued)

Tire Pressure

The following is to be used as a general guide for tire inflation and figures can vary depending on specific brand of tire used. It is important that tires are inspected after unit is loaded. Start with minimum pressure. The tire should stand up with no side-wall buckling or distress as tire rolls. Record the pressure needed to support the full load and maintain this pressure to achieve proper tire life. Do not exceed maximum recommended tire pressure. Each tire must be inflated to 35 PSI max to seat the beads, deflated to 5-10 PSI, then reinflated to recommended minimum pressure.

Tire Pressure for Grain Carts

		Load Index / Ply	
Tire Make	Tire Size	Rating	Max. PS
Firestone	23.1x26 R-3	12	32
	23.1x26 R-1	12	32
	28Lx26 R-3	12	26
	24.5x32 R-3	12	32
	24.5x32 R-1	12	32
	30.5x32 R-1	14	28
	30.5x32 R-3	14	28
	30.5x32 R-3	16	34
	30.5x32 R-1	16	26
	35.5x32 R-3	20	36
	76x50.00x32 HF-3	16	40
	76x50.00x32 HF-3	20	50
	800/65R32 R-1W	172D	41
	800/60R32 R-3	181B	46
	900/65R32 R-3	191B	46
	900/60R32 R-1	176A8	44
	1250/50R32F IF/CFO R-1WNP	201D	46
	1250/50R32F IF/CFO R-1W	188B	30
	520/85R38 R-1	155A8	29
	520/85R38 R-1	173A8	64
	480/80R42 R-1	151A8	36
	520/85R42 R-1	157A8	29
	520/85R42 R-1	165A8	51
	520/85R42 IF/CFO R-1	169A8/B	35
	IF520/85R42 R-1W	169B	35
	VF520/85R42 R-1W	177B	35
	IF1100/50R42 CFO R-1W	197B	46
	420/80R46 R-1	151A8	44
	480/80R46 R-1	158A8	44
	380/90R46 R-1	152B	51

Wheels and Tires (continued)

Tire Pressure (continued)

Tire Make	Tire Size	Load Index / Ply Rating	Max. PS
Titan/Goodyear	23.1x26 R-3	10	26
	23.1x26 R-1	10	26
	24.5R32 R-1	169A8/B (5-Star)	48
	24.5x32 R-3	12	32
	24.5x32 R-1	12	32
	30.5x32 R-3	16	26
	30.5x32 R-3	14	22
	30.5x32 R-1	14	22
	480/80x42 R-1	166A8	23
	800/65R32 R-1W	172D	34
	900/60R32 R-1W	185A	49
	1050/50R32 R-1	196D	52
	1100/45R46 R-1W	195D	35
	IF1250/50R32 R-1W	201D	46
Mitas	650/75R32 R-1W	172A8	58
	650/75R32 R-1	176A8	41
	800/65R32 R-1W	172A8	46
	900/60x32 R-1W	181A8	58
	900/60x32 CHO R-1W	181A8	46
	900/70R32 R-1W	188A8	53
	1050/50x32 R-1W	178A8	41
	1250/50R32 R-1W	188A8	41
	900/60x38 R-1W	181A8	44
	520/85x42 R-1W	162A8	44
	650/65x42 R-1W	168A8	44
Alliance	30.5B32	18-Ply	36
	35.5LR32	193A8	44
	900/60R32 R-1W 1050/50R32 R-1W	192D	46 52
	1050/50R32 R-1W 1250/50R32 R-1W	185A8 201B	52 46
Trelleborg	VF1050/50R32 R-1	198D	52
Heliebolg	900/50R32 R-1W	181A8	55
	900/60x32	176LI	44
	300/00X0Z	17001	77

Wheels and Tires (continued)

Tire Warranty

For questions regarding new tire warranty, please contact your local original equipment tire dealer. Used tires carry no warranty. Following are phone numbers and Websites for your convenience:

Firestone www.firestoneag.com

Phone 800-847-3364

Titan www.titan-intl.com
or Phone 800-USA-BEAR

Goodyear Fax 515-265-9301

Trelleborg www.trelleborg.com

Phone 866-633-8473

Continental/Mitas www.mitas-tires.com

Phone 704-542-3422 Fax 704-542-3474

Alliance www.atgtire.com

Phone 781-325-3801

Bleeding Procedure For Braking System


A WARNING

- RELIEVE THE HYDRAULIC SYSTEM OF ALL PRESSURE BEFORE ADJUSTING OR SERVICING. SEE THE HYDRAULIC POWER UNIT OPERATOR'S MANUAL FOR PROPER PROCEDURES.
- HIGH-PRESSURE FLUIDS CAN PENETRATE THE SKIN AND CAUSE SERIOUS INJURY
 OR DEATH. LEAKS OF HIGH-PRESSURE FLUIDS MAY NOT BE VISIBLE. USE CARDBOARD OR WOOD TO DETECT LEAKS IN THE HYDRAULIC SYSTEM. SEEK MEDICAL
 TREATMENT IMMEDIATELY IF INJURED BY HIGH-PRESSURE FLUIDS.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING IMPLEMENT.
- PLACE TRACTOR IN PARK, TRACTOR MUST IN PARK DURING ENTIRE PROCEDURE.

<u>NOTE</u>: System is intended for tractors with hydraulic trailer brakes. If your tractor does not have hydraulic trailer brakes, contact your dealer for support.

<u>NOTE</u>: This procedure is a **two-person** process. With responsible operator behind controls, one person operates the brake pedal while the second person loosens the bleeder screw on the brake caliper.

- Block tires to prevent movement. Set the tractor parking brake, but leave tractor engine on throughout the procedure. Brakes can be attached to either the front or rear set of wheels. Attach hydraulic brake coupler on the cart to the implement brake port at the rear of the tractor.
- 2. Apply and hold pressure to brake pedal.
- 3. Attach a clear 1/4" hose to fitting. Put hose in an approved container and submerge the end in brake fluid. Loosen the bleeder screw, at the top of the brake caliper, on caliper of the closest wheel located in the hydraulic circuit. If necessary, pump the brake pedal to extract all air from the system. Once air bubbles are no longer present in the hose, tighten the bleeder screw. (Fig. 4-58)
- 4. Repeat steps 2 and 3 to the next brake caliper in the brake circuit. Repeat until all brakes are bled.
- 5. Do a final tightness check of all caliper bleed screws before beginning cart operation. Check that brakes actuate and release properly with tractor brake pedal.

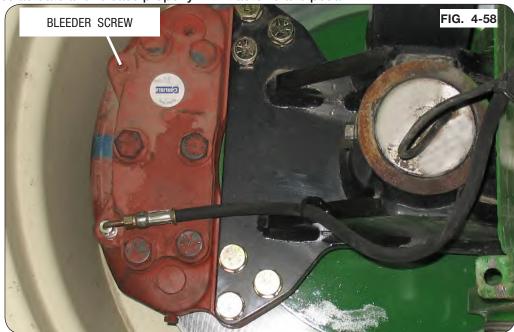


Hydraulic Jack Cylinder Replacement


WARNING

- HIGH-PRESSURE FLUIDS CAN PENETRATE THE SKIN AND CAUSE SERIOUS INJURY OR DEATH. LEAKS OF HIGH-PRESSURE FLUIDS MAY NOT BE VISIBLE. USE CARD-BOARD OR WOOD TO DETECT LEAKS IN THE HYDRAULIC SYSTEM. SEEK MEDICAL TREATMENT IMMEDIATELY IF INJURED BY HIGH-PRESSURE FLUIDS.
- RELIEVE THE HYDRAULIC SYSTEM OF ALL PRESSURE BEFORE ADJUSTING OR SERVICING. SEE THE HYDRAULIC POWER UNIT OPERATOR'S MANUAL FOR PROPER PROCEDURES.
- HYDRAULIC SYSTEM MUST BE PURGED OF AIR BEFORE OPERATING TO PREVENT SERIOUS INJURY OR DEATH.
- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH. ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.
- UNHITCHING A LOADED CART CAN CAUSE SERIOUS INJURY OR DEATH DUE TO TONGUE RISING OR FALLING. ALWAYS HAVE A LOADED CART ATTACHED TO A TRACTOR. THE JACK IS INTENDED TO SUPPORT AN EMPTY CART ONLY.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 100 LBS. SPECIFIC LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.
- 1. Park the empty unit on a firm, level surface. Block tractor and machine to keep it from moving. Set the tractor parking brake, shut off the engine and remove the ignition key. Completely disconnect the PTO from the cart and tractor.
- 2. Attach hydraulic jack hoses to tractor SCV.
- 3. Open valve and lower jack leg to ground. DO NOT raise tongue.




- 4. Relieve pressure on hydraulic jack circuit. See tractor operator manual for procedure.
- 5. Close valve.
- 6. Support the hydraulic jack assembly with a safe lifting device rated for a minimum of 100 lbs.
- 7. Remove hydraulic jack hoses from tractor SCV.
- 8. Remove cylinder pin (272587) and snap rings (91192) from the base end of the cylinder at the lug on top of the tongue. (FIG. 4-59)
- 9. Remove hydraulic jack assembly from the tongue. (FIG. 4-59)

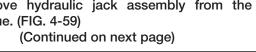

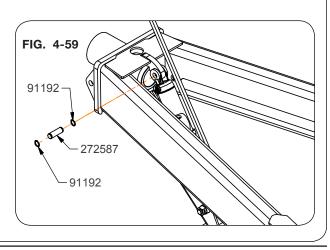

Hydraulic Jack Cylinder Replacement (continued)

- 10. On new hydraulic assembly (296288B), attach hoses (9006068) and fittings to cylinder (9009047) as shown in FIG. 4-60. The valve needs to be assembled to the hose on the base end of the cylinder. Assemble the fittings on the cylinder so they face each other, then store the hydraulic hoses on the hose caddy.
- 11. To reassemble hydraulic jack, see "Install Hydraulic Jack (Optional)" in SET UP section.

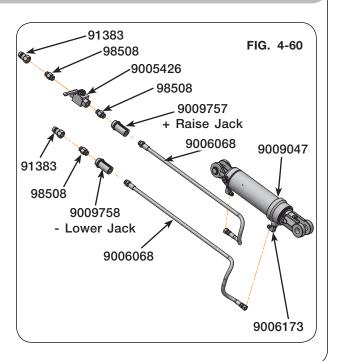

Seasonal Storage

Always open and keep open flow door, horizontal and vertical auger cleanout doors to remove any remaining grain and to allow moisture to dry.

Wash machine inside and out before storing to remove dirt and debris that can draw and collect moisture. When using pressure washers maintain an adequate distance so not to force water into bearings.

Lubricate machine at all points outlined.

Repaint all areas where paint has been removed to keep from rust developing. Rust will affect grain flow.

Coat exposed cylinder piston rods with rust preventative material if applicable.

Inspect machine for parts that may need to be replaced so they may be ordered in the off season.



If the unit is equipped with a scale indicator or electric hydraulic controls, store these indoors in a dry location.

Close the tarp to keep debris out of the hopper.

Ensure rear access door is closed and latched and that all ladders are in storage position.

Possible Cause

Troubleshooting

Problem

Problem	Possible Cause	Corrective Action
	Not getting 12 Volt power supply to the power harness in the tractor	Check the connections to the main power harness in the tractor cab, and check the 5 AMP fuse in the fuse holder of the main power harness. Replace fuse if necessary.
No Electric Over Hydraulic (EOH) Functions work	Rotate and fold functions not working properly	The joystick and 7-pin connector MUST be plugged into the same power source. If plugged into different power sources, the spout rotate and auger fold functions WILL NOT operate normally.
	Not getting good connection at Deutch connectors in the harnesses	Unplug the Deutsch connectors at the hitch point and in the extension harness (if used). Clean up the connectors with electrical contact cleaner. Make sure the connectors are aligned correctly and re-connect them.
	Not pressurizing the correct hydraulic hose	Make sure the quick couplers are properly connected to the tractor SCV and the Hydraulic Pressure line is being pressurized when engaging the tractor SCV.
Auger unfolds part way and stops	Debris in the EOH block on the auger fold cylinder	Fold auger, remove hydraulic pressure, and remove the Coil and the cartridge valve on the EOH valve block. Remove any debris and reinstall cartridge and coil.
Rotating spout will not function	Cartridge valve(s) on the EOH valve block are not locked in center position.	Check the cartridge valve(s) on the EOH valve block are locked in center position. Remove any debris on the cartridge valve(s). Refer to "Manual Override for Opt. Electric Over Hydraulic System" in MAINTENANCE section.
	Defective coil on the EOH valve for that function	Loosen the cap for the coils associated with that function on the EOH valve. Depress the button on the remote, and determine if the coils are getting magnetized. Inspect the wiring connectors to these coils, and replace the coil if necessary.
One single function will not work	Defective valve on the EOH valve for that function	Remove the coil and the cartridge valve on the EOH valve block for that function. Replace the valve if it doesn't operate when the coil is magnetized.
	Debris in the EOH block at the base of the vertical auger	Remove the coil and the cartridge valve on the EOH valve block. Remove any debris and reinstall cartridge and coil.
Functions continue to operate	Tractor hydraulic flow is set too high	Turn tractor hydraulic flow down so that flow doesn't exceed 6 gallons per minute.
after the button on the remote is released	Defective valve on the EOH valve for that function	Remove the coil and the cartridge valve on the EOH valve block for that function, and replace the cartridge.

Corrective Action

Auger Switch Troubleshooting

The switch at the hinge pin should be adjusted so there is 1/8" gap below the lower auger hinge plate. To maintain the 1/8" gap, adjust the hinges on the upper auger or by turning the switch in or out until the 1/8" gap is achieved. (FIG. 4-62)



Tarp Troubleshooting Inspection & Maintenance

PROBLEM	SOLUTION	
TARP SAGS IN MIDDLE AREAS	1. BOWS MAY BE BENT OR ADJUSTED TOO LOW 2. MISSING OR LOOSE RIDGE STRAP REPLACE OR RETIGHTEN 3. TENSION MAY BE TOO LOOSE. U-JOINT MAY NEED TO BE ADJUSTED ON SPLINED SHAFT TO PROVIDE MORE TENSION	
HOLES OR TEARS IN TARP	1. CONSULT YOUR LOCAL DEALER FOR REPAIRS 2. ORDER TARP REPAIR KIT FROM DEALER 3. WHEN NEW TARP OR PARTS ARE NEEDED ALWAYS REPLACE WITH ORIGINAL PARTS	

Inspection and Maintenance

A WARNING

- TO PREVENT PERSONAL INJURY OR DEATH, DO NOT ALLOW ANYONE ON A CLOSED TARP. TARP SYSTEM IS NOT DESIGNED TO SUPPORT A PERSON.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. REMOVE ACCUMULATED WATER/SNOW/ICE OR ANY OTHER OBJECTS FROM TARP BEFORE OPENING TARP.

IMPORTANT

- Do not open or close tarp while moving or in high wind conditions. Damage to the tarp may occur.
- Tarp should not be used if it is torn or the bungee cords are frayed or show damage. Fully close tarp with tension on the latch plate to prevent water from pooling.

Periodic preventive maintenance should be practiced. Inspect tarp and hardware often for abrasions or loosened bolts that may need adjustment and/or repair. Check bungee cords for wear and adjust tension at the beginning of the season and again half way through the season.

Tears in tarp should be addressed before further tarp operation. If water pools on tarp, adjust tension of tarp cables and/or arm springs.

If installed correctly, tarp should always operate as well as when first installed. If tarp does not pass this simple inspection, make all appropriate repairs or adjustments immediately before serious damage occurs.

Unverferth 1620 — Maintenance

Electrical System Diagram — Plug #92450

GRAIN CART WIRES


White -- Ground


Green -- Right Amber Flashing Lamp Yellow -- Left Amber Flashing Lamp


Brown -- Tail Light
Black -- Work Lights
Red -- Brake Lights
Blue -- NOT USED


Black - Work Lights
Green - RH Turn
Yellow - LH Turn


Brown - Tail
White - Ground
Red - Brake

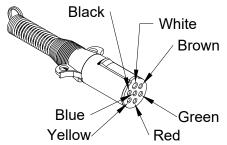


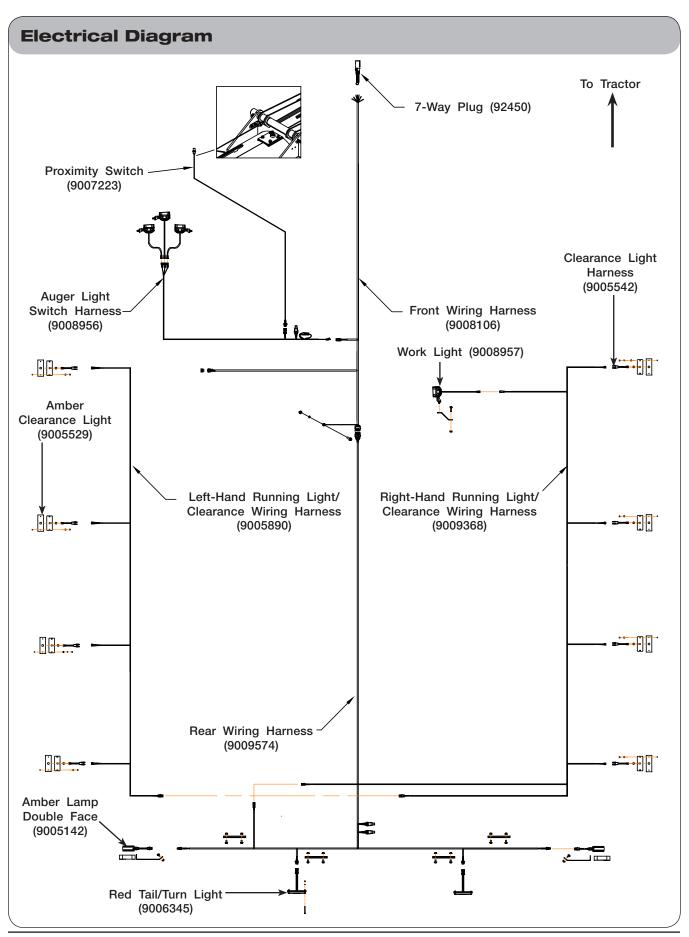


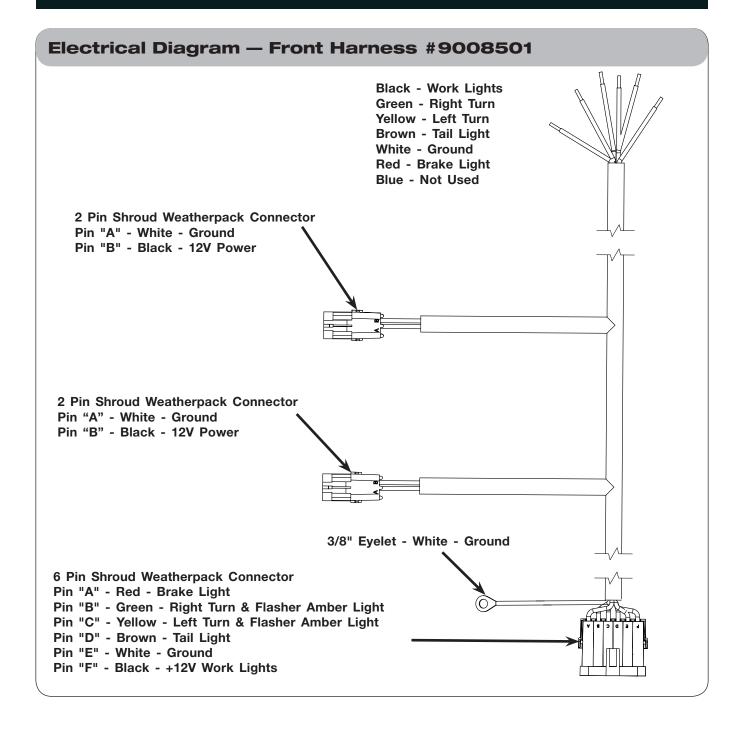


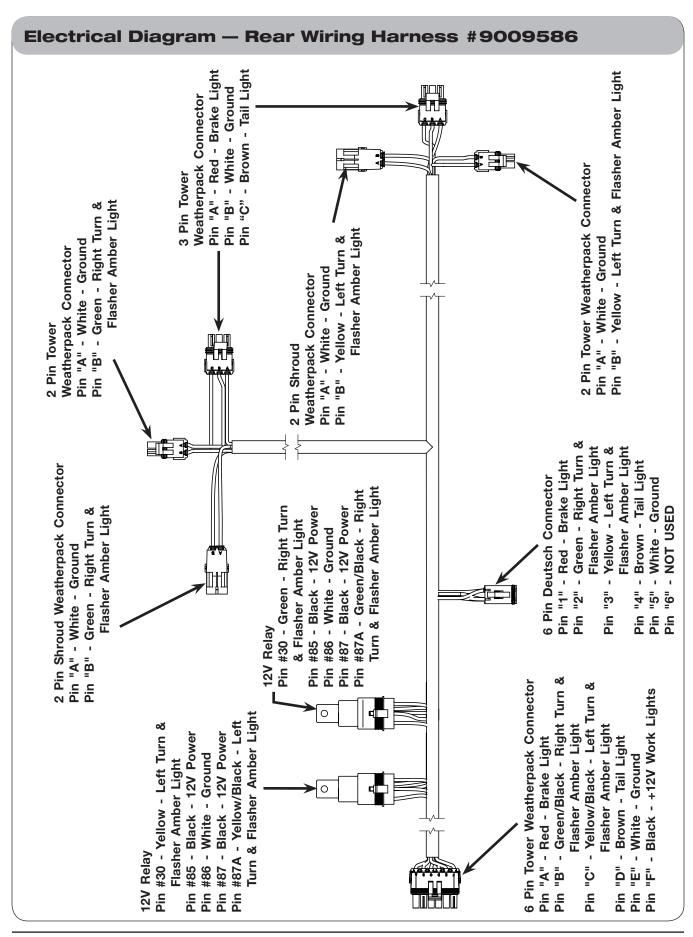

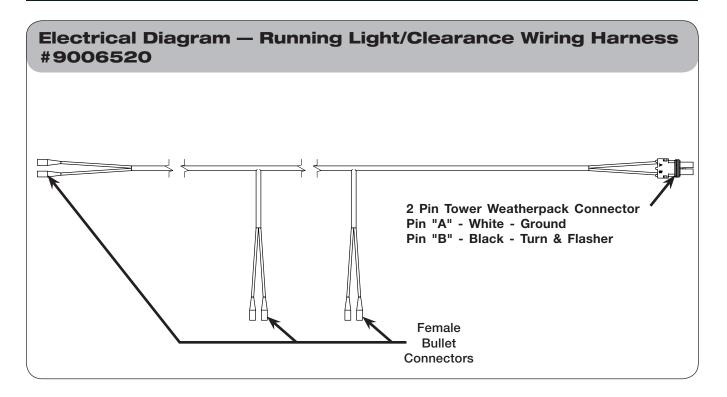


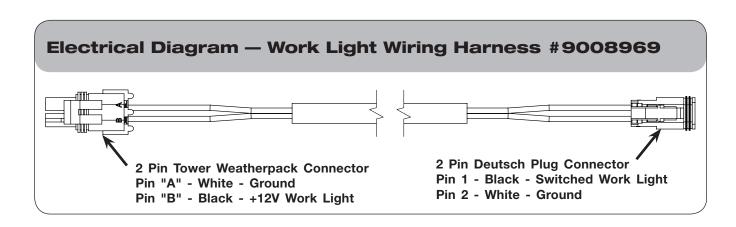


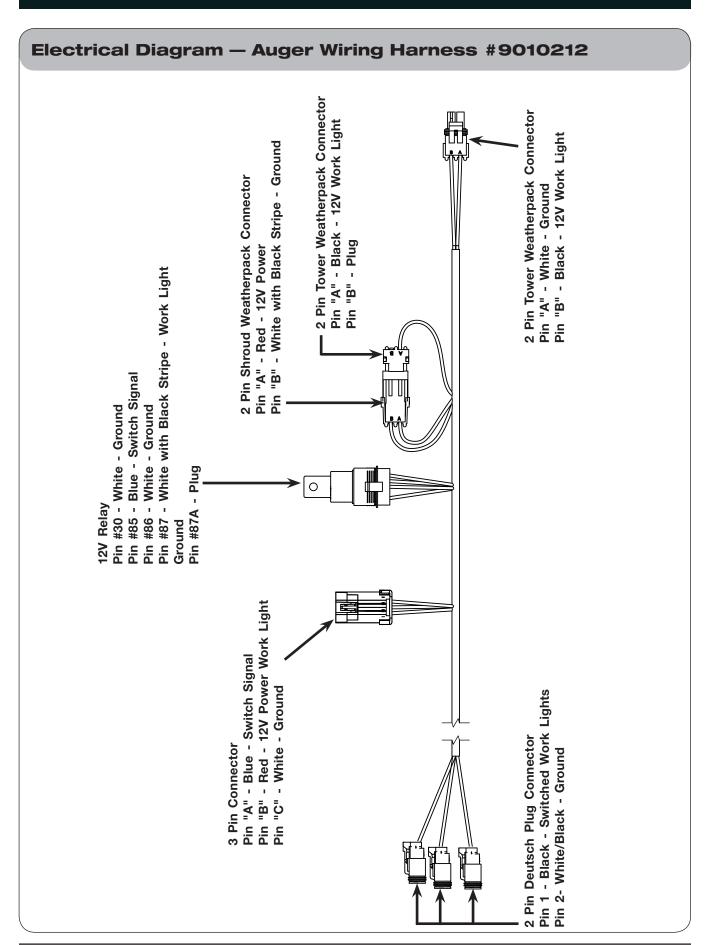


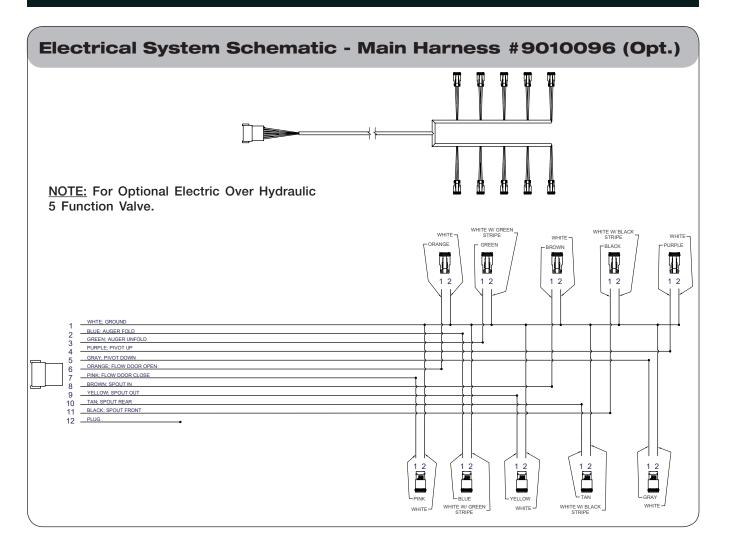



Unverferth 1620 — Maintenance

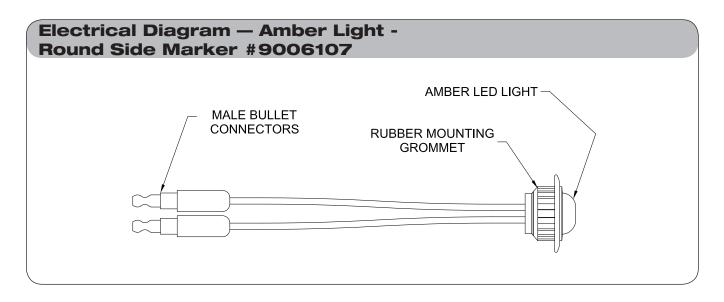

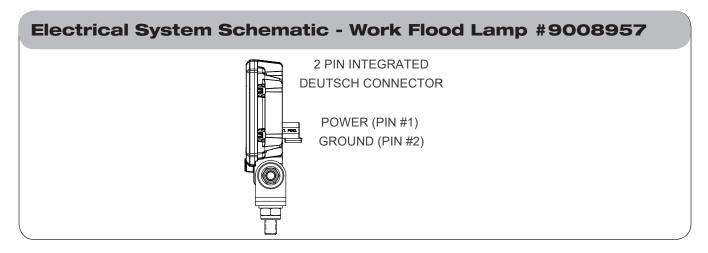


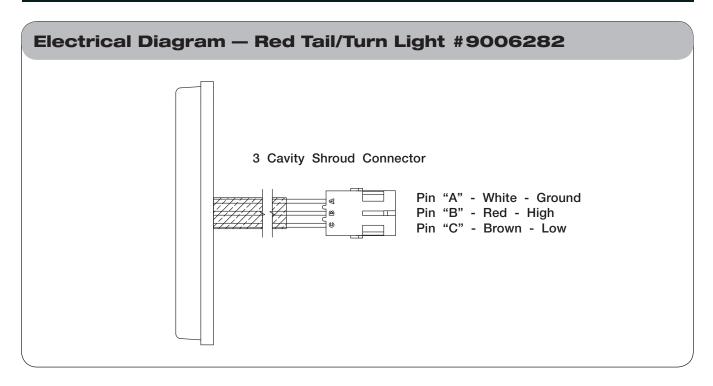


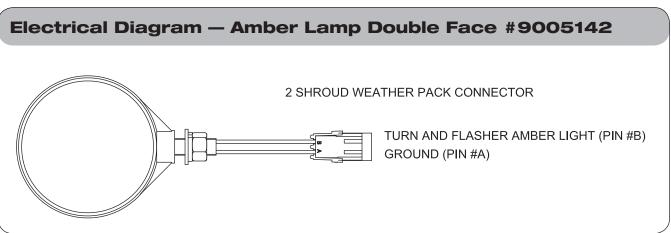


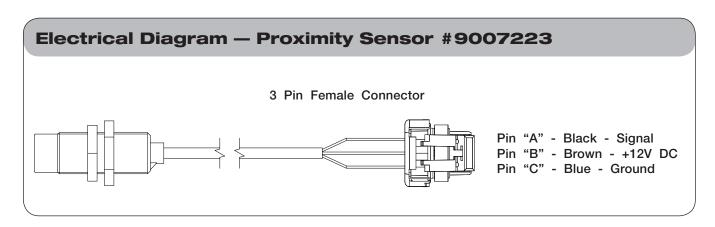


Unverferth 1620 — Maintenance

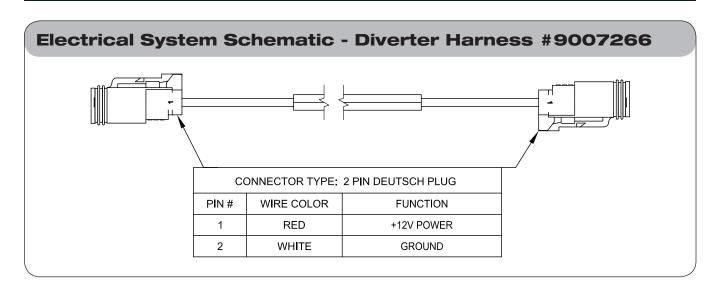

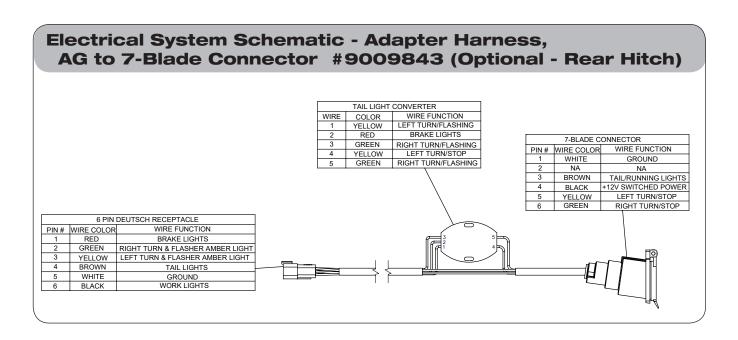


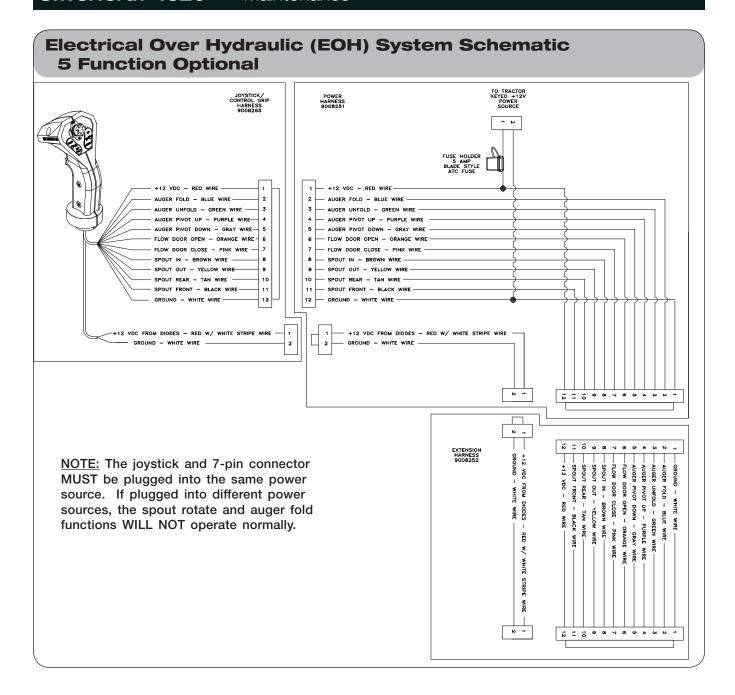


Optional Electric Over Hydraulic Valve Electric Schematic 5 Spool

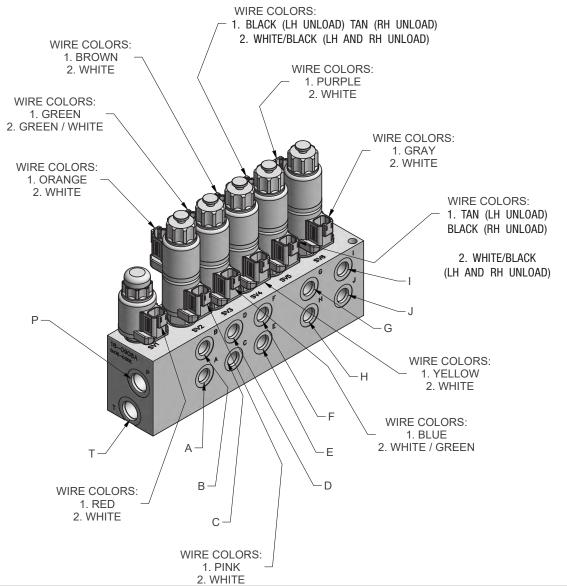

PORT	END OF CYLINDER	FUNCTION
A	BUTT END	FLOW DOOR
В	RAM END	FLOW DOOR
С	RAM END	AUGER FOLD
D	BUTT END	AUGER FOLD
E	RAM END	SPOUT TILT OUT
F	BUTT END	SPOUT TILT IN
G	RAM END	JOYSTICK / SPOUT ROTATE BACK
Н	BUTT END	JOYSTICK / SPOUT ROTATE FRONT
I	BUTT END	AUGER PIVOT DOWN
J	RAM END	AUGER PIVOT UP
Р		TRACTOR PRESSURE
Т		TRACTOR RETURN

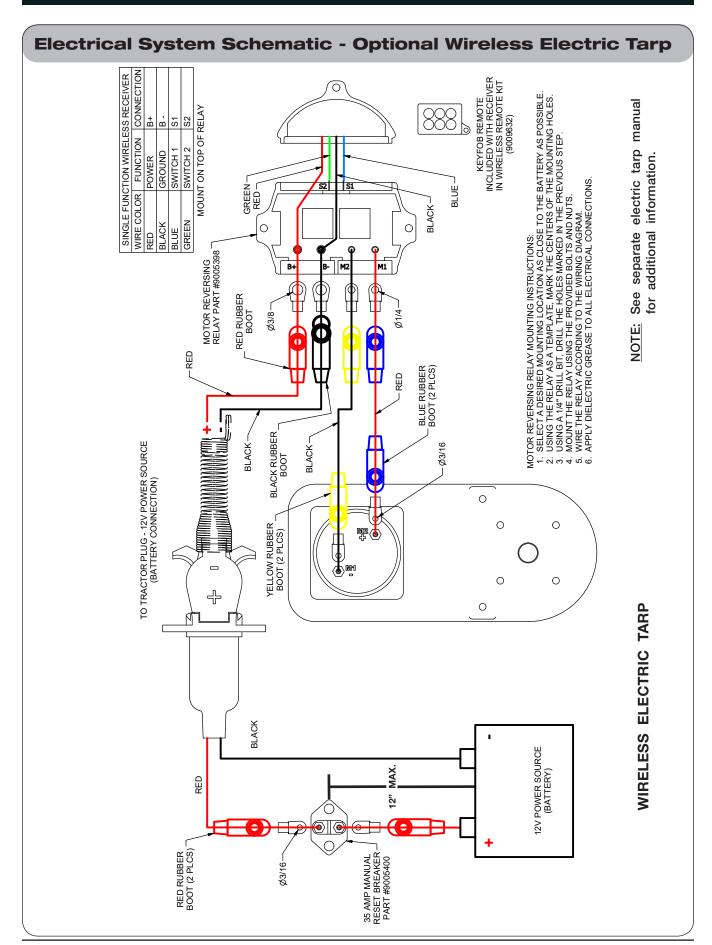

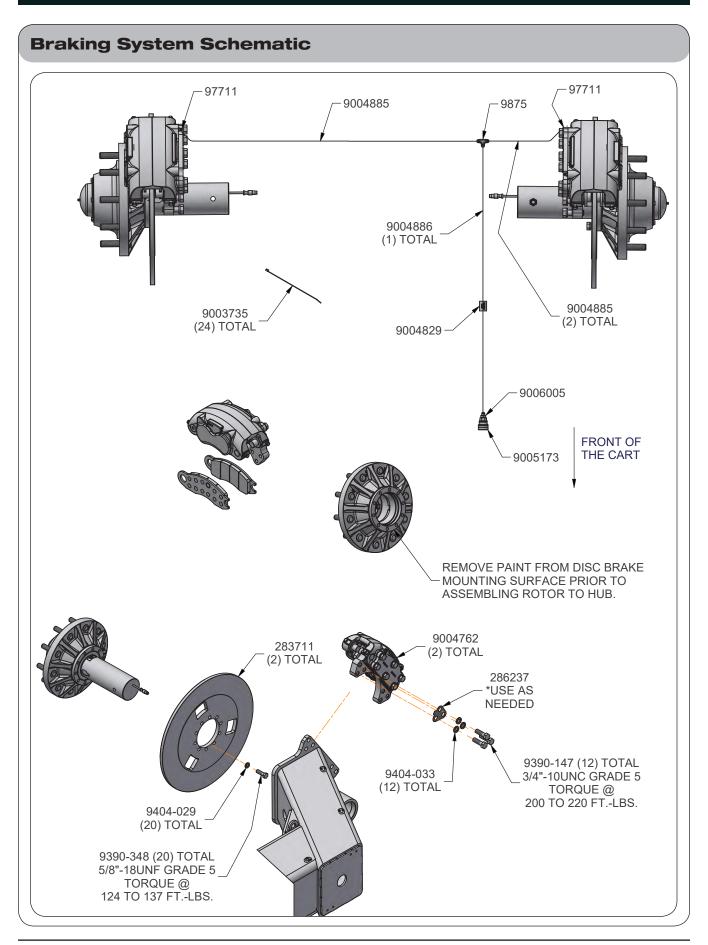

Complete Torque Chart

Capscrews - Grade 5

NOTE:

- Grade 5 capscrews can be identified by three radial dashes on the head.
- For wheel torque requirements, refer to Wheels and Tires.
- Tighten U-bolts evenly and equally to have the same number of threads exposed on each end.

SIZE	FOOT POUNDS	NEWTON Meters
1/4-20	8-10	11-13
1/4-28	9-11	12-15
5/16-18	15-17	20-23
5/16-24	17-19	23-26
3/8-16	25-28	34-38
3/8-24	28-31	38-42
7/16-14	40-45	54-61
7/16-20	45-50	61-68
1/2-13	62-68	84-92
1/2-20	68-75	92-102
9/16-12	90-98	122-133
9/16-18	100-110	134-148
5/8-11	120-135	162-183
5/8-18	124-137	168-186
3/4-10	200-220	270-300
3/4-16	210-230	285-310
7/8-9	330-350	425-475
7/8-14	360-380	460-515
1-8	500-525	675-710
1-14	540-560	730-760
1 1/8-7	600-635	815-860
1 1/8-12	665-700	920-950
1 1/4-7	850-895	1150-1215
1 1/4-12	940-990	1275-1340
1 3/8-6	1125-1175	1525-1590
1 3/8-12	1280-1335	1735-1810
1 1/2-6	1500-1560	2035-2115
1 1/2-12	1685-1755	2285-2380

IMPORTANT

• Follow these torque recommendations except when specified in text.

Complete Torque Chart

Capscrews - Grade 8

NOTE:

- Grade 8 capscrews can be identified by six radial dashes on the head.
- For wheel torque requirements, refer to Wheels and Tires.





SIZE	FOOT POUNDS	NEWTON METERS
5/16-18	20-22	27-30
5/16-24	21-23	28-31
3/8-16	35-39	47-53
3/8-24	36-41	49-55
7/16-14	54-58	73-78
7/16-20	55-60	75-80
1/2-13	82-88	110-120
1/2-20	94-99	125-135
9/16-12	127-134	170-180
9/16-18	147-155	199-210
5/8-11	160-170	215-230
5/8-18	165-175	225-235
3/4-10	280-295	380-400
3/4-16	330-365	445-495
7/8-9	410-430	555-580
7/8-14	420-440	570-595
1-8	630-650	850-880
1-14	680-700	920-950
1 1/8-7	900-930	1220-1260
1 1/8-12	930-950	1260-1290
1 1/4-7	1250-1300	1695-1760
1 1/4-12	1280-1320	1735-1790

IMPORTANT

• Follow these torque recommendations except when specified in text.

Hydraulic Fittings - Torque and Installation

A WARNING

- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WARN WHILE SERVICING THE IMPLEMENT.
- HIGH-PRESSURE FLUIDS CAN PENETRATE THE SKIN AND CAUSE SERIOUS INJURY OR DEATH. LEAKS OF HIGH-PRESSURE FLUIDS MAY NOT BE VISIBLE. USE CARDBOARD OR WOOD TO DETECT LEAKS IN THE HYDRAULIC SYSTEM. SEEK MEDICAL TREATMENT IMMEDIATELY IF INJURED BY HIGH-PRESSURE FLUIDS.



- HYDRAULIC SYSTEM MUST BE PURGED OF AIR BEFORE OPERATING TO PREVENT SERIOUS INJURY OR DEATH.
- RELIEVE HYDRAULIC SYSTEM OF ALL PRESSURE BEFORE ADJUSTING OR SERVICING. SEE TRACTOR OPERATOR'S MANUAL FOR PROPER PROCEDURES.


Tightening O-Ring Fittings

- Inspect components for damage or contamination. Do not connect any other type of fitting to an O-ring fitting.
- 2. For adjustable fittings, ensure the jam nut and washer are fully backed up.
- 3. Lubricate the O-ring and threads on the fitting.
- 4. Turn the fitting into the port until it is finger tight.
- 5. For adjustable fittings, set in the desired position.
- 6. Using a wrench, torque the fitting to the value in the below table. For adjustable fittings the jam nut will be tightened.

NOTE: Never use a power tool to install a fitting.

Dash Size	Thread Size	Straight Stud Torque (Ft-Lbs)	Adjustable Stud Torque (Ft-Lbs)
-5	1/2-20	14-19	10-14
-6	9/16-18	18-24	12-16
-8	3/4-16	27-43	20-30
-10	7/8-14	36-48	30-36
-12	1-1/16-12	65-75	44-54
-14	1-3/16-12	75-99	53-70
-16	1-5/16-12	85-123	59-80
-20	1-5/8"-12	115-161	75-100
-24	1-7/8"-12	125-170	105-125



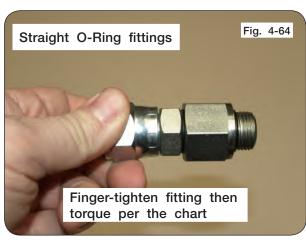


Hydraulic Fittings - Torque and Installation

Tightening JIC Fittings

- Inspect all components for damage or contamination. Do not connect any other type of fitting to a JIC fitting.
- 2. Lubricate the threads.
- 3. Turn the fitting into the port until it bottoms out.
- Use one wrench on the fixed hex on the hose to prevent twisting and a second on the swivel. Tighten the fitting another 60 degrees (or one flat)

NOTE: Never use a power tool to install a fitting.




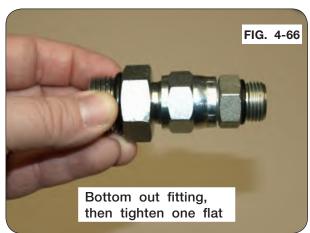


Section V Parts

ease visit www.unverferth.com/parts/ for the most cur	
Touch-Up Paint	
Front End Components	
Side Ladder Components	
Rear Ladder Components	
Rear Access Door Components	
Hopper Cross Brace & Cleanout Door Components	
Sideboards	
Tandem Axle Components	
Tandem Hub Components	
Tandem Wheels & Tires	
Tandem Grease Bank Assembly	5-23
Brake Components (Optional)	5-24
Track Axle Components	5-26
Track Panel Kit Components	5-27
Hopper Flow Door Components	5-28
Front and Rear Flow Door Components	5-30
Flow Door Indicator Assembly	5-32
Rear Runner Brace Components	5-34
Vertical Auger Flighting Components	5-36
Horizontal Auger Components	5-38
Auger Fold Linkage Components	
Downspout Components	
Rotating Spout Components	
Lower Auger Cleanout Door, Covers & Rest Components	
Lower Auger Shields, Pulleys, Bearings, and Belt Components	
Lower Auger Idler Assembly Components	
Lower Auger Retainer Assembly Components	
Cut Out Clutch PTO Assembly - Benzi	
Cut Out Clutch Assembly - Benzi	
Cut Out Clutch PTO Assembly - Walterscheid	
Cut Out Clutch Assembly - Walterscheid	
Gearbox Components	
EOH Valve Assembly Components - Optional	
EOH Valve Functions and Wire Locations - Optional	
EOH Tractor Circuit Hydraulic Components - Optional	
EOH Spout Rotate Components	
Auger Pivot Hydraulic Components	
Auger Fold Hydraulic Components	
Cylinders	
Hopper Rear Electrical Components	
Electrical Components	
End Caps, Tarp Bows & Mounting Brackets	
Weather Guard Tarp	
Rear Drop Hitch (Optional)	
Video System (Optional)	
video Oystotti (Optional)	05


Decals

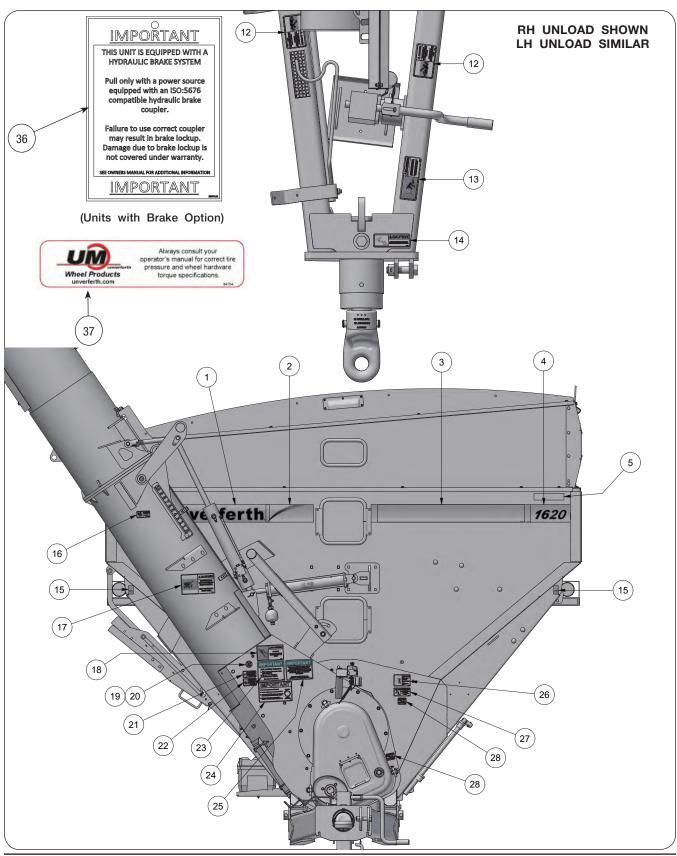

Decals (continued)

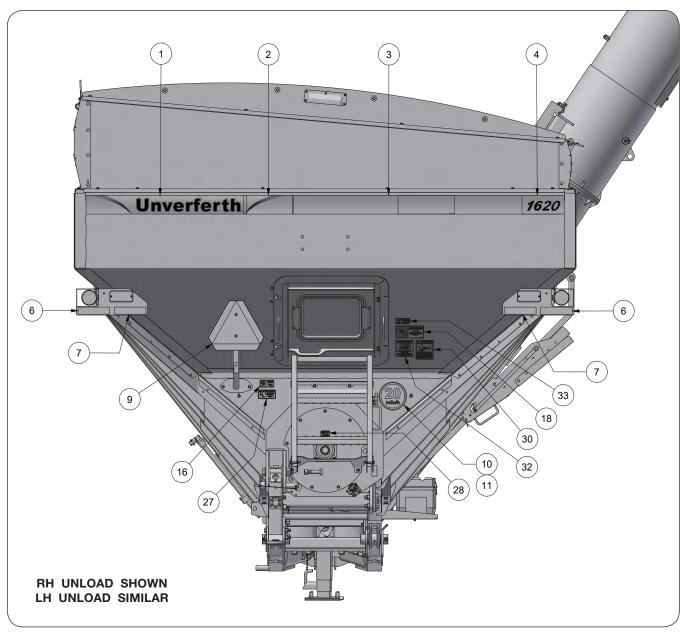


Decals (continued)

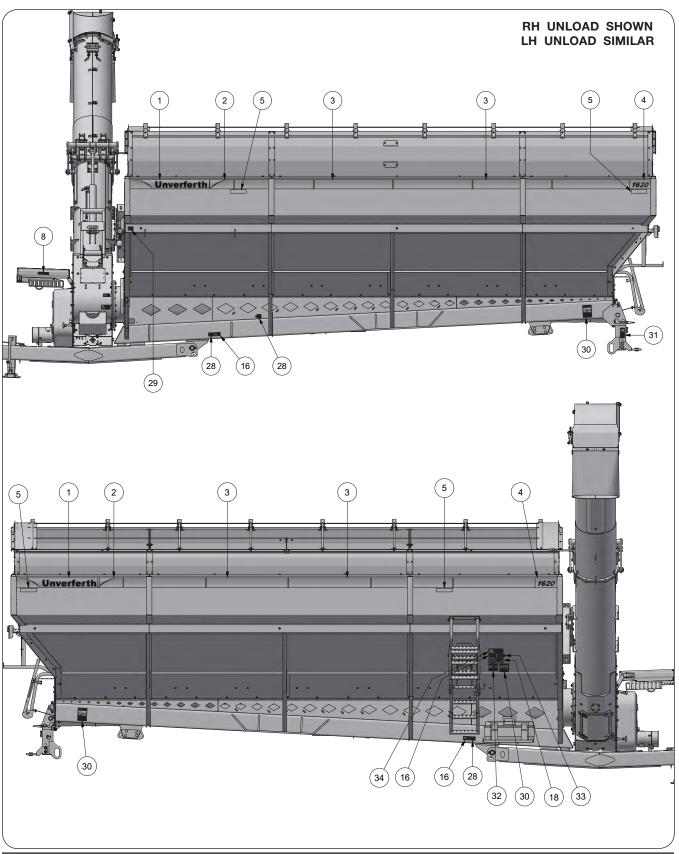

Decals (continued)

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	9004298	Decal, UM Logo		
2	9004213	Decal, UM Logo Tail		
3	9004035	Decal, UM Stripe		
4	9008469	Decal, UM 1620		
5	9003127	Reflector, 2" x 9" =Amber=		
6	9003126	Reflector, 2" x 9" =Red=		
7	9003125	Decal, 2" x 9" =Fluorescent=		
8	9010000	Decal, Hose Caddy Legend		
9	TA510514	SMV Decal		
10	9008714	Rear SIS Decal, MPH		
11	9008720	Rear SIs Decal, KPH		
12	95046	Decal, Danger (Driveline)		
13	94094	Decal, Warning (Rising or Falling Tongue)		
14	97575	Decal, Caution (Transport Chains)		
15	91605	FEMA Decal		
16	95839	Decal, Warning (Pinch Point)		
17	9003474	Decal, Danger (Electric Shock)		
18	9003476	Decal, Warning (No Riders)		
19	9008715	Front SIS Decal, MPH	_	
20	9008721	Front SIS Decal, KPH		
21	97961	Decal, Warning (Operator Manual)		
22	TA1-906109-0	Decal, Warning (Moving Parts)		
23	9004966	Decal, Cart Loading Sequence		
24	9003477	Decal, Important (Operation)		
25	9008151	Decal, PTO Engagment		
26	900024	Decal, Warning (High Pressure Oil)		
27	98229	Decal, Warning (Falling or Lowering Equipment)		
28	9008947	Decal, Grease		
29	283982	Serial Number Decal		
30	9003475	Decal, Danger (Rotating or Moving Parts)		
31	9009646	Decal, Warning (Towing Capacity)		
32	9003478	Decal, Danger (Never Play In or On)		
33	95008	Decal, Caution (Slippery Surface)		
34	9009168	Decal, Warning (Side Ladder Locking Pin)		
35	9008543	Decal, Important (Spout Rotate) *Optional*		Not Shown
36	9007162	Information Tag, Brakes Option		
37	94754	Decal, UM Wheel Systems		


Touch-Up Paint

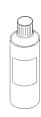

PAINT	SPRAY
Black	97013
Green	97015
Red	97301
Primer, Gray	9500082
Silver Mist	97012
Midnight Grey Metallic	2013136

Notes

Front End Components

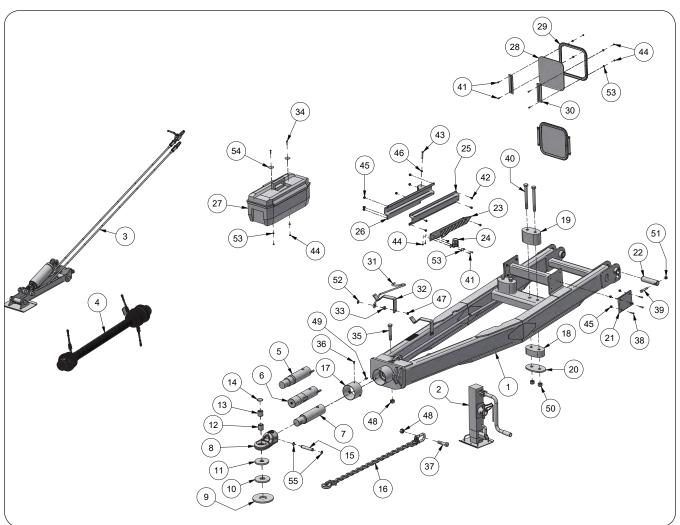


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	271800R	Tongue Weldment =Red=		
1	271800G	Tongue Weldment =Green=] 1	
	271800M	Tongue Weldment =Midnight Grey Metallic=		
2	9005011	Jack	1	
3	276645B	Hydraulic Jack Kit =Black=	1	
4	9008527	PTO Assembly	1	
5	9004910	Scale Hitch Bar 3 3/4" Dia. W/ 16' Cable CAT 4	1	
6	9008119	Scale Hitch Bar 3 3/4" Dia. W/ 16' Cable CAT 5	1	
7	284780	Hitch Bar 3 3/4" Dia. x 16 3/8" CAT 4] ,	
1	271894	Hitch Bar 3 3/4" Dia. x 14 5/8" CAT 5] '_	
8	282875B	CAT 4 Hitch =Black=] ,	
0	282329B	CAT 5 Hitch =Black=	<u> </u>	
9	281899	Poly Wear Shoe CAT 3	1	
10	281898	Poly Wear Shoe CAT 4	1	
11	281663	Poly Wear Shoe CAT 5	1	
12	9002130	Split Tensoin Bushing 2" OD x 1 3/4" ID x 2"	1	
13	9001917	Tension Bushing 2" OD x 1 1/2" ID x 2"	1	
14	9005259	0-Ring	1	
15	282876	CAT 4 Hitch Pin 1" Dia. x 5 1/2"	1	
10	281691	CAT 5 Hitch Pin 1" Dia. x 7 3/8"	1	
16	9004898	Transport Chain, 41,000#	1	
10	PF1238-19	Transport Chain, 61,000#	<u> </u>	For Carts with Rear Hitch Only

Front End Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
17	271891B	Shield Tube =Black=	1	
18	9006457	Spring, 2 1/2" Thick	2	
19	9006456	Spring, 4 3/4" Thick	2	
20	271687B	Spring Retainer Plate =Black=	2	
21	273237	Nylon Pad	2	
22	273368	Pin, 2" Dia. x 7 3/4"	2	
23	296159	Hose Retainer Plate	1	
24	9001968	Trailer Connector Holder	1	
25	294085	Hose Caddy Cover Plate	1	
26	295799	Hose Caddy Weldment	1	
27	9008634	Storage Box	1	
28	9002544	Window	2	
29	271952	Window Moulding	2	
30	250461B	Window Bracket =Black=	4	
31	295840	Driveline Storage Rod	1	
32	296155Y	PTO Bracket =Yellow=	1	
33	296156	PTO Holder Bushing, 1 3/8" ID	1	
34	9390-006	Capscrew, 1/4"-20UNC x 1 1/4" Grade 5	2	
35	91299-125	Capscrew, 1"-8UNC x 6" Grade 8	1	
36	9390-053	Caspcrew, 3/8"-16UNC x 3/4" Grade 5	3	
37	91299-191	Capscrew, 1"-8UNC x 4" Grade 8	1	
38	903171-663	Phillips Head Machine Screw, 5/16"-18UNC x 1 1/2"	8	
39	9390-130	Capscrew, 5/8"-11UNC x 3 1/2" Grade 5	2	
40	9390-464	Capscrew, 1"-8UNC x 10" Grade 5	4	
41	9390-003	Capscrew, 1/4"-20UNC x 3/4" Grade 5	10	
42	91256	Flanged Capscrew, 5/16"-18UNC x 3/4" Grade 5	6	
43	9390-062	Capscrew, 3/8"-16UNC x 2 3/4" Grade 5	1	
44	9936	Lock Nut, 1/4"-20UNC	10	
45	91257	Flanged Hex Nut, 5/16"-18UNC Grade 5	12	
46	902875	Lock Nut, 3/8"-16UNC	1	
47	9003397	Lock Nut, 1/2"-13UNC	1	
48	92199	Lock Nut, 1"-8UNC	2	
49	91263	Flange Nut, 3/8"-16UNC	3	
50	9663	Lock Nut, 1"-8UNC	4	
51	95905	Lock Nut, 5/8"-11UNC	2	
52	9405-088	Flat Washer, 1/2" USS	1	
53	9405-064	Flat Washer, 1/4" USS	2	
54	94763	Fender Washer, 5/16" ID x 2" OD x .08"	2	
55	91192	Retaining Ring, 1"	2	


Side Ladder Components

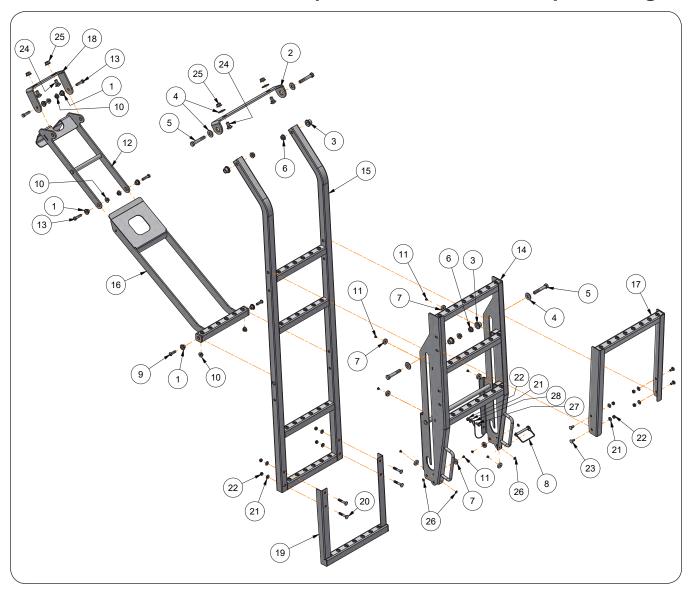

Side Ladder Components


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	2003029	Nylon Bushing, .625" OD x .406" ID x .380"	6	
2	289294B	Plate-Bracket, Ladder =Black=	1	
3	2003030	Nylon Bushing, .875" OD x .531" ID x .563"	4	
4	9405-088	Flat Washer, 1/2" USS	6	
5	9390-107	Capscrew, 1/2"-13UNC x 3" G5	4	
6	9003397	Lock Nut/Top, 1/2"-13UNC	4	
7	TA620384	Plastic Stop, 1" Dia. x .250"	8	
8	9005305	Lynch Pin 3/8" Dia. x 3"	1	
9	99985	Button Head Socket, 3/8"-16UNC x 1 1/4"	2	
10	9008159	Lock Nut/Top, 3/8"-16UNC	6	
11	9003503	Rivet 3/16"X 1/4"	8	
12	289284B	Ladder Link Weldment =Black=	1	
13	9390-057	Capscrew, 3/8"-16UNC x 1 1/2" G5	4	
14	289328B	Ladder Extension Weldment =Black=	1	
15	289326B	Ladder Weldment =Black=	1	
16	289715B	Step Weldment =Black=	1	
17	289707B	Ladder Extension Weldment =Black=	1	
18	289840B	Ladder Bracket =Black=	1	
19	289844B	Ladder Weldment =Black=	1	
20	9388-029	Carriage Bolt, 5/16"-18UNC x 2" G5	4	
21	9405-064	Flat Washer, 5/16" ID USS	9	
22	901527	Lock Nut/Center, 5/16"-18UNC	9	
23	9388-024	Carriage Bolt, 5/16"-18UNC x 3/4" G5	4	
24	9388-102	Carriage Bolt, 1/2"-13UNC x 1" G5	4	
25	91267	Flange Nut 1/2-13 UNC G5	4	
26	9004998	Rivet Burr, 3/16"	4	
27	9390-027	Capscrew, 5/16"-18UNC x 5/8" G5	1	
28	97879	Nylon Lanyard	1	

Rear Ladder Components

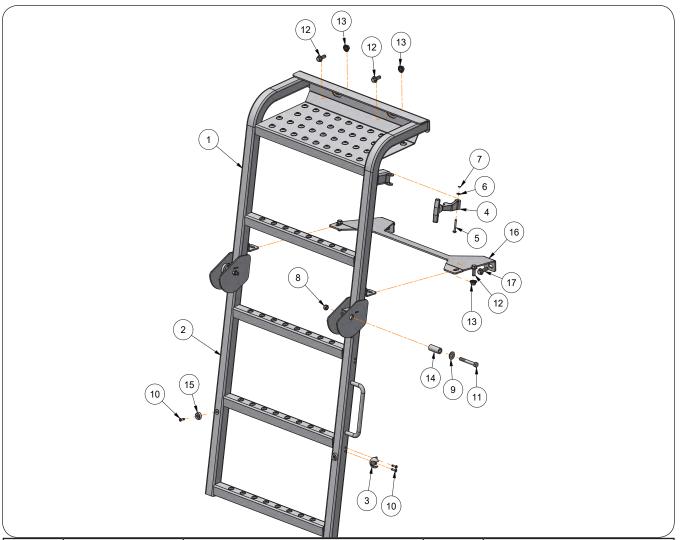


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	297804B	Upper Ladder Replacement Kit =Black=	1	
2	297805B	Lower Ladder Replacement Kit =Black=	1	
3	900059	Draw Latch Keeper	1	
4	900060	Draw Latch Handle	1	
5	900066	Pin 3/16" x 1 1/2"	1	
6	900067	Washer 1/2"	1	
7	900068	E-Ring	1	
8	9928	Lock Nut 3/8-16UNC"	2	
9	9405-076	Flat Washer 3/8" USS	2	
10	TA0-908386-0	3/16" Stainless Rivet	4	
11	9390-062	Capscrew 3/8"-16UNC x 2 3/4" Grade 5	2	
12	91262	Flange Screw 3/8"-16UNC x 1" Grade 5	4	
13	91263	Flange Nut 3/8"-16UNC	4	
14	295137	Pivot Bushing	2	
15	9003850	Bumper	2	
16	296585B	Ladder Bolt Plate =Black=	1	
17	9003259	Flange Screw 3/8"-16UNC x 1 1/4" Grade 5	2	

Rear Access Door Components

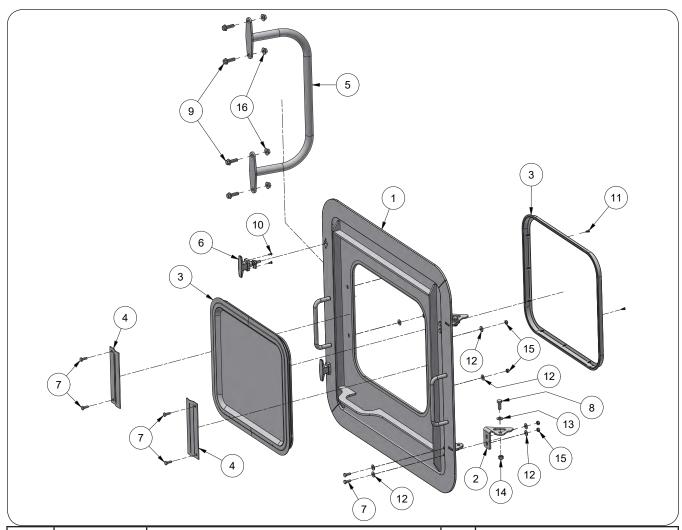

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	256527R	Rear Access Door Weldment =Red=		
1	256527G	Rear Access Door Weldment =Green=	1	
	256527M	Rear Access Door Weldment =Midnight Grey Metallic=		
2	256670	Rear Access Door Hinge	2	
3	9008680	Window and Trim Assembly	1	
4	294121B	Window Bracket =Black=	2	
5	296534B	Access Door Handle Weldment =Black=	1	
6	9009768	Compression Draw Latch	2	
7	9390-003	Capscrew, 1/4"-20UNC x 3/4" Grade 5	8	
8	9390-055	Capscrew, 3/8"-16UNC x 1" Grade 5	3	
9	9003259	Flange Screw, 3/8"-16UNC x 1 1/4"	4	
10	9010397	Caspcrew, M4 x .7 x 14 Grade 8.8	4	
11	9008933	Self Threading Screw, #8-18 x 1/2" #2 Phillips Head	12	
12	9405-064	Flat Washer 1/4" USS	12	
13	9405-074	Flat Washer, 3/8" SAE	4	
14	9928	Lock Nut, 3/8"-16UNC	2	
15	9936	Lock Nut, 1/4"-20UNC	8	
16	9008159	Automation Lock Nut, 3/8"-16UNC	4	


Hopper Cross Brace & Cleanout Door Components

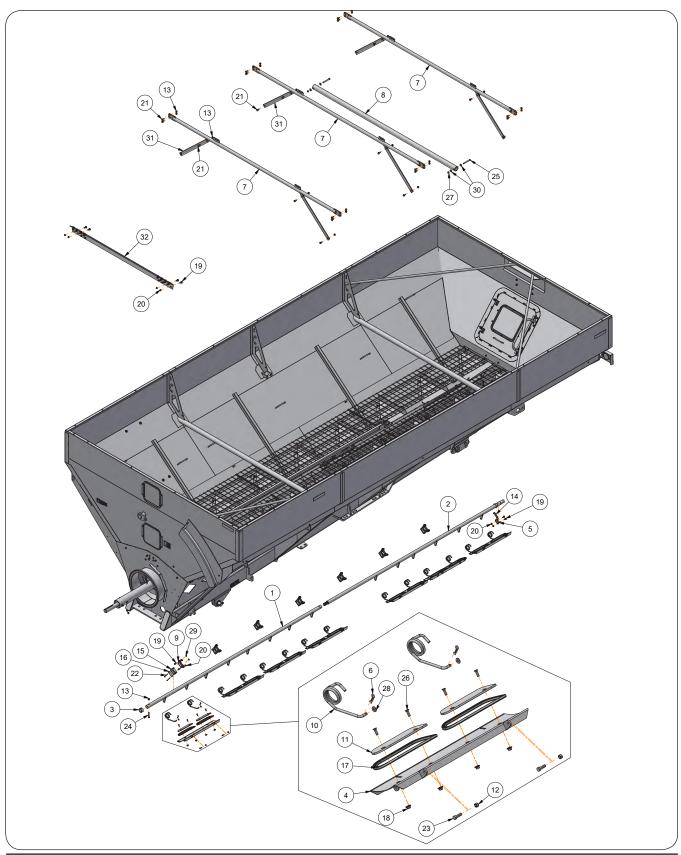

Hopper Cross Brace & Cleanout Door Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	271562B	Front Link Arm Weldment =Black=	1	
2	296813B	Rear Link Arm Weldment =Black=	1	
3	271566B	Stop Bushing =Black=	1	
4	271664B	Cleanout Door Weldment W/Holes =Black=	7	
5	273753B	Door Latch Weldment =Black=	1	
6	TA8B95	Hairpin Cotter, 1/8" Dia. x 1 15/16"	14	
7	296630B	Cross Tube Weldment =Black=	3	
8	296826B	Middle Cross Tube Weldment =Black=	1	
9	286414B	Door Pivot Bracket =Black=	7	
10	286417	Door Linkage Spring	14	
11	286418B	Cleanout Door Doubler Plate =Black=	14	
12	9928	Lock Nut/Top, 3/8"-16UNC Grade 5	14	
13	9003397	Locking Flange Nut, 1/2"-13UNC	1	
14	9005305	Lynch Pin, 3/8" Dia. x 3"	1	
15	9006351	Clamp	7	
16	9006352	Top Plate	7	
17	9007108	Rubber Gasket	14	
18	91257	Large Flange Hex Nut, 5/16"-18UNC Grade 5	28	
19	91262	Large Flange Screw, 3/8"-16UNC x 1" Grade 5	48	
20	91263	Large Flange Nut, 3/8"-16UNC Grade 5	48	
21	91266	Flange Screw, 1/2"-13UNC x 1 1/4" Grade 5	16	
22	9003397	Flange Lock Nut, 1/2"-13UNC Grade 5	16	
23	9390-015	Capscrew, 1/4"-20UNC x 3 1/2" Grade 5	14	
24	9390-056	Capscrew, 3/8"-16UNC x 1 1/4" Grade 5	14	
25	9390-108	Capscrew, 1/2"-13UNC x 3 1/4" Grade 5	1	
26	9390-113	Capscrew, 1/2"-13UNC x 5" Grade 5	2	
27	903171-660	Flat Countersunk Head Machine Screw, 5/16"-18UNC x 1"	28	
28	9800	Locknut, 1/2"-13UNC Grade 5	2	
29	9405-076	Flat Washer, 3/8" USS	14	
30	97189	Large Flange Hex Nut, 1/4"-20UNC	15	
31	9405-088	Flat Washer, 1/2" USS	4	
32	296650B	Brace Bar =Black=	6	

Sideboards

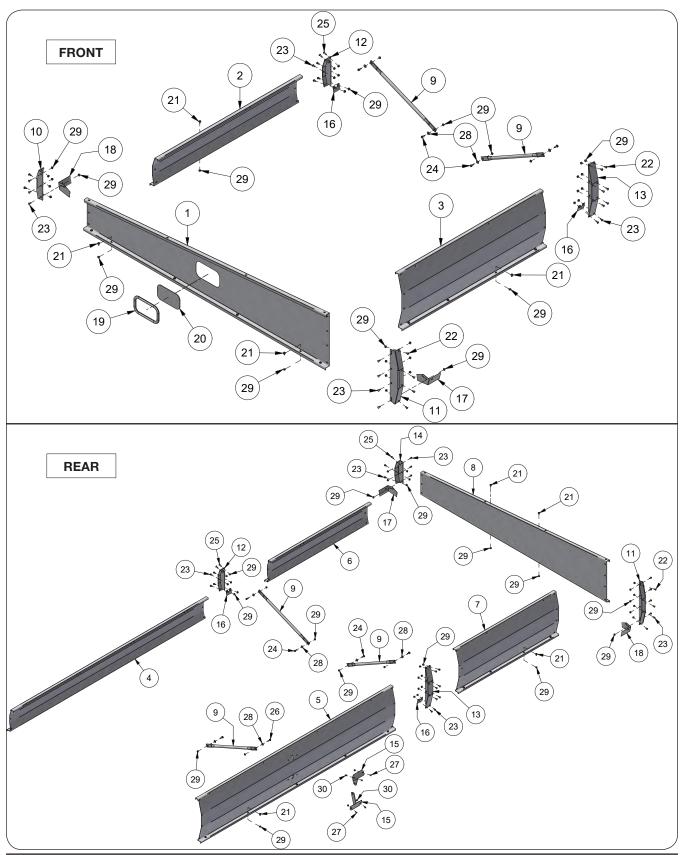

Sideboards


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	298991R	Front Sideboard Replacement Kit =Red=		
1	298991G	Front Sideboard Replacement Kit =Green=	1 1	
	298991M	Front Sideboard Replacement Kit =Midnight Grey Metallic=	i i	
	296320R	RH Front Sidebaord =Red=		
2	296320G	RH Front Sidebaord =Green=	1 1	
	296320M	RH Front Sidebaord =Midnight Grey Metallic=	i i	
	296323R	LH Front Sideboard =Red=		
3	296323G	LH Front Sideboard =Green=	1 1	
	296323M	LH Front Sideboard =Midnight Grey Metallic=	1	
	296321R	RH Middle Sideboard =Red=		
4	296321G	RH Middle Sideboard =Green=	1 1	
	296321M	RH Middle Sideboard =Midnight Grey Metallic=] [
	296324R	LH Middle Sideboard =Red=		
5	296324G	LH Middle Sideboard =Green=] 1 [
	296324M	LH Middle Sideboard =Midnight Grey Metallic=		
	296322R	RH Rear Sideboard =Red=		
6	296322G	RH Rear Sideboard =Green=] 1 [
	296322M	RH Rear Sideboard =Midnight Grey Metallic=		
	296325R	LH Rear Sideboard =Red=		
7	296325G	LH Rear Sideboard =Green=	1	
	296325M	LH Rear Sideboard =Midnight Grey Metallic=		
	296319R	Rear Sideboard =Red=	1	
8	296319G	Rear Sideboard =Green=		
	296319M	Rear Sideboard =Midnight Grey Metallic=		
9	220032B	Sideboard Brace Tubes =Black=	5	
	296328R	RH Front Corner Weldment =Red=]	
10	296328G	RH Front Corner Weldment =Green=	1	
	296328M	RH Front Corner Weldment =Midnight Grey Metallic=		
	296326R	LH Corner Weldment =Red=]	
11	296326G	LH Corner Weldment =Green=	2	
	296326M	LH Corner Weldment =Midnight Grey Metallic=		
	296330R	RH Sideboard Bracket =Red=]	
12	296330G	RH Sideboard Bracket =Green=	2	
	296330M	RH Sideboard Bracket =Midnight Grey Metallic=		
	296329R	LH Sideboard Bracket =Red=		
13	296329G	LH Sideboard Bracket =Green=	2	
	296329M	LH Sideboard Bracket =Midnight Grey Metallic=		
	296327R	RH Rear Corner Weldment =Red=		
14	296327G	RH Rear Corner Weldment =Green=	1	
	296327M	RH Rear Corner Weldment =Midnight Grey Metallic=		
	283938R	Brace Weldment =Red=		
15	283938G	Brace Weldment =Green=	2	
	283938M	Brace Weldment =Midnight Grey Metallic=		
16	295691B	Sideboard Cover Plate =Black=	4	
17	298224B	Sideboard Corner Plate =Black=	2	
18	298223B	Sideboard Corner Plate =Black=	2	

Sideboards

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
19	9001489	Window Moulding	1	
20	92403	Window	1	
21	95585	Flanged Capscrew, 3/8"-16UNC x 3/4" Grade 5	38	
22	9005312	Torx Head Machine Screw, 3/8"-16UNC x 1"	6	
23	9398-051	Carriage Bolt, 3/8"-16UNC x 1" Grade 5	44	
24	9003259	Flanged Capscrew, 3/8"-16UNC x 1 1/4" Grade 5	9	
25	9009089	Torx Head Machine Screw, 3/8"-16UNC x 1 1/4" Grade 5	6	
26	95785	Flanged Capscrew, 3/8"-16UNC x 1 1/2" Grade 5	1	
27	9388-024	Carriage Bolt, 5/16"-18UNC x 3/4" Grade 5	4	
28	9405-078	Flat Washer, 3/8"	10	
29	9008159	Flanged Lock Nut, 3/8"-16UNC	104	
30	9010154	Lock Nut, 5/16"-18UNC	4	

Notes


Tandem Axle Components

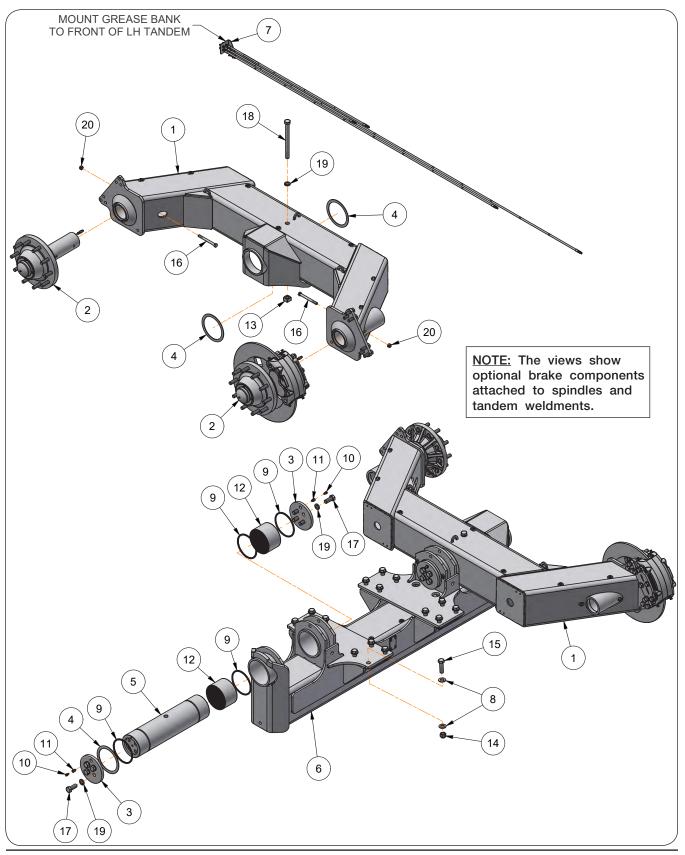

Tandem Axle Components

ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	288851B	Tandem Weldment =Black=	2	
2	283796B	Hub & Spindle Assembly With Scales (Black)	4	Refer to "Tandem Hub
	286170B	Hub & Spindle Assembly Without Scales (Black)	4	Components" for parts list
3	298064B	Cover Plate Replacement Kit =Black=	4	
4	282690	Washer 8 1/2" OD x 7.063" ID	6	
5	298113	Pin Weldment Replacement Kit	2	
6	293600B	Tandem Axle Weldment =Black=	1	
7	293620B	Grease Bank Assembly (Black)	1	
8	804685	Washer 2" OD	32	
9	9006410	Seal	8	
10	9006785	Adapter 90°, 1/8" NPT	4	
11	9006816	Adapter 1/8" NPT	4	
12	9006971	Pivot Bushing	4	
13	9007888	Heavy Square Nut 1"-8UNC Gr.5	2	
14	9008441	Elastic Locknut 1"-14UNS Gr.8	16	
15	91299-1458	Capscrew 1"-14UNS x 3 1/2" Gr.8	16	
16	9390-137	Capscrew 5/8"-11UNC x 6 1/2"	4	
17	9390-185	Capscrew 1"-8UNC x 2 1/2"	16	
18	9390-468	Capscrew 1"-8UNC x 12"	2	
19	9404-041	Lock Washer 1"	18	
20	95905	Lock Nut/Center 5/8"-11UNC	4	


Tandem Hub Components

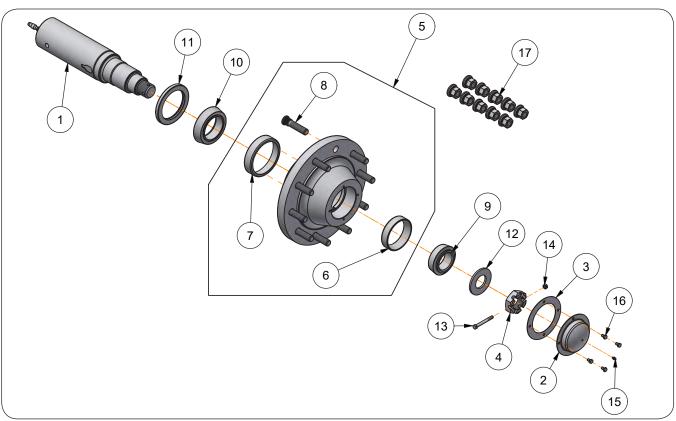

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	283796B	Hub & Spindle Assembly (Black) For Scales		Includes Items 1 through 16
	286170B	Hub & Spindle Assembly (Black) Without Scales		Includes Items 1 through 16
1	9006348	Scale Spindle 4 1/2" Dia.	1	For Scales
' [286172	Spindle 4 1/2" Dia.	1	Without Scales
2	286171B	Hub Cap =Black=	1	
3	284230	Gasket	1	
4	92470	Castle Nut, 2"-12UNF Grade 5	1	
5	283739B	Hub Sub-Assembly =Black=	1	
6	92462	Bearing Cup 4.8125" Dia. (HM212011)	1	
7	92476	Bearing Cup 5.786" Dia. (HM218210)	1	
8	9007001	Stud Bolt, M22 x 1.5 x 4	10	
9	92464	Outer Bearing Cone 2.625" Bore (HM212049)	1	
10	92545	Inner Bearing Cone 3.5423" Bore (HM218248)	1	
11	92455	Grease Seal	1	
12	92472	Spindle Washer (Hardened)	1	
13	9390-064	Capscrew 3/8"-16UNC x 3 1/4" Grade 5	1	
14	902875	Locknut, 3/8"-16UNC	1	
15	91160	Grease Zerk	1	
16	9390-026	Capscrew, 5/16"-18UNC x 1/2" Grade 5	4	
17	267275	Wheel Nut Kit	1	Ilaa with Itam 0
''	97319	Flanged Cap Nut, M22 x 1.5	10	Use with Item 8

Tandem Wheels & Tires

Please visit www.unverferth.com/parts/ for the most current parts listing.

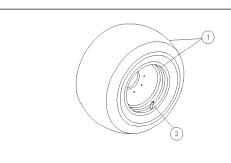


TIRES

For questions regarding new tire warranty, please contact your local original equipment tire dealer. Used tires carry no warranty. Tire manufacturers' phone numbers and websites are listed in the Maintenance Section for your convenience.

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	18325SM	Wheel & Tire Assembly	4	30 x 32 / 900/60R32 R1W (Silver Mist)
1 1	17939SM	Wheel Only	4	30 x 32 (Silver Mist)
	99498	Tire Only	4	TL900/60R32 R-1W (181A8)
	93300	Valve Stem	4	
2	95365	Plug	4	


Tandem Grease Bank Assembly #293620B

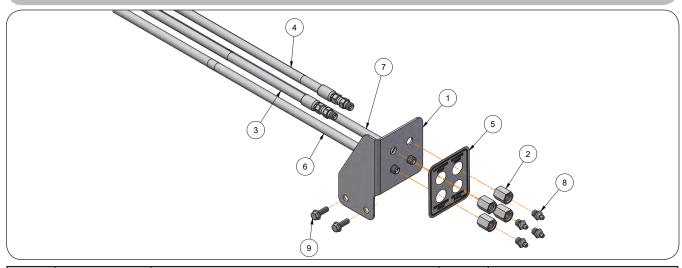

ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	293621B	Grease Bank Bracket =Black=	1	
2	9003949	Coupler 1/8" NPT	4	
3	9008248	Hose 3/16" x 57"	1	
4	9008182	Hose 3/16" x 53"	1	
5	9008499	Decal, Grease Bank	1	
6	9008707	Hose 3/16" x 141"	1	
7	9008708	Hose 3/16" x 120"	1	
8	93426	Grease Zerk	4	
9	97420	Flange Screw 1/4"-20UNC x 3/4"	2	

Brake Components (Optional)

(Requires tractor with Implement Braking)

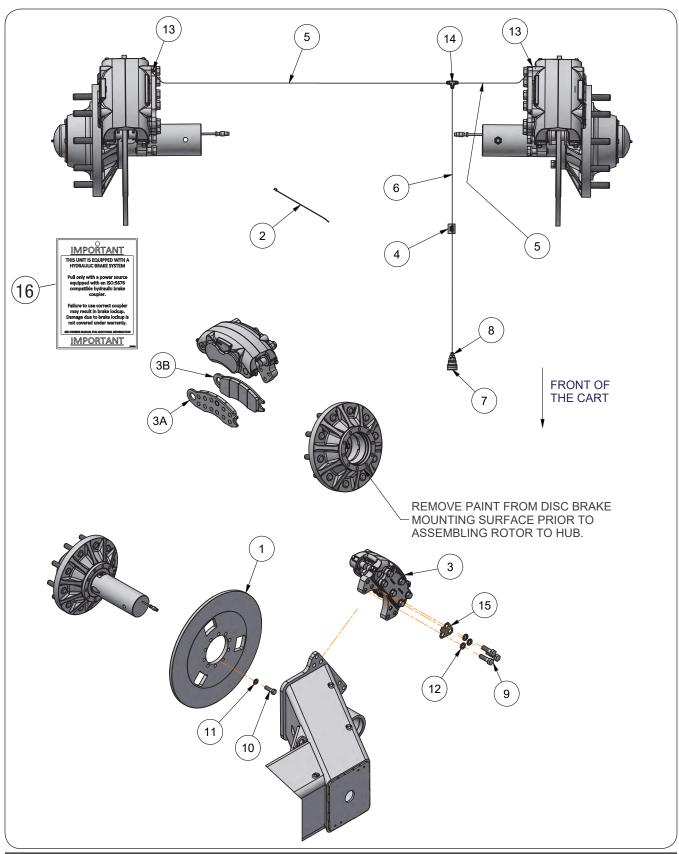


Brake Components (Optional)

(Requires tractor with Implement Braking)


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	283711	Brake Rotor Plate	2	
2	9003735	Cable Tie, 11" Long	24	
3	9004762	Brake Assembly	2	
3A	9007135	Brake Pad - Outer	1	Quantity Per
3B	9007136	Brake Pad - Inner	1	Brake Caliper
3C	9007137	Seal Kit	1	(Not Shown)
4	9004829	Hose Marker Sleeve (Blue) = Brake Pressure	1	
5	9004885	Hose, 1/4" x 108" (3000 PSI)	2	
6	9004886	Hose, 1/4" x 390" (3000 PSI)	1	
7	9005173	Quick Coupler	1	
8	9006005	Adapter, 9/16"-18 JIC M x 18x1.5 M	1	
9	9390-147	Capscrew, 3/4"-10UNC x 2 1/2" Grade 5	12	
10	9390-348	Capscrew, 5/8"-18UNF x 2" Grade 5	20	
11	9404-029	Lock Washer, 5/8"	20	
12	9404-033	Lock Washer, 3/4"	12	
13	97711	Adapter, 9/16"-18 JIC M x 7/16"-20 O-R M	2	Locate/Replace in lowest bleeder port of each caliper.
14	9875	Tee, 9/16"-18 JIC M	1	
15	286237	Shim	16	Use as Needed
16	9007162	Brakes Information Tag	1	

Track Axle Components

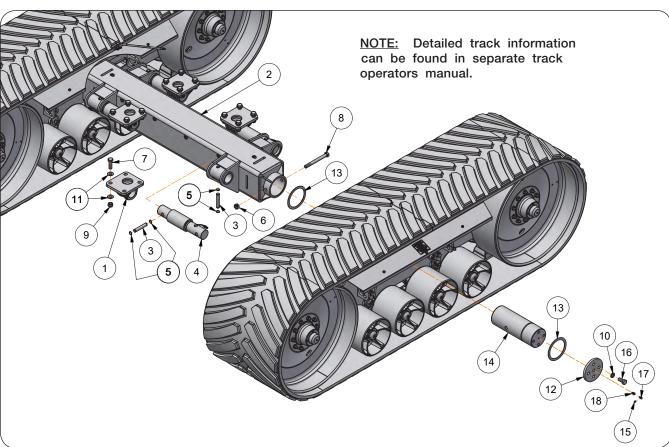


ITEM	DART NO	DECORIDATION	1 OTV	NOTEO
ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	268838B	Axle Mount =Black=	4	
	282035B	Axle Weldment =Black=	1	42" Equalizer Tracks
2	282744B	Axle Weldment =Black=	1	Standard Tracks, 50" Equalizer Tracks & Optional Long Axle for 42" Equalizer Tracks
3	282876	Hitch Pin, 1" Dia. x 5 1/2"	8	
4	9005811	Scale Bar, 3.50" (SHOWN)	4	
4	282745	Bar, 3.50" - Non-Scale	4	
5	91192	Retaining Ring 1"	16	
6	92199	Locknut, 1"-8UNC	2	
7	91299-1457	Capscrew 1"-14UNS x 3 1/4" Grade 8	16	
8	9390-464	Capscrew 1"-8UNC x 10" Grade 5	2	
9	9008441	Elastic Lock Nut 1"-14UNS Grade 8	16	
10	9404-041	Lock Washer, 1"	8	
11	804685	Washer, 1 1/16" ID	32	
12	282689B	Cover Plate =Black=	2	
13	282690	Washer 8 1/2" OD	4	
14	282102	Track Pivot Shaft, 7" Dia. x 19 1/8"	2	Equalizer Tracks
14	282742	Track Pivot Shaft 7" Dia. x 19 3/16"	2	Standard Tracks
15	93426	Grease Zerk	2	Standard Tracks
16	9390-184	Capscrew 1"-8UNC x 2 1/4" Grade 5	8	
17	9006785	90° Adapter 1/8" NPT	1	Equalizer Tracks
18	9006816	Adapter 1/8" NPT	1	Equalizer Tracks

Track Panel Kit Components

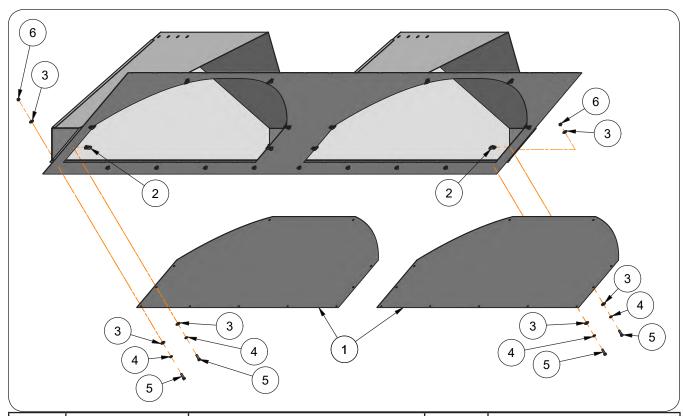

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	284213G	Track Panel Kit =Green=		
	284213R	Track Panel Kit =Red=	_	Includes Items 1 through 6
	284213M	Track Panel Kit =Midnight Grey Metallic=		
	284212G	Track Panel Plate =Green=		
1	284212R	Track Panel Plate =Red=	4	
	284212M	Track Panel Plate =Midnight Grey Metallic=		
2	9005376	U-nut, 3/8"-16UNC	24	
3	9405-076	Flat Washer, 3/8" USS	64	
4	9404-021	Lock Washer, 3/8"	44	
5	9390-056	Capscrew, 3/8"-16UNC x 1 1/4" Grade 5	44	
6	9394-006	Hex Nut, 3/8"-16UNC	20	


Hopper Flow Door Components

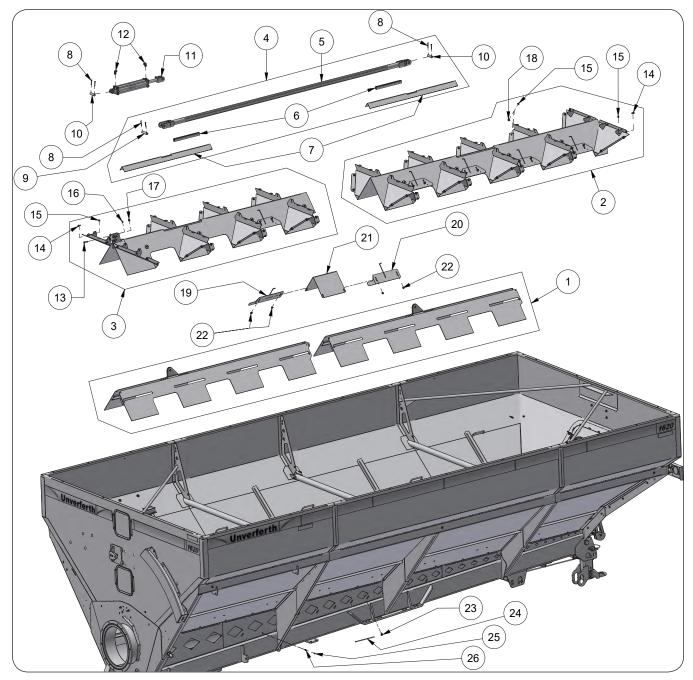

Hopper Flow Door Components

ITI	EM	PART NO.	DESCRIPTION	QTY	NOTES
1	1	284889B	Flow Door Service Kit =Black=	1	
2	2	294073B	Rear Tent Service Kit =Black=	1	
3	3	294072B	Front Tent Service Kit =Black=	1	
4	4	294156B	Flow Door Linkage Replacement Kit =Black=	1	Includes Items 5-10
	5	294154B	Flow Door Linkage Weldment =Black=	1	
	6	271331	Seal Plate	4	*Not for individual sale, see Item 4
	7	282187B	Tent Hole Cover Plate =Black=	2	
	8	9391-046	Cotter Pin, 3/16" x 2"	6	
	9	266285	Cylinder Pin, 1" x 4 1/2"	1	
	10	804572	Cylinder Pin, 1" x 3 1/2"	1	
1	1	9002575	Hydraulic Cylinder, 3" x 16" 3,000 PSI	1	
1	2	9874	Elbow Fitting, 90 Degree 9/16"-18 JIC x 3/4"-16 O-Ring Male	2	
1	3	9390-103	Capscrew, 1/2"-13 UNC x 2" Grade 5	4	
1	4	91262	Flange Screw, 3/8"-16 UNC x 1" Grade 5	8	
1	5	9008159	Lock Nut, 3/8"-16 UNC	72	
1	6	9404-025	Lock Washer, 1/2"	4	
1	7	9394-010	Hex Nut, 1/2"-13 UNC Grade 5	4	
1	8	95585	Flanged Capscrew, 3/8"-16 UNC x 3/4" Grade 5	64	
1	9	284724B	Baffle Weldment, RH =Black=	1	
2	.0	284723B	Baffle Weldment, LH =Black=	1	
2	1	282488B	Cover Plate =Black=	1	
2	2	91263	Flange Nut, 3/8"-16 UNC	4	
2	:3	9005072	Quicklinc Fitting 1/4" Tube x 1/8" NPT Elbow	1	
2	4	9005074	Grease Hose 1/4" OD	3	Specify In Feet
2	5	93426	Grease Zerk	1	
2	6	9005073	Quicklinc Fitting 1/4" Tube x 1/8" NPT Straight	1	


Front and Rear Flow Door Components

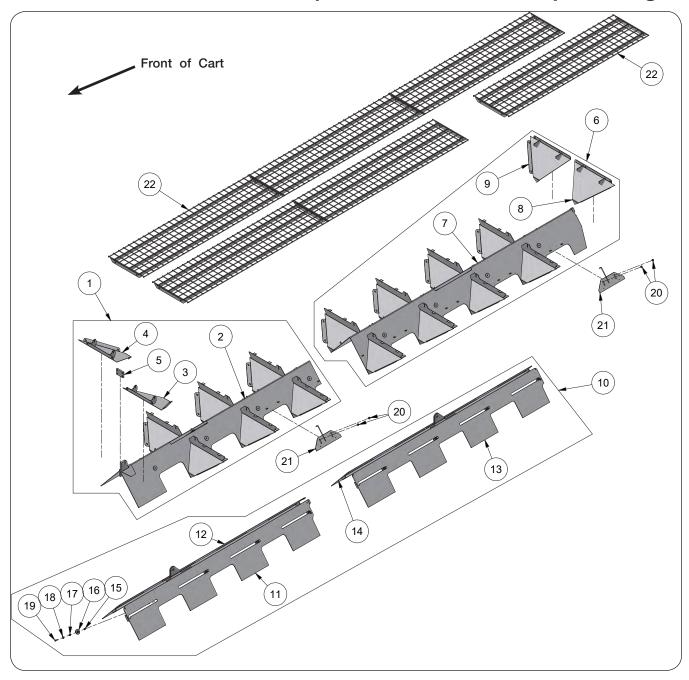

Front and Rear Flow Door Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
11	294072B	Front Tent Service Kit (Black)	1	Includes Items 2-5
2	294070B	Front Tent Weldment =Black=	1	
3	283135B	Front LH Baffle =Black=	1	
4	283136B	Front RH Baffle =Black=	1	
5	271054*	Cylinder Mount Plate	-	*Not for individual sale, see Item 1
6	294073B	Rear Tent Service Kit (Black)	1	Includes Items 7-9
7	294071B	Rear Tent Weldment =Black=	1	
8	282139B	Rear LH Baffle =Black=	1	
9	282138B	Rear RH Baffle =Black=	1	
10	284889B	Flow Door Service Kit (Black)	1	Includes Items 11-19
11	284855B	Front Door Weldment Left-Hand =Black=	1	
12	284854B	Front Door Weldment Right-Hand =Black=	1	
13	284850B	Rear Door Weldment Left-Hand =Black=	1	
14	284849B	Rear Door Weldment Right-Hand =Black=	1	
15	9003396	Locknut 3/8"-16UNC	16	
16	284168	Spacer Bushing, 2 1/4" OD x 1/2"	16	
17	284169	Roller Bushing, 1/4" OD x 7/16" ID	16	
18	9005471	Flat Washer, 3/8"	16	
19	91299-057	Capscrew, 3/8"-16UNC x 1 1/2"	16	
20	91263	Locknut, 3/8"-16UNC Gr.5	20	
21	284721B	Baffle Weldment =Black=	10	
22	293985	Hopper Screen Weldment	6	


Flow Door Indicator Assembly

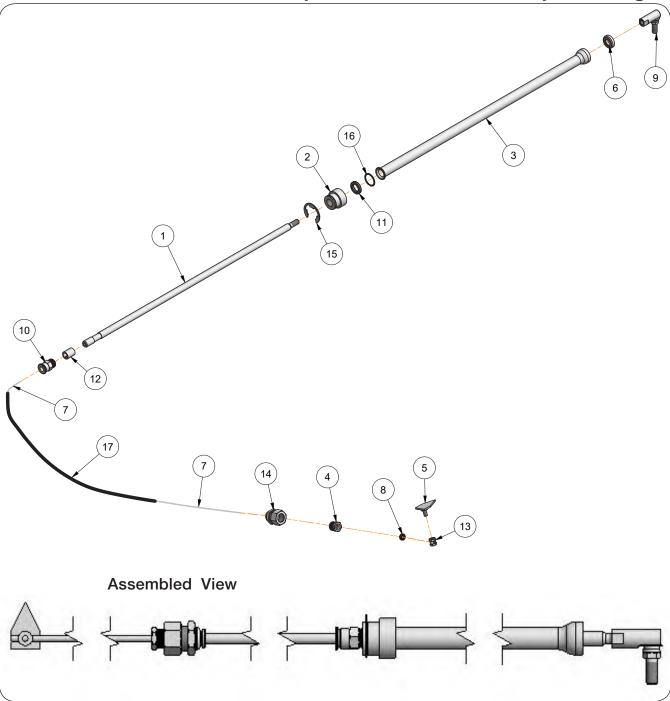

Flow Door Indicator Assembly

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	293760R	Complete Indicator Assembly	1	Includes Items 1 through 17
1	271582	Push Rod Indicator	1	
2	271585	Bushing - Coupler	1	
3	271589	Cable Tube (Push Rod)	1	
4	271593	Reducer Bushing	1	
5	271595R	Flow Door Indicator =Red=	1	
6	9006610	Seal (Wiper)	1	
7	9008593	Inner Cable (Conduit) - 3/16 Dia. x 112 1/2	1	
8	9008612	Seal (Shaft)	1	
9	9006630	Rod End, 3/8"	1	
10	9006634	Connector Fitting	1	
11	9006635	Quad Ring	1	
12	9006636	Wear Ring	1	
13	271597	Wire Stop	1	
14	9006640	Hose Fitting	1	
15	9006641	Snap Ring	1	
16	9006644	Retaining Ring - Internal	1	
17	293759	Plastic Tubing - 92"	1	

Rear Runner Brace Components

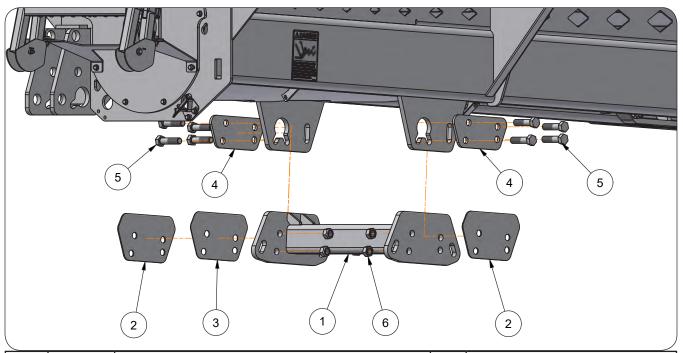


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	297398G	Rear Runner Brace Weldment =Green=		
1 1	297398R	Rear Runner Brace Weldment =Red=	1	
	297398M	Rear Runner Brace Weldment =Midnight Grey Metallic=		
	297386G	Shim Plate, 8GA =Green=		
2	297386R	Shim Plate, 8GA =Red=	2	
	297386M	Shim Plate, 8GA =Midnight Grey Metallic=		
	297387G	Shim Plate, 14GA =Green=		
3	297387R	Shim Plate, 14GA =Red=	1	
	297387M	Shim Plate, 14GA =Midnight Grey Metallic=		
	272745G	Outer Cap Bolt Plate, 3/8" =Green=		
4	272745R	Outer Cap Bolt Plate, 3/8" =Red=	2	
	272745M	Outer Cap Bolt Plate, 3/8" =Midnight Grey Metallic=		
5	9390-170	Capscrew, 7/8"-9UNC x 3 1/2" Gr.5	8	
6	98420	Locknut, 7/8"-9UNC Gr.8	8	

Unverferth 1620 — Parts

Notes


Vertical Auger Flighting Components

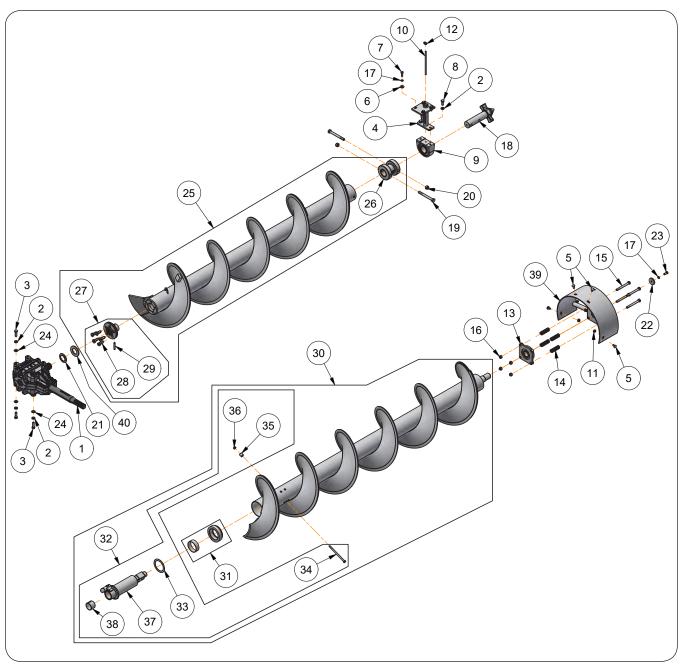

Vertical Auger Flighting Components

IT	EM	PART NO.	DESCRIPTION	QTY	NOTES
	1	9007366	Gearbox 1 3/4"-20 Spline Input Shaft 2 1/4"-17 Spline Output Shaft	1	See "Gearbox" in this section for parts.
	2	9404-030	Lock Washer, 5/8"	8	
-	3	9390-124	Capscrew, 5/8"-11UNC x 2" G5	6	
	4	289898B	Bearing Bracket Replacement Kit (Black)	1	Includes Items 6 and 7
	5	9388-102	Carriage Bolt, 1/2"-13UNC x 1" G5	4	
	6	9405-088	Flat Washer, 1/2" USS	4	
	7	9390-101	Carriage Bolt, 1/2"-13UNC x 1 1/2" G5	4	
	8	9390-122	Capscrew, 5/8"-11UNC x 1 1/2" G5	2	
	9	9004731	Pillow Block Bearing, 2 1/2" Bore	1	
1	0	284636	Grease Pipe	1	
1	1	9003397	Lock Nut/Top, 1/2"-13UNC	4	
1	2	9004764	90° Elbow, 1/8" NPTF Female	1	
1	3	9002492	Bearing 2" Dia. Flanged	1	
1	4	9004899	Spring - 10 Coils	4	
1	5	9390-136	Capscrew, 5/8"-11UNC x 6" G5	4	
1	6	9801	Lock Nut, 5/8"-11UNC	4	
1	7	9404-025	Lock Washer, 1/2"	5	
1	8	288813	Drive Dog, Double Lobe	1	
1	9	9390-159	Capscrew, 3/4"-10UNC x 7" G5	2	
2	20	9802	Lock Nut, 3/4"-10UNC	2	
2	21	9007377B	Dust Cover =Black=	1	
2	22	407699	Washer Plate, 2 1/2" Dia.	1	
2	23	9390-100	Capscrew, 1/2"-13UNC x 1 1/4" G5	1	
2	24	9405-098	Flat Washer, 5/8" SAE	6	
_2	25	296316B	Lower Auger Replacement Kit (Black)	1	Includes Items 26-29 Fits 2 1/4"-17 Spline Gearbox Output Shaft
	26	283515	Auger Tube Adapter	1	
	27	287802	Auger Drive Plate Assembly	1	Includes Items 28 & 29
	28	9007000	Drive Head Pin	5	
Ш	29	902614-238	Spiral Pin, 1/2" Dia. x 2 3/4"	1	
[3	30	299200B	Upper Auger Replacement Kit (Black)	1	Includes Items 31-39
l ∟	31	284626	Flex Coupler Bushing Assembly	1	Includes End Ring and Self Lubricating Bushing
	32	281912	Soft Start Replacement Kit	1	Includes Items 33-38 and Self Lubricating Bushing
	33	9004878	Self Lubricating Washer	1	
	34	9390-119	Capscrew, 1/2"-13UNC x 8" G5	1	
	35	410511	Spacer Bushing	1	
	36	9800	Locknut, 1/2"-13UNC	1	
	37	281283	Soft Start Assembly	1	Includes Item 38
Ш	38	9003230	Split Bushing	1	
	39	297221B	Hanger Bearing Weldment =Black=	1	
4	10	297008	Washer, 4" OD x 2.265 ID x .3125"	1	UHMW Material


Horizontal Auger Components

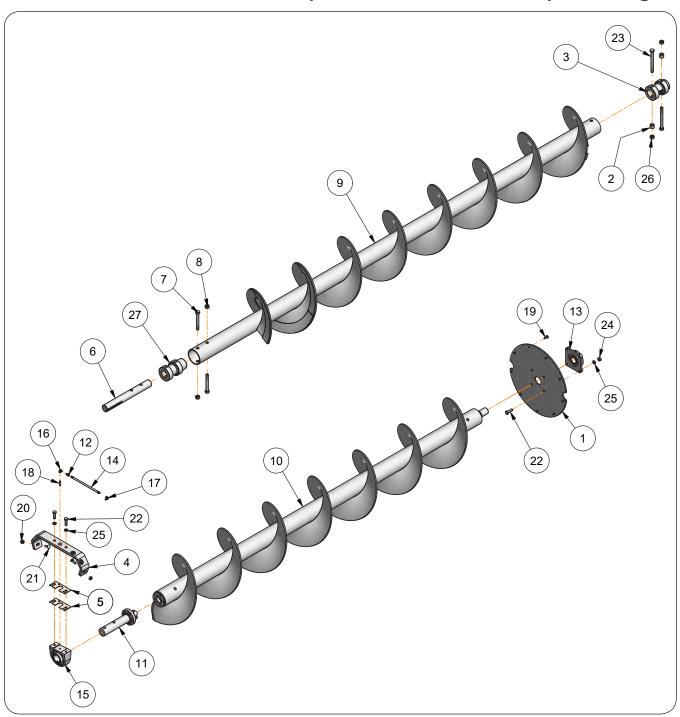

Horizontal Auger Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	283097G	Cover Plate =Green=		
1	283097R	Cover Plate =Red=	1	
	283097M	Cover Plate =Midnight Grey Metallic=		
2	283895	Spacer Bushing, 1 1/4" OD x 0.813" ID x 1 1/8"	2	
3	286282	Adapter/Shaft Bushing Weldment =Primed=	1	
4	286381B	Bearing Mounting Bar =Black=	1	
5	286424B	Bearing Shim Plate =Black=	2	
6	283537	Auger Shaft 2.25" Dia.	1	
7	91299-157	Capscrew, 3/4"-10UNC x 6" Grade 8	2	
8	9802	Lock Nut, 3/4"-10UNC	2	
9	294138B	Front Auger Replacement Kit (Black)	1	Includes Items 3, 6 - 8, 27
10	295739B	Rear Auger Replacement Kit =Black=	1	Includes Items 2, 11, 23, and 26
11	293957	Auger Coupler Shaft Weldment	1	
12	9002479	Adapter 1/8"-27 NPTF Male x 1/8"-27 NPSM Female Swivel Nut	1	
13	9002492	Bearing/Flanged 2" Dia.	1	
14	9002689	Hose 1/8" x 12", 3000 PSI	1	
15	9004731	Pillow Block Bearing with 2 1/2" Bore	1	
16	9004764	90° Elbow 1/8" Female NPTF x 1/8" Female NPTF	1	
17	9005072	90° Elbow 1/4" Tube x 1/8"-27 NPTF Swivel Nut	1	
18	9006964	Nipple 1/8" NPT Male x 1/8" NPT Male	1	
19	91262	Capscrew, 3/8"-16UNC x 1" G5	21	
20	9003397	Lock Nut, 1/2"-13UNC	2	
21	9388-105	Carriage Bolt, 1/2"-13UNC x 1 1/2" G5	2	
22	9390-124	Capscrew, 5/8"-11UNC x 2" G5	4	
23	9390-160	Capscrew, 3/4"-10UNC x 7 1/2" G5	2	
24	9394-014	Hex Nut, 5/8"-11UNC Grade 5	4	
25	9404-029	Lock Washer, 5/8"	6	
26	9802	Lock Nut, 3/4"-10UNC	2	
27	283535	Auger Tube Adapter	1	

Auger Fold Linkage Components

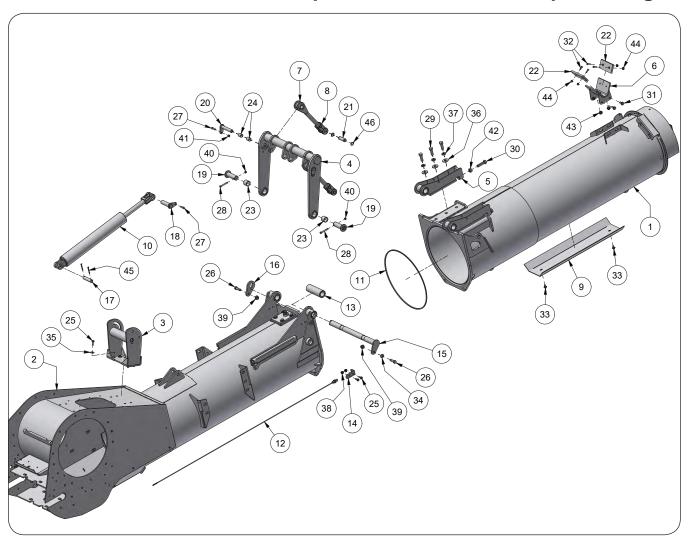

Auger Fold Linkage Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	298407R	Upper Auger Weldment =Red=		
1	298407G	Upper Auger Weldment =Green=	1	
	298407M	Upper Auger Weldment =Midnight Grey Metallic=		
	298929R	Lower Auger Weldment =Red=		
2	298929G	Lower Auger Weldment =Green=	1	
	298929M	Lower Auger Weldment =Midnight Grey Metallic=		
	298503R	Lower Auger Rest Weldment =Red=		
3	298503G	Lower Auger Rest Weldment =Green=	1	
	298503M	Lower Auger Rest Weldment =Midnight Grey Metallic=		
	295540R	Fold Linkage Weldment =Red=		
4	295540G	Fold Linkage Weldment =Green=	1	
	295540M	Fold Linkage Weldment =Midnight Grey Metallic=]	
	289857R	Auger Hinge Weldment =Red=		
5	289857G	Auger Hinge Weldment =Green=	2	
	289857M	Auger Hinge Weldment =Midnight Grey Metallic=]	
	272553R	Auger Rest Weldment =Red=		
6	272553G	Auger Rest Weldment =Green=	1 1	
	272553M	Auger Rest Weldment =Midnight Grey Metallic=	[
7	295551	Fold Linkage Weldment	2	
8	9006491	Fold Linkage Clevis	2	
	284141R	Strike Plate =Red=		
9	284141G	Strike Plate =Green=	1	
	284141M	Strike Plate =Midnight Grey Metallic=]	
10	9009659	Hydraulic Cylinder, 3 1/2" x 20" 3,000 PSI	1	
11	9009728	Auger Fold Gasket	1	
12	9007223	Proximity Sensor	1	
	284493R	Auger Pivot Tube =Red=		
13	284493G	Auger Pivot Tube =Green=	1	
	284493M	Auger Pivot Tube =Midnight Grey Metallic=	[
14	272645B	Proximity Switch Bracket =Black=	1	
15	299228B	Auger Pivot Pin	1	
16	293663	Auger Pivot Pin Retainer Plate	2	
17	266285	Idler Pin, 1" x 4 1/2"	1	
18	295793	Cylinder Pin	1	
19	295549	Auger Linkage Pin, Lower	2	
20	295559	Auger Linkage Pin, Upper	2	
21	272587	Fold Linkage Pin	2	


Auger Fold Linkage Components (continued)

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
22	272574	Auger Rest Poly Pad	2	
23	9004741	Bushing, 1 3/4" x 1 1/2" x 1 1/2"	2	
24	9003440	Bushing, 1 1/8" x 1" x 1 1/4"	4	
25	9002359	Flange Screw, 3/8"-16UNC x 1 1/4" Grade 5	6	
26	9390-125	Capscrew, 5/8"-11UNC x 2 1/4" Grade 5	2	
27	9390-057	Capscrew, 3/8"-16UNC x 1 1/2" Grade 5	3	
28	9390-063	Capscrew, 3/8"-16UNC x 3" Grade 5	2	
29	91299-146	Caspcrew, 3/4"-10UNC x 2" 1/4" Grade 8	6	
30	94733	Capscrew, 3/4"-10UNC x 3" Grade 5 Full Thread	2	
31	91266	Flange Screw, 1/2"-13UNC x 1 1/4"	4	
32	903171-662	Flat Head Screw, 5/16"-18UNC x 1 1/4"	16	
33	95585	Flanged Capscrew, 3/8"-16UNC x 3/4" Grade 5	6	
34	9405-098	Flat Washer, 5/8" SAE	8	
35	9405-078	Flat Washer, 3/8"	4	
36	9234	Flat Washer, 13/16" ID x 2" OD	6	
37	9404-034	Lock Washer, 3/4"	6	
38	91263	Flange Nut, 3/8"-16UNC	4	
39	9003398	Lock Nut, 5/8"-11UNC	2	
40	902875	Lock Nut, 3/8"-16UNC	2	
41	9003396	Lock Nut, 3/8"-16UNC	3	
42	9394-016	Hex Nut, 3/4"-10UNC Grade 5	2	
43	91267	Flange Nut, 1/2"-13UNC	4	
44	91257	Flange Nut, 5/16"-18 UNC Grade 5	10	
45	9391-046	Cotter Pin, 3/16" x 2"	2	
46	91192	Retaining Ring, 1"	4	

Unverferth 1620 — Parts

Notes


Downspout Components

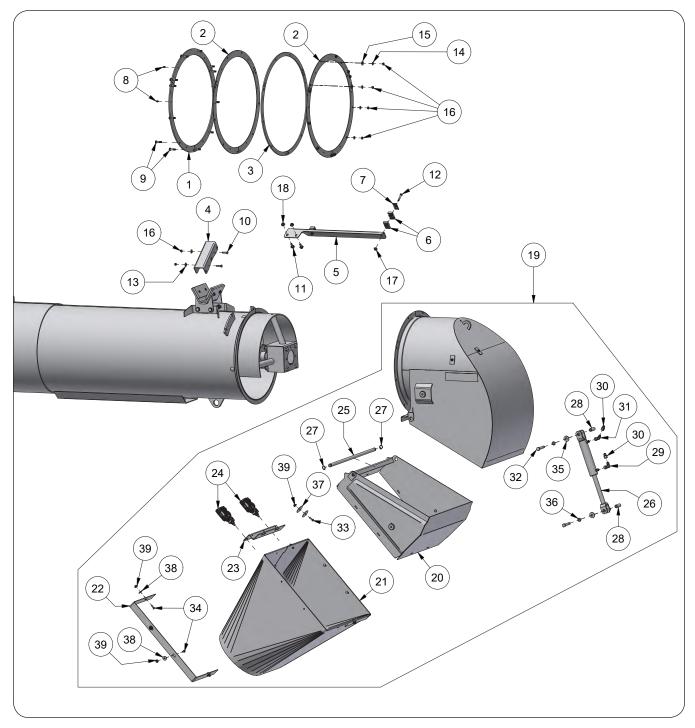

Downspout Components

ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	288186B	Spout Pivot Plate =Black=	3	
2	288184	Spout Pivot Pad, Poly	6	
3	288683B	Spout Pivot Plate Spacer =Black=		
4	298552B	Spout Rotate Lock =Black=	1	
5	297375B	Hose Bracket Plate =Black=	1	
6	9003816	Double Hose Clamp Half	4	
7	9003814	Double Hose Clamp Plate	2	
8	91160	Grease Zerk	6	
9	9007838	Shoulder Bolt, 5/16"-18UNC x 7/8"	12	
10	9390-031	Capscrew, 5/16"-18UNC x 1 1/4" Grade 5	2	
11	91262	Flange Screw, 3/8"-16UNC x 1" Grade 5	2	
12	9390-034	Capscrew, 5/16"-18UNC x 2" Grade 5	2	
13	9405-070	Flat Washer, 5/16" USS	4	
14		Flat Washer, 1/4" USS	12	
15		Flat Washer, 3/8" USS	2	
16	9807	Lock Nut, 5/16"-18UNC	12	
17	91257	Flanged Hex Nut, 5/16"-18UNC	1	
18	91263	Flange Nut, 3/8"-16UNC Grade 5	2	
19	298932B	Spout Assembly =Black=	1	Includes items 20 through 39
20	293670B	Lower Spout Weldment =Black=	1	· ·
21	9007847	Auger Hood	1	
22	288293	Chute Strap	2	
23	272646	Light Bracket	1	
24	9008957	Work Light	2	
25	288292	Auger Pivot Shaft	1	
26	9008152	Hydraulic Cylinder. 1 1/2" x 6" 3,000 PSI	1	
27	9003810	Snap Ring, 3/4"	2	
28	285290	Tilt Cylinder Bushing	2	
29	9876	Elbow Fitting, 9/16"-18 JIC Male x 9/16"-18 JIC Female	1	
30	95193	Adapter, 9/16"-18 JIC Female x 9/16"-18 JIC Male	2	With .030" Restrictor (Red)
31	9001041	45 Degree Elbow Fitting, 9/16"-18 JIC Female x 9/16"-18 JIC Male	1	
32	9390-107	Capscrew, 1/2"-13UNC x 3" Grade 5	2	
33	9390-005	Capscrew, 1/4"-20UNC x 1" Grade 5	6	
34		Carriage Bolt, 1/4"-20UNC x 1" Grade 5	8	
35	9405-088	Flat Washer, 1/2" USS	2	
36		Lock Washer, 1/2"	2	
37	94763	Fender Washer, 5/16" ID x 2" OD x .080"	12	
38		Flat Washer, 1/4"	8	
39	97189	Flanged Hex Nut, 1/4"-20UNC	14	


Spout Rotate Assembly

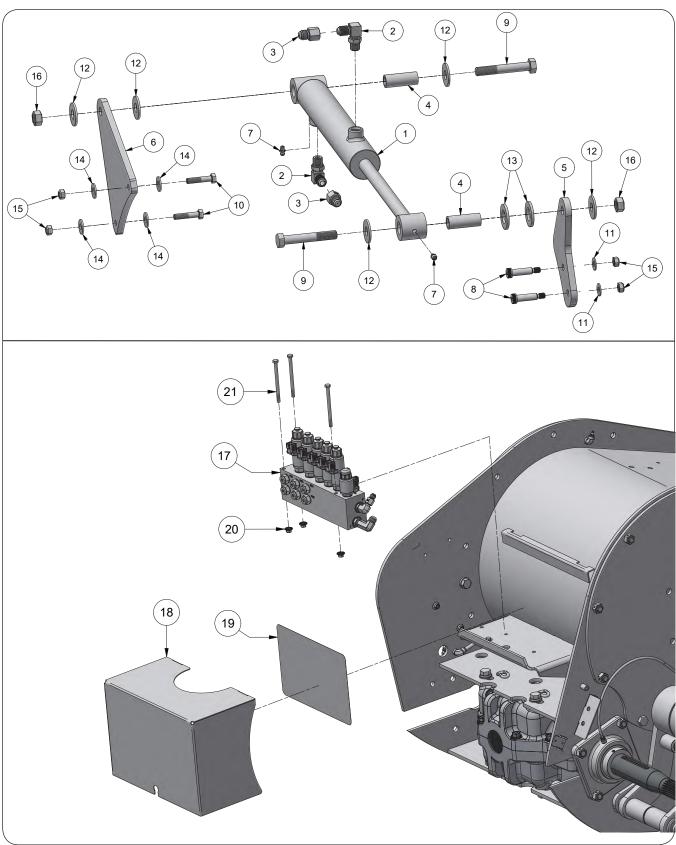

Spout Rotate Asembly

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	9005135	Hydraulic Cylinder 1 1/2" x 8"	1	
2	97445	Elbow Fitting, 9/16"-18 JIC Male x 9/16"-18 O Ring Male	2	
3	9003303	Adapter, 9/16"-18 JIC Female x 9/16"-18 JIC Male	2	with .045" Restrictor
4	285290	Cylinder Bushing	2	
5	298207B	Lug Plate =Black=	1	
6	297432	Lug Plate =Black=	1	
7	91160	Grease Zerk	2	
8	9007837	Shoulder Bolt, 3/8" x 1 1/4" x 5/16"-18UNC	2	
9	9390-108	Capscrew, 1/2"-13UNC x 3 1/4" Grade 5	2	
10	9390-032	Capscrew, 5/16"-18UNC x 1 1/2" Grade 5	2	
11	9405-064	Flat Washer, 1/4" USS	2	
12	9405-088	Flat Washer, 1/2" USS	5	
13	9405-104	Flat Washer, 3/4" SAE	2	
14	9405-070	Flat Washer, 5/16" USS	4	
15	9807	Lock Nut, 5/16"-18UNC	4	
16	94981	Lock Nut, 1/2"-13UNC	2	
17	272618	Hydraulic Valve Assembly	1	
18	295569	Hydraulic Valve Cover Plate	1	
19	9008564	Hydraulic Valve Cover Plate Decal	1	
20	91257	Flanged Hex Nut, 5/16"-18UNC	3	
21	9390-043	Capscrew, 5/16"-18UNC x 4 1/2" Grade 5	3	


Lower Auger Cleanout Door, Covers & Rest Components

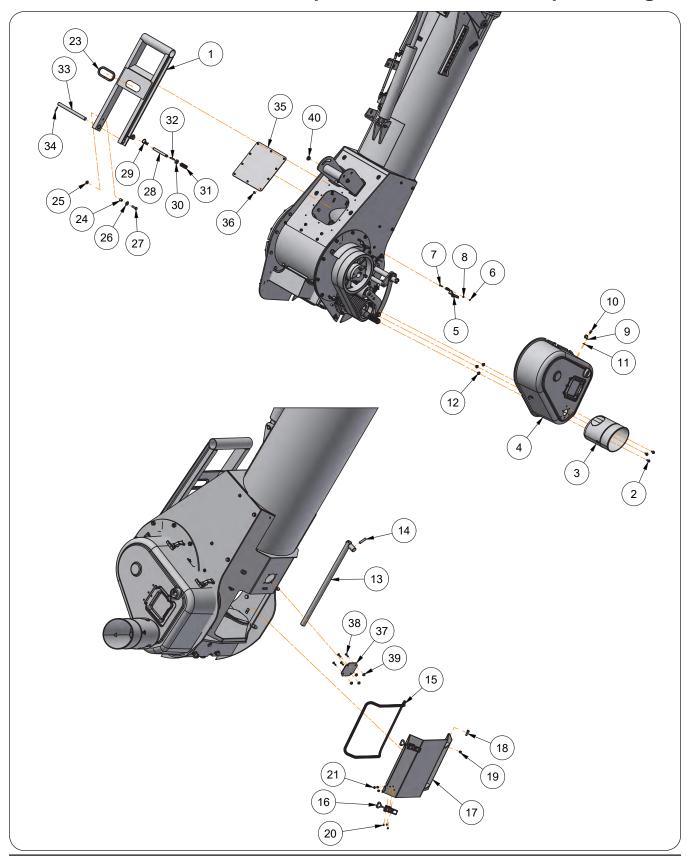

Lower Auger Cleanout Door, Covers & Rest Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	272579G	Auger Rest Weldment =Green=		
1	272579R	Auger Rest Weldment =Red=	1	
	272579M	Auger Rest Weldment =Midnight Grey Metallic=	1	
2	95585	Capscrew/Large Flange 3/8"-16UNC x 3/4" Grade 5	3	
3	9004918	PTO Bell Cover	1	
4	9008700	Belt Cover/Shield	1	
5	900060	Handle for Draw Latch	3	
6	900068	"E" Retainer for Draw Latch	3	
7	900066	Stud Pin for Draw Latch	3	
8	900067	Washer for Draw Latch	3	
9	900059	Flexible Draw Latch Asy w/Style R Keeper	3	
10	9004940	Pop Rivet	6	
11	9004998	Rivet Washer/Burr 3/16"	6	
12	91263	Large Flange Nut 3/8"-16UNC Grade 5	3	
13	284714B	Belt Tensioner Handle With Roll Pin =Black=	1	
14	9392-208	Roll Pin 1/2" Dia. x 2"	1	
15	9007108	Gasket w/Adhesive Backing for Cleanout Door	A/R	Specify in Feet
16	9006497	Plate - Latch	2	
17	289854B	Cleanout Door Weldment =Black=	1	
18	9390-056	Capscrew 3/8-16UNC x 1 1/4" Grade 5	2	
19	9928	Locknut 3/8"-16UNC Grade 5	2	
20	903171-574	Flat Countersunk Screw #10-24UNC x 1/2"	6	
21	902331	Flange Hex Nut #10-24 (Serrated)	6	
22	900058	Draw Latch Base	3	
23	9000787	Trim Lock	1.25	Specify in Feet
24	272583	Stop Bushing, 3/4" Dia. x 7/8"	1	
25	9003397	Locking Flange Nut, 1/2"-13UNC Grade 5	1	
26	9405-088	Flat Washer, 1/2" USS	1	
27	9390-124	Capscrew, 5/8"-11UNC x 2" Grade 5	2	
28	272376	Lock Pin, 3/4" Dia. x 6 3/4"	1	
29	92424	Hairpin Cotter	1	
30	9001868	Locking Collar, 3/4"	1	
31	9004772	Spring	1	
32	9392-182	Roll Pin, 3/8" Dia. x 2 1/2"	1	
33	284549	Pivot Pin, 1" Dia. x 13 1/16"	1	
34	9392-136	Roll Pin, 1/4" Dia. x 1 1/2"	1	
0.5	283518G	Cover Plate, 14 1/4" x 15" =Green=	1	
35	283518R	Cover Plate, 14 1/4" x 15" =Red=	1	
36	97420	Flange Screw, 1/4"-20UNC x 3/4" Grade 5	10	
37	2001446B	Cover Plate, 4 1/2" x 4 1/2" =Black=	1	
38	9388-003	Carriage Bolt, 1/4"-20UNC x 1" Grade 5	4	
39	97189	Hex Nut/Large Flange, 1/4"-20UNC	4	
40	9003412	Split Output Bushing 1" ID	2	

Lower Auger Shields, Pulleys, Bearings, & Belt Components

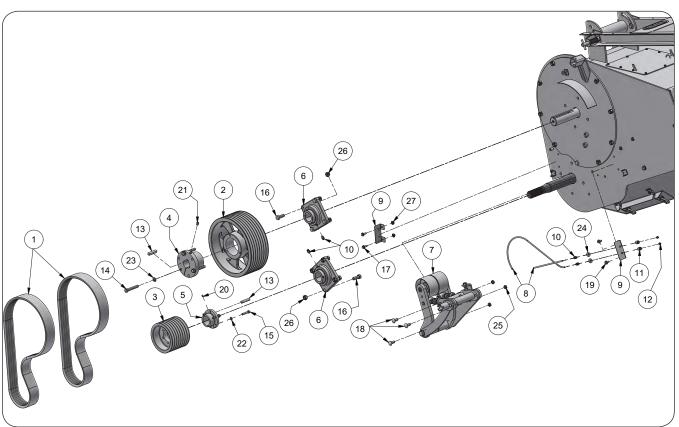


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	9005411	Belt	2	Included As Matched Pair
2	9004590	Pulley, 15" Diameter x 5 13/16"	1	
3	9004591	Pulley, 7 1/2" Diameter x 5 13/16"	1	
4	9004813	Bushing, 6 5/8" Diameter x 2 1/4" x 3 3/4"	1	Includes Items 13, 14, 21, and 23
5	9007376	Bushing, 3 1/4" Bore with 1/2" Keyway	1	Includes Items 13, 15, 20, and 22
6	9005565	Flange Bearing, 2 1/4" ID	2	
7	283600B	Idler Assmebly =Black=	1	
8	9005074	Grease Tube, 1/4" OD	2.5	Specify Length in Feet
9	296738B	Belt Cover Plate =Black=	2	
10	9005073	Adapter, 1/4" x 1/8"-27 NPTF Male	2	
11	9003949	Pipe Coupling, 1/8" NPT Female x 1/8" NPT Female	2	
12	93426	Grease Fitting	2	

Lower Auger Shields, Pulleys, Bearings, & Belt Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
13	9002562	Key Stock, 1/2" x 1/2" x 2 1/2"	2	
14	9006263	Capscrew, 9/16"-12 UNC x 3 5/8" Full Thread	3	
15	9006669	Capscrew, 3/8"-16 UNC x 2" Grade 5	3	
16	9390-123	Capscrew, 5/8"-11 UNC x 1 3/4" Grade 5	8	
17	97604	Flange Capscrew, 5/16"-18 UNC x 1" Grade 5	2	
18	9388-103	Carriage Bolt, 1/2"-13 UNC x 1 1/4" Grade 5	3	
19	91256	Flange Capscrew, 5/16"-18 UNC x 3/4" Grade 5	2	
20	9399-059	Set Screw, 1/4"-20 UNC x 3/8"	1	
21	9399-107	Set Screw, 1/2"-13 UNC x 5/8"	1	
22	9404-021	Lock Washer, 3/8"	3	
23	9404-027	Lock Washer, 9/16"	3	
24	9405-076	Flat Washer, 3/8" USS	2	
25	9008466	Lock Nut, 1/2"-13 UNC Grade 5	3	
26	95905	Lock Nut, 5/8"-11 UNC Grade 5	8	
27	91257	Hex Nut, 5/16"-18 UNC Grade 5	2	


Lower Auger Idler Assembly Components

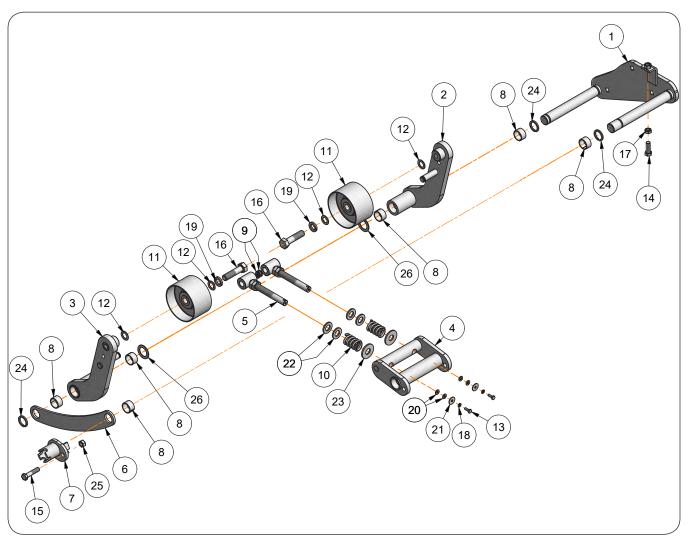

Lower Auger Idler Assembly Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	283600B	Idler Assembly (Black)	1	Includes items 1-26
1	283601B	Idler Mount Weldment =Black=	1	
2	283602B	Inner Idler Arm Weldment =Black=	1	
3	283603B	Outer Idler Arm Weldment =Black=	1	
4	283604B	Tensioner Weldment =Black=	1	
5	283605	Tensioner Rod Weldment	2	
6	283619B	Idler Brace Plate =Black=	1	
7	284703	Tensioner Bushing Weldment	1	
8	9003635	Self-Lubricating Bushing, 1.4" OD x 1.25" ID x 3/4"	6	
9	9003810	Snap Ring	2	
10	9005447	Compression Spring, 1.415" OD x 2 1/2"	2	
11	9005684	Idler Pulley	2	Single Piece Item
11	296744B	Idler Pulley Assembly =Black=]	Includes Ball Bearing W/Retaining Ring 2"
12	9005685	Machine Washer, 3/4"	4	
13	9390-003	Capscrew, 1/4-20UNC x 3/4" G5	2	
14	9390-101	Capscrew, 1/2"-13UNC x 1 1/2" G5	1	
15	9390-104	Capscrew, 1/2"-13UNC x 2 1/4" G5	1	
16	9390-149	Capscrew, 3/4"-10UNC x 3" G5	2	
17	9395-010	Hex Jam Nut, 1/2"-13UNC	1	
18	9404-017	Lock Washer, 1/4"	2	
19	9404-033	Lock Washer, 3/4"	2	
20	9405-062	Flat Washer, 1/4" SAE	4	
21	9405-066	Flat Washer, 1/4"	2	
22	9405-104	Flat Washer, 3/4" SAE	4	
23	9405-106	Flat Washer, 3/4" USS	2	
24	94144	Retaining Ring, 1 1/4"	4	
25	94981	Locknut, 1/2"-13UNC	1	
26	TA500397	Bushing, 1.875" Dia. x .074"	2	


Lower Auger Retainer Components

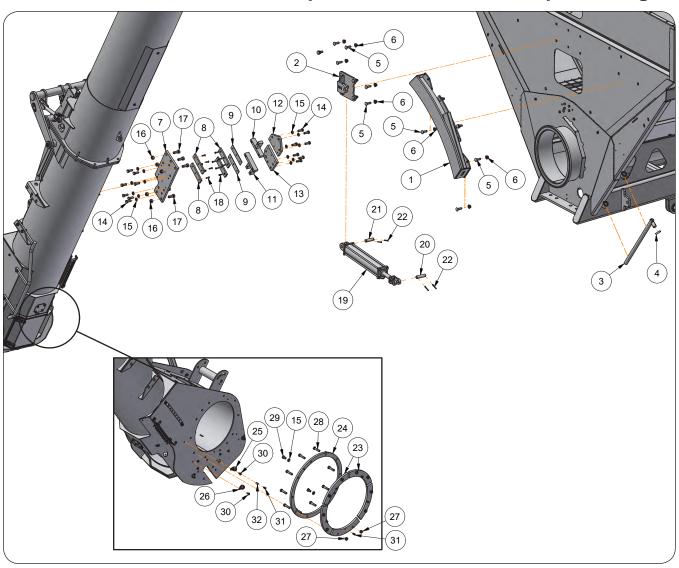

Lower Auger Retainer Components


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	278019G	Slide Plate Weldment =Green=		
1	278019R	Slide Plate Weldment =Red=	1	
	278019BM	Slide Plate Weldment =Black Metallic=		
	295934G	Cylinder Lug Weldment =Green=		
2	295934R	Cylinder Lug Weldment =Red=	1	
	295934BM	Cylinder Lug Weldment =Black Metallic=		
3	284714B	Locking Pipe Weldment =Black=	1	
4	9392-208	Roll Pin 1/2" Dia. x 2"	1	
5	9388-135	Carriage Bolt, 5/8"-11UNC x 2" Grade 5	12	
6	9003398	Locknut 5/8"-11UNC	12	
7	295605B	Auger Slide Mount =Black=	1	
8	271124	Nylon Fold Slide 2" x 8"	4	
9	295962B	Slide Shim Plate =Black=	2	
10	295642B	Upper Bolt Plate Weldment =Black=	1	
11	295643B	Lower Bolt Plate Weldment =Black=	1	
12	271119B	Fold Plate 6 1/2" x 8" =Black=	1	
13	284518B	Fold Plate 6" x 8" =Black=	1	
14	9390-123	Capscrew, 5/8"-11UNC x 1 3/4" G5	14	
15	9404-030	Lock Washer, 5/8"	16	
16	9802	Top Locknut 3/4"-10UNC	5	
17	9390-145	Capscrew, 3/4"-10UNC x 2" G5	5	
18	903171-662	Flat Head Phillips Screw, 5/16"-18UNC x 1 1/4"	12	
10	9000933	Hydraulic Cylinder, 3 1/2" x 20" - 3000 PSI	1	
19	9001081	Seal Kit	-	
20	250104	Cylinder Pin W/Holes, 1" Dia. x 4"	1	
21	804572	Pin, 1" Dia. x 3 1/2"	1	
22	9391-046	Cotter Pin, 3/16" Dia. x 2"	4	
23	295788B	Pivot Retainer Plate, 4 3/8" x 15 9/16"	5	
24	295780B	Junction Box Mount =Black=	1	
25	9008246	Clamp 1 1/4" (Plated Steel)	1	
26	9007556	Cable Clamp 1 1/8"	1	
27	95905	Center Locknut 5/8"-11UNC	10	
28	9390-126	Capscrew, 5/8"-11UNC x 2 1/2" G5	10	
29	9390-120	Capscrew, 5/8"-11UNC x 1" G5	2	
30	91256	Flange Screw, 5/16"-18UNC x 3/4" G5	2	
31	9006785	90° Adapter 1/8" NPT	6	
32	9002538	Pipe Couplling, 1/8" NPT	1	

Cut Out Clutch PTO Assembly - Benzi

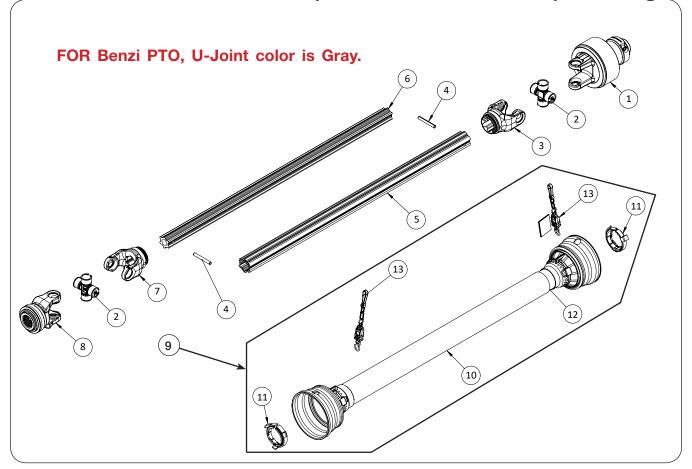

IT	EM	PART NO.	DESCRIPTION	QTY	NOTES
		9008527	Complete Driveline Assembly 1 3/4"-20 Spline	1	Includes Items 1-9
		9009250	Front Half Driveline Assembly 1 3/4"-20 Spline w/Overrunning Clutch	1	Includes Items 2, 4, & 6-9
		9009251	Rear Half Driveline Assembly 1 3/4"-20 Spline w/CAM Cut Out Clutch	1	Includes items 1-5 & 9
	1	9008791	Clutch Assembly (3200 N*m Setting)	1	1 3/4"-20 Spline 1000RPM
	2	9008792	U-Joint Assembly	2	
	3	9008793	Outer Yoke	1	
	4	9008794	Tension Pin	2	
	5	9008795	Outer Profile Tube w/ Cap	1	
	6	9008796	Inner Profile Tube w/ Cap	1	
	7	9008797	Inner Yoke	1	
	8	9008798	Yoke Assembly	1	
	9	9009188	Safety Guard Assembly	1	For SN B41030100 & Higher Includes Items 10 - 13
	10	N/A	Outer Guard Half	1	Not For Individual Sale. See Item 9
	11	9008801	Guarding Cone Retainer Clip Package	1	Package of 2
	12	N/A	Inner Guard Half	1	Not For Individual Sale. See Item 9
	13	9008804	Chain	2	


Cut Out Clutch PTO Assembly - Benzi

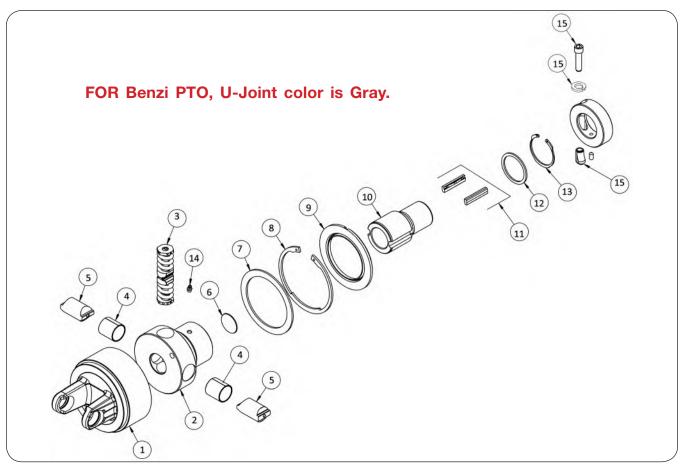

NOTE: Clutch Assembly (9008791) must be used with the Complete PTO Assembly (9008527).

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9008791	Cut Out Clutch (3200 N*m Setting)		Includes Items 1-15
1	9008775	Housing Weld	1	
2	9008776	Cam Clutch Hub 1 3/4"-20 Spline	1	
3	9008777	Automatic Cam Clutch	1	
4	9008778	Bushing	2	
5	9008779	Pusher Rod	2	
6	9008780	Closer Ring	1	
7	9008781	Washer 6 5/8" Dia.	1	
8	9008782	Circlip 6 5/8" Dia.	1	
9	9008783	Seal Ring	1	
10	9008784	Overrunning Clutch Hub	1	Includes Collar With Set Screw
11	9008785	Spring Pack	1	
12	9008786	Washer	1	
13	9008787	Circlip	1	
14	9008788	Grease Zerk (M8)	1	
15	9008789	Conic Bolt Set	1	Includes Socket Head Bolt, Lock Washer, and Threaded Insert


Cut Out Clutch PTO Assembly - Walterscheid

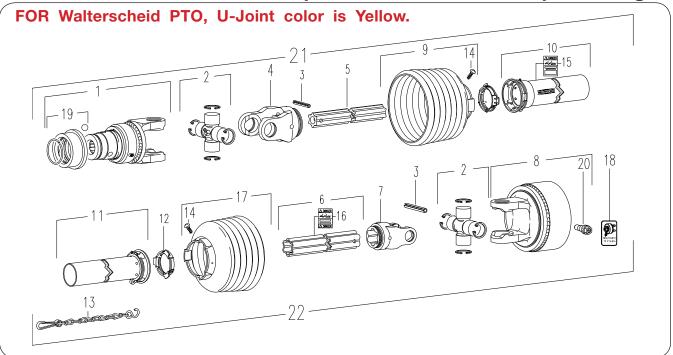

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9005230	PTO Assembly Complete		Includes Items 19 & 20
1	9005234	Over-Running PTO Clutch Assembly	1	1 3/4"-20 Spline 1000RPM
2	92529	Cross & Bearing Kit	2	
3	9002609	Spring Pin 10x90	2	
4	9002610	Inboard Yoke S4	1	
5	9004840	Inner Profile	1	
6	9004841	Outer Profile	1	
7	9002613	Inboard Yoke S5	1	
8	9005235	Cut Out Clutch (3200 N-m Setting)	1	1 3/4"-20 Spline 1000RPM
9	9002615	Shield Cone 7 Rib	1	
10	9004843	Outer Shield Tube Oval	1	
11	9004844	Inner Shield Tube Oval	1	
12	92373	Bearing Ring	2	
13	92374	Safety Chain	1	
14	92372	Screw	2	
15	92377	Decal Out	1	
16	92378	Decal In	1	
17	93866	Shield Cone 6 Rib	1	
18	9005233	Decal K64	1	"Tighten to 75 FtLbs."
19	93856	Quick-Disconnect Kit	1	1 3/4"-20 Spline w/Metal Collar
20	9005253	Clutch Clamp Cone Assembly	1	
21	9005231	PTO Front Half Assembly 1 3/4"-20 Spline	1	
22	9005232	PTO Rear Half Assembly 1 3/4"-20 Spline	1	
23	9002513	Reinforcing Collar	1	NOT SHOWN

Cut Out Clutch Components - Walterscheid


Please visit www.unverferth.com/parts/ for the most current parts listing.

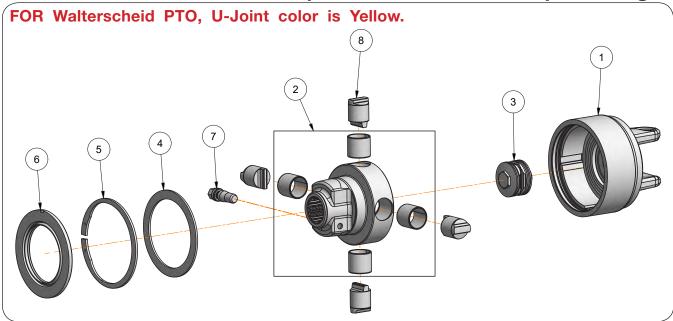

NOTE: Cut Out Clutch (9005235) must be used with the Complete PTO Assembly (9005230). This will not work with the Friction Clutch PTO Assembly (9005245).

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9005235	Cut Out Clutch (3200 N*m Setting)		Includes Items 1-8
1	9005247	Clutch Housing	1	
2	9005248	Clutch Hub 1 3/4"-20 Spline	1	
3	9005249	Spring Pack	1	
4	9005250	Washer	1	
5	9005251	Retaining Ring	1	
6	9005252	Sealing Ring	1	
7	9005253	Clutch Clamp Cone Assembly	1	
8	9005254	Clutch Cam	4	


Gearbox Components

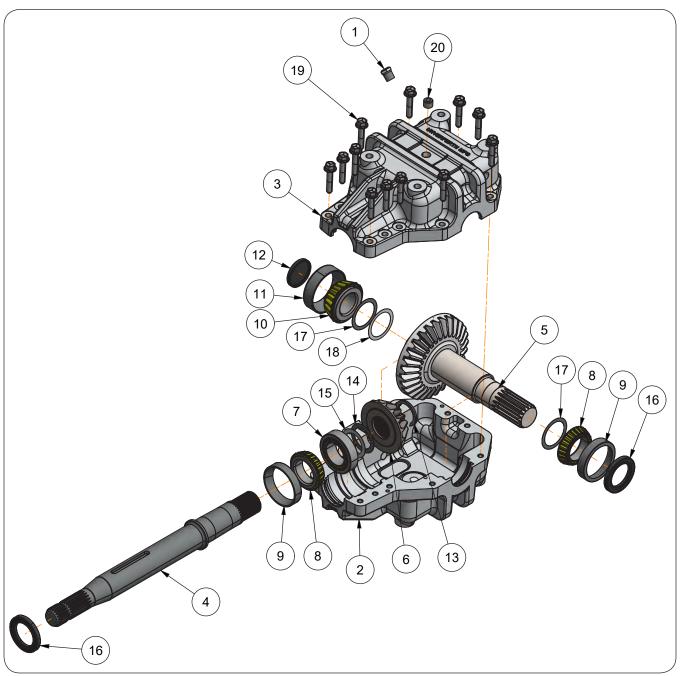

Gearbox Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9007366	Gearbox Complete	1	Includes Items 1 through 20
1	9006381	Glass Sight Plug	2	
2	9007492	Gearbox Housing Q800 w/Taped Holes	1	
3	9007493	Gearbox Housing Q800 w/Through Holes	1	
4	9007494	Gearbox Shaft 2 1/4" Dia.	1	
5	9007495	Gear Shaft Assembly 29 Tooth, 2 1/4"-17 Spline	1	
6	9007496	Gear 16 Tooth Splined	1	
7	9007497	Bearing Cup & Cone Set, 3.740" OD x 1 1/4"	1	
8	9007498	Bearing Cone 2 1/4" ID x 1"	2	
9	9007499	Bearing Cup 3.8437" OD x 0.7812"	2	
10	9007500	Bearing Cone 2" ID x 1.5312"	1	
11	9007501	Bearing Cup 4.125" OD	1	
12	9007502	End Cap	1	
13	9007503	Retaining Ring - External 2" Nominal Shaft Dia.	1	
14	9007504	Shim - 0.025"	1	
15	9007505	Shim - 0.030"	1	
16	9007508	Shaft Seal	2	
17	9007511	Shim - 0.005"	2	
18	9007512	Shim - 0.003"	1	
19	903161-060	Flange Screw 1/2"-13UNC x 2 1/2"	12	
20	95283	Plug	3	


EOH Valve Assembly Components Optional

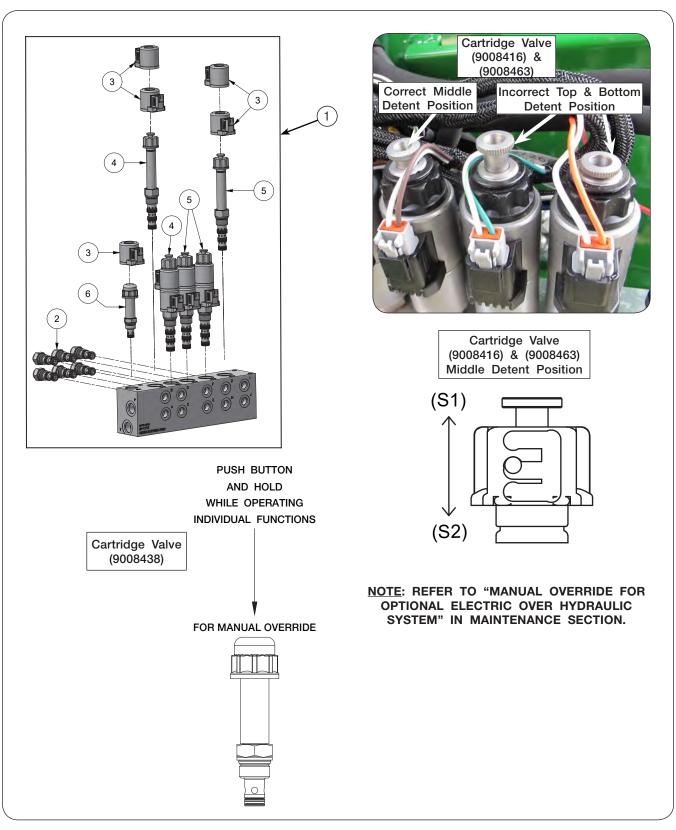

EOH Valve Assembly Components Optional


ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	9010165	EOH Block Assembly - 5 Spool Replacement Kit	1	Includes Items 2-7 and Instruction Sheet
2	9003856	Pilot Check Valve	6	
3	9005769	Coil - 12 VDC DN-40	11	
4	9008416	Cartridge Valve - 4 Way, 3 Position - Closed Center w/Detented Manual Override	2	Includes Retaining Cap
	9003906	Seal Kit	-	
5	9008463	Cartridge Valve - 4 Way, 3 Position - Open Center w/Detented Manual Override	3	Includes Retaining Cap
	9003906	Seal Kit	-	
6	9008438	Cartridge Valve - 2 Way, 2 Position w/Push Type Manual Overide	1	
	9003904	Seal Kit	-	

EOH Valve Functions and Wire Locations - Optional

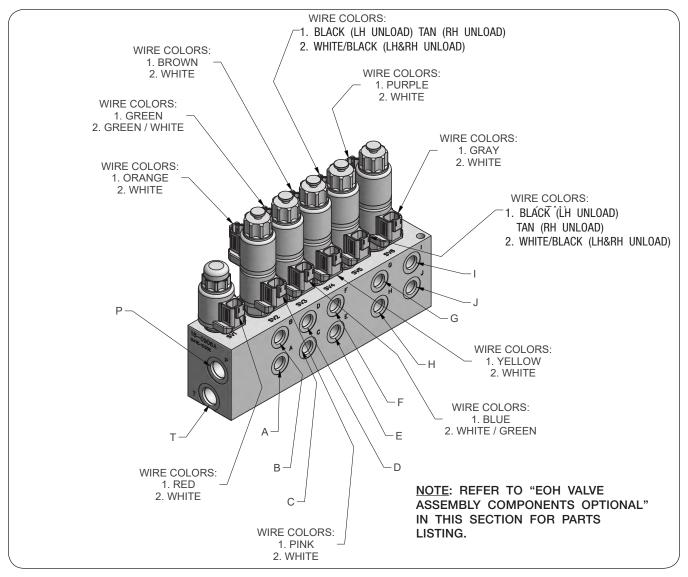


PORT	END OF CYLINDER	FUNCTION
А	BUTT END	Flow Door
В	RAM END	Flow Door
С	RAM END	Auger Fold
D	BUTT END	Auger Fold
Е	RAM END	Spout Tilt Out
F	BUTT END	Spout Tilt In
G	RAM END	Joystick / Spout Rotate Back
Н	BUTT END	Joystick / Spout Rotate Front
I	BUTT END	Auger Pivot Down
J	RAM END	Auger Pivot Up
Р		Tractor Pressure
T		Tractor Return

EOH Tractor Circuit Hydraulic Components - Optional

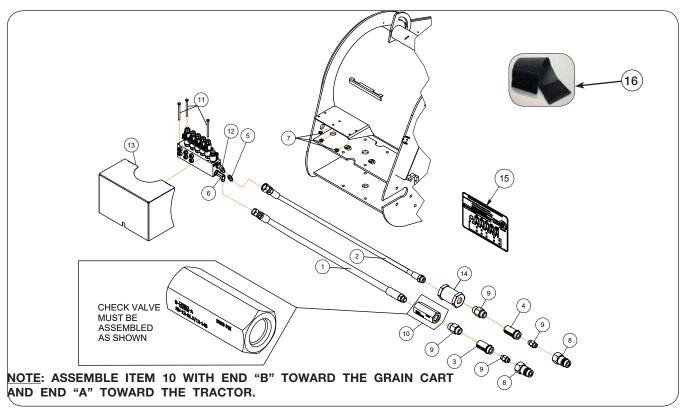


ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	9009839	Hydraulic Hose, 1/2" x 188" - 3000 PSI	1	
2	9006587	Hydraulic Hose, 1/4" x 186" - 3000 PSI	1	
3	9009766	Hose Grips - Tan (- Cylinder Extend)	1	Joystick / Spout Rotate Front
4	9009765	Hose Grips - Tan (+ Cylinder Retract)	1	Joystick / Spout Rotate Back
5	9006527	JIC Tube Reducer 9/16"-18 UNF M x 9/16"-UNF F	1	
6	901568	Elbow, 90° Extra Long 3/4"-16 JIC x 3/4"-16 O-Ring M	1	
7	91257	Large Flange Hex Nut, 5/16"-18UNC Gr.5	3	
8	91383	Male Tip Coupling, 3/4"-16	2	
9	98508	Adapter 3/4"-16 O-Ring M x 3/4"-16 O-Ring M	2	
10	9006994	Check Line Valve 145 PSI	1	
11	9390-042	Capscrew, 5/16"-18UNC x 4" Gr.5	3	
12	9874	Elbow, 90° 9/16"-18 JIC M x 3/4"-16 OR ADJ M	1	
13	295569B	Valve Cover Plate	1	Also Order Item #15
14	9005403	120 Micron Hydraulic Filter	1	
15	9008564	Decal, CAUTION (Valve Block)	1	Located Inside Cover Plate #13
16	9003848	Velcro Hose Wrap, 2" I.D. x 127"	1	

EOH Spout Rotate Hydraulic Components (Optional)

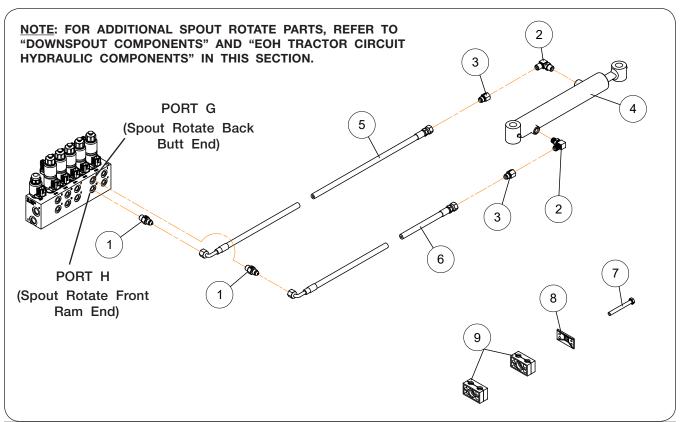


ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	98435	Adapter, 9/16"-18 JIC Male x 9/16"-18 O-Ring Male	2	Optional (Includes 0.030" Red Restrictor)
2	97445	Elbow, 90° 9/16"-18 JIC Male x 9/16"-18 O-Ring ADJ Male	2	
3	9003303	Adapter 9/16"-18 JICF x 9/16"-18 JICM	2	
4	9005135	Cylinder 1 1/2" x 8" (3000 PSI)	1	
4	9005419	Seal Kit	-	
5	9010303	Hydraulic Hose, 1/4" x 241" - 3000 PSI	1	
6	9010304	Hydraulic Hose, 1/4" x 248" - 3000 PSI	1	
7	9390-034	Capscrew, 5/16"-18UNC x 2" G5	2	
8	9003814	Clamp Top Plate, 1/4" x 1 1/8" x 2 1/16"	2	
9	9003816	Clamp, Polypropylene	2	

EOH Spout Tilt Hydraulic Components (Optional)

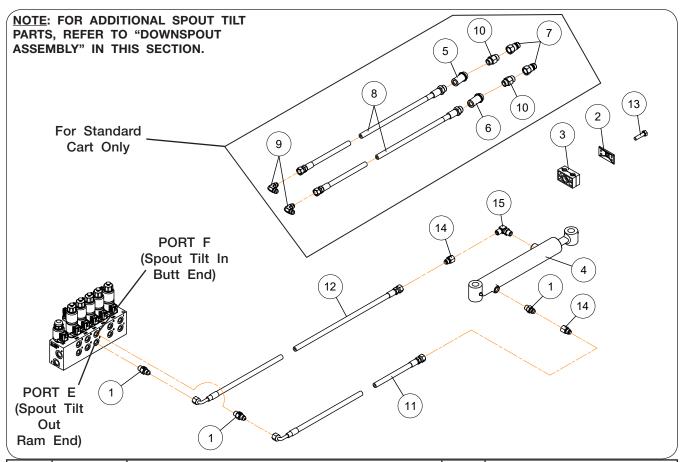


ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	9001495	Adapter, 9/16"-18 JIC Male x 9/16"-18 0-Ring Male	3	
2	9003814	Clamp Top Plate, 1/4" x 1 1/8" x 2 1/16"	4	
3	9003816	Clamp, Polypropylene	4	
4	9005135	Cylinder 1 1/2" x 8" (3000 PSI)	1	
4	9005419	Seal Kit	-	
5	9009759	Hose Grips - Yellow (+ Cylinder Extend)	1	Spout Out
6	9009760	Hose Grips - Yellow (- Cylinder Retract)	1	Spout In
7	91383	Male Tip Coupling, 3/4"-16 O-Ring Female	2	
8	9006587	Hydraulic Hose, 1/4" x 186" - 3000 PSI	2	
9	9897	Elbow, 90° 9/16"-18 JIC Male x 9/16"-18 JIC Male	2	
10	98508	Adapter, 3/4"-16 OR Male x 3/4"-16 OR Male	2	
11	9005324	Hydraulic Hose, 1/4" x 304" - 3000 PSI	1	
12	9006580	Hydraulic Hose, 1/4" x 312" - 3000 PSI	1	
13	9390-031	Capscrew, 5/16"-18UNC x 1 1/4" G5	2	
14	95193	Adapter, 9/16"-18 JIC Female x 9/16"-18 JIC Male	2	
15	97445	90° Elbow 9/16"-18 JIC Male x 9/16"-18 O-Ring Male	1	

Auger Pivot Hydraulic Components

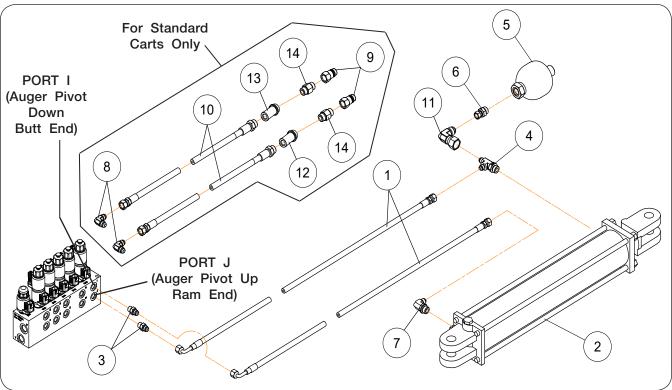


ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	9000925	Hydraulic Hose, 1/4" x 78" - 3000 PSI	2	
2	9000933	Hydraulic Cylinder, 3 1/2" x 20" - 3000 PSI	1	
2	9001081	Seal Kit	-	
3	9001495	Adapter, 9/16"-18 JIC M x 9/16"-18 OR M	2	Optional EOH (Includes 0.030" Red Restrictor)
4	9002155	Tee, 9/16"-18 JIC M x 3/4"-16 OR ADJ M	1	
5	9002719	Accumulator - 1800 PSI	1	
6	9002720	Adapter, 3/4"-16 OR M x 9/16"-18 JIC F	1	
7	9874	Elbow, 90° 9/16-18 JIC Male x 3/4-16 OR ADJ Male	1	
8	9897	Elbow, 90° 9/16-18 JIC Male x 9/16-18 JIC Male	2	
9	91383	Male Tip Coupling, 3/4"-16	2	
10	9005574	Hydraulic Hose, 1/4" x 208" - 3000 PSI	2	
11	9876	Elbow, 90° 9/16-18 JIC Male x 9/16-18 JIC Female	1	
12	9009761	Hose Grips - Orange (+ Cylinder Extend)	1	
13	9009762	Hose Grips - Orange (- Cylinder Retract)	1	
14	98508	Adapter, 3/4"-16 OR Male x 3/4"-16 OR Male	2	

Auger Fold Hydraulic Components

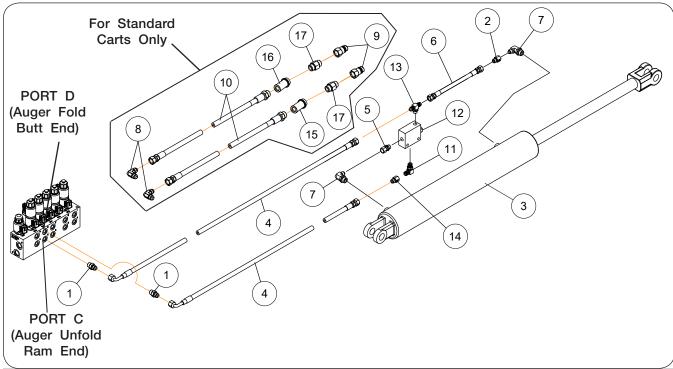

ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	9001495	Adapter, 9/16"-18 JIC M x 9/16"-18 OR M	2	Optional EOH
2	9002199	Reducer, 9/16"-18 JIC F x 9/16"-18 JIC M	1	0.060" Yellow Restrictor
3	9007639	Hydraulic Cylinder, 3 1/2" x 20" - 3000 PSI	1	
J	9006942	Seal Kit	-	
4	9005864	Hydraulic Hose, 1/4" x 66" - 3000 PSI	2	
5	9002446	Adapter, 9/16"-18 M O-Ring x 9/16"-18 JIC F	1	
6	93472	Hycraulic Hose, 1/4" x 16" - 3000 PSI	1	
7	9874	Elbow, 90° 9/16"-18 JIC M x 3/4"-16 OR ADJ M	2	
8	9897	Elbow, 90° 9/16"-18 JIC M x 9/16"-18 JIC M	2	
9	91383	Male Tip Coupling, 3/4"-16	2	
10	9006587	Hydraulic Hose, 1/4" x 186" - 3000 PSI	2	
11	97445	Elbow, 90° 9/16"-18 JIC M x 9/16"-18 0-Ring ADJ M	1	
12	9003990	Pilot Operated Check Valve with 3 Ports	1	
13	9001710	Tee 9/16"-18 JIC M x 9/16"-18 JIC M x 9/16"-18 O-Ring M	1	
14	9002199	Reducer, 9/16"-18 JIC F x 9/16"-18 JIC M	1	0.060" Yellow Restrictor
15	9009751	Hose Grips - Green (+ Cylinder Extend)	1	
16	9009752	Hose Grips - Green (- Cylinder Retract)	1	
17	98508	Adapter, 3/4"-16 OR Male x 3/4"-16 OR Male	2	

Flow Door Circuit Hydraulic Components

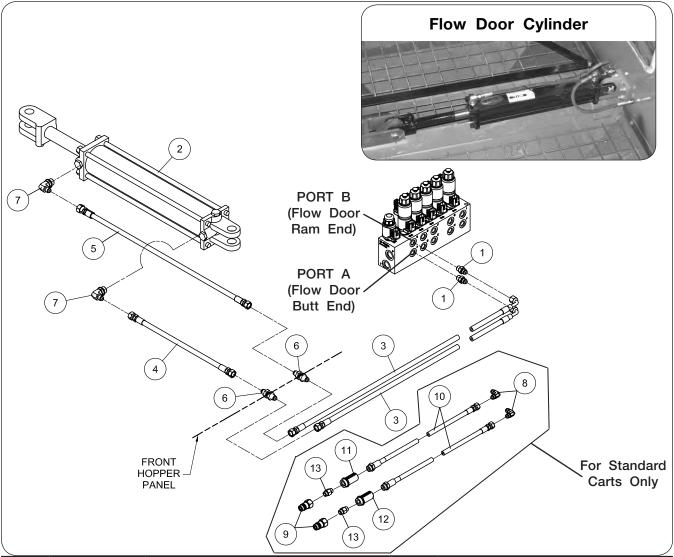

ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	9001495	Adapter, 9/16"-18 JIC M x 9/16"-18 OR M	2	Optional EOH
2	9002575	Hydraulic Cylinder, 3" x 16" - 3000 PSI	1	
	9003772	Seal Kit	-	
3	9004442	Hydraulic Hose, 1/4" x 54" - 3000 PSI	2	
4	9006607	Hydraulic Hose, 1/4" x 50" - 3000 PSI	1	
5	93472	Hydraulic Hose, 1/4" x 16" - 3000 PSI	1	
6	95192	Bulkhead Union, 9/16"-18 JIC M x 9/16"-18 JIC M	2	
7	9874	Elbow, 90° 9/16"-18 JIC M x 3/4"-16 OR ADJ M	6	
8	9897	Elbow, 90° 9/16"-18 JIC M x 9/16"-18 JIC M	2	
9	91383	Male Tip Coupling, 3/4"-16	2	
10	9006587	Hydraulic Hose, 1/4" x 208" - 3000 PSI	2	
11	9009754	Hose Grips - Red (+ Cylinder Extend)	1	
12	9009755	Hose Grips - Red (- Cylinder Retract)	1	
13	98508	Adapter, 3/4"-16 OR Male x 3/4"-16 OR Male	2	

Unverferth 1620 — Parts

Notes

Unverferth 1620 — Parts

Cylinders

Please visit www.unverferth.com/parts/ for the most current parts listing.

Auger Flow Door Cylinder - 3" x 16"


TEM	PART NO.	DESCRIPTION	QTY	NOTES
	9002575	Cylinder 3" x 16"	1	3/4"-16 O-Ring Ports (3000 PSI)
1	9003772	Seal Kit	1	

Auger Fold Cylinder - 3 1/2" x 20"

I	ITEM	PART NO.	DESCRIPTION	QTY	NOTES
		9009659	Cylinder 3" x 22"	1	3/4"-16 O-Ring Ports (3000 PSI)
ĺ	1	9006942	Seal Kit	1	

Auger Pivot Cylinder - 3 1/2" x 20"

l	ITEM	PART NO.	DESCRIPTION	QTY	NOTES
		9000933	Cylinder 3 1/2" x 20"	1	3/4"-16 O-Ring Ports (3000 PSI)
	1	9001081	Seal Kit	1	

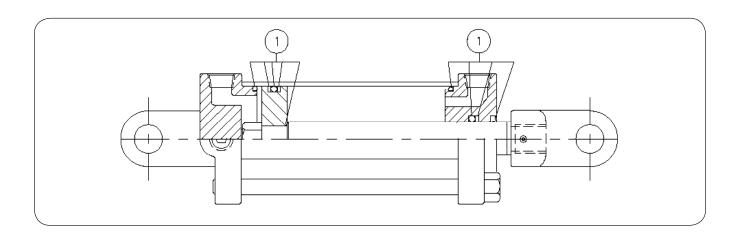

Unverferth 1620 — Parts

Cylinders


Please visit www.unverferth.com/parts/ for the most current parts listing.

Spout Tilt and Rotate Cylinders - 1 1/2" x 8"


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9005135	Cylinder 1 1/2" x 8"	2	#6 9/16"-18 O-Ring Ports (3000 PSI)
1	9005419	Seal Kit	1	

Optional Jack Cylinder - 3 1/2" x 8"

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9009047	Cylinder, Complete - 3 1/2" x 8"	1	
1	9007880	Seal Kit	1	

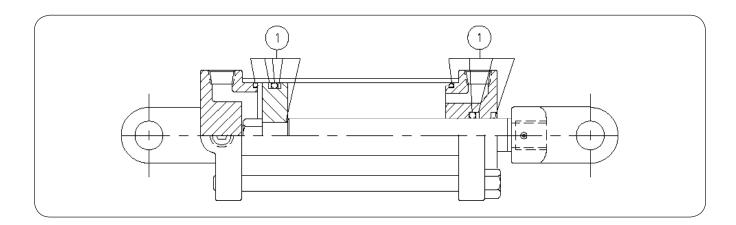


Hopper Rear Electrical Components

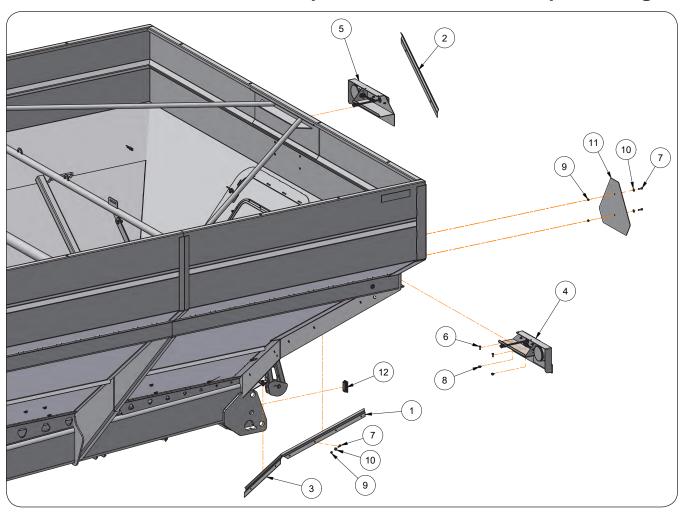

Hopper Rear Electrical Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	282305G	Upper Harness Cover =Green=		
1	282305R	Upper Harness Cover =Red=	2	
	282305M	Upper Harness Cover =Midnight Grey Metallic=		
	282308G	Harness Cover Plate RH =Green=		
2	282308R	Harness Cover Plate RH =Red=	1	
	282308M	Harness Cover Plate RH =Midnight Grey Metallic=		
	282309G	Harness Cover Plate LH =Green=		
3	282309R	Harness Cover Plate LH =Red=	1	
	282309M	Harness Cover Plate LH =Midnight Grey Metallic=		
4	284358B	Lamp Assembly LH =Black=	1	
5	284359B	Lamp Assembly RH =Black=	1	
6	9390-003	Capscrew 1/4"-20UNC x 3/4" Grade 5	4	
7	9390-005	Capscrew 1/4-20UNC x 1" Grade 5	12	
8	97189	Large Flange Hex Nut 1/4"-20UNC Grade 5	4	
9	9936	Locknut 1/4"-20UNC	12	
10	9405-064	Flat Washer 1/4"	12	
11	TA510514	SMV Emblem	1	
12	9009931	Plug, 1 1/2" x 3"	2	


Electrical Components

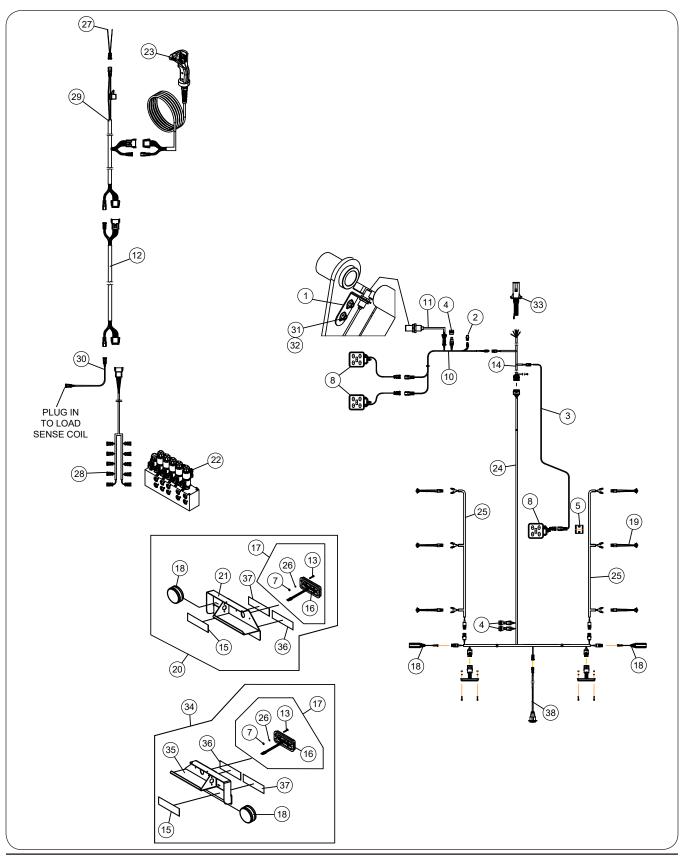

Electrical Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	272645B	Switch Plate Bracket =Black=	1	
2	252386	Plug Assembly, 2 Pin Shroud	1	
3	9008969	Wiring Harness - 226" (w/2-Pin Connectors)	1	
4	9005618	Relay - 12VDC	3	
5	271574B	Lamp Mount Plate =Black=	1	
7	9830-016	Hex Nut, #10-32 Grade 2	4	
8	9008957	Work Light (LED) (w/2-Pin Connector)	3	
10	9010212	Switch Wiring Harness (w/2-Pin Connector Ends)	1	
11	9007223	Proximity Switch	1	
12	9008252	Joystick Controller Extension Harness	1	
13	903172-350	Phillips Pan Head Screw, #10-32UNF x 1-1/4"	4	
14	9008501	Front Harness - 296" (w/2 Pin Shroud Connectors)	1	
15	9003127	Reflector 2" x 9" =Amber=	2	
16	9006282	LED Lamp - Red	2	
17	232170	LED Lamp - Red - Replacement Kit	2	Includes Items 7, 13, 16 & 26
18	9005142	LED Lamp - Amber	2	
19	9006107	Micro Dot, LED Amber Light	6	
20	284359B	Lamp Assembly Right-Hand =Black=	1	
21	284371B	Lamp Mount Weldment Right-Hand =Black=	1	
22	293416	EOH Block Assembly - 5 Spool Replacement Kit	1	
23	9008265	L-Series Control Grip - 5 Function	1	
24	9009586	Rear Harness	1	
25	9006520	Clearance Harness	2	
26	9404-013	Lock Washer, #10	4	
27	9006907	Power Harness, 2-Pin	1	
28	9010096	"T" Main Wiring Harness - 189"	1	
29	9008251	Harness - Joystick Power	1	
30	9007266	Wire Harness, 218 5/16" (2 Pin Diverter)	1	
31	91262	Large Flange Screw, 3/8"-16UNC x 1" Grade 5	2	
32	91263	Large Flange Nut, 3/8"-16UNC Grade 5	2	
33	92450	7-Way Plug	1	
34	284358B	Lamp Assembly Left-Hand =Black=	1	
35	284370B	Lamp Mount Weldment Left-Hand =Black=	1	
36	9003125	Decal, 2" x 9" =Fluorescent=	2	
37	9003126	Reflector 2" x 9" =Red=	2	
38	9009843	7-Blade Connector	1	Optional Rear Hitch


End Caps, Tarp Bows & Mounting Brackets

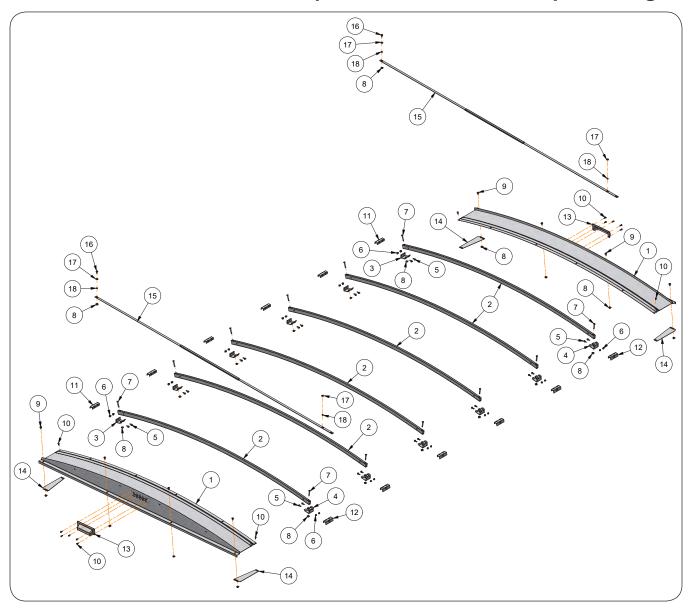

End Caps, Tarp Bows & Mounting Brackets

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	296123B	End Cap Weldment =Black=	2	296753B End Cap Service Kit Includes Items 1, 10, 13
2	283992B	Tarp Bow Weldment =Black=	6	
3	283425B	Tarp Bow Bracket =Black= (Right-Hand Side)	6	
4	283427B	Tarp Bow Bracket =Black= (Left-Hand Side)	6	
5	97604	Screw/Large Flange 5/16"-18UNC x 1"	24	
6	9010154	Flange Nut 5/16"-18UNC	24	
7	902703-046	Socket Flat Countersunk Capscrew, 3/8"-16UNC x 3"	12	
8	9008159	Nut/Large Flange 3/8"-16UNC Grade 5	22	
9	95585	Capscrew/Large Flange 3/8"-16UNC x 3/4" Grade 5	8	
10	9512	Screw/Self Drilling 1/4"-14 x 1"	14	
11	294670B	Doubler Plate Right-Hand =Black=	6	
12	294671B	Doubler Plate Left-Hand =Black=	6	
13	9009504	Endcap Vent Cover	2	
14	296355B	Sideboard Cover Plate =Black=	4	
15	9008948	Hurricane Strap For 12 FT Wide Hopper	2	
16	96972	Screw/Self Tapping 3/8"-16UNC x 1"	2	
17	9008972	Flat Washer, 3/8" Aluminum	4	
18	9008949	Tarp Strap Spacer Bushing	4	


Weather Guard Tarp

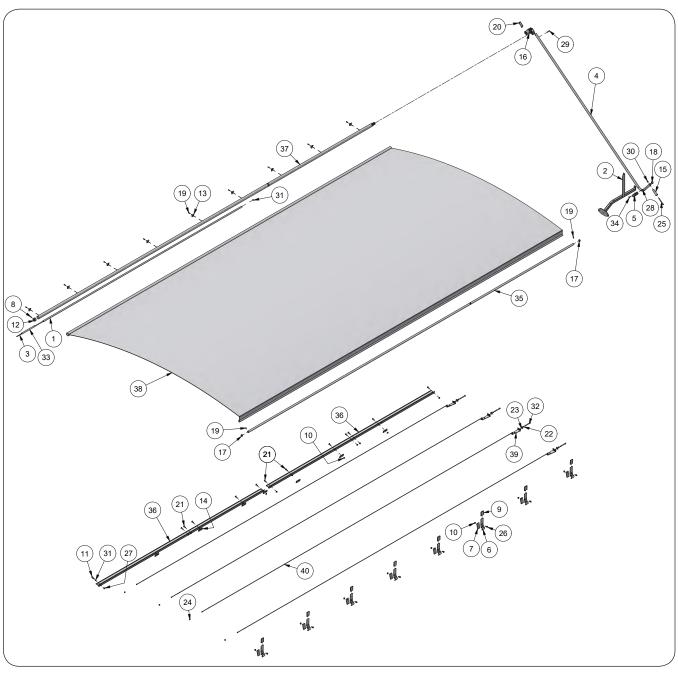

Weather Guard Tarp

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	221668	Pipe - 180"	1	
2	296423B	Handle Bracket Weldment =Black=	1	
3	221722	Bungee 3/8" Dia. x 204"	1	
4	221749	Tarp Handle Weldment	1	
5	221770B	Handle Retainer Weldment =Black=	1	
6	291661B	Tarp Stop Plate =Black=	8	
7	295183B	Tarp Stop Spacer Plate =Black=	8	
8	9001396	Pan Head Screw #10-16 x 1/2"	1	
9	9003078	Cap - Plastic (2" x 3")	8	
10	9003378	Rivet/Pop 3/16"	2	
11	9004548	Eye Bolt 3/8"-16UNC x 1 3/4"	1	
12	9004947	Plug 2"	1	
13	9004949	U-Clamp	9	
14	295259B	Tarp Spacer Plate =Black=	7	
15	9004969	Handle	1	
16	9004977	U-Joint w/ 1 3/8"-21 Spline	1	
17	9005088	Plug 1 1/8"	2	
18	9005089	Plug 1 1/4"	1	
19	9005197	Screw/Self Drilling #10-16 x 3/4" Pan Head	9	
20	9005305	Lynch Pin 3/8" x 3"	1	
21	9009089	Torx Head Machine Screw 3/8-16UNC x 1 1/4 Grade 5	12	
22	9005688	Star Washer	4	
23	9005696	Fender Washer	4	
24	9005727	Plug 7/16"	4	
25	903172-450	Phillips Pan Head Screw 3/8"-16UNC x 4 1/2"	1	
26	9003259	Flange Screw 3/8"-16UNC x 1 1/4" Grade 5	8	
27	9008159	Nut/Large Flange 3/8"-16UNC Grade 5	21	
28	9390-055	Capscrew 3/8"-16UNC x 1" Grade 5	1	
29	9392-180	Roll Pin 3/8" Dia. x 2"	1	
30	9398-012	Elastic Stop Nut 3/8"-16UNC	1	
31	9405-074	Flat Washer 3/8"	3	
32	TA0-907131-0	Capscrew 3/8"-16UNC x 4 1/2" (Full Threaded)	4	
33	TA806225	Hose 1/2" EPDM	1	
34	9928	Locknut 3/8-16UNC	1	
35	221615	Fixed Tube Weldment	1	
36	297583	Latch Plate Service Kit	1	
37	221789	Roll Tube Weldment	1	
38	9005046	Tarp 166" x 293"	1	
	9005581	Tarp Patch Kit	-	
39	281712B	Bracket & U-Nut Assembly =Black=	4	
40	9005677	Cable Assembly 282"	4	


Hydraulic Jack - Kit #296288B (Optional)

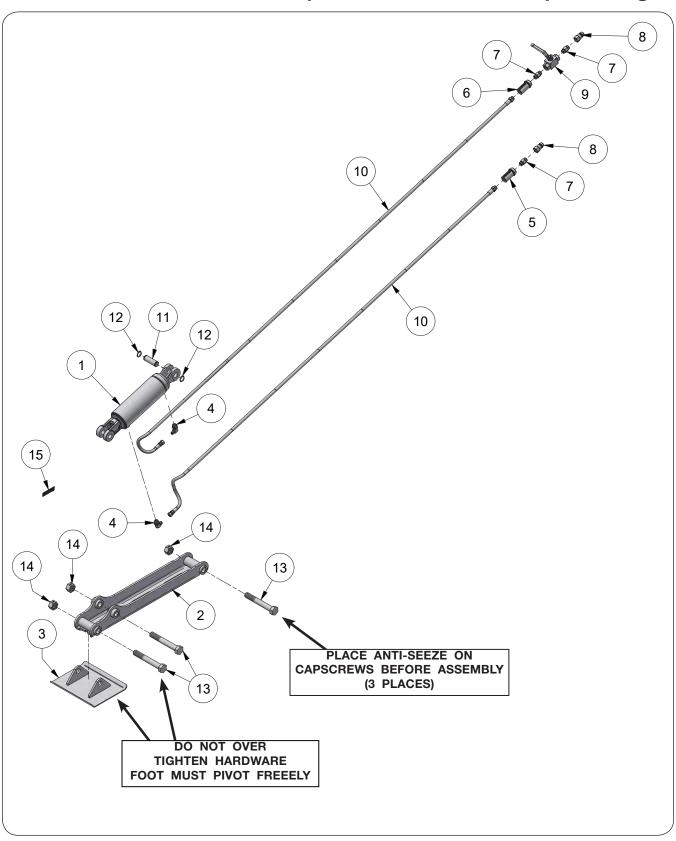

Hydraulic Jack - Kit #296288B (Optional)


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	9009047	Hydraulic Cylinder, 3 1/2" x 8" 3000 PSI	1	
2	271712B	Jack Weldment =Black=	1	
3	271723B	Jack Foot Weldment =Black=	1	
4	9006173	Elbow Fitting, 90 Degree 9/16" Female O-Ring x 3/4" Male O-Ring	2	
5	9009758	Hose Grip, Black (-)	1	
6	9009757	Hose Grip, Black (+)	1	
7	98508	Adapter, 3/4"-16 Male O-Ring x 3/4"-16 Male O-Ring	2	
8	91383	Male Tip Coupling, 3/4"-16 O-Ring Female	2	
9	9005426	Ball Valve	1	
10	9006068	Hydraulic Hose, 1/4" x 92"	2	
11	272587	Hydraulic Cylinder Pin	1	
12	91192	Retaining Ring, 1"	2	
13	9390-197	Caspcrew, 1"-8UNC x 7" Grade 5	3	
14	92199	Lock Nut, 1"-8UNC	3	
15	9009869	Hydraulic Jack Decal, Hose Caddy	1	

Rear Drop Hitch Components (Optional)

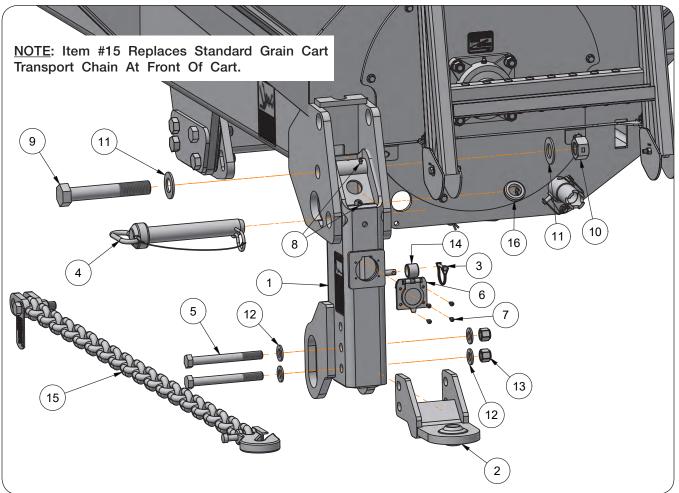

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	296960B	Rear Drop Hitch Kit (Black)	1	Includes Items 1-15. See "Front End Components" For Additional Details.
1	297128B	Rear Drop Hitch Assembly (Black)	1	Includes Decal, WARNING (Towing Capacity) 9009646
2	295978B	Rear Hitch Weldment =Black=	1	
3	9000936	Lynch Pin	1	
4	9009656	Pivot Pin	1	
5	9390-159	Capscrew 3/4"-10UNC x 7" Grade 5	2	
6	9009843	7-Blade Connector	1	
7	903172-133	Phillips Head Screw #10-24 x 1/2"	4	
8	91160	Grease Zerk	2	
9	9390-225	Capscrew 1 1/4"-7UNC x 8" Grade 5	1	
10	93476	Lock Nut 1 1/4"-7UNC Grade 5	1	
11	9405-128	Flat Washer 1 1/4" SAE	2	
12	9405-104	Flat Washer 3/4" SAE	4	
13	9398-021	Lock Nut 3/4"-10UNC	2	
14	91268	Tension Bushing	1	
15	PF1238-19	Transport Chain #61,000	1	Replaces Standard Grain Cart Transport Chain If Equipped With Optional Rear Hitch

Video System (Optional)

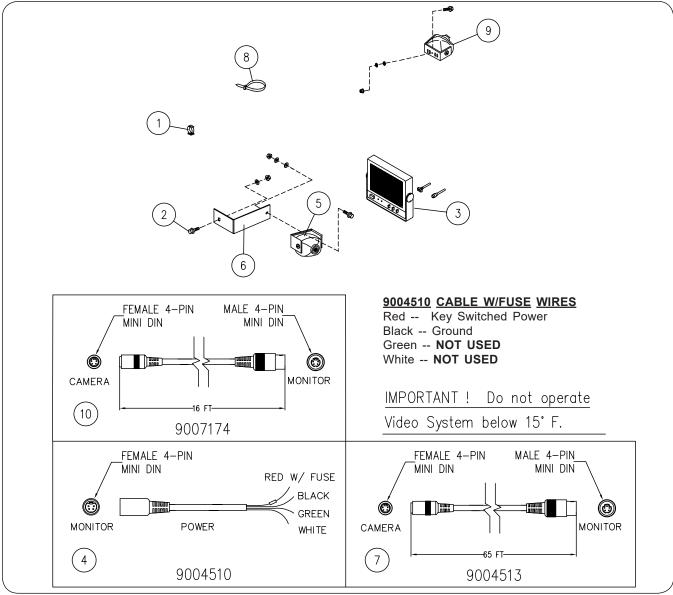

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	265770	Video System Kit for Front View	1	Includes Items 1-8 and own Instruction Sheet
	9004506	Additional Camera for Rear View	1	Includes Items 6 & 7
1	TAAU14007	Snap Clip, Adhesive	10	
2	9512	Self-Drilling Screw 1/4"-14 x 1"	10	
3	9006273	Monitor, 7" LCD/LED	1	
4	9004510	Cable w/Fuse	1	
5	9006274	Camera	1	
6	265771B	Bracket	1	
7	9004513	Cable, 65'	1	
8	9000107	Cable Tie	AR	
9	9004506	Camera Kit for Rear View with 65' Cable	1	
10	9007174	Camera Cable, 16 ft.	1	



Scan the QR code for additional product information.

