



UNVERFERTH DOUBLE-AUGER GRAIN CART MODEL 2520

Serial Number B46330100 & Higher

Part No. 297937

Unverferth 2520 — Introduction

Foreword




This symbol identifies important safety messages. When you see it, read the message that follows and be alert to the possibility of personal injury.

Remember, safety instructions stated in this manual are for your protection. Read them carefully and follow them closely when working around or using this machine.

Read and study this manual completely before attempting to operate this implement. Take this manual to the field for handy reference when operating, adjusting, or servicing your machine.

When referenced, "Right-Hand" (RH) and "Left-Hand" (LH) side of the machine are determined by standing behind the machine and facing in the direction of travel.

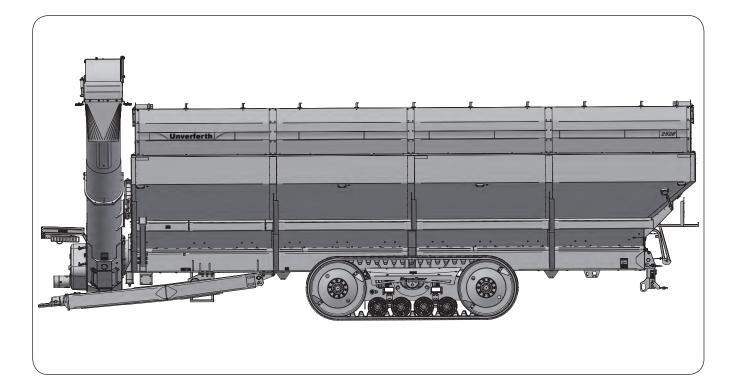

Unverferth 2520 — Introduction

Product Information


When ordering parts or when requesting further information or assistance, always give the following information:

- Machine name
- Model number
- Serial number

All products manufactured by Unverferth Mfg. Co., Inc. are warranted to be free from material and workmanship defects for one full year from time of consumer delivery. Your local dealer will gladly assist you with any warranty questions.

Please fill out and retain this portion for your records. The serial number decal is located at the left-front corner of your grain cart.

Purchase Date	Model	Serial No	
Dealer		City	
Dealer Contact		Phone	

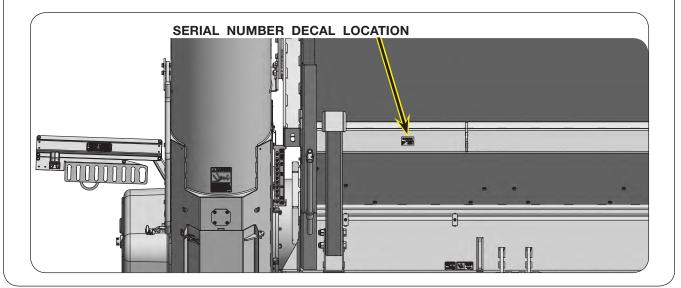

IMPORTANT

• The information, specifications, and illustrations in the manual are based on information available at the time it was written. Due to continuing improvements in the design and manufacture of Unverferth products, all specifications and information contained herein are subject to change without notice.

Section I Safety

General Hazard Information	1-2
Safety Decals	1-3
Following Safety Instructions	1-6
Before Servicing or Operating	
During Operation	1-8
Before Transporting	1-8
During Transport	1-8
Driveline Safety	1-9
Pressurized Oil	
Preparing for Emergencies	1-11
Wearing Protective Equipment	1-11

Section II Set Up

Set Up Checklist	2-2
Repositioning Tongue	
Driveline Install	
Driveline Set Up	2-10
Auger Set Up	
7-Pin Connection & Auger Pivot Slide Shipping Block Removal	2-13
Auger Spout Cylinder Stop Removal	2-14
Hydraulic Jack Set Up	
Side Ladder Upper Extension	
Move Lights to Operating Position	
SMV & SIS Decals	2-19
Video System (Optional)	
Vertical Auger Work Light	
Belt Engagement	
Operational Check	
FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, VIDEO SYSTEM OR OTHER O	
PLEASE REFER TO THE INDIVIDUAL MANUALS.	

Section III Operation

Operating Checklist	
Preparing Tractor	3-3
Preparing Cart	
Hardware	
Pivot Pins	
Hitch	
Auger	
Rear Drop Hitch	
Auger	3-4
Hydraulic System	3-5
Hitching to Tractor	
Drawbar Connection	3-5
Hydraulic Jack Usage	3-6
Transport Chain Connection	3-7
Hydraulic Connection	3-8
Hydraulic Connection For Optional Water Delivery Syatem	3-10
Electrical Connections	3-11
Towing	3-12
Auger Operation	
PTO Driven Auger	3-13
Vertical Auger Fold	
Auger Overload Procedure	3-16
Electric Over Hydraulic Operation	
Electric/Hydraulic Connection	3-17
Auger Fold & Spout Operation	3-18
Flow Door Operation	3-19
Auger Fold to Transport	3-19
Cart Loading Sequence	3-20
Vertical & Horizontal Cleanout Door Operation	
Closing Vertical Cleanout Door	3-21
Opening Vertical Cleanout Door	
Horizontal Cleanout Door	3-23
Ladder Operation	
Side Ladder Operation	3-25
Rear Ladder Operation	3-29
Rear Access Door Operation	3-31
Rear Drop Hitch Operation	
Storage to Working Position	3-33
Rear Hitch Connection	3-34
Electrical Connection	3-35
Rear Drop Hitch Adjustment	
Video System	
Weather Guard Tarp	
Wireless Receiver and Control Box Location	

FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, VIDEO SYSTEM OR OTHER OPTIONS, PLEASE REFER TO THE INDIVIDUAL MANUALS.

Section IV Maintenance

Lubrication	4-2
Hydraulic System	
Purge Hydraulic System	
Manual Override For Optional Electric Over Hydraulic System	4-6
Auger System	
Vertical Auger Height Check	4-9
Vertical Auger Timing	
Horizontal Auger Height Measurment	4-12
Hanger Bearing Height Adjustment	4-13
Horizontal Auger Driveline Bearings	4-14
Belt Tightener Adjustment	4-15
V-Belt Alignment	4-17
Split Tapered Bushings	4-18
Horizonatal Auger Removal and Replacement	
Driveline Removal	
Gearbox	4-26
PTO Shaft Length	4-27
PTO Shaft Length Adjustment	
PTO Shaft and Clutch - Benzi PTO	
Track Wheels	4-32
Baffle Adjustment	
Horizontal Cleanout Door Adjustment	
Hydraulic Jack Cylinder Replacement	
Seasonal Storage	
Troubleshooting	
Tarp Troubleshooting, Inspection, and Replacement	
Electircal System Diagram - Plug #92450	
Electircal System Diagram	
Electircal System Diagram - Front Harness #9008106	
Electircal System Diagram - Rear Harness # 9009574	
Electircal System Diagram - Right Hand Clearance Light Harness #9009032	
Electircal System Diagram - Left Hand Clearance Light Harness #9009070	
Electircal System Diagram - Auger Wire Harness #9008956	
Electircal System Diagram - Main Harness #9010096	
Electircal System Diagram - Proximity Sensor #9007223	
Electircal System Diagram - Amber Clearance Light #9005529	
Electircal System Diagram - Clearnace Light Harness #9005542	
Electircal System Diagram - Work Flood Lamp #9008957	
Electircal System Diagram - Red Tail/Turn Light #9006345	
Electircal System Diagram - Amber Double Face #9005142	
Electircal System Diagram - Diverter Harness #9007266	
Electircal System Diagram - Adapter Harness AG to 7 Blade Connector	
Electric Over Hydraulic System Schematic 5 Function	
Electric Over Hydraulic Valve Electrical Schematic 5 Function	
Electrical System Diagram - Optional Wireless Electirc Tarp	
Complete Torque Chart	+ 00
Capscrews - Grade 5	4-56
Capscrews - Grade 8	
Hydraulic Fittings	
FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, VIDEO SYSTEM OR OTHER OPTION	
PLEASE REFER TO THE INDIVIDUAL MANUALS.	٧٠,
I LEAGE THE ET TO THE HYDIVIDUAL MANUALO.	

Section V Parts

Please visit www.unverferth.com/parts/ for the most current parts listing.

Decals5-2
Touch Up Paint5-5
Front End Components5-6
Side Ladder Components5-8
Rear Ladder Components5-10
Rear Access Door Components5-11
Hopper Cross Brace Components5-12
Clean Out Door Components5-14
Side Door Components5-16
Track Axle Mounting Components5-18
Hopper Flow Door Components5-20
Front Flow Door Components5-22
Middle Flow Door Components5-23
Rear Flow Door Components5-24
Flow Door Indicator Assembly5-26
Vertical Auger Components5-28
Horizontal Auger Components5-30
Lower Auger Cleanout Door and Cover Components5-32
Lower Auger Shields, Pulleys, Bearings, and Belts5-34
Idler Assembly Components5-36
Lower Auger Retainer Components5-38
Auger Fold Linkage Components5-40
Downspout Components5-42
Cut Out Clutch PTO Assembly5-44
Cut Out Clutch Assembly5-45
PTO and Bracket Assembly5-46
Gearbox Components5-48
Electric Over Hydraulic Valve Functions and Wire Locations 5 Spool5-50
Electric Over Hydraulic (EOH) Valve Assembly Components 5 Spool5-52
EOH Tractor Circuit Hydraulic Components5-54
Flow Door Hydraulic Circuit Components5-55
Auger Pivot Hydraulic Components5-56
Auger Fold Hydraulic Components5-57
EOH Spout Rotate Hydraulic Components5-58
EOH Spout Tilt Hydraulic Components5-60
Hydraulic Cylinders5-62
Electrical Components - 5 Function Control Grip5-64
Weather Guard Tarp Components5-66
Rear Drop Hitch Components5-69
Hydraulic Jack Components5-70
Video System Components5-72

FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, VIDEO SYSTEM OR OTHER OPTIONS, PLEASE REFER TO THE INDIVIDUAL MANUALS.

Unverferth 2520 — Introduction

Notes	

Section I Safety

General Hazard Information	1-2
Safety Decals	
Following Safety Instructions	
Before Servicing or Operating	
During Operation	
Before Transporting	
During Transport	
Driveline Safety	1-9
Pressurized Oil	
Preparing for Emergencies	1-11
Wearing Protective Equipment	

General Hazard Information

No accident-prevention program can be successful without the wholehearted cooperation of the person who is directly responsible for the operation of the equipment.

A large number of accidents can be prevented only by the operator anticipating the result before the accident is caused and doing something about it. No power-driven equipment, whether it be transportation or processing, whether it be on the highway, in the field, or in the industrial plant, can be safer than the person who is at the controls. If accidents are to be prevented--and they can be prevented--it will be done by the operators who accept the full measure of their responsibility.

It is true that the designer, the manufacturer, and the safety engineer can help; and they will help, but their combined efforts can be wiped out by a single careless act of the operator.

It is said that, "the best kind of a safety device is a careful operator." We, at Unverferth Mfg. Co., Inc. ask that you be that kind of operator.



REMEMBER:

THINK SAFETY A CAREFUL OPERATOR IS THE BEST INSURANCE AGAINST AN ACCIDENT!

SIGNAL WORDS



INDICATES AN EXTREMELY HAZARDOUS SITUATION OR ACTION THAT WILL RESULT IN SERIOUS INJURY OR DEATH.

A WARNING

INDICATES A HAZARDOUS SITUATION OR ACTION THAT COULD RESULT IN SERIOUS INJURY OR DEATH.



INDICATES AN UNSAFE SITUATION OR ACTION THAT MAY RESULT IN PERSONAL INJURY.


IMPORTANT

Is used for instruction on operating, adjusting, or servicing a machine.


Safety Decals

A WARNING


• REPLACE LOST, DAMAGED, PAINTED, OR UNREADABLE DECALS IMMEDIATELY. IF PARTS THAT HAVE DECALS ARE REPLACED, ALSO MAKE SURE TO INSTALL NEW DECALS. THESE DECALS INFORM AND REMIND THE OPERATOR WITH OPERATIONAL INFORMATION AND SAFETY MESSAGES.

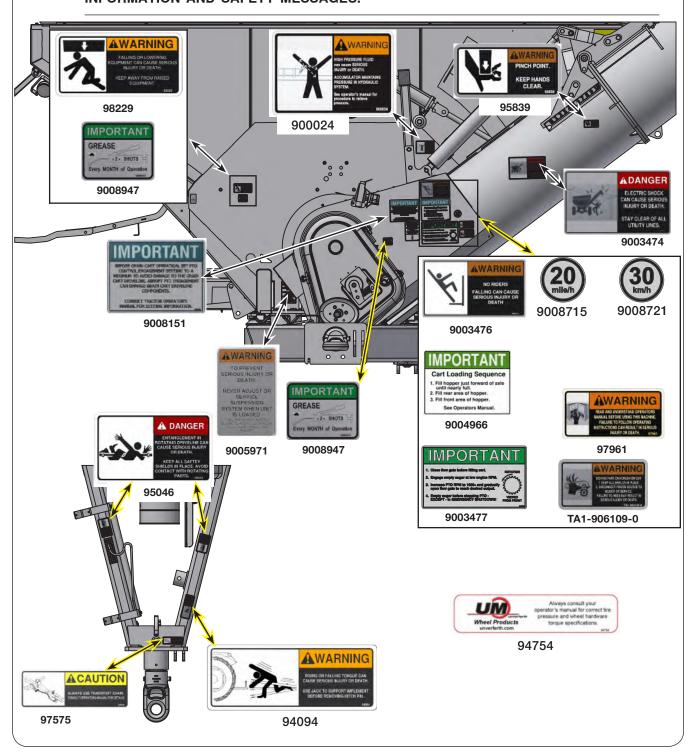

Unverferth 2520 — Safety

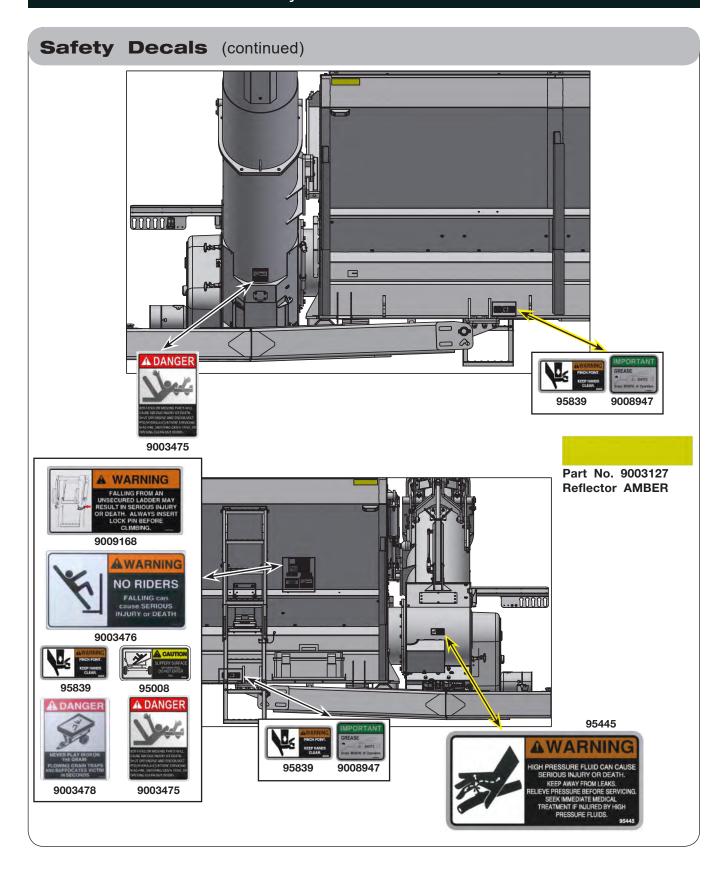

Unverferth 2520 — Safety

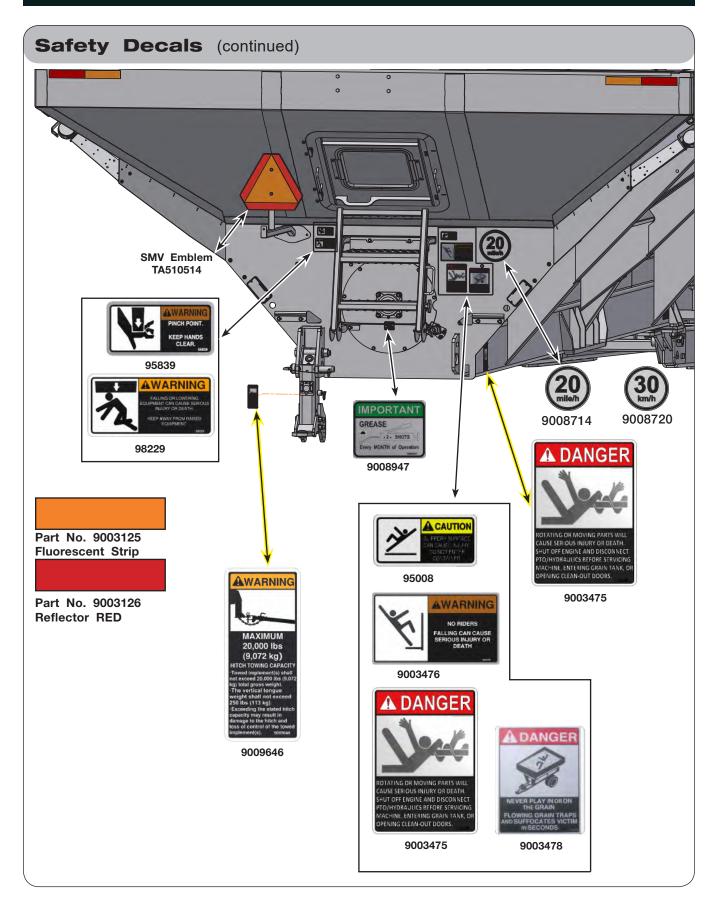

Following Safety Instructions

Read and understand this operator's manual before operating.



- All machinery should be operated only by trained and authorized personnel.
- To prevent machine damage, use only attachments and service parts approved by the manufacturer.
- Always shut tractor engine off and remove key before servicing.



- Avoid personal attire such as loose fitting clothing, shoestrings, drawstrings, pants cuffs, long hair, etc., that may become entangled in moving parts.
- Do not allow anyone to ride on the implement. Make sure everyone is clear before operating machine or towing vehicle.



- Never attempt to operate implement unless you are in the driver's seat.
- Never enter a cart containing grain. Flowing grain traps and suffocates victims in seconds.



Before Servicing or Operating

 Avoid working under an implement; however, if it becomes absolutely unavoidable, make sure the implement is safely blocked.



- Ensure that all applicable safety decals are installed and legible.
- Sharp edges on the machine can cause injury. Be careful when working around the machine.
- To prevent personal injury or death, always ensure that there are people who remain outside the cart to assist the person working inside, and that all safe workplace practices are followed. There are restricted mobility and limited exit paths when working inside the implement.
- Secure drawbar pin with safety lock and lock tractor drawbar in fixed position.
- Hot parts can cause sever burns. Use caution when working around power system/ ground engaging components. Allow parts to cool before servicing.
- Explosive separation of a tire and rim can cause serious injury or death. Only properly trained personnel should attempt to service a tire and wheel assembly.
- Verify that all safety shields are in place and properly secured.



- Add sufficient ballast to tractor to maintain steering and braking control at all times. Do not exceed tractor's lift capacity or ballast capacity.
- Do not stand between towing vehicle and implement during hitching.



Always make certain everyone and everything is clear of the machine before beginning operation.

During Operation

- · Regulate speed to working conditions. Maintain complete control at all times.
- Never lubricate equipment when in operation.
- Keep away from overhead power lines. Electrical shock can cause serious injury or death.



- Use extreme care when operating close to ditches, fences, or on hillsides.
- Do not leave towing vehicle unattended with engine running.

Before Transporting

- Verify transport chain capacity meets or exceeds weight capacity of all towed implements. Secure transport chain to towing vehicle before transporting. DO NOT transport without chain.
- Check for proper function of all available transport lights. Make sure that all reflectors are clean
 and in place on machine. Make sure the SMV emblem and SIS decals are visible to approaching
 traffic.
- Make sure auger is folded and vertical auger assembly is positioned in its narrowest configuration.
- This implement is not equipped with brakes. Ensure that the towing vehicle has adequate weight and braking capacity to tow this implement.

During Transport

- Comply with all laws governing highway safety when moving machinery.
- Use transport lights as required by all laws to adequately warn operators of other vehicles.
- Regulate speed to road conditions and maintain complete control.
- Maximum transport speed of this implement should never exceed 20 mph as indicated on the machine. Maximum transport speed of any combination of implements must not exceed the lowest specified speed of the implements in combination. Do not exceed 10 mph during off-highway travel.
- Slow down before making sharp turns to avoid tipping. Drive slowly over rough ground and side slopes.
- Do not transport grain cart on roads while loaded.
- It is probable that this implement is taller, wider and longer than the towing vehicle. Become aware of and avoid all obstacles and hazards in the travel path of the equipment, such as power lines, ditches, etc.

Driveline Safety

Do not allow children near equipment that is running or engaged.



- Do not exceed 1000 rpm PTO speed.
- Disengage the PTO, stop the tractor engine, and remove key from ignition before making inspections, or performing maintenance and repairs.
- Inspect the driveline, quick disconnect, overload shear-bolt limiter or clutch, and shielding often. Repair immediately. Use replacement parts and attaching hardware equivalent to the original equipment. Only alterations described in this manual for overall length adjustment are allowed. Any other alteration is prohibited.
- Avoid excessively long hardware or exposed and protruding parts which can snag and cause entanglement.
- Lubricate the driveline as recommended in the MAINTENANCE section.
- Keep hoses, wiring, ropes, etc. from dangling too close to the driveline.
- Install driveline and shields according to recommended lengths and attaching methods with recommended hardware. The driveline shield should rotate independently a full rotation and telescope freely. The retaining chain must be secured to the implement safety shield.
- Adjust drawbar to height and length recommended in OPERATION section.
- Use caution when turning to avoid contact between tractor tires and driveline.
- Check the length of the telescoping members to ensure the driveline will not bottom out or separate when turning and/or going over rough terrain. Refer to "PTO Shaft Length Adjustment" in MAINTENANCE section.
- Proper extended and collapsed lengths of the telescoping PTO shaft must be verified before first
 operation with each and every tractor. If the extended length of the PTO shaft is insufficient, it may
 become uncoupled during operation and cause serious injury or death from contact with uncontrolled flailing of PTO shaft assembly components. Refer to "PTO Shaft Length Adjustment" in
 MAINTENANCE section.

Pressurized Oil

- Relieve the hydraulic system of all pressure before adjusting or servicing. See tractor operator's manual manual for procedure to relieve pressure.
- High-pressure fluids can penetrate the skin and cause serious injury or death. Leaks
 of high-pressure fluids may not be visible. Use cardboard or wood to detect leaks
 in the hydraulic system. Seek medical treatment immediately if injured by highpressure fluids.



- Accumulators used in this hydraulic system can retain fluid under pressure even after tractor hydraulic valve is placed in FLOAT. See tractor operator's manual for procedure to relieve pressure.
- Hydraulic system must be purged of air before operating to prevent serious injury or death.
- Do not bend or strike high-pressure lines. Do not install bent or damaged tubes or hoses.
- Repair all oil leaks. Leaks can cause fires, personal injury, and environmental damage.
- Route hoses and lines carefully to prevent premature failure due to kinking and rubbing against other parts. Make sure that all clamps, guards and shields are installed correctly.
- Check hydraulic hoses and tubes carefully. Replace components as necessary if any of the following conditions are found:
 - o End fittings damaged, displaced, or leaking.
 - Outer covering chafed/cut or wire reinforcing exposed.
 - Outer covering ballooning locally.
 - o Evidence of kinking or crushing of the flexible part of a hose.

Preparing for Emergencies

• Keep a first aid kit and properly rated fire extinguisher nearby.





Keep emergency numbers for fire, rescue, and poison control personnel near the phone.



Wearing Protective Equipment

Wear clothing and personal protective equipment appropriate for the job.





Wear steel-toed shoes when operating.



Wear hearing protection when exposed to loud noises.



• Do not wear additional hearing impairing devices such as radio headphones, etc.



Unverferth 2520 — Safety

Notes	
Notes	

Section II Set Up

Set Up Checklist	2-2
Repositioning Tongue	2-4
Driveline Install	
Driveline Set Up	2-10
Auger Set Up	
7-Pin Connection & Auger Pivot Slide Shipping Block Removal	2-13
Auger Spout Cylinder Stop Removal	2-14
Hydraulic Jack Set Up	2-15
Side Ladder Upper Extension	
Move Lights to Operating Position	
SMV & SIS Decals	
Video System (Optional)	2-20
Vertical Auger Work Light	
Belt Engagement	
Operational Check	

FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, VIDEO SYSTEM OR OTHER OPTIONS, PLEASE REFER TO THE INDIVIDUAL MANUALS.

Set Up Checklist

After the cart has been completely assembled, use the following checklist and inspect the cart. Check off each item as it is found satisfactory or after proper adjustment is made.		
Set or Calibrate tractor PTO control engagement to MINIMUM setting. Refer to tractor operator's manual for setting information.		
Remove auger spout cylinder stop.		
Using a safe lifting device rated at a minimum 100 lbs., remove PTO from shipping brackets, install onto gearbox input shaft and set in PTO holder. Remove PTO shipping brackets.		
Move upper ladder extension from shipping to operating position. See "Upper Side Ladder Extension" in this section.		
Move rear left-hand and right-hand light brackets from shipping to operating position. See "Move Lights to Operating Position" in this section.		
Torque wheel nuts as specified in MAINTENANCE section.		
Check tire pressure and inflate tires as needed to specified air pressure. See "Tire Pressure" in MAINTENANCE section. (If applicable)		
Verify track has been aligned and is properly conditioned. (If applicable)		
Lubricate all grease fittings and check gearbox oil level.		
Inspect cleanout door assembly for proper adjustment, refer to "Vertical & Horizontal Clean-Out Door Operation" in the OPERATION section.		
Verify all safety decals are correctly located and legible. Replace if damaged.		
Verify all reflective decals are correctly located.		
Check SMV decal and SIS decals are in place, clean and visible.		
Verify transport lights are working properly.		
Verify PTO length, see "Verify Telescoping PTO Shaft Length" in MAINTENANCE section.		
Align and properly tension belts. See "Belt Tightener Adjustment" and "V-Belt Alignment" in MAIN-TENANCE section.		
Ensure screens over horizontal auger are in place and properly secured.		
Ensure transport chain on the grain cart is sized according to the weight that is being towed. Refer to "Transport Chain Connection" in OPERATION section for complete transport chain instructions.		
Install transport chain and torque hardware to specification. See "Transport Chain" in OPERATION section.		
Paint all parts scratched in shipment.		
Test run the augers. See "Auger Operation" in OPERATION section.		
Check hydraulics for leaks and check hose routing.		

Repositioning Tongue

A WARNING

- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE IS RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- HIGH-PRESSURE FLUIDS CAN PENETRATE THE SKIN AND CAUSE SERIOUS INJURY OR DEATH. LEAKS OF HIGH-PRESSURE FLUIDS MAY NOT BE VISIBLE. USE CARDBOARD OR WOOD TO DETECT LEAKS IN THE HYDRAULIC SYSTEM. SEEK MEDICAL TREATMENT IMMEDIATELY IF INJURED BY HIGH-PRESSURE FLUIDS.
- RELIEVE THE HYDRAULIC SYSTEM OF ALL PRESSURE BEFORE ADJUSTING OR SERVICING.
 SEE THE HYDRAULIC POWER UNIT OPERATOR'S MANUAL FOR PROPER PROCEDURES.
- HYDRAULIC SYSTEM MUST BE PURGED OF AIR BEFORE OPERATING TO PREVENT SERI-OUS INJURY OR DEATH.
- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH. ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR ARE IN PLACE AND SE-CURELY FASTENED BEFORE OPERATING UNIT.
- UNHITCHING A LOADED CART CAN CAUSE SERIOUS INJURY OR DEATH DUE TO THE TONGUE RISING OR FALLING. ALWAYS HAVE A LOADED CART ATTACHED TO A TRAC-TOR. THE JACK IS INTENDED TO SUPPORT AN EMPTY CART ONLY.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE
 MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS
 WILL REQUIRE SAFE LIFTING DEVICES UP TO 7,000 LBS. SPECIFIC LOAD RATINGS FOR
 INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.


Repositioning Tongue


IMPORTANT

- Prior to adjusting tongue position, ensure horizontal cleanout doors are CLOSED. Do not attempt
 to close horizontal cleanout doors with tongue in shipping position. Damage to cleanout doors
 and components will result. Reference steps 8 through 10 for tongue reposition and closing
 the cleanout door procedure.
- Park the unit on a firm, level surface. Block the tracks on the machine to keep the unit from moving. Set the vehicle parking brake, shut off the engine and remove the ignition key.




- 2. Using a safe lifting device rated at a minimum of 7,000 lbs., raise the front of the cart.
- 3. Remove and save the 1"-8UNC x 6" capscrew (9390-195) and 1"-8UNC elastic locknut (9398-026) (FIG. 2-1). Rotate the support stands (276748B) downward. Reinstall the 1"-8UNC x 6" capscrew (9390-195) and 1"-8UNC elastic locknut (9398-026) (FIG. 2-2). Repeat process on the opposite side of the grain cart.

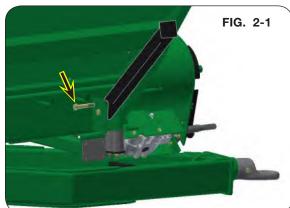

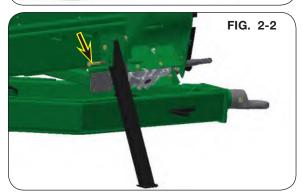


Repositioning Tongue

Remove and save the 1"-8UNC x 10 1/2" capscrews (9390-465), spring retainer plates (271687B), both urethane springs (9006456 and 9006457), and 1"-8UNC elastic lock nuts (9398-026). (FIG. 2-3)

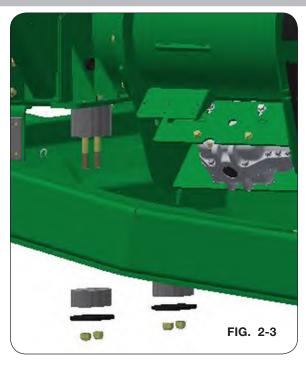


- 5. Support the tongue with safe lifting devices rated for a minimum of 2,000 lbs.
- 6. Remove and discard the 3/4"-10UNC locknuts (9003399), 3/4" SAE flat washers (9405-104), 3/4"-10UNC x 2 1/4" capscrews (9390-146), and spacer weldments (left-hand 276725B and right-hand 276721B) from the tongue. (FIG. 2-4)

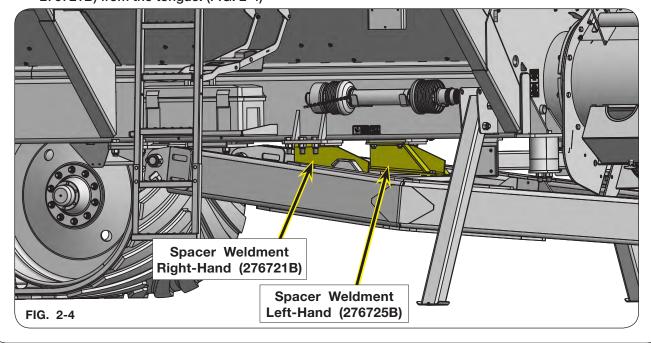

Unverferth 2520 — Set Up

Repositioning Tongue (continued)

7. Remove and save the 1"-14UNS x 3" capscrews (9390-409) and 1"-14UNS elastic lock nuts (9008441) from the tongue pivot weldments (left-hand 274818G/R/BM; right-hand 274819G/R/BM). (FIG. 2-5)

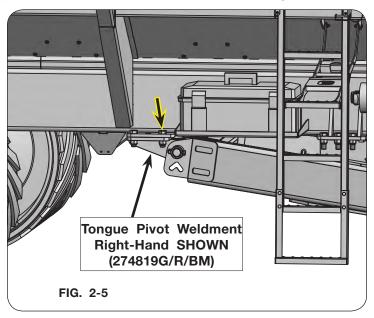

Repositioning Tongue (continued)

IMPORTANT


- Prior to adjusting tongue position, ensure horizontal cleanout doors are CLOSED. Do not attempt to close horizontal cleanout doors with tongue in shipping position. Damage to cleanout doors and components will result.
- 8. Using a safe lifting device rated for 2,000 lbs., lower the tongue. (FIG. 2-6)

NOTE: Before closing cleanout doors, check to ensure the wiring harnesses are secured and not in the cleanout door swing path.

- 9. Close horizontal cleanout doors.
- 10. Slide the tongue forward until the tongue pivots align with the forward mounting plate. (FIG. 2-6)


NOTE: Do not mix the 1" UNS hardware for the tongue pivot and the 1" UNC hardware for the urethane springs.


- 11. Secure the tongue pivot weldment to the cart with 1"-14UNS x 3" capscrews (9390-409) and 1"-14UNS elastic lock nuts (9008441). (FIG. 2-6)
- 12. Torque 1" UNS hardware to 550 ft.-lbs. (FIG. 2-6)

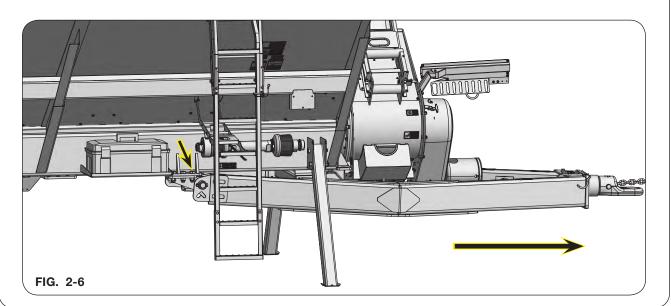

Repositioning Tongue (continued)

- 12. Attach 4 3/4" thick urethane springs (9006456) between tongue and frame, 2 1/2" thick urethane springs (9006457) under the tongue, followed by retainer plates (271687B). Secure to grain cart with, 1"-8UNC x 10 1/2" capscrews (9390-465) and 1"-8UNC elastic locknuts (9398-026) (FIG. 2-7 & 2-8).
- 13. Tighten the 1" UNC hardware to compress the upper bumpers 1/4". (FIG. 2-7 & 2-8)

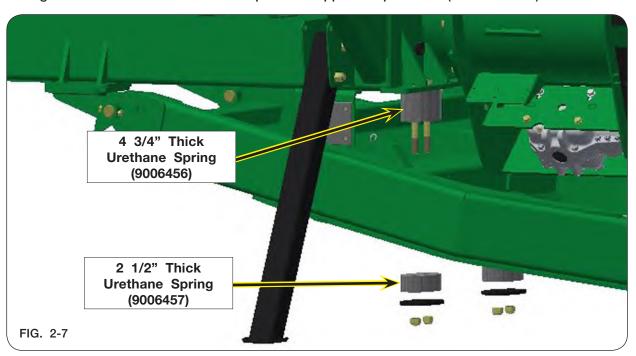

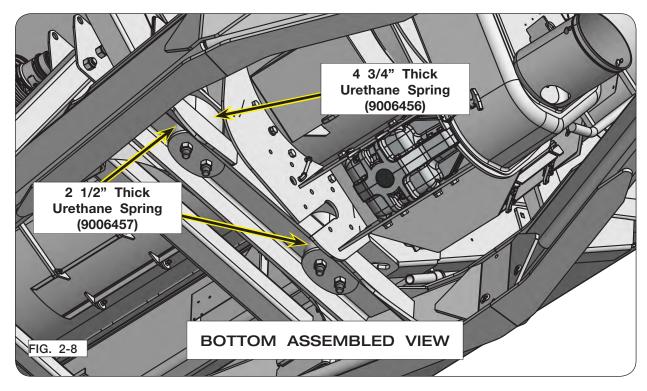

Repositioning Tongue (continued)


14. HYDRAULIC JACK

Use the tractor hydraulics to lower the jackstand and lift the support stands. (FIG. 2-9)

NOTE: Refer to "Hydraulic Jack Usage" in the OPERATION section for procedure.

- 15. Remove the 1"-8UNC x 6" capscrew (9390-195) and 1"-8UNC elastic locknut (9398-026). Rotate the support stands (276748B) upwards. Reinstall the 1"-8UNC x 6" capscrew (9390-195) and 1"-8UNC elastic locknut (9398-026). Repeat process on the opposite side of the grain cart. (FIG. 2-10)
- 16. Remove the safe lifting devices under the tongue and front of the cart.




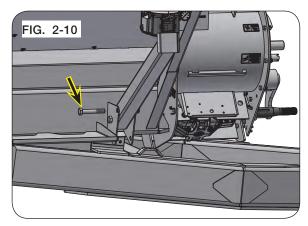


Driveline Installation

Driveline Storage

Storage brackets are located on the right-hand side of the cart. Secure the PTO and bracket assembly and driveline assembly to these brackets for extended transporting or seasonal storage. (FIG. 2-11 and 2-12)

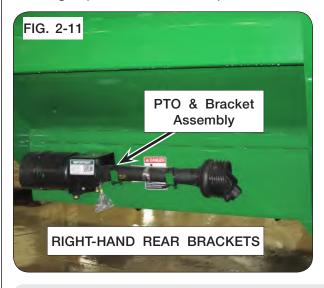

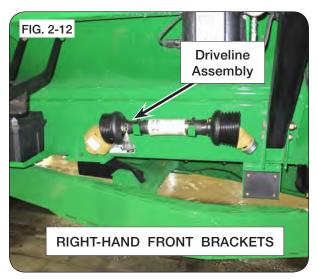

Driveline Set Up

♠ DANGER

ENTANGLEMENT WITH THE DRIVELINE WILL CAUSE SERIOUS INJURY OR DEATH.
KEEP ALL GUARDS AND SHIELDS IN GOOD CONDITION AND PROPERLY INSTALLED
AT ALL TIMES. AVOID PERSONAL ATTIRE SUCH AS LOOSE FITTING CLOTHING, SHOE
STRINGS, DRAWSTRINGS, PANTS CUFFS, LONG HAIR, ETC. THAT CAN BECOME ENTANGLED IN A ROTATING DRIVELINE.

IMPORTANT

- Prior to hitching grain cart to tractor drawbar, drawbar MUST be set at 20" from end of PTO shaft to center of hitch pin. Dimension (A) in picture. Failure to do so will result in driveline damage. (FIG. 2-13)
- Clean and grease the implement gearbox splined shaft. Gearbox shaft guard has access doors for greasing, installing and removing of driveline.

(Continued on next page)




Driveline Installation (continued)

Driveline Set Up (continued)

- 2. Attach the adapter plate (277012B) to the tongue with 5/8"-11UNC x 1 3/4" capscrews (9390-123) and 5/8"-11UNC lock nuts (9003398). (FIG. 2-14)
- 3. Torque 5/8" hardware to 125 ft.-lbs. (FIG. 2-14)

NOTE: Adapter plate offset needs to match auger discharge. Flip adapter plate for Right-Hand unload verses Left-Hand unload. (FIG. 2-14)

- 4. Attach the PTO and bracket assembly (276629B) to the auger gearbox splined shaft. (FIG. 2-14)
- 5. Attach bracket assembly to adapter plate with 5/8"-11UNC x 1 3/4" capscrews (9390-123) and 5/8"-11UNC lock nuts (9003398). (FIG. 2-14)
- 6. Torque 5/8" hardware to 125 ft.-lbs. (FIG. 2-14)
- 7. Slide the driveline assembly (9008417) cut-out clutch end onto the PTO and bracket assembly (276629B) splined shaft end until retaining groove of PTO and bracket shaft aligns with clamping cone hole. (FIG. 2-14)

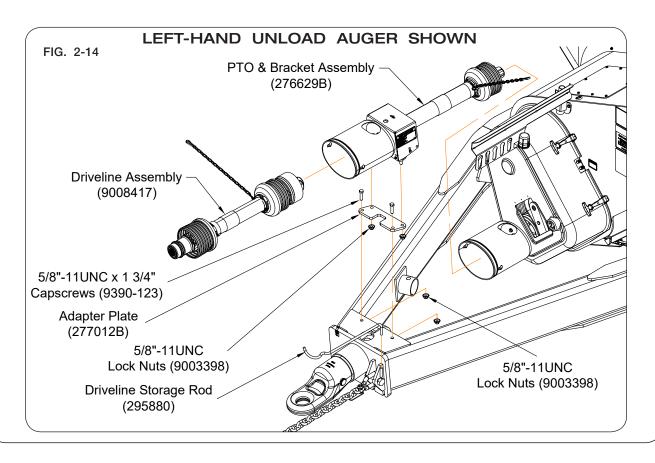


Driveline Installation (continued)

Driveline Set Up (continued)

8. Insert clamping cone into threaded hole, hand tighten. Torque cone to 75 ft.-lb. (FIG. 2-15)

NOTE: See MAINTENANCE section - PTO Quick Disconnect - for further instructions.

- 9. Attach the anti-rotation chains on each driveline and verify that each of the shields can turn one revolution. (FIG. 2-15)
- 10. Pivot driveline storage rod (295880) 90° forward from the tongue. (FIG. 2-15)
- 11. Place the driveline assembly onto the driveline storage rod.

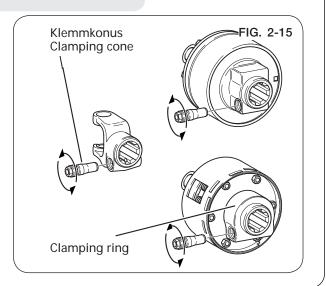

Auger Set Up

A WARNING


- HIGH-PRESSURE FLUIDS CAN PENETRATE THE SKIN AND CAUSE SERIOUS INJURY OR DEATH. LEAKS OF HIGH-PRESSURE FLUIDS MAY NOT BE VISIBLE. USE CARDBOARD OR WOOD TO DETECT LEAKS IN THE HYDRAULIC SYSTEM. SEEK MEDICAL TREATMENT IMMEDIATELY IF INJURED BY HIGH-PRESSURE FLUIDS.
- RELIEVE THE HYDRAULIC SYSTEM OF ALL PRESSURE BEFORE ADJUSTING OR SERVICING. SEE THE HYDRAULIC POWER UNIT OPERATOR'S MANUAL FOR PROPER PROCEDURES.
- HYDRAULIC SYSTEM MUST BE PURGED OF AIR BEFORE OPERATING TO PREVENT SERI-OUS INJURY OR DEATH.
- FALLING OR LOWERING EQUIPMENT CAN CAUSE SERIOUS INJURY OR DEATH. KEEP EVERYONE AWAY FROM EQUIPMENT WHEN SUSPENDED, RAISING, OR LOWERING.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING IMPLEMENT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.


7-Pin Connection & Auger Pivot Slide Shipping Block Removal

- 1. Close the vertical cleanout door.
- 2. Remove the PTO assembly from the tongue. Refer to "Driveline Install" in this section.
- 3. Hitch cart to tractor. Refer to "Hitching to Tractor" in the OPERATION section.
- 4. Park the empty cart on a firm, level surface. Block the machine to keep it from moving. Set the tractor's parking brake.
- 5. Attach the 7-pin connector to tractor. (FIG. 2-16)

NOTE: Auger hydraulic functions will not operate without power and ground via the 7-pin connector.

- 6. Use tractor SCV to pivot auger up.
- 7. Shut-off the engine and remove the ignition key.
- 8. Remove and discard the wood block from the auger pivot. (FIG. 2-17)
- 9. Restart engine and cycle auger pivot all the way up and down to ensure movement is free.
- Check all hoses and cylinders for signs of leakage. Hoses should not be kinked, twisted or rubbing against sharp edges. Re-route hoses as necessary. Refer to SAFETY section for additional information.

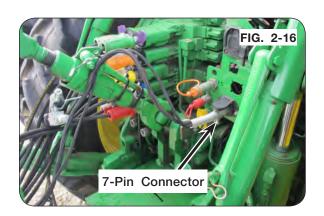

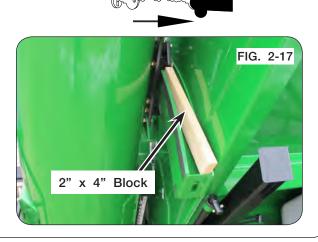

Auger Set Up (continued)

Auger Spout Cylinder Stop Removal

- 1. Extend spout cylinder before removing the shipping stop. (Figs. 2-18 and 2-19)
- 2. Support spout to prevent movement while removing the shipping stop from the spout tilt cylinder. (Figs. 2-18 and 2-19)

IMPORTANT

• Cylinder stop must be removed before operating the auger spout. Failure to remove stop will result in damage to the cylinder and spout.






Hydraulic Jack Set Up

A WARNING

- UNHITCHING A LOADED CART CAN CAUSE SERIOUS INJURY OR DEATH DUE TO TONGUE RISING OR FALLING. ALWAYS HAVE A LOADED CART ATTACHED TO A TRACTOR. THE JACK IS INTENDED TO SUPPORT AN EMPTY CART ONLY.
- Park the unit on a firm, level surface. Block the machine to keep it from moving. Set the vehicle parking brake, shut off the engine and remove the ignition key and disconnect the PTO shaft from the tractor.
- Assemble hoses (9006068) and fittings to cylinder (9009047) as shown in FIG. 2-20. The valve needs to be attached to the hose on the base end of the cylinder. Assemble the fittings on the cylinder so they face each other, then store the hydraulic hoses on the hose caddy.



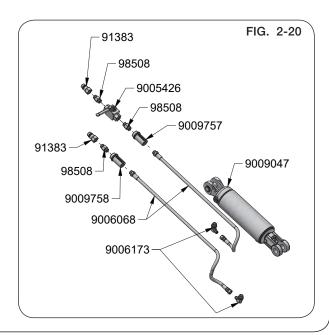

Hydraulic Jack Set Up (continued)

A WARNING


- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- Assemble the cylinder (9009047) and jack foot (271723B) to the jack weldment (271712B) as shown in FIG. 2-21 using 1"-8UNC x 7" capscrews (9390-197) and 1"-8UNC locknuts (92199).


<u>NOTE</u>: Ensure all jack leg weldment (271712B) joints can pivot freely, especially jack foot (271723B).


- 4. Tighten 1" hardware on jack leg weldment and allow the cylinder and jack foot to freely pivot. (FIG. 2-21)
- Attach mounting bracket (273808B) to jack leg weldment (271712B) using 1"-8UNC x 7" capscrew (9390-197) and 1"-8UNC locknut (92199), before mounting to the tongue. (FIG. 2-22)
- 6. Tighten 1" hardware on jack leg weldment and allow the joint to pivot. (FIG. 2-22)
- 7. Attach the mounting bracket (273808B) to the back side of the front hitch plate with two 7/8"-9UNC x 2 1/4" capscrews (9390-165) and 7/8" lock washers (9404-037). (FIG. 2-22)
- 8. Torque 7/8" hardware to 330 ft.-lbs. (FIG. 2-22)
- 9. Align the base end of the cylinder with the lug on the top of the tongue and assemble the cylinder pin (272587) and snap rings (91192) shown in FIG. 2-23.

NOTE: Refer to "Optional Hydraulic Jack Usage" in the OPERATION section for additional information.

 Purge air from system. See "Purge Hydraulic System" in the MAINTENANCE section for procedure.

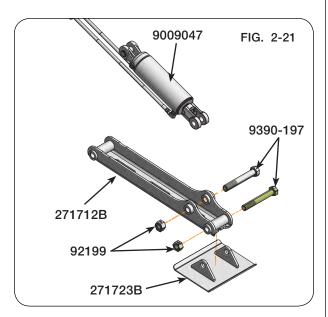

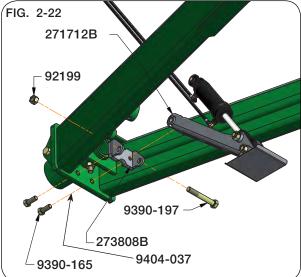

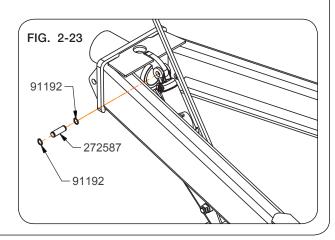

Side Ladder Upper Extension


A WARNING


- FALLING OR LOWERING EQUIPMENT CAN CAUSE SERIOUS INJURY OR DEATH. KEEP EVERYONE AWAY FROM EQUIPMENT WHEN SUSPENDED, RAISING, OR LOWERING.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- DO NOT ALLOW ANYONE TO RIDE ON THE LADDER. MAKE SURE EVERYONE IS CLEAR BEFORE OPERATING MACHINE OR TOWING VEHICLE.
- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE
 WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE, AND THAT
 ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE ARE RESTRICTED MOBILITY
 AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- NEVER ENTER A CART CONTAINING GRAIN. FLOWING GRAIN TRAPS AND SUFFOCATES VICTIMS IN SECONDS.


NOTE: Ensure ladder and steps are free from snow/debris before changing ladder positions and climbing.


NOTE: To change ladder assembly positions, refer to "Ladder Operation" in the OPERATION section.

- Park the unit on a firm, level surface. Block the machine to keep it from moving. Set the vehicle parking brake, shut off the engine and remove the ignition key.
- 2. Move the upper ladder extension (289707B) from shipping position by removing the 5/16"-18UNC x 3/4" carriage bolts (9388-024), 5/16" flat washers (9405-064) and 5/16"-18UNC lock nuts (9008441). Keep hardware for next step. (Fig. 2-25)
- Using hardware from step 2, attach upper ladder extension to the higher set of holes to be in operating position. (Fig. 2-24, Fig. 2-25 and 2-26)
- 4. Torque hardware to 17 ft.-lbs.

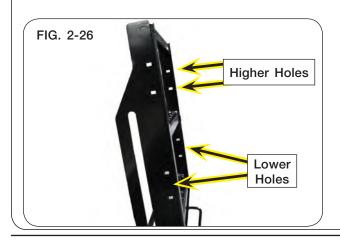

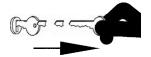

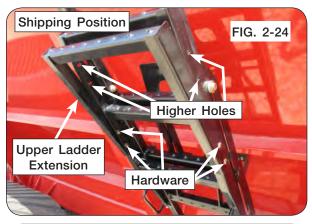


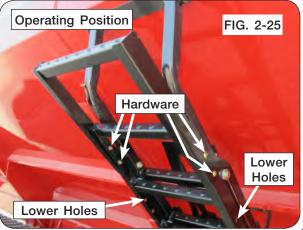


Move Lights to Operating Position


A WARNING


- FALLING OR LOWERING EQUIPMENT CAN CAUSE SERIOUS INJURY OR DEATH. KEEP EVERYONE AWAY FROM EQUIPMENT WHEN SUSPENDED, RAISING, OR LOWERING.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING IMPLEMENT.
- Park the unit on a firm, level surface. Block the machine to keep it from moving. Set the vehicle parking brake, shut off the engine and remove the ignition key.
- 2. Remove upper light arm capscrew. (Fig 2-27)

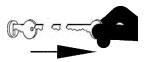

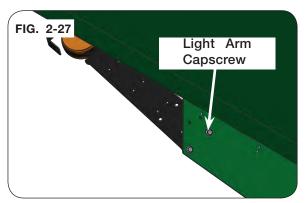

- 3. Loosen lower light arm capscrew and rotate the light arm downward. (FIG. 2-28)
- 4. Reinstall the upper light arm capscrew. (FIG. 2-28)
- 5. Loosely tighten upper and lower light arm capscrews.
- 6. Loosen amber light and light guard nut and rotate both parallel to the light arm. (FIG. 2-29)
- 7. Torque both the upper and lower light arm capscrews and light guard nut to 17 ft.-lbs.
- 8. Repeat process for the opposite side of the grain cart.

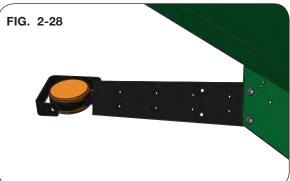

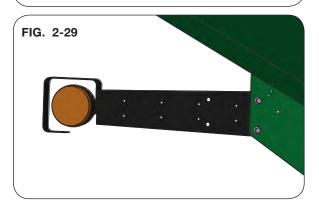

SMV Emblem & SIS Decal

The reflective surface of the SMV must face rearward. This may require removal of film protecting the reflective surface or removing and reinstallation of the SMV. (Fig. 2-30)

When reinstalling the SMV make sure that it is mounted with the wide part of the SMV at the bottom.



Ensure the front and rear SIS decals are clean and visible after shipping. (FIG. 2-31)

For 20 M.P.H. SIS decals, order 9008715 for the front & 9008714 for the rear.

For 30 K.P.H. SIS decals, order 9008721 for the front & 9008720 for the rear.



Video System Set-Up (Optional)

Rear Bracket Location

- 1. Attach mount bracket (265771B) to the rear undercarriage plate, as shown in FIG. 2-32.
- 2. Assemble camera (9006274) to the camera mount bracket.
- 3. Connect the 65' cable wire (9004513) to the camera.
- 4. Route the cable down to the left-hand side of the runner and out the front of the cart. ENSURE THERE IS ENOUGH SLACK AT THE JOINTS TO PREVENT OVEREXTENDING THE WIRE WHEN FOLDING. Use zip ties (9000107) to attach the cable to the runner as necessary. (FIG. 2-32)




NOTE: If more cable length is needed, connect 16' camera cable (9007174).

Vertical Auger Work Light Location

- 1. Assemble camera (9006274) to the light bracket (272646B), as shown in FIG. 2-33.
- 2. Connect the 65' cable wire (9004513) to the camera.
- Route the cable down along the vertical auger the front of the cart. ENSURE THERE IS ENOUGH SLACK AT THE JOINTS TO PREVENT OVEREXTENDING THE WIRE WHEN FOLDING. Use zip ties (9000107) to attach the cable to the vertical auger tube as necessary. (FIG. 2-33)

NOTE: If more cable length is needed, connect 16' camera cable (9007174).

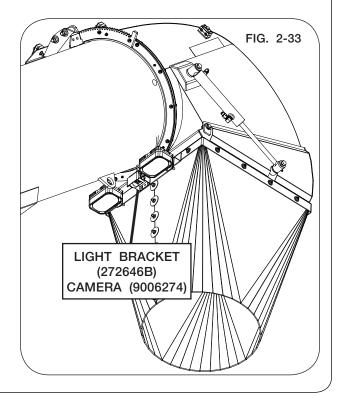

Belt Engagement

A WARNING

 MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH. ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOORS ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.

The unit is shipped without tension applied to the belts. To engage the tensioner use the belt tensioner handle, located on the front left-hand side of the grain cart, behind the first panel. Verify the belts are correctly aligned and are seated in both sheaves. If belt hangs over edge of sheave, detention idler, adjust and retention idler. (Figs. 2-34 and 2-35)

Rotate the handle downwards to engage tensioner. (Fig. 2-35)

NOTE: See MAINTENANCE section - V-Belt Alignment - for more details.





Operational Check

A WARNING

 MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH. ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.

IMPORTANT

 Before running the auger pivot, the vertical auger clean-out door must be closed to prevent machine damage.

Perform the clean-out door steps to prepare the cart for operation:

- Retrieve lynch pin from toolbox for the horizontal clean-out doors.
- Close clean-out doors. Refer to "Vertical & Horizontal Clean-Out Door Operation" in the OPERATION section.

NOTE: The joystick and 7-pin connector MUST be plugged into the same power source. If plugged into different power sources, the spout rotate and auger fold functions WILL NOT operate normally.

Once set-up has been completed, run the cart to check for operation and functionality:

- 1. Lights Work, Turn, Brake
- 2. Flow Door
- 3. Flow Door Indicator
- Auger Fold
- 5. Auger Pivot
- 6. Spout Rotate
- 7. Spout Tilt
- 8. Auger Startup & Shut-down
- Tarp
- 10. Video System Camera (if applicable)
- 11. Scale (if applicable)







Section III Operation

Operating Checklist	
Preparing Tractor	3-3
Preparing Cart	
Hardware	
Pivot Pins	3-4
Hitch	3-4
Auger	3-4
Rear Drop Hitch	3-4
Auger	3-4
Hydraulic System	3-5
Hitching to Tractor	
Drawbar Connection	3-5
Hydraulic Jack Usage	3-6
Transport Chain Connection	3-7
Hydraulic Connection	3-8
Hydraulic Connection For Optional Water Delivery Syatem	
Electrical Connections	3-11
Towing	3-12
Auger Operation	
PTO Driven Auger	3-13
Vertical Auger Fold	3-15
Auger Overload Procedure	3-16
Electric Over Hydraulic Operation	
Electric/Hydraulic Connection	3-17
Auger Fold & Spout Operation	3-18
Flow Door Operation	3-19
Auger Fold to Transport	
Cart Loading Sequence	3-20
Vertical & Horizontal Cleanout Door Operation	
Closing Vertical Cleanout Door	
Opening Vertical Cleanout Door	
Horizontal Cleanout Door	3-23
Ladder Operation	
Side Ladder Operation	
Rear Ladder Operation	3-29
Rear Access Door Operation	3-31
Rear Drop Hitch Operation	
Storage to Working Position	3-33
Rear Hitch Connection	3-34
Electrical Connection	3-35
Rear Drop Hitch Adjustment	3-36
Video System	
Weather Guard Tarp	3-37
Wireless Receiver and Control Box Location	3-39

FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, AND / OR WATER DELIVERY SYSTEM INFORMATION, PLEASE REFER TO THE INDIVIDUAL MANUALS.

Operating Checklist ☐ Read and understand all safety precautions before operating cart. R.V. antifreeze needs to be completely flushed from the Water Delivery System and disposed of properly. Make certain the Water Delivery System only contains water before placing the Water Delivery System in service. (If applicable) Set or Calibrate tractor PTO control engagement to MINIMUM setting. Refer to tractor operator's manual for setting information. ☐ Torque wheel nuts and check tire pressure as specified in MAINTENANCE section. □ Verify track has been aligned and is properly conditioned. Refer to 50" x 172" Equalizer SP Track manual (297550), 50" / 42" Equalizer Track manual (267909) MAINTENANCE section for alignment information. (If applicable) Verify track grease pump reservoir is full. Refer to track auto grease pump instruction sheet (282986) for setting information. ☐ Inflate tires to specified air pressure. See "Tire Pressure" in MAINTENANCE section. (If applicable) ☐ Lubricate all grease fittings and check gearbox oil level. ☐ Inspect cleanout door assembly for proper adjustment, refer to "Vertical & Horizontal Clean-Out Door Operation" in the OPERATION section. ☐ Test operation and functionality of work lights, flow door, flow door indicator, auger fold, auger pivot, spout rotate, spout tilt, tarp, rear access door, and if equipped, rear drop hitch, hydraulic jack stand, scale, joystick, scale remote display, video system, and water delivery system. Verify all reflective decals are correctly located. ☐ Check SMV sign and SIS decals are clearly visible with the cart attached to the tractor and implement grain cart optional rear hitch. ☐ Verify transport lights are working properly. Check and follow all regulations before towing on a road or highway. Verify tractor drawbar height and length. See "Preparing Tractor" in this section. ☐ Verify PTO length, see "PTO Shaft Length" in MAINTENANCE section. ☐ Align and properly tension belts. See "Belt Tightener Adjustment" and "V-Belt Alignment" in MAIN-TENANCE section. Ensure screens over horizontal auger are in place and properly secured. Ensure all cleanout doors and rear access door are closed and latched. ☐ Ensure side and rear ladders are in storage position. Ensure transport chain is properly sized, installed and attached. See "Transport Chain Connection" in OPERATION section.

☐ Test run the augers. See "Auger Operation" in OPERATION section.

Preparing Tractor

Before operating cart, read the tractor Operator's Manual and gain an understanding of its safe methods of operation.

Check the tractor brakes and transport lights. Make sure they are in proper working order.

If equipped, check the tractor and cart electric tarp connection. Refer to electric roll tarp manual (26487) for details.

Set tractor PTO modulation to MINIMUM. Check that your tractor has the latest PTO engagement software from the OEM. If unsure, contact your local dealer for tractor capabilities and recommended setting for grain cart operation.

Adjust the tractor drawbar so the center of the hitch pin is 20" behind the rear end of the PTO shaft. If this is not done, the driveline on the cart will be damaged.

If possible, adjust the tractor drawbar vertically so the topside of the drawbar is approximately 17-22 inches from the ground. Ensure that the drawbar is locked in the center position.

Check the tractor hydraulic oil reservoir and add oil if needed.

Verify that the tractor is adequately ballasted for drawbar operation at the anticipated draft load. See tractor manual for ballasting instructions.

NOTE: The grain cart comes with a CAT 5 hitch. The tractor drawbar must also be a CAT 5 with a 2 3/4" diameter hitch pin.



• USE OF NON-MATCHING CATEGORY HITCH AND TRACTOR DRAWBAR CONNECTION WILL RESULT IN POOR HITCH PERFORMANCE AS WELL AS DAMAGE TO TRACTOR, IMPLEMENT OR BOTH.

On tractors equipped with a 3-point hitch, raise and secure the linkage to prevent interference with the cart tongue, hydraulic hoses and the implement driveline during turning. It may be necessary to remove tractor 3-point quick attach to avoid damage during turning.

Preparing Cart

Perform the service checks as outlined below. Repair or replace any damaged or worn parts before operating.

Hardware

Check for loose bolts and nuts, and tighten as needed. Check again after the first half-day of operation.

Pivot Pins

Check that all pins are in place and in good condition. Replace any worn, damaged or missing pins.

Hitch

Check hitch wear plates for damage and wear. Be aware of the size of hitch adapter bushing that is being used. Select correct size for the hitch pin/draw bar you are using.

Rear Drop Hitch (Optional)

Check rear drop hitch wear plates for damage and wear. Check that the hitch pin is in place and in good condition. Replace any worn, damaged or missing hitch pin.

Auger

Inspect auger for damage and wear.

Hydraulic System

Check all hoses and cylinders for signs of leakage. Hoses should not be kinked, twisted or rubbing against sharp edges. Re-route or repair hoses as necessary. Refer to SAFETY section for additional information on safe repair and inspection of hydraulic components.

Hitching to Tractor

Drawbar Connection

This cart is intended to be hitched to a tractor drawbar. Do not attempt to hitch to any other location on the tractor other than the drawbar.

The cart is equipped standard with a single tang hitch. A 2 3/4" hitch pin (CAT 5) diameter must only be used with a clevis-type (hammer strap) tractor drawbar.

NOTE: Use of the proper hitch pin will prevent excessive wear and tear on both the cart and tractor.

Lock tractor drawbar in center position.

Set tractor drawbar length to 20" from the end of the tractor PTO shaft to center of hitch tang pinhole.

Before inserting hitch pin, apply wearshoe (281899 - CAT 5) between tractor hitch and grain cart hitch (Figure 3-1).

A WARNING


 CRUSHING CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT STAND BETWEEN TOWING VEHICLE AND IMPLEMENT WHEN HITCHING. AL-WAYS ENGAGE PARKING BRAKE AND STOP ENGINE BEFORE INSERTING HITCH PINS OR SECURING LATCHES.

After inserting drawbar pin, secure drawbar pin with a locking device to help prevent uncoupling during use.

NOTE: Hitch tang can be flipped providing a drawbar connection height difference of 2 7/8" (Figure 3-2 & 3-3). Position the hitch tang to help assure a level cart when loaded, or the rear of the hopper slightly higher than the front, to maintain rear slope cleanout. Whenever the hitch tang is flipped, the driveline clearances need to be reviewed.





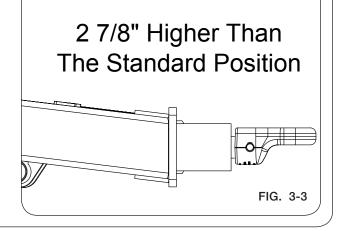

Hitching to Tractor (continued)

Hydraulic Jack Usage

A WARNING

- HIGH-PRESSURE FLUIDS CAN PENETRATE THE SKIN AND CAUSE SERIOUS INJURY
 OR DEATH. LEAKS OF HIGH-PRESSURE FLUIDS MAY NOT BE VISIBLE. USE CARDBOARD OR WOOD TO DETECT LEAKS IN THE HYDRAULIC SYSTEM. SEEK MEDICAL
 TREATMENT IMMEDIATELY IF INJURED BY HIGH-PRESSURE FLUIDS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- OPENING OF HYDRAULIC VALVE CAN CAUSE SUDDEN MACHINE MOVEMENT. KEEP CLEAR OF MACHINE WHEN OPENING VALVE.


IMPORTANT

 After cart is hitched to tractor, attach hydraulic hoses to tractor and retract hydraulic cylinder to store hydraulic jack between the frame rails. (FIG. 3-5)

Use hydraulic jack to support an empty grain cart, never a loaded grain cart. Always have a loaded grain cart hooked to tractor.

Always close the manual valve for the hydraulic jack for in-field use and when unhitched from the tractor.

- 1. Remove hoses from storage slots.
- 2. Attach jack cylinder hose couplers to tractor.
- 3. Open valve to allow hydraulic flow.
- 4. Use tractor hydraulic SCV to extend cylinder and lift tongue.
- Once attached to tractor drawbar, retract cylinder to lower tongue and to raise jack into storage position.
- Close valve, relieve pressure on couplers (see tractor operators manual for procedure) and then disconnect hose couplers from tractor.
- Place hose couplers into storage caddy. Be sure to route hoses to clear PTO driveline during operation.
- 8. Check for leaks.

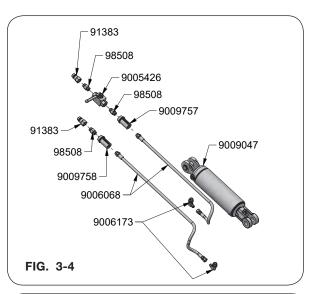



Hitching to Tractor (continued)

Transport Chain Connection



CAUTION

- ALWAYS USE TRANSPORT CHAIN WHEN TRANSPORTING IMPLEMENTS. FAILURE TO USE A TRANSPORT CHAIN COULD CAUSE PERSONAL INJURY IF CART BECOMES DISENGAGED.
- REPLACE TRANSPORT CHAIN IF ANY LINK OR END FITTING IS BROKEN, STRETCHED, DAMAGED OR NOT FUNCTIONING. DO NOT WELD TRANSPORT CHAIN.
- USE ONLY AN UNVERFERTH ASABE TRANSPORT CHAIN WITH A WEIGHT RATING EX-CEEDING THE GROSS COMBINED WEIGHT OF ALL TOWED IMPLEMENTS. CONTACT YOUR UNVERFERTH DEALER FOR ADDITIONAL INFORMATION.

Tractor must be equipped with a transport chain support. Always use intermediate support when connecting cart directly to a tractor. DO NOT use intermediate chain support as the chain attaching point. See tractor operator's manual for proper chain attachment. FIG. 3-6 shows how the transport chain must be installed between implement and towing vehicle.

The standard transport chain is rated for towing the grain cart empty on public roads. Never tow a loaded grain cart on pubic roads.

If the grain cart has the rear hitch installed, the standard transport chain must be replaced with PF1238-19 61,000 LBS. transport chain. The PF1238-19 61,000 LBS. transport chain is rated for the empty grain cart plus the rear hitch capacity of 20,000 LBS.



Hitching to Tractor (continued)


Hydraulic Connections

Clean hydraulic hose couplers before connecting to the tractor. For convenience, this unit is equipped with color-coded hose grips attached to the hydraulic hoses. This will help in identifying the hose function and correct hook up. (FIG. 3-9 & 3-10)

(+ extend port) and (- retract port) is indicated on the hose grip.

NOTE: Hydraulic hose grip color may not match the tractor SCV color.

Color	Function
Red	Flow Door Open / Close
Yellow	Spout Tilt In / Out
Tan	Joystick / Spout Rotate (Optional)
Green	Auger Fold / Unfold
Orange	Auger Pivot Up / Down
Black	Jack Raise / Lower (Optional)
Blue	Water Pump (Optional)

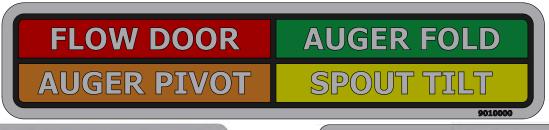



HYD. JACK

9009869



After initial set-up or replacement of any hydraulic component on the cart, air must be removed from the cart's hydraulic system. Reference "Hydraulic System - Purge Hydraulic System" section in the MAINTENANCE section.

Route hoses away from areas that may cause abrasion or kinking of hoses during operation.


(Continued on next page)

Hitching to Tractor (continued)

Hydraulic Connections (continued)

Before disconnecting hoses from tractor, place tractor in Park and shut PTO off, operate auger fold and pivot to the lowest positions. Where possible, remove hydraulic pressure loads and avoid potential pressure buildup in the lines from long storage periods such as upper auger not in rest position. Extend jack to desired position, turn valve to closed position. See tractor operator's manual for proper procedure to relieve pressure from the lines. After SCV pressures have been relieved and tractor engine is off, disconnect hoses from tractor. Install couplers into storage slots provided. (FIG. 3-7)



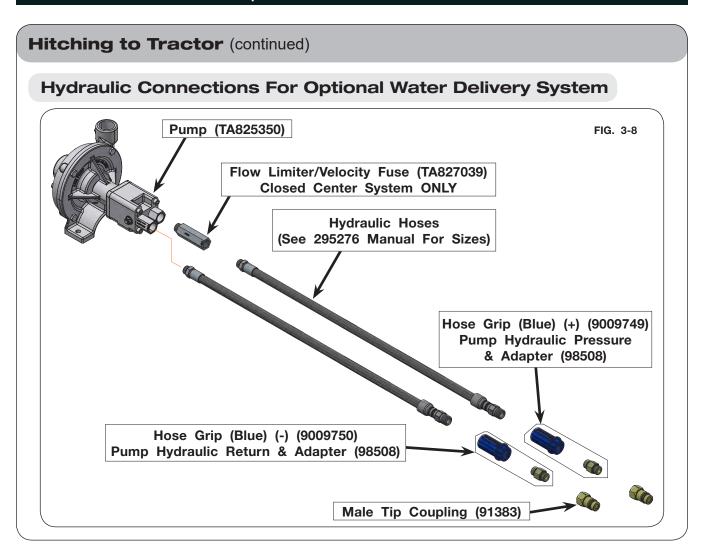


Hitching to Tractor (continued)

Electrical Connections

This cart is equipped with a seven-pin SAE connector plug that will connect with the receptacle found on most newer tractors. If your tractor does not have this type of receptacle, an SAE J-560 seven-point socket can be purchased from your Unverferth dealer (Part number 92824). (FIG. 3-9)

NOTE: 7-pin connector must be plugged into the tractor in order for the spout system to operate.

The wiring schematic for this cart, shown in the MAINTENANCE section, complies with AS-ABE Standards. Always verify correct electrical function before using this cart.

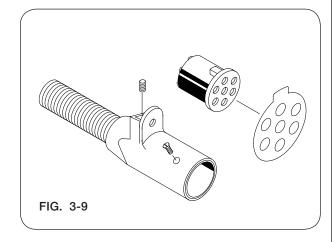

If equipped, check the tractor and cart electrical tarp connection. Refer to electric roll tarp manual (26487) for details.

This unit is equipped with Side Marker lights for enhanced visibility. These lights will have different functionality depending upon the tractor lighting selection.

- When the tractor field lights switch is on; the Side Marker lights and the amber turn signal lights are on solid and will not flash.
- When the flashers and/or turn signal is on; the Side Marker lights flash in unison with their respective side's amber turn lamp.

Compliance with all lighting and marking laws is the responsibility of the operator at the time of travel.

See federal regulation 49 CFR 562; available at www.govinfo.gov for US federal law requirements.

See your Unverferth dealer for additional brackets, reflectors, or lights to meet your requirements.

Hitching to Tractor (continued)

Towing

Ensure that the towing vehicle has adequate weight and braking capacity to tow this grain cart and up to 20,000 lbs. on the optional towed header transport. See the towing vehicle manual for towing capacity. Never tow a loaded grain cart over public roads.

Maximum speed of cart should never exceed 20 m.p.h. Do not exceed 10 m.p.h. during off-highway travel. Do not exceed 8 m.p.h. when cart is fully loaded.

Secure drawbar pin with a locking device and lock tractor drawbar in centered position.

The PTO drive shaft must be properly attached to the tractor during transport. See "Driveline Install" in SET UP section and "PTO Shaft and Clutch" in MAINTENANCE section before connecting the PTO drive shaft to the tractor.

Secure transport chain to tractor before towing.



• THE STANDARD TRANSPORT CHAIN IS DESIGNED ONLY FOR AN EMPTY GRAIN CART DURING ROAD TRAVEL.

IMPORTANT

- Upper auger must be in Transport Position for public road travel.
- Position vertical auger with discharge hood within hopper width for public road travel.

Regulate speed to road conditions and maintain complete control.

It is probable that this cart is taller, wider and longer than the towing tractor. Become aware of and avoid all obstacles and hazards in the travel path of the equipment, such as power lines, ditches, etc.

Slow down before making sharp turns to avoid tipping. Drive slowly over rough ground and side slopes.

Always have auger folded into transport position when auger is not in use. (Fig. 3-10)



Auger Operation

PTO Driven Auger

▲ DANGER

ELECTROCUTION WILL CAUSE SERIOUS INJURY OR DEATH. ELECTROCUTION CAN OCCUR WITHOUT DIRECT CONTACT. KEEP AWAY FROM ALL ELECTRICAL LINES AND DEVICES.



A WARNING

- NEVER ENTER CART WITH AUGER OR TRACTOR RUNNING. SERIOUS OR FATAL IN-JURY CAN OCCUR DUE TO ENTANGLEMENT WITH ROTATING COMPONENTS. ALWAYS STOP ENGINE AND REMOVE KEY BEFORE ENTERING CART.
- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING IN-SIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE ARE RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- 1. Before loading cart or operating auger, verify that the flow control door is closed.
- 2. Choose an area free from obstructions and unfold auger into unloading position. Allow sufficient time for the cylinder to fully engage the two augers and over-center latch to fully engage.
- 3. Engage PTO at low engine RPM, then increase engine RPM until 1000 PTO RPM is reached.

IMPORTANT

• Operating the PTO at less than 1000 RPM can result in damage to the PTO and driveline components in addition to excessive auger wear and cart vibration.

Auger Operation (continued)


- 4. Open flow control door to desired unloading rate. Numbers on the auger tube provide a point of reference for operator convenience. (FIG. 3-11)
- To slow or stop grain flow, close flow door, do not reduce tractor RPM. Close flow door fully when unloading is complete.


NOTE: If an overload occurs, see "Auger Overload Procedure."

NOTE: It is not recommended to disengage auger with flow control door open. Auger system will require substantially more torque to start, placing extra stress on both cart and tractor driveline.

Cart is equipped with baffles that can be adjusted to accommodate the flow of different materials and/or torque demands associated with different materials. See the MAINTENANCE section for the procedure.

- 6. When auger is empty, reduce PTO rpm to idle, and stop PTO.
- 7. After PTO has come to a complete stop, align the checkered flag decals to locate center as shown in FIG. 3-12.
- Completely extend rotate spout cylinder to center spout, if necessary. If this unit has optional spout rotate kit auger can fold regardless of spout location.

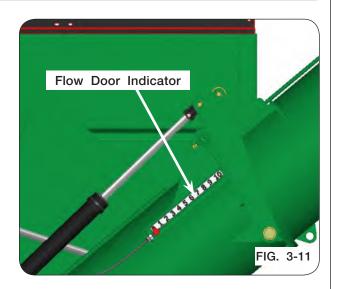

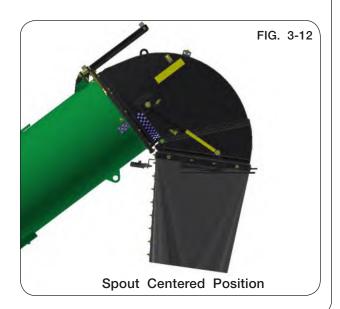

Auger Operation (continued)

Vertical Auger Fold

A WARNING

 DO NOT STAND ON LADDER OR FRAME UNLESS TRACTOR ENGINE IS TURNED OFF AND KEYS ARE REMOVED FROM THE IGNITION.

Actuate hydraulic auger fold circuit to pivot vertical auger between transport and operating positions. When unfolding auger, allow sufficient time for cylinder to rotate the outside fold link into an over-center position. (Fig. 3-13)



Auger Operation (continued)

Auger Overload Procedure

IMPORTANT

• Extensive operation while the clutch is slipping may damage drive components.

NOTE: When over loading occurs, drivelines equipped with cut-out clutch will make a "clicking" noise when torque has been exceeded. Immediately shut off PTO and shut the flow door.

NOTE: Once PTO RPM has significantly decreased, cut-out clutch will automatically reset.

- 1. Close flow door.
- 2. Shut-off the engine and remove the ignition key.



- With the PTO off and driveline stopped, disengage the belt tensioner using the belt tensioner handle, this disengages the horizontal auger from the drivetrain. (FIG. 3-14)
- 4. Restart and engage the tractor PTO at low engine RPM.
- 5. Increase engine RPM until 1,000 PTO RPM is reached to empty the vertical auger.

IMPORTANT

- Operating the PTO at less than 1000 RPM can result in damage to the PTO and driveline components in addition to excessive auger wear and cart vibration.
- 6. Once vertical auger is empty, stop PTO.
- 7. Shut-off the engine and remove the ignition key.



- 8. With the tractor PTO off and driveline stopped, reengage the belt tensioner using the belt tensioner handle. Return handle to storage. (FIG. 3-15)
- 9. Restart and engage the tractor PTO at low engine RPM.
- 10. Increase engine RPM until 1,000 PTO RPM is reached to empty the drag auger.

NOTE: If the grain cannot be relieved by above method, open bottom clean out doors (see "Vertical & Horizontal Clean-Out Door Operation" in this section) to remove grain from auger before repeating these steps to clean out auger.






Electric Over Hydraulic Operation (Optional)

Electric/Hydraulic Connection

Before operating cart, familarize yourself with the functions associated with the joystick controller by operating with an empty cart.

The joystick comes with a mounting pin allowing storage inside the tractor cab when not in use.

- 1. Connect the red wire from power harness (9008251) to a key-switched +12VDC power supply. (FIG. 3-17)
- 2. Connect the white wire from power harness (9008251) to ground. (FIG. 3-16)

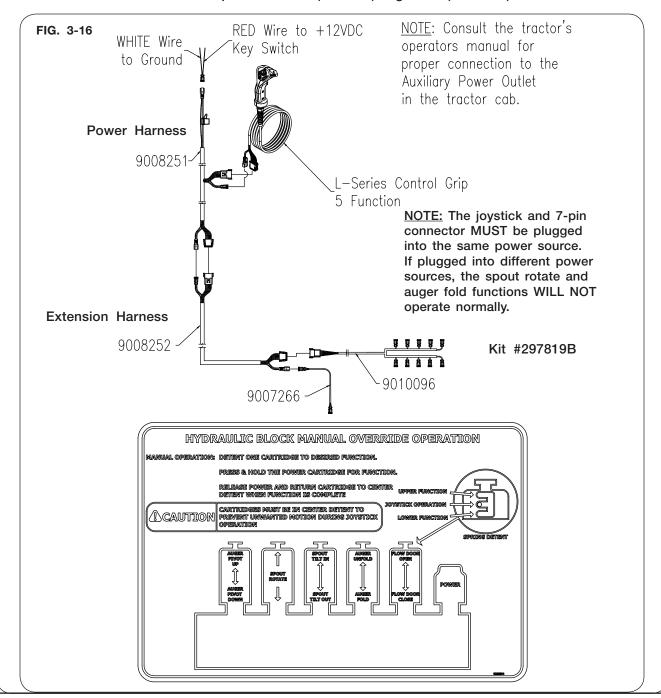

Electric Over Hydraulic Operation (Optional) (continued)


Auger Fold & Spout Operation

NOTE: Cartridge valves (9008416 and 9008463) must be locked in center position for joystick to function properly. Refer to "Manual Override for Opt. Electric Over Hydraulic System" in MAINTENANCE section.

- 1. Connect the Hydraulic Pressure and Return hoses to the tractor SCV remote so that the Pressure line is able to be put in continuous detent.
- 2. Place the remote in continuous detent so that the Hydraulic Pressure hose is pressurized and set the hydraulic flow to a maximum 6 gal/min to minimum 4 gal/min.
- To fold auger out from transport to operating position, push down the auger unfold button on joystick face until the upper and lower auger are engaged and fold linkage is over center. See Fig. 3-18.

NOTE: Joystick has a double tap feature, which allows the operator to quickly double tap a function in order to operate it for a set time. If the auger fold or auger unfold buttons are double tapped, the function will stay on for 60 seconds to complete the full cycle without holding the buttons down. Pressing either of those buttons during these timed cycles will CANCEL the cycle. This double tap feature only applies to auger fold and unfold functions.


- 4. To pivot spout OUT away from cart, push hat switch toward OUT. Hold the switch until desired position is achieved. See Fig. 3-17.
- 5. To pivot spout IN toward cart, push hat switch toward IN. Hold the switch until desired position is achieved. See Fig. 3-17.
- 6. To pivot the entire auger UP, press and hold the auger pivot UP button until the desired height is achieved. See Fig. 3-17.
- 7. To pivot the entire auger DOWN, press and hold the auger pivot DOWN button until the desired height is achieved. See Fig. 3-17.
- 8. To pivot the spout FORWARD, push hat switch RIGHT. Hold the switch until desired position is achieved. See Fig. 3-17.
- 9. To pivot the spout REARWARD, push hat switch LEFT. Hold the switch until desired position is achieved. See Fig. 3-17.

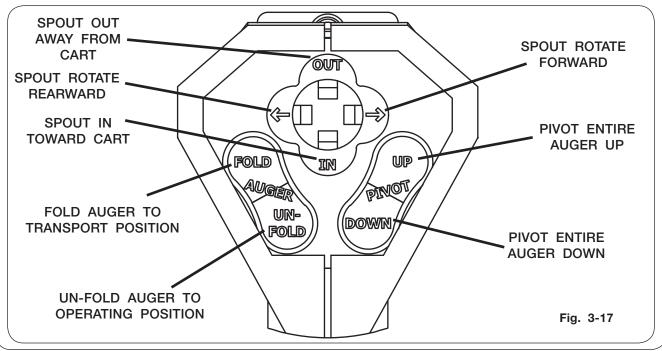


Electric Over Hydraulic Operation (Optional) (continued)

Flow Door Operation

 To open flow door, rotate the switch upwards. Observe flow door indicator to determine when to release trigger and stop flow door movement. See FIG. 3-18.

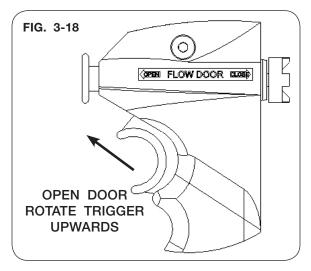


To close flow door, rotate the switch downwards. Observe the flow door indicator and release trigger when door is closed to desired position. See FIG. 3-19.

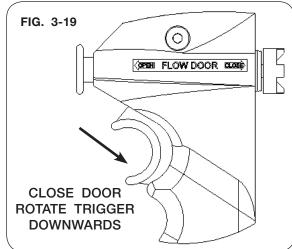

Auger Fold to Transport

NOTE: Refer to "Troubleshooting" for EOH, vertical auger and/or rotating spout issues in the MAINTENANCE section.

- 1. To fold auger from operating position to transport position:
- A. Press auger FOLD button on joystick.
- B. Double tap FOLD button until upper auger is on field rest or in transport position.
- 2. Once unloading is complete, stop hydraulic flow. <u>ALWAYS</u> stop continuous detent when auger functions are not required or active.

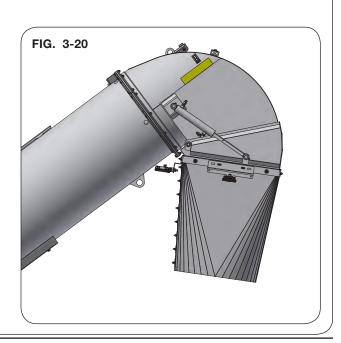

Cart Loading Sequence

A WARNING

- NEVER LOAD THE REAR OF A GRAIN CART FIRST. LOAD THE CART EVENLY TO MAINTAIN WEIGHT ON THE TRACTOR DRAWBAR. LOADING ONLY THE FRONT, OR ONLY THE REAR, CAN CAUSE A LOSS OF CONTROL.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- UNHITCHING A LOADED CART CAN CAUSE SERIOUS INJURY OR DEATH DUE TO THE TONGUE RISING OR FALLING. ALWAYS HAVE A LOADED CART ATTACHED TO A TRACTOR. THE JACK IS INTENDED TO SUPPORT AN EMPTY CART ONLY.
- NEVER ENTER A CART CONTAINING GRAIN. FLOWING GRAIN TRAPS AND SUFFOCATES VICTIMS IN SECONDS.
- 1. Ensure auger flow door is closed before loading cart.
- 2. Fill the cart starting just forward of the axle until nearly full.

NOTE: Overfilling the front or rear area of the hopper can result in reduced control of the cart when towing.

3. Fill the rear area of the hopper before topping off the front area. This maintains proper weight on the hitch of the tractor.


Vertical & Horizontal Cleanout Door Operation

A WARNING

- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH.
 ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEANOUT DOORS ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING THE IMPLEMENT.


Closing Vertical Cleanout Door

- 1. Raise the vertical auger to highest position.
- Park the empty grain cart on a clean level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shutoff the engine, remove the ignition key and disconnect the PTO shaft.
- 3. To completely close cleanout door, ensure the vertical auger cleanout door top edge clears the vertical position stop (key stop). (FIG. 3-21)
- 4. Attach eye bolt ends of over center latches to the hooks on the vertical auger. (FIG. 3-21)
- 5. Clasp the over center latch handles to lock the door in the closed position. (FIG. 3-21)
- Inspect and verify cleanout door perimeter for gaps. Ensure all grain dust and filings are removed that may prevent the door from shutting completely.
- 7. If gaps are present, unclasp the over center latch and tighten eye bolt to improve door seal contact on the vertical auger.

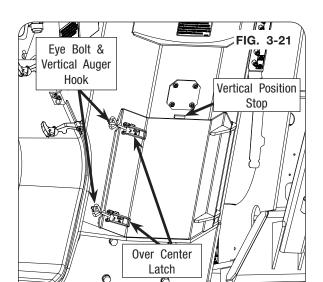

8. Rehook eye bolt to vertical auger and clasp the over center latch.

NOTE: Repeat steps 4 - 8, as necessary.

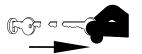


Vertical & Horizontal Cleanout Door Operation (continued)


Opening Vertical Cleanout Door

- 1. Raise the vertical auger to highest position.
- Park the empty grain cart on a firm, level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shutoff the engine, remove the ignition key and disconnect the PTO shaft.


NOTE: Remove the vertical auger cleanout door to improve vertical auger cleaning.

- 3. To open and remove the vertical auger cleanout door, unclasp the over center latch. (FIG. 3-22)
- 4. Unhook the eye bolt from the vertical auger and open the cleanout door. (FIG. 3-22)

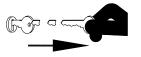

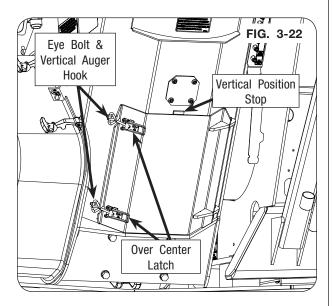

- 5. The hinge on the vertical auger cleanout door is set on a pin. Lift and remove the cleanout door from the vertical auger. Keep vertical auger cleanout door. (FIG. 3-23)
- 6. Inspect and verify all debris is removed from inside the vertical auger housing.
- 7. Reattach the vertical cleanout door to the vertical auger.

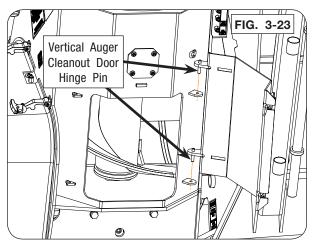

Vertical & Horizontal Cleanout Door Operation (continued)

Horizontal Cleanout Door


Use the tensioner handle, located on the left-hand side of the grain cart, behind the first panel to open and close the horizontal cleanout doors.

Park the empty grain cart on a firm, level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shut-off the engine, remove the ignition key and disconnect the PTO shaft.



- 2. Insert tensioner handle into the cleanout door receiver coupler on the rear panel, and remove lynch pin from rockshaft. Keep lynch pin. (FIG. 3-24)
- 3. Rotate the tensioner handle clockwise to open the cleanout doors. (FIG. 3-25)
- 4. Insert and lock lynch pin into rockshaft. (FIG. 3-25)



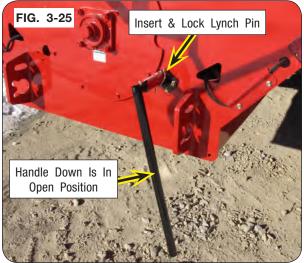

Vertical & Horizontal Cleanout Door Operation (continued)

Horizontal Cleanout Door

NOTE: If cleanout doors do not function properly, refer to "Horizontal Cleanout Door Adjustment" in MAINTENANCE section for more information.

- 5. Remove lynch pin from rockshaft and rotate handle counter-clockwise and clockwise to check for smooth door operation.
- 6. Rotate handle counter-clockwise to close doors and ensure all doors seal. (FIG. 3-27)





7. Insert and lock lynch pin into rockshaft and return handle to storage location. (FIG. 3-28)



Ladder Operation

Side Ladder Operation

A WARNING

- FALLING OR LOWERING EQUIPMENT CAN CAUSE SERIOUS INJURY OR DEATH. KEEP EVERYONE AWAY FROM EQUIPMENT WHEN SUSPENDED, RAISING, OR LOWERING.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- DO NOT ALLOW ANYONE TO RIDE ON THE LADDER. MAKE SURE EVERYONE IS CLEAR BEFORE OPERATING MACHINE OR TOWING VEHICLE.
- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING IN-SIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE ARE RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- NEVER ENTER A CART CONTAINING GRAIN. FLOWING GRAIN TRAPS AND SUFFO-CATES VICTIMS IN SECONDS.

<u>NOTE</u>: Ensure ladder and steps are free from snow/debris before changing ladder positions and climbing.

NOTE: Ensure upper ladder extension is attached to higher holes on the ladder. Reference "Upper Ladder Extension to Operating Position" section in the SET UP section.

NOTE: Always use lock pin in the working and storage position to lock the ladder extension. The lock pin can be inserted in either left-hand or right-hand ladder hole. (FIGS. 3-29 & 3-30)






Ladder Operation (continued)

Storage to Working Position


- 1. Standing in front of ladder, place hands on outside ladder handles.
- 2. Keep one hand on ladder handle and with opposite hand, remove lock pin from ladder extension. Retain for future use. (FIG. 3-31)

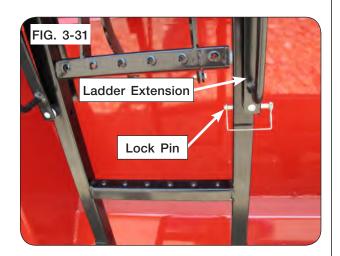


 With hands back on ladder handles, push ladder towards hopper bin and lift ladder extension to unseat ladder extension rod from the cradle. (FIG. 3-32)

A CAUTION

• THE LADDER IS NOW FREE TO PIVOT.

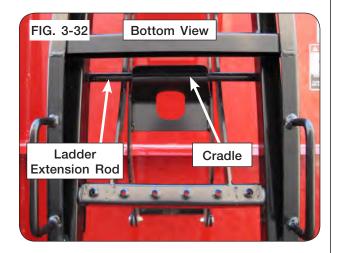

4. Slowly swing ladder outward until hinge is fully extended and locks in the working position. (FIG. 3-33)

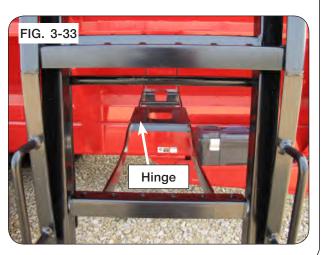


Ladder Operation (continued)

Storage to Working Position

- 5. Lift and seat ladder extension into shorter leg of "J slot". (FIG. 3-34)
- 6. Using lock pin from step 2, insert lock pin into ladder extension and ladder. (FIG. 3-34)


A WARNING

 FALLING FROM AN UNSECURED LADDER MAY CAUSE SERIOUS INJURY OR DEATH. ALWAYS INSERT LOCK PIN BEFORE CLIMBING.

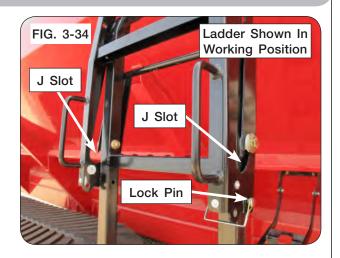

Working to Storage Position

- 7. Standing in front of ladder, place hands on outside ladder handles.
- 8. Keep one hand on ladder handle and with opposite hand, remove lock pin from ladder extension. Retain for future use. (FIG. 3-35)
- With hands back on ladder handles, lift and unseat ladder extension from shorter leg of "J slot". (FIG. 3-34)
- 10. Lower ladder extension until fully seated in longer leg of "J slot". (FIG. 3-35)

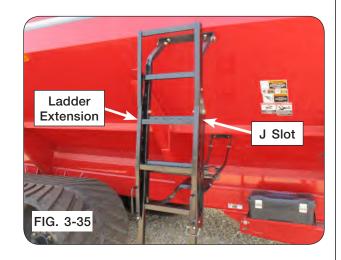


- 11. Keep one hand on ladder handle and with opposite hand, reach between ladder rungs and grab the ladder hinge hole. (FIG. 3-36)
- 12. Slowly lift ladder hinge until the ladder starts folding.
- 13. Remove hand from ladder hinge hole and place onto ladder handle.
- 14. Slowly push ladder towards hopper bin.




Ladder Operation (continued)

Working to Storage Position

15. Lower ladder extension and seat ladder extension rod onto the cradle. (FIG. 3-37)

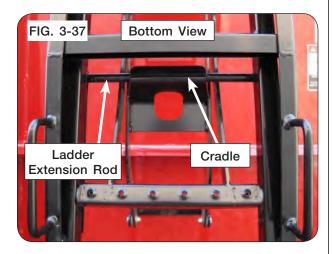

16. Using lock pin from step 8, insert lock pin into ladder extension and ladder. (FIG. 3-38)

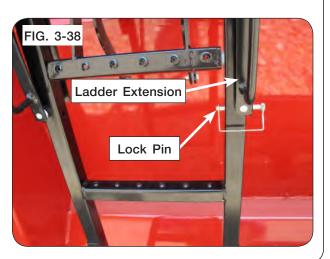

Rear Ladder Operation

A WARNING


- FALLING OR LOWERING EQUIPMENT CAN CAUSE SERIOUS INJURY OR DEATH. KEEP EVERYONE AWAY FROM EQUIPMENT WHEN SUSPENDED, RAISING, OR LOWERING.
- DO NOT ALLOW ANYONE TO RIDE ON THE LADDER. MAKE SURE EVERYONE IS CLEAR BEFORE OPERATING MACHINE OR TOWING VEHICLE.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE IS RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- NEVER ENTER A CART CONTAINING GRAIN. FLOWING GRAIN TRAPS AND SUFFO-CATES VICTIMS IN SECONDS.

NOTE: Ensure ladder and steps are free from snow/debris before changing ladder positions and climbing.


NOTE: The lower ladder section must be raised and locked in the storage position when not used.


Storage to Working Position

1. Park the empty grain cart on a firm and level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shut-off the engine, remove the ignition key and disconnect the PTO shaft.

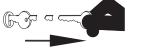


2. While holding ladder handle, remove rubber latch from holder. (FIG. 3-39 and 3-40) (Continued on next page)

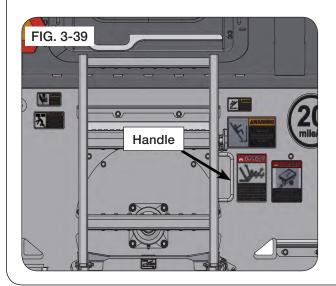

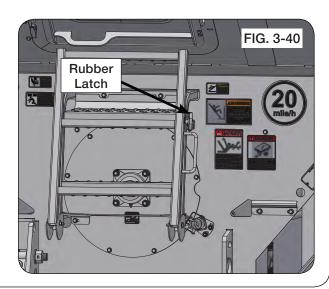


Rear Ladder Operation (continued)


3. While holding ladder handle, slowly swing the lower ladder section completely down to working position. (FIG. 3-41)

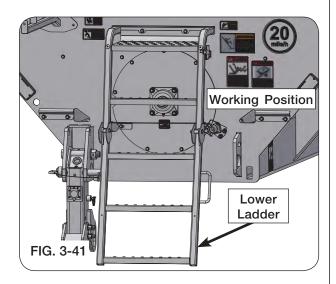


Working to Storage Position

- 1. Slowly lift and swing the lower ladder section up to storage position. (FIG. 3-42)
- 2. While holding ladder handle, attach rubber latch into holder to lock ladder in storage position. (FIG. 3-43 and 3-44)

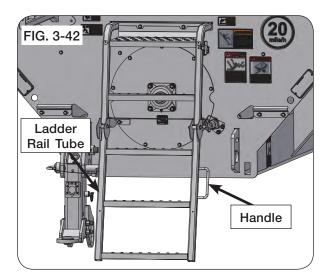

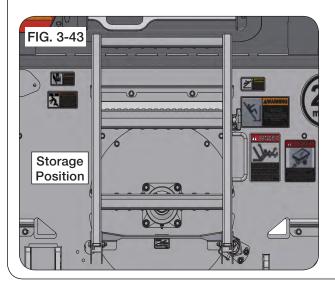

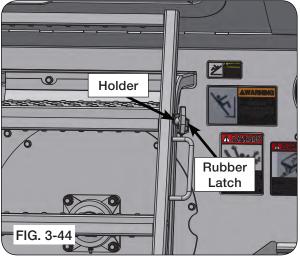

Rear Access Door Operation


A WARNING

- ENSURE SCREENS OVER HORIZONTAL AUGERS ARE IN PLACE AND PROPERLY SECURED.
- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE ARE RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING THE IMPLEMENT.
- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH. ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEANOUT DOORS ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- NEVER ENTER A CART CONTAINING GRAIN. FLOWING GRAIN TRAPS AND SUFFO-CATES VICTIMS IN SECONDS.
- Park the empty grain cart on a firm and level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shutoff the engine, remove the ignition key and disconnect the PTO shaft.




- 2. Turn both door latches 90 degrees counter clockwise. (Fig. 3-45)
- 3. Push door handle to open rear access door. (Fig. 3-45)
- 4. Push door until it stops. While maintaining contact with the outer handles, enter the grain cart. (Fig. 3-45)

(Continued on next page.)

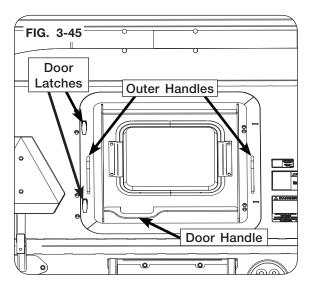


Rear Access Door Operation

5. To exit, pull inner door handle to open the rear access door, place hand on inner handle and exit grain cart. (Fig. 3-46)

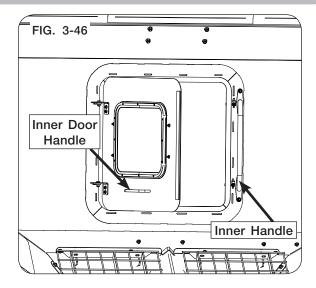

- 6. While maintaining contact with outer handles, use door handle to close the rear access door. (Fig. 3-47)
- 7. Turn both door latches 90 degrees clockwise to lock the rear access door. (Fig. 3-47)

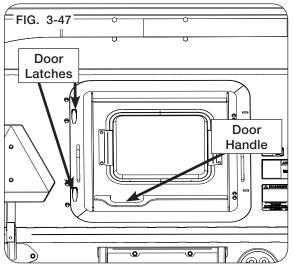

Rear Drop Hitch Operation (Optional)


A WARNING

- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING THE IMPLEMENT.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 50 LBS. SPECIFIC LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.

Storage to Working Position


NOTE: Keep rear drop hitch in storage position when not in use.


 Park the empty grain cart on a firm and level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shutoff the engine, remove the ignition key.

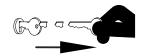

- 2. Attach a safe lifting device rated for a minimum of 50 lbs. to the rear drop hitch.
- 3. Remove the keeper from the pivot pin, then remove the pivot pin from the rear drop hitch. (Fig. 3-48)
- 4. Slowly pivot rear drop hitch to desired position. (Fig. 3-49)
- 5. Reinstall pivot pin and keeper into rear drop hitch. (Fig. 3-49)

(Continued on next page.)

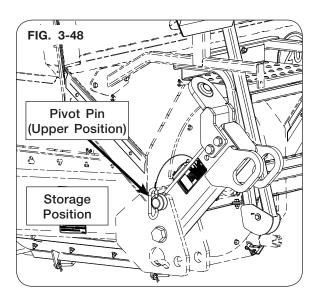

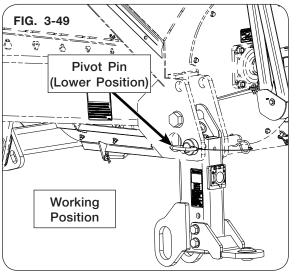

Rear Drop Hitch Operation (Optional) (continued)

Rear Hitch Connection


IMPORTANT


• The rear ladder MUST be folded into storage position to prevent damage when towing with the rear drop hitch.

The transport chain on the grain cart must be sized according to the weight that is being towed. Refer to "Transport Chain" in OPERATION section for complete transport chain instructions.

NOTE: Keep rear drop hitch in storage position when not in use.

- 1. With hitch in operating position, connect the tongue of the header transport to the rear drop hitch. (Fig. 3-50)
- 2. If header transport has brakes, attach the brake cable to the rear drop hitch. (Fig. 3-50)
- Connect transport chains and electrical connection of the header transport to the rear drop hitch. See implement operator's manual for proper transport chain instructions. (Fig. 3-51)

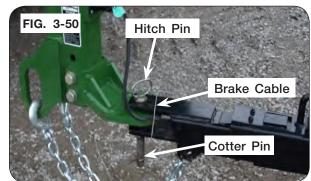

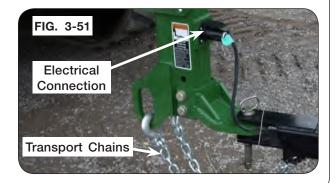


Rear Drop Hitch Operation (Optional) (continued)

Electrical Connection

The rear drop hitch is equipped with a 7-blade connector which will connect to the plug on most newer header transports to be towed behind the cart. (Fig. 3-52)

The wiring schematic for this connector is shown in the MAINTENANCE section. Verify correct electrical function before using this connector.

Compliance with all lighting and marking laws is the responsibility of the operator at the time of travel.

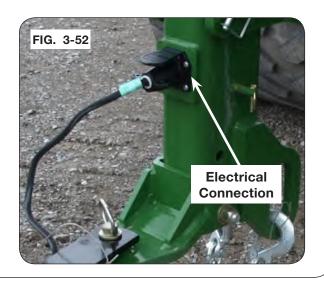

Rear Drop Hitch Operation (Optional) (continued)

A WARNING


- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING THE IMPLEMENT.


Rear Drop Hitch Adjustment


1. Park the empty grain cart on a firm and level surface. Block the machine to keep it from moving. Set the tractor's parking brake, shut-off the engine, remove the ignition key.




- 2. Remove the nuts, washers, and bolts from the rear drop hitch.
- 3. Remove hitch tang and re-install in one of the four positions depending on the height that is needed to maintain a level trailer tongue. There will be a difference of 6 3/4" from position 1 to position 4. (Figs. 3-53 through 3-56)
- 4. Reinstall the nuts, washers, and bolts to the rear drop hitch and torque to specification.

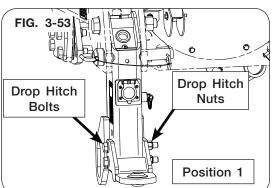

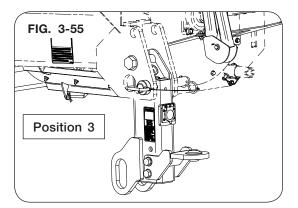

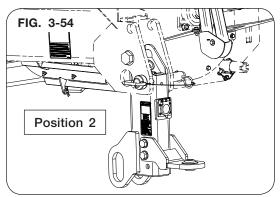

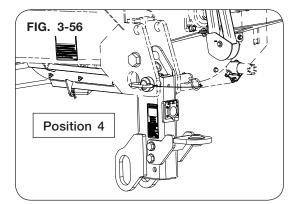

Video System (Optional)

IMPORTANT

Do not operate video system below 15°F. Damage to video system can occur.

The video system includes its own operation instruction sheet.

Weather Guard Tarp

A WARNING

- TO PREVENT PERSONAL INJURY OR DEATH, DO NOT ALLOW ANYONE ON A CLOSED TARP. TARP SYSTEM IS NOT DESIGNED TO SUPPORT A PERSON.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. REMOVE ACCUMULATED WATER/SNOW/ICE OR ANY OTHER OBJECTS FROM TARP BEFORE OPENING TARP.

IMPORTANT

- Do not open or close tarp while moving or in high wind conditions. Damage to the tarp may occur.
- Tarp should not be used if it is torn or the bungee cords are frayed or show damage. Fully
 close tarp with tension on the latch plate to prevent water from pooling.

Always use adequate caution when operating tarp.

If equipped, refer to electric roll tarp manual (26487) for operation details.

Open and close the tarp evenly.

Make sure tarp is open before loading.

Make sure all persons are clear of the tarp system before and during operating.

Do not operate tarp with cart hoisted in an elevated position.

If tarp is covered with snow, it is important to remove snow before operating.

End caps must be free from grain that may be piled on them. Grain should not be heaped higher than the end caps or tarp bows.

Tarp may be fully opened or completely closed while in transit. However, the closed position is recommended.

Ensure everyone who operates the tarp is familiar with the correct procedures outlined in this manual.

Weather Guard Tarp (continued)

<u>NOTE:</u> If equipped with wireless electric roll tarp, skip to step 7 on next page. For weather guard tarp, continue to step 1.


- 1. Using both hands, carefully remove tarp handle weldment from tube holder. (FIG. 3-57)
- 2. Roll tarp to the desired location, choosing either a fully open or fully closed position.
- 3. To close the tarp, rotate the roll tube clockwise up under the latch plate.
- 4. Make sure tarp is positioned evenly over latch plate length.

NOTE: Do not tighten if tarp overlaps end of the latch plate. Tearing of the tarp may occur. Reposition tarp, as necessary.

5. Bring the tarp handle weldment down perpendicular to the ground. Continue by lifting it up into the tube holder.

NOTE: Tarp handle weldment U-joint may need to be re-indexed on roll tube to achieve correct tension.

6. To open tarp, turn the roll tube counter clockwise until the tarp is fully open. Place tarp handle weldment in tube holder.

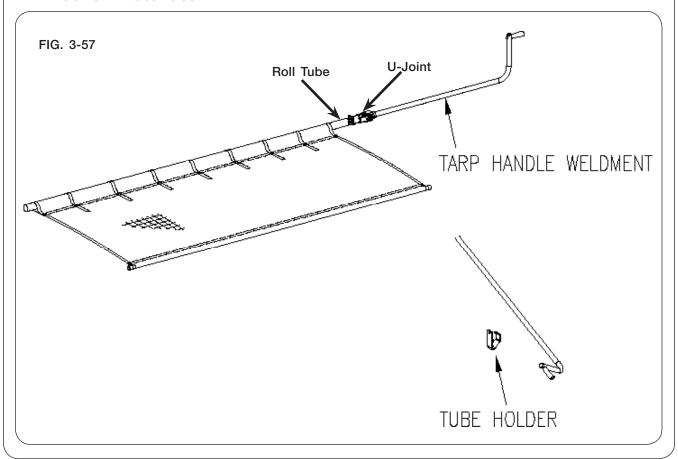


Weather Guard Tarp (continued)

Wireless Receiver and Control Box Location


NOTE: Refer to electric roll tarp manual (26487) for wireless operation details.

1. Wireless receiver (9009632) and control box (9005398) mount to the left-hand standard behind the vertical auger as shown. (FIGS. 3-58 & 3-59)

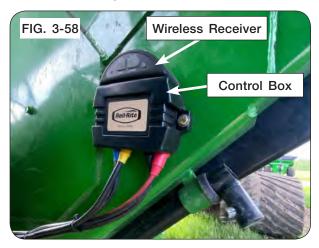

- 2. Control box wires route along the front of the cart following the isobus harness.
- Dual connector plug (9005327) attaches to the socket on the back of the tractor as shown. (FIG. 3-60)
- When electric tarp is not in use, place connector plug into storage caddy. Be sure to route connector plug harness to clear PTO driveline during operation.



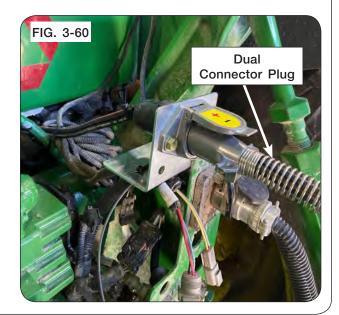

Notes	


Section IV Maintenance


Lubrication	4-2
Hydraulic System	
Purge Hydraulic System	
Manual Override For Optional Electric Over Hydraulic System	4-6
Auger System	
Vertical Auger Height Check	
Vertical Auger Timing	
Horizontal Auger Height Measurment	
Hanger Bearing Height Adjustment	
Horizontal Auger Driveline Bearings	
Belt Tightener Adjustment	
V-Belt Alignment	
Split Tapered Bushings	
Horizonatal Auger Removal and Replacement	
Driveline Removal	
Gearbox	
PTO Shaft Length	
PTO Shaft Length AdjustmentPTO Shaft and Clutch - Benzi PTO	
Track Wheels	
Baffle Adjustment	
Horizontal Cleanout Door Adjustment	
Hydraulic Jack Cylinder Replacement	
Seasonal Storage	
Troubleshooting	
Tarp Troubleshooting, Inspection, and Replacement	
Electircal System Diagram - Plug #92450	
Electircal System Diagram	
Electircal System Diagram - Front Harness #9008106	
Electircal System Diagram - Rear Harness # 9009574	
Electircal System Diagram - Right Hand Clearance Light Harness #9009032	
Electircal System Diagram - Left Hand Clearance Light Harness #9009070	
Electircal System Diagram - Auger Wire Harness #9008956	
Electircal System Diagram - Main Harness #9010096	4-49
Electircal System Diagram - Proximity Sensor #9007223	
Electircal System Diagram - Amber Clearance Light #9005529	
Electircal System Diagram - Clearnace Light Harness #9005542	
Electircal System Diagram - Work Flood Lamp #9008957	
Electircal System Diagram - Red Tail/Turn Light #9006345	
Electircal System Diagram - Amber Double Face #9005142	4-5 ⁻
Electircal System Diagram - Diverter Harness #9007266	4-5
Electircal System Diagram - Adapter Harness AG to 7 Blade Connector	4-5
Electric Over Hydraulic System Schematic 5 Function	
Electric Over Hydraulic Valve Electrical Schematic 5 Function	4-54
Electrical System Diagram - Optional Wireless Electirc Tarp	
Complete Torque Chart	
Capscrews - Grade 5	
Capscrews - Grade 8	4-5
Hydraulic Fittings	4-58

FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, VIDEO SYSTEM OR OTHER OPTIONS, PLEASE REFER TO THE INDIVIDUAL MANUALS.

Lubrication

To keep your grain cart in top operating condition and to assure its proper performance and reliability for a long period of time, periodic inspection and lubrication is a must.

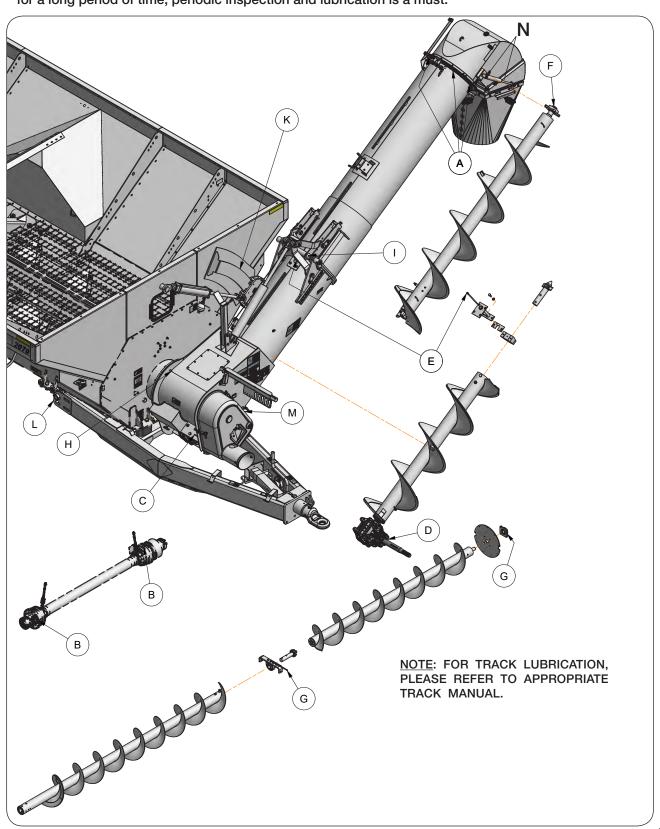

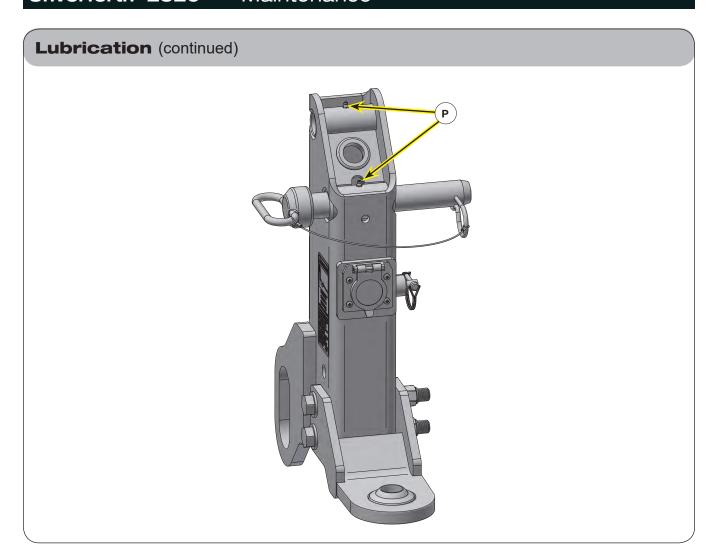

Lubrication (continued)

Lower Auger Pivot Housing Grease Points












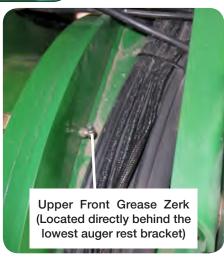

Hydraulic System

Refer to parts section for hydraulic component detail listing.

When properly assembled and maintained, the hydraulic system of the grain cart requires little maintenance.

Replacing Hoses/Fittings/Cylinders:

- 1. Use replacement hoses, fittings, and cylinders from your Unverferth Manufacturing dealer which are rated for 3,000 psi.
- 2. Do not use hoses, fittings and cylinders that have pipe threads.
- 3. Do not use Teflon tape or thread sealant on JIC or O-ring fittings. Tighten fittings according to "Torque Specifications" in the MAINTENANCE section.
- 4. When replacing hoses, always allow sufficient slack to permit hoses to move through the full range of motion of the cylinders.
- 5. Always purge the hydraulic system after servicing.

Purge Hydraulic System

A WARNING

- HYDRAULIC SYSTEM MUST BE PURGED OF AIR BEFORE OPERATING TO PREVENT SERIOUS INJURY OR DEATH.
- RELIEVE HYDRAULIC SYSTEM OF ALL PRESSURE BEFORE ADJUSTING OR SERVICING.
 SEE THE HYDRAULIC POWER UNIT OPERATOR'S MANUAL FOR PROPER PROCEDURES.
- HIGH-PRESSURE FLUIDS CAN PENETRATE THE SKIN AND CAUSE SERIOUS INJURY OR DEATH. LEAKS OF HIGH-PRESSURE FLUIDS MAY NOT BE VISIBLE. USE CARDBOARD OR WOOD TO DETECT LEAKS IN THE HYDRAULIC SYSTEM. SEEK MEDICAL TREATMENT IMMEDIATELY IF INJURED BY HIGH-PRESSURE FLUIDS.



KEEP CLEAR OF PINCH POINT AREAS.



 FALLING OR LOWERING EQUIPMENT CAN CAUSE SERIOUS INJURY OR DEATH. KEEP EVERY-ONE AWAY FROM EQUIPMENT WHEN SUSPENDED, RASING, OR LOWERING.

Purge air from system as follows:

- A. Clear all personnel and objects from the area, including where the machine will have full range of motion during the hydraulic movement. Remove transport locks from the machine.
- B. Pressurize the system and maintain the system at full pressure for at least 5 seconds after the cylinder rods stop moving, or hydraulic motors have completed the required movement. Check that all movements are fully completed.
- C. Check oil reservoir in the hydraulic power source and refill as needed.
- D. Pressurize the system again to reverse the motion of step B. Maintain pressure on the system for at least 5 seconds after the cylinder rods stop moving, or hydraulic motors have completed the required movement. Check that all movements are fully completed.
- E. Check for hydraulic oil leaks using cardboard or wood. Tighten connections according to directions in the Torque Specifications in the MAINTENANCE section.
- F. Repeat steps in B, C, D, and E 10-12 times.

IMPORTANT

• Machine damage will occur if the cylinder is incorrectly installed.

Check for and correct any leaks. Make sure hoses are not kinked, stretched, or twisted. Secure hoses to prevent cuts or chafing during operation.

Manual Override for Optional Electric Over Hydraulic System

A WARNING


- MOVING OR ROTATING AUGER COMPONENTS CAN CAUSE SERIOUS INJURY OR MA-CHINE DAMAGE. BEFORE OPERATING MANUAL OVERRIDE(S), ENSURE EVERYONE IS AWAY FROM THE SPOUT AND THAT THE SPOUT WILL NOT CONTACT ANY OTHER PARTS OF THE GRAIN CART. ALL CONTROL SWITCHES ARE DEACTIVATED WHILE UTILIZING MANUAL OVERRIDE(S).
- MOVING OR ROTATING PTO COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT OPERATE PTO WHILE UTILIZING MANUAL OVERRIDE(S).
- FALLING OR LOWERING EQUIPMENT CAN CAUSE SERIOUS INJURY OR DEATH. KEEP EVERYONE AWAY FROM EQUIPMENT WHEN SUSPENDED, RASING, OR LOWERING.

IMPORTANT

Align checker flag decals to ensure spout rotate is centered.

NOTE: Manual override operation is intended for emergency use ONLY and is not intended for continuous operation. Spout may rotate into cart causing damage.

NOTE: Manual override operation allows the spout and auger to move regardless of location.

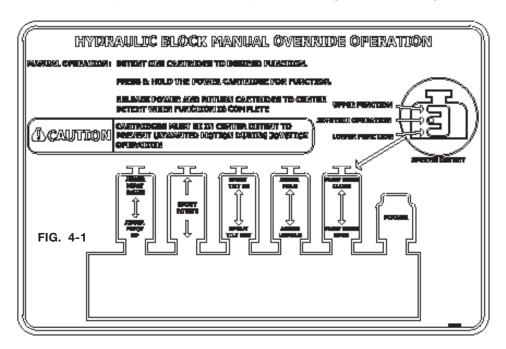

1. Park the grain cart on a firm and level surface. Block the machine to keep it from moving. Set the tractor's parking brake. Keep engine running.

Manual Override for Optional Electric Over Hydraulic System (continued)


- 2. Remove cover plate (272606B) from the bottom of the lower auger housing to access the EOH block assembly. Keep cover plate. (FIG. 4-2)
- 3. Connect the desired Hydraulic Pressure and Return hoses to the tractor SCV remote so that the Pressure line is able to be put in continuous detent.
- To operate the manual override function, place the tractor SCV remote in continuous detent so that the Hydraulic Pressure hose is pressurized.





Manual Override for Optional Electric Over Hydraulic System (continued)

- NOTE: Only one cartridge valve (9008416 & 9008463) must be in the top or bottom detent position at a time to function properly. All other valves must be in the middle detent postion. (FIG. 4-3 & 4-4)
- 5. Operate the desired function on valve (9008416 & 9008463) by rotating the manual override knurled knob from the locked neutral position. (FIG. 4-4, 4-5, & 4-6)
- 6. Push and hold the manual override button on valve (9008438). (FIG. 4-5)
- 7. Once the desired position is reached, release manual override button on valve (9008438).
- 8. Return knurled knob to center and lock valve (9008416) & (9008463) in position. (FIG 4-4, 4-5 & 4-6)
- NOTE: Refer to "Troubleshooting" for EOH, vertical auger and/or rotating spout issues in the MAINTENANCE section.
- Turn off hydraulic circuit when done. Correct electric/hydraulic system before continued use. Consult your dealer for service and parts.
- 10. Place cover plate (272606B) from step 2 back onto the bottom of the lower auger housing.



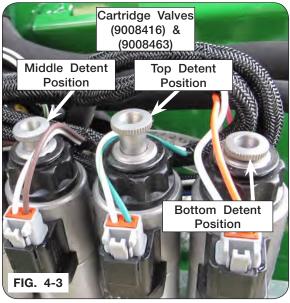

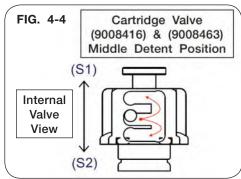

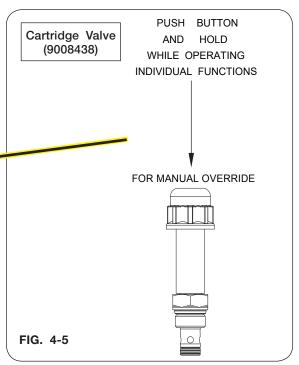

Auger System

WARNING

- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING IN-SIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE ARE RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- NEVER ENTER CART WITH AUGER OR TRACTOR RUNNING. SERIOUS OR FATAL IN-JURY CAN OCCUR DUE TO ENTANGLEMENT WITH ROTATING COMPONENTS. ALWAYS STOP ENGINE AND REMOVE KEY BEFORE ENTERING CART.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING IMPLEMENT.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 2,000 LBS. SPECIFIC LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.
- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH. ALWAYS DISCONNECT POWER SOURCE BEFORE SERVICING. EN-SURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR(S) ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING MACHINE.




• WHEN WORKING AROUND THE IMPLEMENT, BE CAREFUL NOT TO BE CUT BY SHARP EDGES.

Vertical Auger Height Check

Before servicing the vertical auger, park the unit on a firm, level surface. Block the machine to keep it from moving. Raise vertical auger to discharge position and close horizontal auger flow door. Set the tractor parking brake, turn off tractor engine, remove ignition key, and disconnect PTO shaft and hydraulic lines from tractor.


Annually check all bolts, nuts, and set screws for tightness. Replace the vertical auger top bearing hardware, as necessary. (FIG. 4-7)

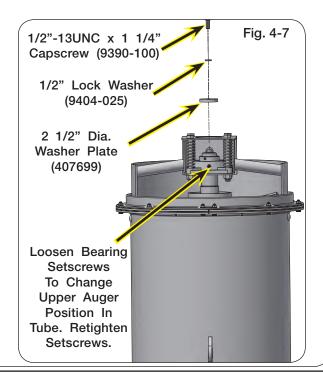



Auger System (continued)

Vertical Auger Height Check (continued)

NOTE: The lower auger position is indexed from the drive dog / tube flange hinge surface as shown. (Figs. 4-9 & 4-10)

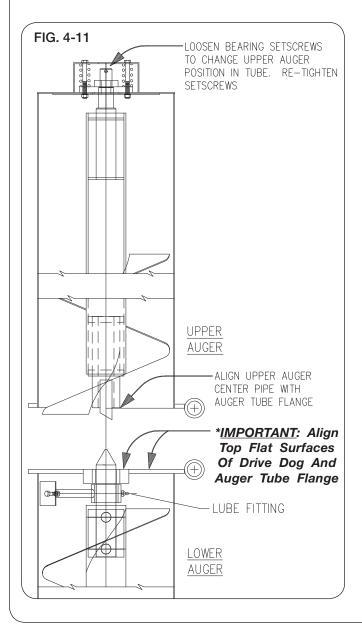

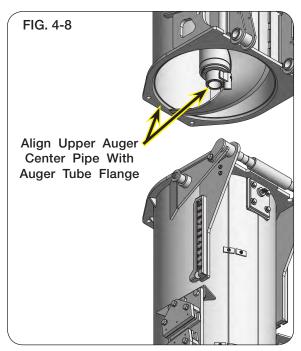

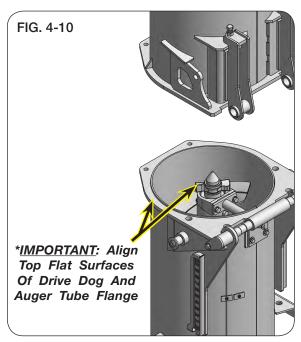


Auger System (continued)


Vertical Auger Timing

 For the lower vertical auger, use the top edge of the flighting as a 12 o'clock reference. Position the drive dog so the driving edge is at the 7 o'clock position. (FIG. 4-12)

NOTE: Looking down at the lower flighting (FIG. 4-12) the auger rotation will be counter-clockwise. When looking up at the upper flighting (FIG. 4-13) the auger rotation will be clockwise.

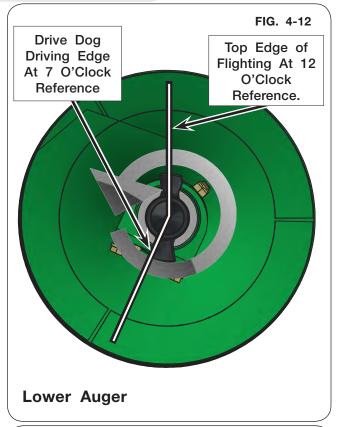

- For the upper auger, use the outer edge of the flighting as a 12 o'clock reference.
 Postion the driven edge of the drive pin at the 8 o'clock position. See Fig. 4-13.
- 3. When engaged, the upper flighting should immediately follow the lower flighting.

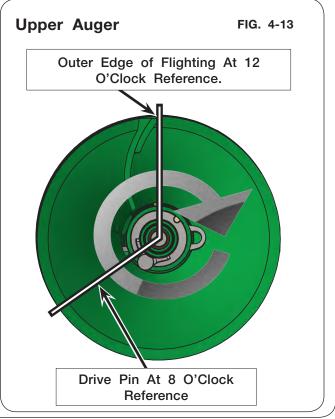

Auger System (continued)


Horizontal Auger


Annually check all bolts, nuts, and set screws. Perform lubrication as specified.


Horizontal Auger Height Measurement

- 4. Run a string from the front of the cart to the back, above the cleanout doors and linkages as shown in FIG. 4-14.
- 5. Attach the string to the bottom of the belly pan in the front side of the front opening. Place a 3/8"-1/2" spacer under the belly pan and clamp the string to the center of the opening as shown in FIG. 4-15.
- 6. Attach the opposite end of the string to the back side of the rear belly pan opening. Place the same thickness of spacer as was used on the front in between the string and the belly pan. Pull the string tight and clamp to the center of the opening. (FIG. 4-16)
- 7. Measure the distance from the string to the bottom of the flighting center pipe in between the flighting pitch. Take a measurement through the front opening and the rear opening. If the measurement in the front and rear is different, add a shim under the smaller dimensioned end between the string and the belly pan so the measurements are the same.
- 8. Measure the string to the auger tube either in front or behind the hanger bearing. If this dimension is 1/8" greater than the measurement taken in the front and rear, shims are required on top of the center hanger bearing. (FIG. 4-17)

NOTE: The shims are 1/8" thick each. Add as needed. Shims (286424B) are available from your Unverferth dealer.

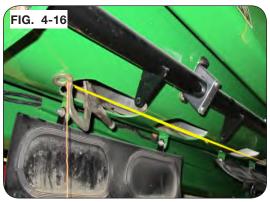

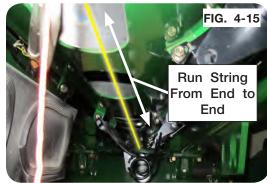

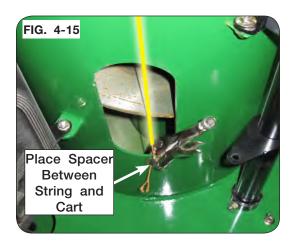




Auger System (continued)

Hanger Bearing Height Adjustment

- Remove the center screens inside the hopper by removing the 3/8" hardware holding them in place. (FIG. 4-18)
- 10. Remove the baffle weldment on the auger tent at the opening above the hanger bearing. (FIG. 4-19)
- 11. Loosen the two 5/8"x2" capscrews. It is not necessary to remove this hardware if two or fewer shims are being installed. Install the shims from the backside between the bearing and the bracket as shown in FIG. 4-19.



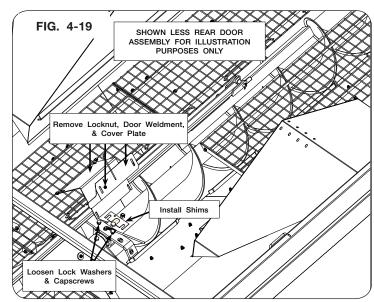

- 12. If more than two shims are necessary to set the bearing height, replace 5/8" x 1 3/4" capscrews with 5/8" x 2" capscrews (9390-124). See your Unverferth dealer for capscrews.
- 13. Re-measure the distance from the flighting tube to the string making sure the string is pulled tight. If the measurements are all within 1/8", the string can be removed.
- 14. Reassemble the baffle weldment and screens on the inside of the cart.
- 15. Reassemble the cleanout door linkages on the front and rear doors.
- 16. Close cleanout doors and reassemble the cleanout door lock pin.
- 17. Ensure all personnel and tools are removed from the cart and reconnect the cart to the tractor.
- 18. Run the auger starting at a low RPM and increase speed to max RPM to make sure the auger flighting does not make contact with the belly pan or flow doors.


Auger System (continued)

Horizontal Auger Driveline Bearings

IMPORTANT

• Periodically check set screws in all bearings at either end of the driveline for tightness. (FIGS. 4-20 & 4-21)



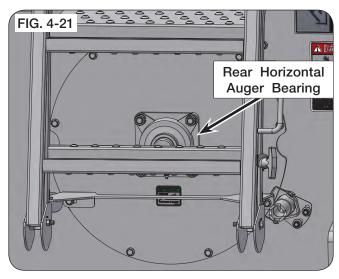

Belt Tightener Adjustment

IMPORTANT

- Do not use belt dressing.
- · Keep grease and oil off of belt and pulleys.

NOTE: Pulleys do not need to be removed to remove/replace belt.

Due to prolonged use, belt wear may be evident causing slack. To correct this, follow these steps.

 Park the unit on a firm, level surface. Block the machine to keep it from moving. Set the vehicle parking brake, shut off the engine and remove the ignition key from the towing vehicle.







A WARNING

- MOVING OR ROTATING COMPONENTS
 CAN CAUSE SERIOUS INJURY OR
 DEATH. ALWAYS DISCONNECT POWER
 SOURCE BEFORE SERVICING. ENSURE
 SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR(S) ARE
 IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.
- Remove PTO assembly from Gearbox input shaft.
- 3. Detension the belt as outlined in OPERATION section. Remove belt tensioner handle.
- Remove cover and inspect belts for misalignment, loose parts and cracks. Replace if necessary with a matched set. See Fig. 4-24.


Belt Tightener Adjustment (continued)

- Belt tension is adjusted with hex nuts below the spring. All belt tension MUST be released from linkage. Loosen outer hex nut and adjust inner nut to establish a 3 1/16" pre-load dimension between the heavy washers. Tighten the outer hex nut against inner nut to lock position. (Fig. 4-25)
- 6. Check the lower belt pulley to ensure belt is aligned in their grooves. Using the belt tensioner handle, engage the roller/idler linkage against the belt and over-center stop. The compressed spring should now be approximately 1 3/4" between the washers and generating a force of approximately 480 lbs. against the belt. (Fig. 4-26)
- 7. Release and tighten belt multiple times to confirm positions and final adjustments. See Fig. 4-26 and Fig. 4-27.
- Tighten belt. Install the cover guard and the PTO shaft to the gearbox input shaft. Clear work area and test-run drivetrain for 3 minutes at 1000 PTO RPM.

A WARNING

- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.
- 9. Disengage PTO, turn off towing vehicle and remove the ignition key. Through the cover access door, check the compressed spring length is approximately 1 3/4" between the washers and check each belt for uniform tension. If more adjustment is needed, refer to Steps 5 through 7. If no additional spring adjustment is available, then both belts must be replaced with a new matched set.

NOTE: Always replace belts in matched sets.

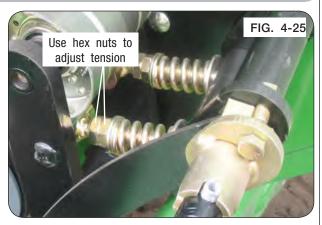






V-Belt Alignment

1. Pulleys must be aligned with the fixed idler. Belts should be centered on idler for longest belt life. (Fig. 4-28)



2. After tightening taper-lock bushing hardware, lay a straight edge across face of the drive and driven belt pulleys to ensure alignment between the grooves on the pulleys. (FIG. 4-29)

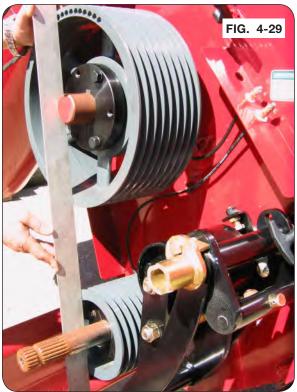

V-Belt Alignment (continued)

Split Tapered Bushings

Check annually for tight engagement to driveshaft. Torque three bolts progressively to values shown in figure 4-30.

For the smaller gearbox bushing (9007376): 3/8"-16UNC hardware. Torque to 75 ft-lbs.

For the larger horizontal auger bushing (9004813): 9/16"-12UNC hardware. Torque to 90 ft.-lbs.

Some gap must remain between flange & hub when bushing is properly tightened.

To remove from shaft, remove capscrews and insert them in tapped holes in bushing flange. Tighten progressively until bushing disengages.



Horizontal Auger Removal and Replacement

WARNING

- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING IN-SIDE, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE ARE RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE IMPLEMENT.
- NEVER ENTER CART WITH AUGER OR TRACTOR RUNNING. SERIOUS OR FATAL IN-JURY CAN OCCUR DUE TO ENTANGLEMENT WITH ROTATING COMPONENTS. ALWAYS STOP ENGINE AND REMOVE KEY BEFORE ENTERING CART.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING IMPLEMENT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 1,000 LBS. SPECIFIC LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.


NOTE: Open the flow gates all the way.

- Park the unit on a firm, level surface. Block the machine to keep it from moving. Set the vehicle parking brake, shut off the engine and remove the ignition key and disconnect the PTO shaft from the tractor.
- 2. Remove 4 rear ladder capscrews attached to the cart. (FIG. 4-31)

NOTE: Keep all hardware for re-assembly.

3. Remove rear ladder from the cart. (FIG. 4-31)



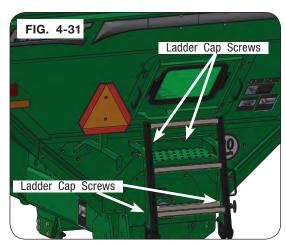


Horizontal Auger Removal and Replacement (continued)

- 4. Remove the capscrews from the auger cover. (Fig. 4-32)
- 5. Pry the auger from the auger tube. (Fig. 4-33)
- 6. Using a safe lifting device rated for a minimum 1,000 lbs., pull the rear auger out of the cart. (Fig. 4-34)





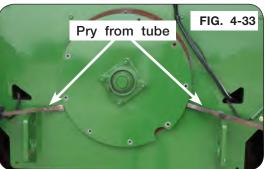


Horizontal Auger Removal and Replacement (continued)

NOTE: If only servicing rear auger, skip to step 23. For 5-pin driver replacement, continue to step 8.


8. Remove the flange screws in both middle grates inside the cart. Remove the grates. (Fig. 4-35)



- 9. Remove locknuts, baffle weldments and cover plates from the middle tent. (Fig. 4-36)
- 10. Disconnect grease line. (Fig. 4-36)
- 11. Remove the bearing mount bar bolts on each side of the auger.
- 12. Remove capscrews and lock washers holding bearing onto the bearing mount bar.

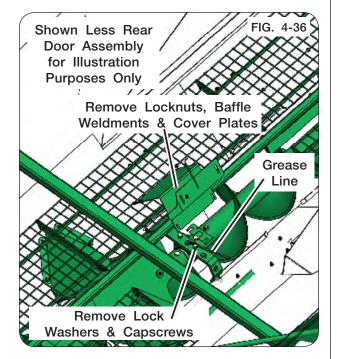


13. Remove bearing mount bar to allow access to work on the bearing and shaft. Remove two center tube connecting capscrews, spacer bushings (283895B) and locknuts from the horizontal auger. (Fig. 4-37)

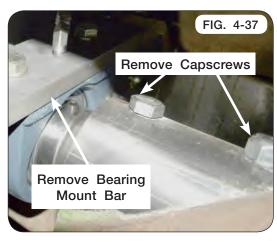

Horizontal Auger Removal and Replacement (continued)

- 14. Remove the original 5-pin driver, bearing and the bushing insert. (Figs. 4-38 & 4-39)
- 15. Replace 5-pin driver and bushing insert, if needed.



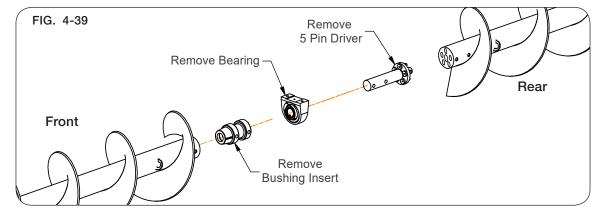


- 16. Substantially coat bushing insert with antiseize.
- 17. Slide bushing insert into front auger and ensure tube holes are aligned. (Figs. 4-40 & 4-41)




NOTE: Make sure the set screws on bearing are towards the front of the cart. (Fig. 4-41)

- 18. Slide bearing onto 5-pin driver. (Fig. 4-41)
- 19. Insert 5-pin driver into front auger and ensure tube holes are aligned.
- 20. Insert capscrews from opposite sides through auger, bushing and driver. Slide spacer bushings over threads and install locknuts. Hand tighten hardware at this time. (Fig. 4-41)

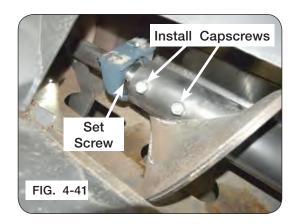

Horizontal Auger Removal and Replacement (continued)


- 21. Install bearing mount bar. Leave the capscrews and lock washers loose attaching bearing mount bar to the cart. Attach bearing mount bar to the bearing. (Fig. 4-42)
- 22. Reattach grease line components. (Fig. 4-42)

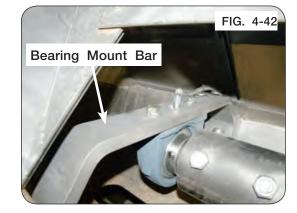

- NOTE: Rear auger flighting should lead the front auger flighting.
- 23. Slide the rear auger forward. Align the pins and holes with the rear auger pipe. (Fig. 4-43)




24. Extend a string tightly from front to rear to check horizontal auger alignment. Measure the string to the auger tube near the hanger bearing. If this dimension is greater than the measurement taken in the front and rear, shims (8GA - 286419B or 12GA - 286424B) are required on top of the center hanger bearing. Ideally the center measurement should be equal to or 1/8" lower than the measurements on the ends of the augers. (Fig. 4-44)

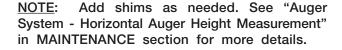

- 25. Torque bearing mount bar capscrews to 130 ft.-lbs. See Fig. 4-42.
- 26. Torque front auger capscrews to 200 ft.-lbs. (Fig. 4-45)




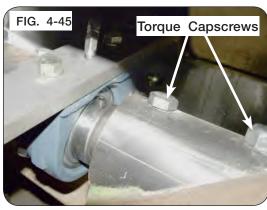

Horizontal Auger Removal and Replacement (continued)

- 27. Insert hardware for rear auger cover, and rear ladder, if equipped. (Figs. 4-46 and 4-47)
- 28. Torque all hardware to specification. See "Torque Chart" in this section. (Figs. 4-46 and 4-47)
- 29. Reinstall ALL the grates.



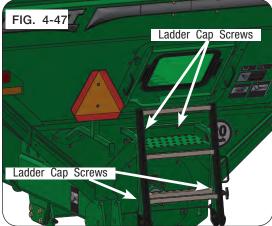

Driveline Removal

▲ DANGER


ENTANGLEMENT WITH THE DRIVELINE WILL CAUSE SERIOUS INJURY OR DEATH.
KEEP ALL GUARDS AND SHIELDS IN GOOD CONDITION AND PROPERLY INSTALLED
AT ALL TIMES. AVOID PERSONAL ATTIRE SUCH AS LOOSE FITTING CLOTHING, SHOE
STRINGS, DRAWSTRINGS, PANTS CUFFS, LONG HAIR, ETC. THAT CAN BECOME ENTANGLED IN A ROTATING DRIVELINE.

A WARNING

- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH.
 ALWAYS DISCONNECT POWER SOURCE BEFORE SERVICING. ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 100 LBS. SPECIFIC LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.

Gearbox shaft guard has access doors for installing and removing of driveline.

- 1. Remove clamping cone/retaining bolt.
- Use a hammer and punch, if needed, to moderately hit the end of clamping cone/ retaining bolt, as shown. (FIG. 4-48)
- Once clamping cone/retaining bolt is removed, slide torque limiter off gearbox splined input shaft.

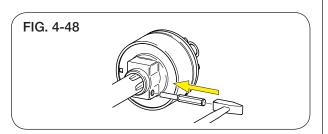


Gearbox

When checking the oil level of the gearbox, the vertical auger should be pivoted all the way down.

For adequate lubrication, the oil should be visible in the sight glass. Fill with oil to the sight glass only. (Fig. 4-49)

For Maximum gearbox life: Check oil level every 2 weeks.

Replace oil every season with approximately 85 oz. 80W90 EP lubricant.

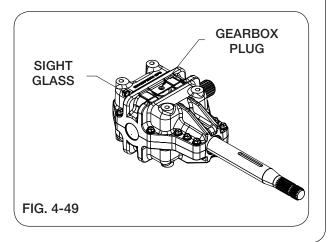

PTO Shaft Length

A WARNING

- PROPER EXTENDED AND COLLAPSED LENGTHS OF THE TELESCOPING PTO SHAFT MUST BE VERIFIED BEFORE FIRST OPERATION WITH EACH AND EVERY TRACTOR. IF THE EXTENDED LENGTH OF THE PTO SHAFT IS NOT SUFFICIENT, IT MAY BECOME UNCOUPLED IN OPERATION AND CAUSE SERIOUS INJURY OR DEATH FROM CONTACT WITH UNCONTROLLED FLAILING OF PTO SHAFT ASSEMBLY COMPONENTS.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 100 LBS. SPECIFIC LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.


IMPORTANT

• Check the length of the telescoping members to ensure the driveline will not bottom out or separate when turning and/or going over rough terrain.

Consult your OEM dealer for recommended drawbar and PTO set up.

An excessive collapsed length can result in damage to the PTO driveline and attached components. This is most likely to occur during extreme turning angles and/or travel over rough terrain. Conditions are amplified on tractors with tracks operating in uneven terrain, particularly rice levies. Damaged driveline components can result in unsafe operation and severely reduced driveline component life.

Check the length of the telescoping members to ensure the driveline will not bottom out or separate when turning and/or going over rough terrain.

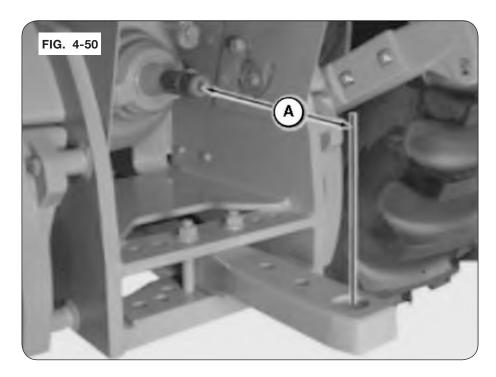

PTO Shaft Length (continued)

NOTE: Do not exceed 10 degrees beyond a straight pull line while operating the PTO. To verify proper extended and collapsed lengths, use the following procedure:

1. Fully collapse PTO shaft and measure length "L" (Fig. 4-51).

Enter here: (1)


(Verify that outer tube does not bottom out on surrounding plastic shield components).


2. Pull apart PTO telescoping shaft ends and measure lengths "T" & "C" (Fig. 4-52)

Add "T" + "C" measurments together Enter total here:_____(2)

- 3. Calculate maximum recommended extended length:
 - a. Subtract line 1 from line 2
 - Enter here:____(a)
 - b. Divide line (a) by 2 Enter here:____(b)
 - c. Add line (b) to line 1. Enter here:____(c)
 - d. Subtract 3 inches from line (c)


Enter here:____(d)

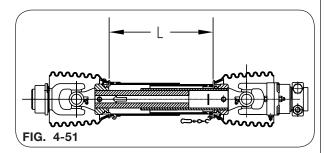


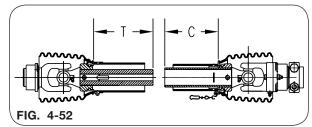

This is the maximum recommended extended length.

- 4. Hitch tractor drawbar to cart, ensuring that tractor and cart are on level ground and coupled as straight as practical.
- 5. Using a safe lifting device rated at a minimum 100 lbs., connect PTO shaft to tractor, and measure length "L" from same points as used in step 1. Ensure that this measurement does not exceed the maximum recommended extended length calculated in step 3 above. If necessary, choose a shorter drawbar position, or obtain a longer PTO shaft assembly before operating cart.
- 6. Position the tractor to obtain the tightest turning angle, relative to the cart. (Fig. 4-53)
- 7. Measure the length "L" from the same points as used in step 1. This distance must be at least 1.5 inches greater than the distance measured in step 1. If necessary, adjust the length of the PTO shaft by cutting the inner and outer plastic guard tubes and inner and outer sliding profiles by the same length. Round off all sharp edges and remove burrs before greasing and reassembling shaft halves. (Fig. 4-54)

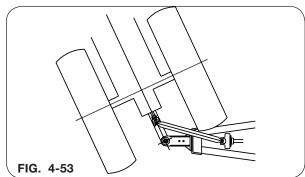

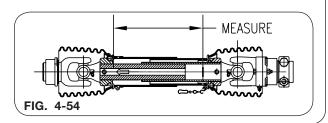


PTO Shaft Length Adjustment


A WARNING


 CHECK THE LENGTH OF THE TELESCOPING MEMBERS TO ENSURE THE DRIVELINE WILL NOT BOTTOM OUT OR SEPARATE WHEN TURNING AND/OR GOING OVER ROUGH TERRAIN.


NOTE: Maximum operating length LB. (Refer to "Verify Telescoping PTO Shaft Length" in this section for LB length.)

- 1. To adjust length, hold the half-shafts next to each other in the shortest working position and mark them.
- 2. Shorten inner and outer guard tubes equally.
- 3. Shorten inner and outer sliding profiles by the same length as the guard tubes.
- 4. Round off all sharp edges and remove burrs. Grease sliding profiles.

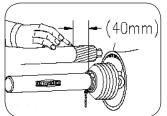

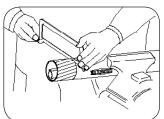

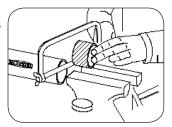

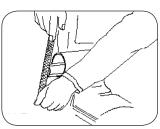

PTO Shaft and Clutch - Benzi PTO

To Dismantle Guard (Figs. J1 - J3)

1. Pull the guard tube backwards and, using a screwdriver, disengage the three bearing ring tabs by pushing them inward. (FIG. J1)



2. Remove half-guard. (FIG. J2)



3. Open the bearing ring and remove from the yoke groove. (FIG. J3)




PTO Shaft and Clutch - Benzi PTO (continued)

To Assemble Guard (Figs. K1 - K3)

1. Clean and grease the bearing ring, yoke groove and inner profile tube. (FIG. K1)



- 2. Fit bearing ring in groove with three bearing ring tabs positioned as shown. (FIG. K2)
- Slip on half-guard by aligning the holes on the cone with three bearing ring tabs and the cone inner key with the cut of the bearing ring. (FIG. K2)

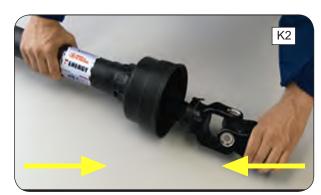

- 4. Push half-guard and yoke together causing the half-guard to engage. (FIG. K3)
- <u>NOTE</u>: Ensure the three bearing ring tabs are positioned inside the grooves.
- 5. Confirm half-guard engagement by pulling backwards on the half-guard. (FIG. K3)



Track Wheels

Torque Requirements



CAUTION

 IMPROPERLY TORQUED WHEEL NUTS/BOLTS CAN CAUSE A LOSS OF IMPLEMENT CONTROL AND MACHINE DAMAGE. TORQUE WHEEL NUTS/BOLTS TO VALUES IN TABLE. CHECK TORQUE BEFORE USE, AFTER ONE HOUR OF UNLOADED USE OR AFTER FIRST LOAD, AND EACH LOAD UNTIL WHEEL NUTS/BOLTS MAINTAIN TORQUE VALUE. CHECK TORQUE EVERY 10 HOURS OF USE THERE-AFTER. AFTER EACH WHEEL REMOVAL START TORQUE PROCESS FROM BEGINNING. WARRANTY DOES NOT COVER FAILURES CAUSED BY IMPROPERLY TORQUED WHEEL NUTS/BOLTS.

Failure to check torque before first load may damage track wheel nut/bolt seats. Once seats are damaged, it will become impossible to keep nuts/bolts tight. Tighten nuts/bolts to applicable torque value shown in table. Start all nuts/bolts by hand to prevent cross threading. Torque nuts/bolts in the recommended sequence as shown in Diagram 1.

NOTE: Do not use anti-seize on wheel hardware.

WHEEL HARDWARE		
SIZE	FOOT-POUNDS	
3/4-16 (UNF)	365 ftlbs.	

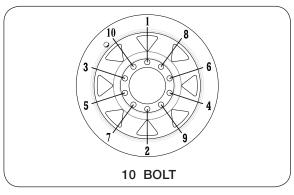


DIAGRAM 1

Baffle Adjustment

A WARNING

- TO PREVENT PERSONAL INJURY OR DEATH, ALWAYS ENSURE THAT THERE ARE PEOPLE WHO REMAIN OUTSIDE THE CART TO ASSIST THE PERSON WORKING INSIDE THE CART, AND THAT ALL SAFE WORKPLACE PRACTICES ARE FOLLOWED. THERE ARE RESTRICTED MOBILITY AND LIMITED EXIT PATHS WHEN WORKING INSIDE THE CART.
- NEVER ENTER CART WITH AUGER OR TRACTOR RUNNING. SERIOUS OR FATAL IN-JURY CAN OCCUR DUE TO ENTANGLEMENT WITH ROTATING COMPONENTS. ALWAYS STOP ENGINE AND REMOVE KEY BEFORE ENTERING CART.

The horizontal auger baffles are factory-set at the lowest position. This position results in the lowest power requirements and longest flighting life. Once grain has been run through the unit, adjustments can be made to achieve the ideal unloading performance.

Refer to the following reasons for baffle adjustment:

NOTE: To unload the cart evenly from front to back the openings should increase in height from back to front.

- If higher flow is desired and torque is not the limiting factor, raise each baffle to an incremental amount and rerun.
- If more material remains at the back of the cart towards the end of the unloading cycle, the back baffles should be adjusted upward in incremental amounts and rerun.
- If more material remains at the front of the cart towards the end of the unloading cycle, the back baffles should be adjusted downward in incremental amounts and rerun.
- If the cart requires more torque than what is available at times during the unloading cycle, then all baffles should be adjusted downward in incremental amounts.


Baffle Adjustment (continued)


Before making any baffle adjustments, close horizontal auger flow door. Securely block the grain cart, set the tractor parking brake, turn off tractor engine and remove ignition key.

If a higher flow is desired and torque is not a factor, loosen the (2) flange nuts on each baffle, see figure 4-55. Use the lift handle to raise each baffle to the desired position, retighten both flange nuts, see figures 4-55 & 4-56.

NOTE: DO NOT REMOVE ANY SCREEN PAN-ELS. The flange nuts are best accessed using an extended socket wrench and 9/16" socket through the screen panel openings.

<u>NOTE</u>: Screen removed in figure 4-56 for illustration only.

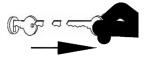

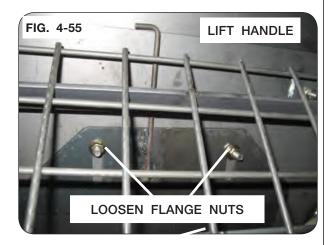




Horizontal Cleanout Door Adjustment

A WARNING

- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH.
 ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEANOUT DOORS ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.
- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING THE IMPLEMENT.
- Park the unit on a firm, level surface. Block the tractor and machine to keep it from moving. Set the tractor parking brake, turn off tractor engine, remove ignition key, and disconnect PTO shaft.

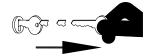


- 2. Loosen all the hardware in the slotted brackets connecting the cleanout door rockshaft to the grain cart tube. (Fig. 4-57)
- 3. Starting at the front of the cart, using a jack, push the rockshaft up and toward the runner tube. (Fig. 4-57)




NOTE: Ideal distance between the runner tube and rockshaft is 3 1/4". (FIG. 4-58)

- 4. When the rockshaft is in position, torque the hardware previously loosened to 28 ft.-lbs.
- 5. Continue repositioning the rockshaft moving toward the back of the cart.

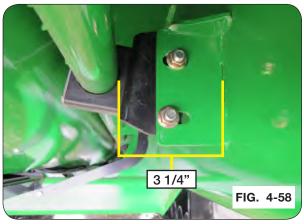

Horizontal Cleanout Door Adjustment

- 10. Rotate the tensioner handle counter-clockwise to close the doors allowing the seals to fit into the belly pan. (Fig. 4-59)
- 11. Close the doors and ensure all doors seal. (Fig. 4-59)
- 12. Insert lynch pin into rockshaft and return handle to storage location.

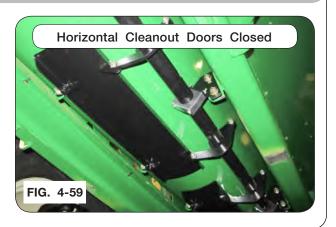


Hydraulic Jack Cylinder Replacement

A WARNING

- HIGH-PRESSURE FLUIDS CAN PENETRATE THE SKIN AND CAUSE SERIOUS INJURY OR DEATH. LEAKS OF HIGH-PRESSURE FLUIDS MAY NOT BE VISIBLE. USE CARD-BOARD OR WOOD TO DETECT LEAKS IN THE HYDRAULIC SYSTEM. SEEK MEDICAL TREATMENT IMMEDIATELY IF INJURED BY HIGH-PRESSURE FLUIDS.
- RELIEVE THE HYDRAULIC SYSTEM OF ALL PRESSURE BEFORE ADJUSTING OR SERVICING. SEE THE HYDRAULIC POWER UNIT OPERATOR'S MANUAL FOR PROPER PROCEDURES.
- HYDRAULIC SYSTEM MUST BE PURGED OF AIR BEFORE OPERATING TO PREVENT SERIOUS INJURY OR DEATH.
- MOVING OR ROTATING COMPONENTS CAN CAUSE SERIOUS INJURY OR DEATH.
 ENSURE SERVICE COVERS, CHAIN/BELT COVERS AND CLEAN-OUT DOOR ARE IN PLACE AND SECURELY FASTENED BEFORE OPERATING UNIT.
- UNHITCHING A LOADED CART CAN CAUSE SERIOUS INJURY OR DEATH DUE TO TONGUE RISING OR FALLING. ALWAYS HAVE A LOADED CART ATTACHED TO A TRACTOR. THE JACK IS INTENDED TO SUPPORT AN EMPTY CART ONLY.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER
 THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES
 AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY
 INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 2,000 LBS. SPECIFIC
 LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME
 IN THE INSTRUCTIONS.
- 1. Park the empty unit on a firm, level surface. Block tractor and machine to keep it from moving. Set the tractor parking brake, shut off the engine and remove the ignition key. Completely disconnect the PTO from the cart and tractor.
- 2. Attach hydraulic jack hoses to tractor SCV.
- Open valve and lower jack leg to ground. DO NOT raise tongue.




- 4. Relieve pressure on hydraulic jack circuit. See tractor operator manual for procedure.
- 5. Close valve.
- Support the hydraulic jack assembly with a safe lifting device rated for a minimum of 100 lbs.
- Remove hydraulic jack hoses from tractor SCV.
- 8. Remove cylinder pin (272587) and snap rings (91192) from the base end of the cylinder at the lug on top of the tongue. (FIG. 4-60)

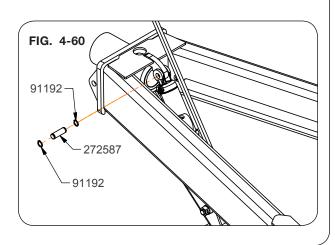


Hydraulic Jack Cylinder Replacement (continued)

- Remove two 7/8"-9UNC x 2 1/4" capscrews (9390-165) and 7/8" lock washers (9404-037) from mounting bracket (273808B). (FIG. 4-61)
- 10. Remove hydraulic jack assembly from the tongue. (FIG. 4-61)

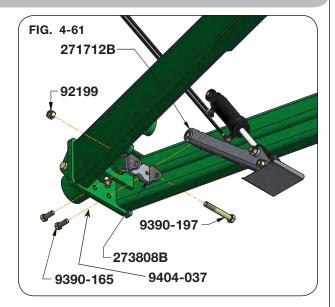

- 11. On new hydraulic assembly (294143B), attach hoses (9006068) and fittings to cylinder (9009047) as shown in FIG. 4-62. The valve needs to be assembled to the hose on the base end of the cylinder. Assemble the fittings on the cylinder so they face each other, then store the hydraulic hoses on the hose caddy.
- 12. To reassemble hydraulic jack, see "Install Hydraulic Jack (Optional)" in SET UP section.

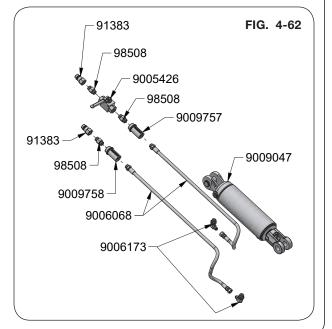

Seasonal Storage

Always open and keep open the flow door, horizontal and vertical auger cleanout doors to remove any remaining grain and to allow moisture to dry.

Wash machine inside and out before storing to remove dirt and debris that can draw and collect moisture. When using pressure washers maintain an adequate distance so not to force water into bearings.

Lubricate machine at all points outlined.

Repaint all areas where paint has been removed to keep from rust developing. Rust will affect grain flow.

Coat exposed cylinder piston rods with rust preventative material if applicable.

Inspect machine for parts that may need to be replaced so they may be ordered in the off season.



If unit is equipped with a scale indicator or electric hydraulic controls, store these indoors in a dry location.

Close the tarp to keep debris out of the hopper.

Ensure rear access door is closed and latched and that all ladders are in storage position.

Troubleshooting

Problem	Possible Cause	Corrective Action	
No Electric Over Hydraulic (EOH) Functions work	Not getting 12 Volt power supply to the power harness in the tractor	Check the connections to the main power harness in the tractor cab, and check the 5 AMP fuse in the fuse holder of the main power harness. Replace fuse if necessary. Make sure the joystick and 7-pin connector are plugged into the same power source. If plugged into different power sources, the spout rotate and auger fold functions WILL NOT operate properly.	
	Not getting good connection at Deutch connectors in the harnesses	Unplug the Deutsch connectors at the hitch point and in the extension harness (if used). Clean up the connectors with electrical contact cleaner. Make sure the connectors are aligned correctly and re-connect them.	
	Not pressurizing the correct hydraulic hose	Make sure the quick couplers are properly connected to the tractor SCV and the Hydraulic Pressure line is being pressurized when engaging the tractor SCV.	
Auger unfolds part way and stops	Debris in the EOH block on the auger fold cylinder	Fold auger, remove the coil and the cartridge valve on the EOH valve block. Remove any debris and reinstall cartridge and coil.	
Auger lights will not function	7 pin connector is not plugged into tractor.	Plug in 7 pin connector to same power source as the 5 function controller.	
(For SN B45790100 and Higher)	Proximity Switch at the auger hinge is not getting Power or Ground.	Check power and ground to the proximity switch harness on the vertical auger. Make sure the center pin on the 7 pin plug has +12V key switch power.	
Rotating spout will not function (For SN B45790099 and Lower) Proximity switch located at the hing plate is not adjusted correctly.		This proximity switch has a 1/4" effective operating range. The upper auger hinge plate needs to be within that range when it is unfolded in to the operating position. Adjust the proximity switch in or out in order for the sensor to activate when it is in the operating position.	
One single function will not work	Defective coil on the EOH valve for that function	Loosen the cap for the coils associated with that function on the EOH valve. Depress the button on the remote, and determine if the coils are getting magnetized. Inspect the wiring connectors to these coils, and replace the coil if necessary.	
	Defective valve on the EOH valve for that function	Remove the coil and the cartridge valve on the EOH valve block for that function. Replace the valve if it doesn't operate when the coil is magnetized.	
	Debris in the EOH block at the base of the vertical auger	Remove the coil and the cartridge valve on the EOH valve block. Remove any debris and reinstall cartridge and coil.	
Functions continue to operate after the button on the remote	Tractor hydraulic flow is set too high	Turn tractor hydraulic flow down so that flow doesn't exceed 6 gallons per minute.	
is released	Defective valve on the EOH valve for that function	Remove the Coil and the cartridge valve on the EOH valve block for that function, and replace the cartridge.	

Tarp Troubleshooting Inspection & Maintenance

PROBLEM	SOLUTION	
TARP SAGS IN MIDDLE AREAS	1. BOWS MAY BE BENT OR ADJUSTED TOO LOW	
	2. MISSING OR LOOSE RIDGE STRAP REPLACE OR RETIGHTEN	
	3. TENSION MAY BE TOO LOOSE. U-JOINT MAY NEED TO BE ADJUSTED ON SPLINED SHAFT TO PROVIDE MORE TENSION	
HOLES OR TEARS IN TARP	1. CONSULT YOUR LOCAL DEALER FOR REPAIRS	
	2. ORDER TARP REPAIR KIT FROM DEALER	
	3. WHEN NEW TARP OR PARTS ARE NEEDED ALWAYS REPLACE WITH ORIGINAL PARTS	

Inspection and Maintenance

A WARNING

- TO PREVENT PERSONAL INJURY OR DEATH, DO NOT ALLOW ANYONE ON A CLOSED TARP. TARP SYSTEM IS NOT DESIGNED TO SUPPORT A PERSON.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. REMOVE ACCUMULATED WATER/SNOW/ICE OR ANY OTHER OBJECTS FROM TARP BEFORE OPENING TARP.

IMPORTANT

- Do not open or close tarp while moving or in high wind conditions. Damage to the tarp may occur.
- Tarp should not be used if it is torn or the bungee cords are frayed or show damage. Fully close tarp with tension on the latch plate to prevent water from pooling.

Periodic preventive maintenance should be practiced. Inspect tarp and hardware often for abrasions or loosened bolts that may need adjustment and/or repair. Check bungee cords for wear and adjust tension at the beginning of the season and again half way through the season.

Tears in tarp should addressed before further tarp operation. If water pools on tarp, adjust tension of tarp cables and/or arm springs.

If installed correctly, tarp should always operate as well as when first installed. If tarp does not pass this simple inspection, make all appropriate repairs or adjustments immediately before serious damage occurs.


Auger Switch Troubleshooting

Auger Fold, Unfold & Auger Lights Switch

NOTE: For SN B45790100 and higher, the switch near the auger hinge pin controls the power and ground for the auger lights.

NOTE: For SN B45790099 and lower, the switch controls the power and ground for the auger fold, unfold and auger lights.

The switch at the hinge pin should be adjusted so there is 1/8" gap below the lower auger hinge plate. To maintain the 1/8" gap, adjust the hinges on the upper auger or by turning the switch in or out until the 1/8" gap is achieved. (Fig. 4-64)

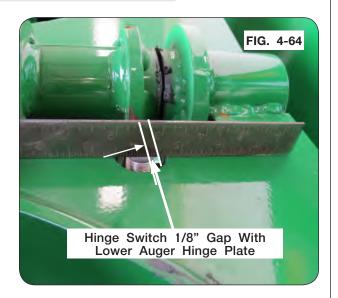

Electrical System Diagram — Plug #92450

GRAIN CART WIRES

White -- Ground

Green -- Right Amber Flashing Lamp Yellow -- Left Amber Flashing Lamp

Brown -- Amber Clearance and


Red Tail Lights (Low Filament)


Red -- Red Brake Lights (High Filament)


Black -- Work Lights
Blue -- NOT USED


Black - Work Lights
Green - RH Turn
Yellow - LH Turn
Brown - Tail
White - Ground
Red - Brake


Black
White
Brown
Blue
Green
Yellow
Red

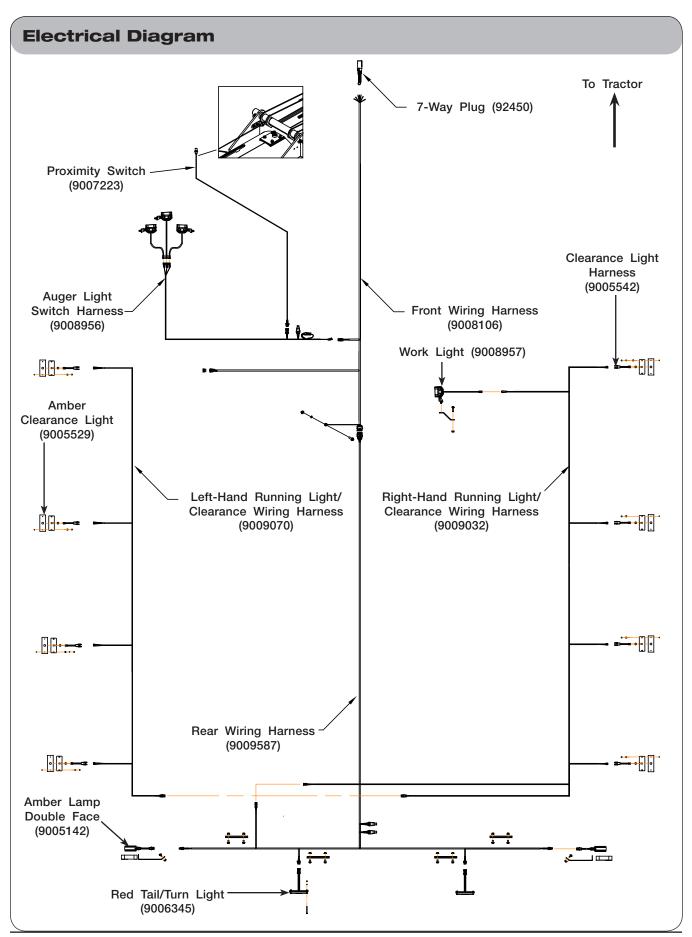


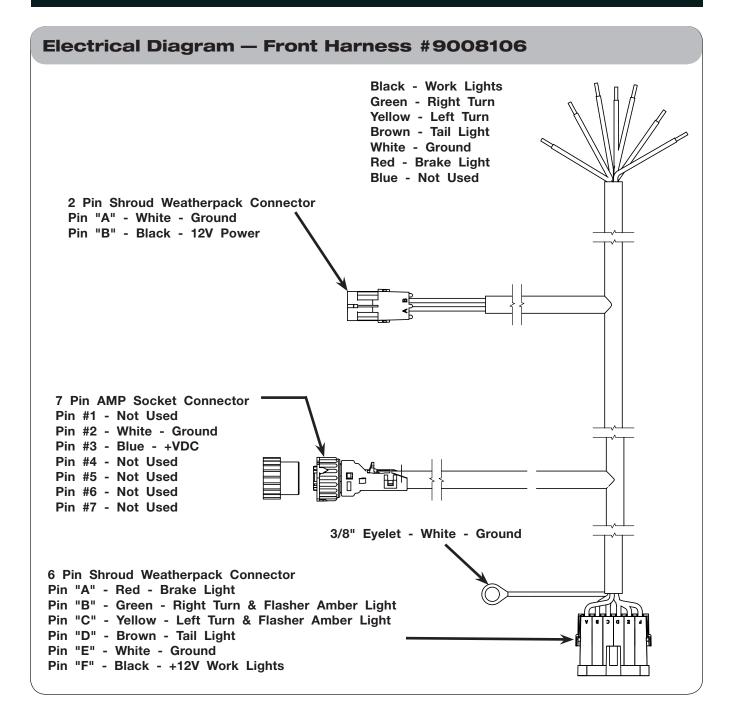


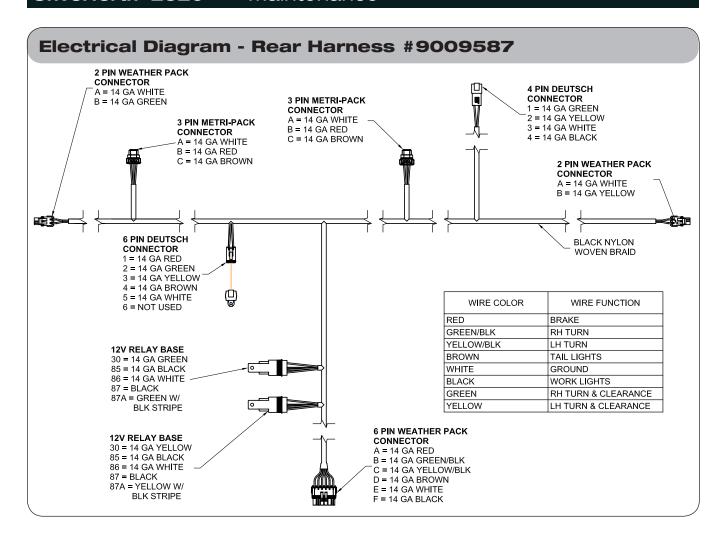

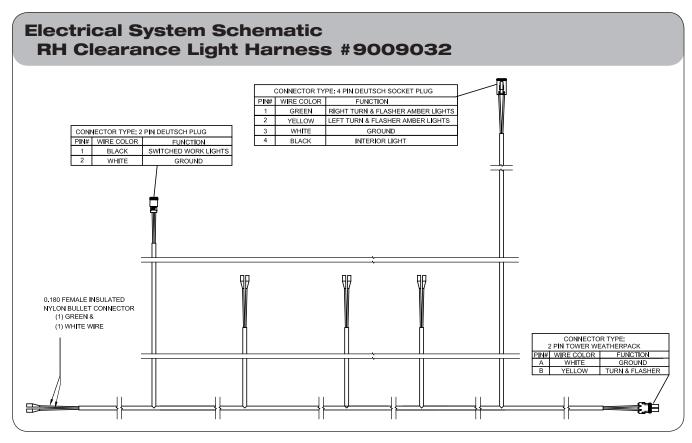


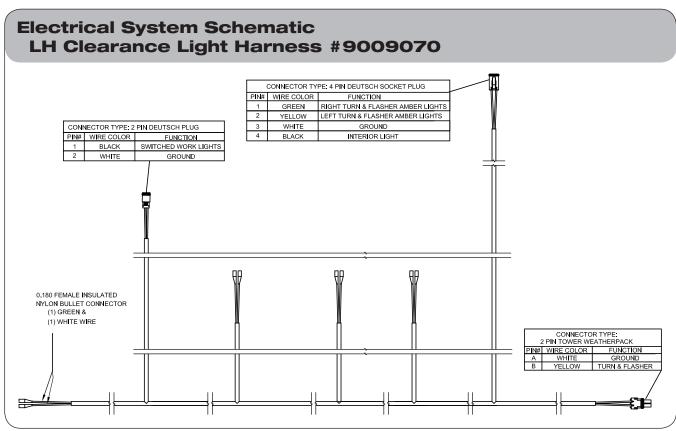


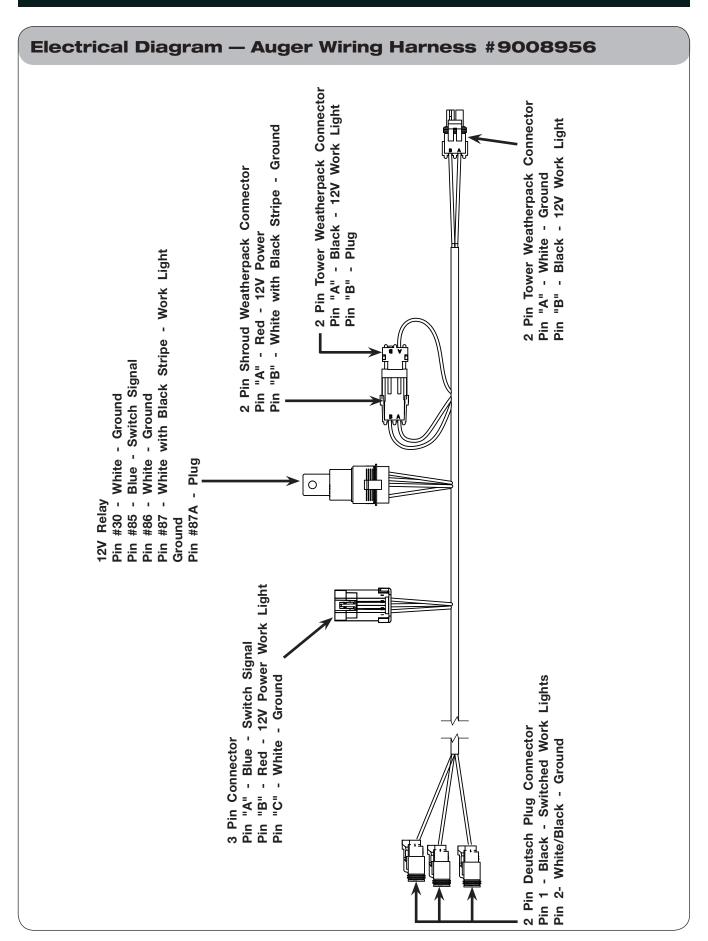


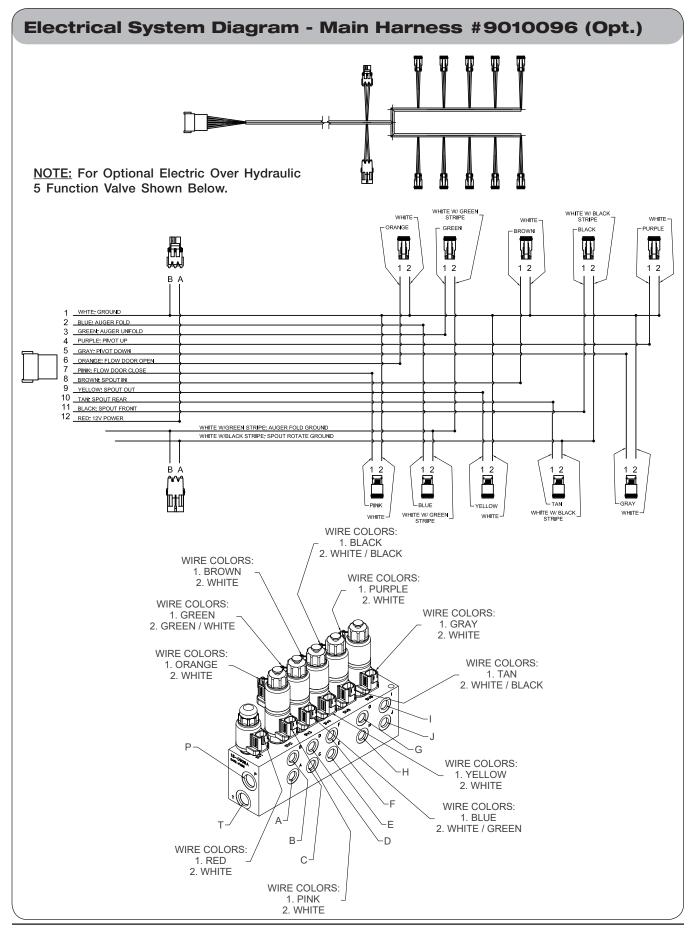



3 Pin Female Connector Pin "A" - Black - Signal Pin "B" - Brown - +12V DC Pin "C" - Blue - Ground

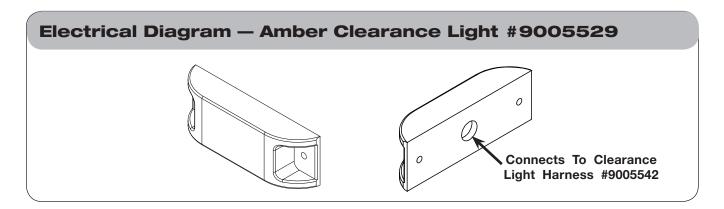


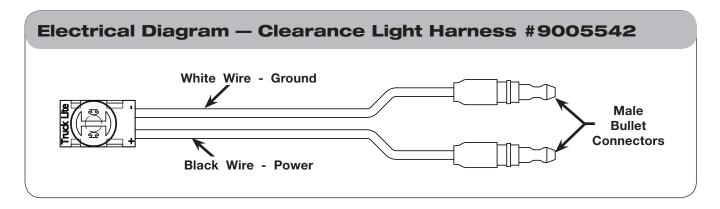


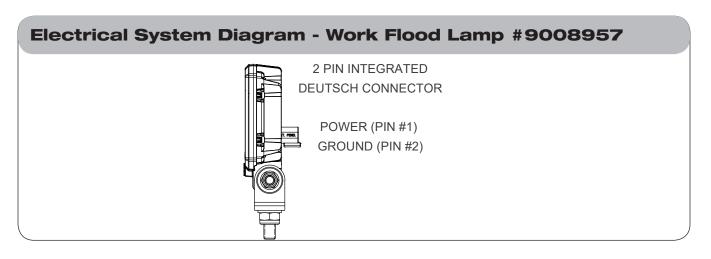


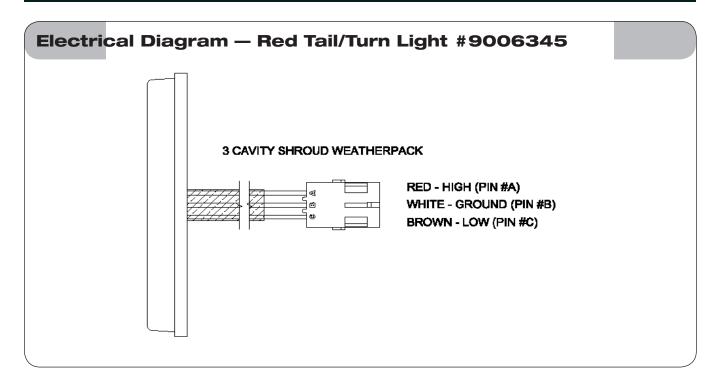

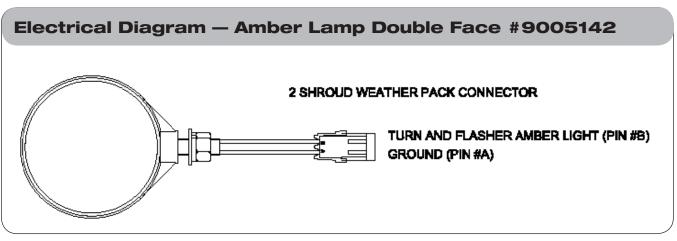


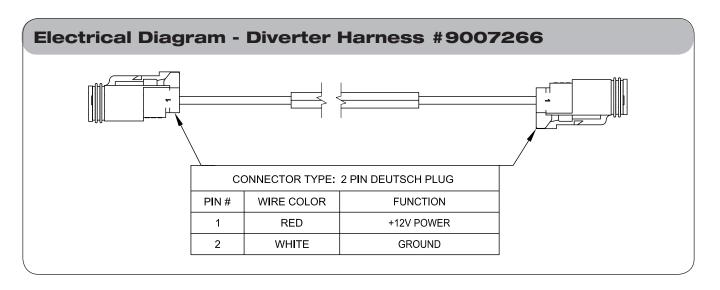

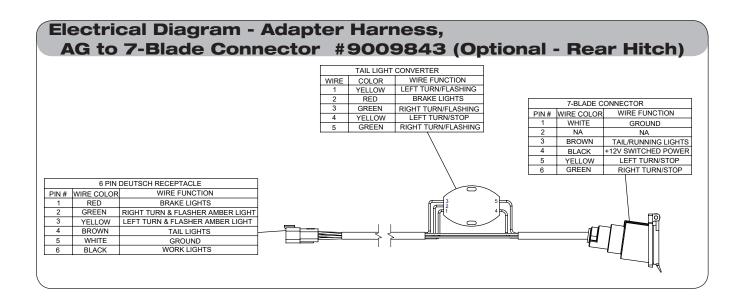


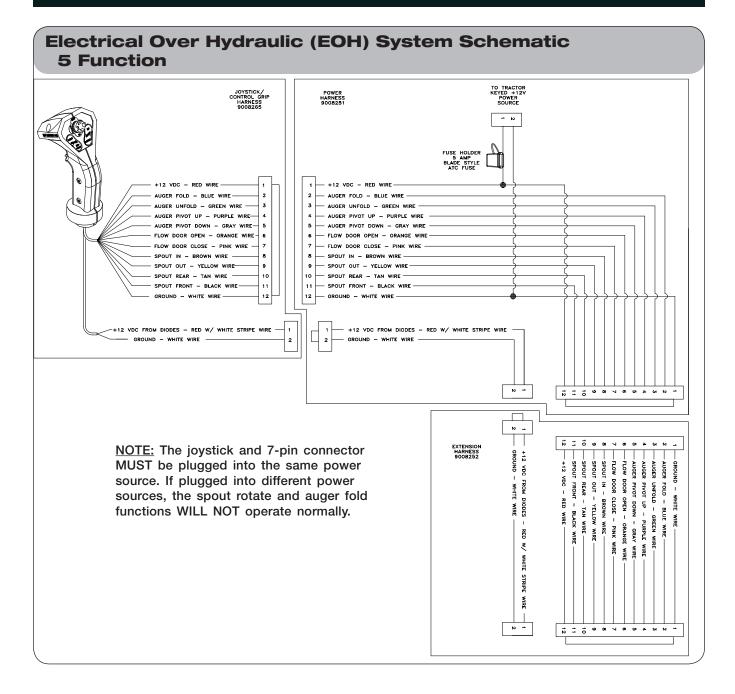

Electric Over Hydraulic Valve Electric Schematic 5 Function

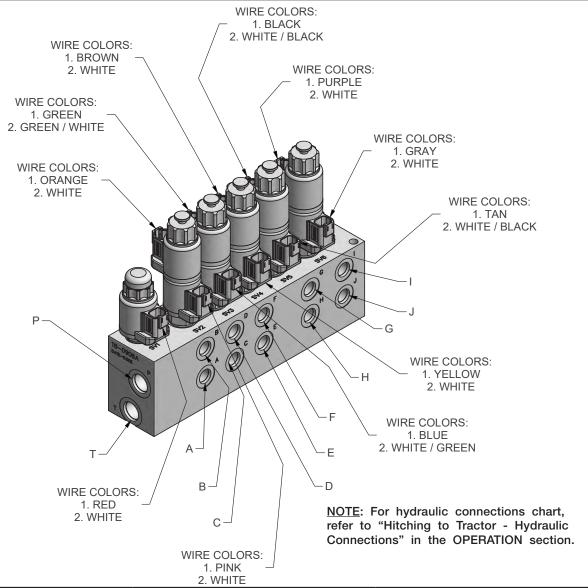

PORT	END OF CYLINDER	FUNCTION
Α	BUTT END	FLOW DOOR CLOSE
В	RAM END	FLOW DOOR OPEN
С	RAM END	AUGER UNFOLD
D	BUTT END	AUGER FOLD
E	RAM END	SPOUT TILT OUT
F	BUTT END	SPOUT TILT IN
G	BUTT END	JOYSTICK / SPOUT ROTATE
Н	RAM END	JOYSTICK / SPOUT ROTATE
I	BUTT END	AUGER PIVOT DOWN
J	RAM END	AUGER PIVOT UP
Р		JOYSTICK / TRACTOR PRESSURE
Т		JOYSTICK / TRACTOR RETURN

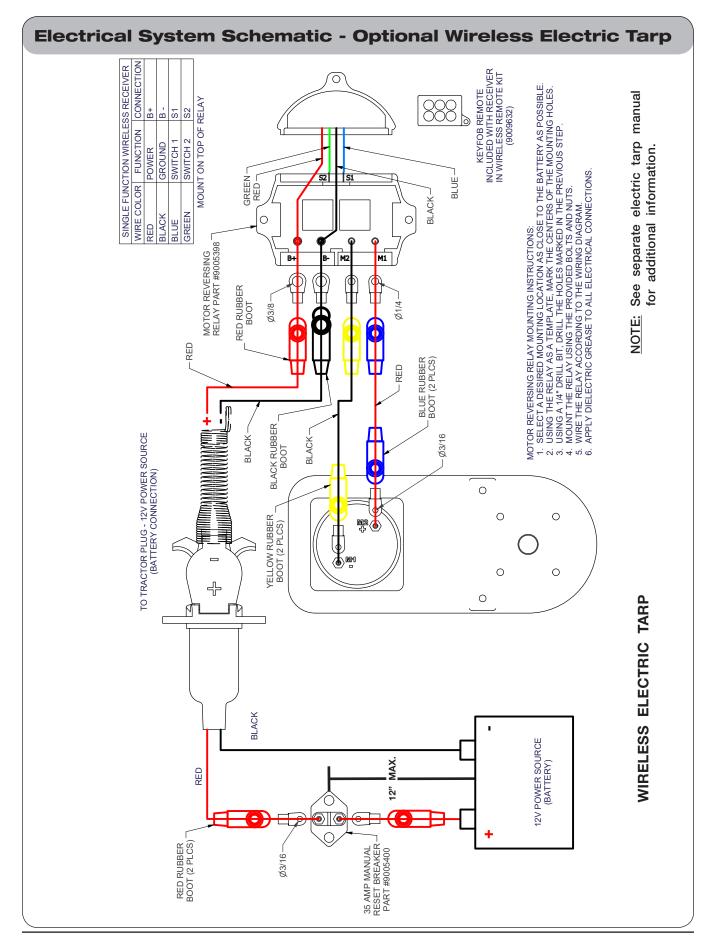

Complete Torque Chart

Capscrews - Grade 5

NOTE:

- Grade 5 capscrews can be identified by three radial dashes on the head.

- For wheel torque requirements, refer to Wheels and Tires.
- Tighten U-bolts evenly and equally to have the same number of threads exposed on each end.

SIZE	FOOT POUNDS	NEWTON METERS
1/4-20	8-10	11-13
1/4-28	9-11	12-15
5/16-18	15-17	20-23
5/16-24	17-19	23-26
3/8-16	25-28	34-38
3/8-24	28-31	38-42
7/16-14	40-45	54-61
7/16-20	45-50	61-68
1/2-13	62-68	84-92
1/2-20	68-75	92-102
9/16-12	90-98	122-133
9/16-18	100-110	134-148
5/8-11	120-135	162-183
5/8-18	124-137	168-186
3/4-10	200-220	270-300
3/4-16	210-230	285-310
7/8-9	330-350	425-475
7/8-14	360-380	460-515
1-8	500-525	675-710
1-14	540-560	730-760
1 1/8-7	600-635	815-860
1 1/8-12	665-700	920-950
1 1/4-7	850-895	1150-1215
1 1/4-12	940-990	1275-1340
1 3/8-6	1125-1175	1525-1590
1 3/8-12	1280-1335	1735-1810
1 1/2-6	1500-1560	2035-2115
1 1/2-12	1685-1755	2285-2380

IMPORTANT

• Follow these torque recommendations except when specified in text.

Complete Torque Chart

Capscrews - Grade 8

NOTE:

- Grade 8 capscrews can be identified by six radial dashes on the head.
- · For wheel torque requirements, refer to Wheels and Tires.
- Tighten U-bolts evenly and equally to have the same number of threads exposed on each end.

SIZE	FOOT POUNDS	NEWTON METERS
5/16-18	20-22	27-30
5/16-24	21-23	28-31
3/8-16	35-39	47-53
3/8-24	36-41	49-55
7/16-14	54-58	73-78
7/16-20	55-60	75-80
1/2-13	82-88	110-120
1/2-20	94-99	125-135
9/16-12	127-134	170-180
9/16-18	147-155	199-210
5/8-11	160-170	215-230
5/8-18	165-175	225-235
3/4-10	280-295	380-400
3/4-16	330-365	445-495
7/8-9	410-430	555-580
7/8-14	420-440	570-595
1-8	630-650	850-880
1-14	680-700	920-950
1 1/8-7	900-930	1220-1260
1 1/8-12	930-950	1260-1290
1 1/4-7	1250-1300	1695-1760
1 1/4-12	1280-1320	1735-1790

IMPORTANT

Follow these torque recommendations except when specified in text.



Hydraulic Fittings - Torque and Installation

A WARNING

- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WARN WHILE SERVICING THE IMPLEMENT.
- HIGH-PRESSURE FLUIDS CAN PENETRATE THE SKIN AND CAUSE SERIOUS INJURY OR DEATH. LEAKS OF HIGH-PRESSURE FLUIDS MAY NOT BE VIS-IBLE. USE CARDBOARD OR WOOD TO DETECT LEAKS IN THE HYDRAULIC SYSTEM. SEEK MEDICAL TREATMENT IMMEDIATELY IF INJURED BY HIGH-PRESSURE FLUIDS.



- HYDRAULIC SYSTEM MUST BE PURGED OF AIR BEFORE OPERATING TO PREVENT SERIOUS INJURY OR DEATH.
- RELIEVE HYDRAULIC SYSTEM OF ALL PRESSURE BEFORE ADJUSTING OR SERVICING. SEE TRACTOR OPERATOR'S MANUAL FOR PROPER PROCEDURES.


Tightening O-Ring Fittings

- Inspect components for damage or contamination. Do not connect any other type of fitting to an O-ring fitting.
- 2. For adjustable fittings, ensure the jam nut and washer are fully backed up.
- 3. Lubricate the O-ring and threads on the fitting.
- 4. Turn the fitting into the port until it is finger tight.
- 5. For adjustable fittings, set in the desired position.
- 6. Using a wrench, torque the fitting to the value in the below table. For adjustable fittings the jam nut will be tightened.

NOTE: Never use a power tool to install a fitting.

Never use a power toor to install a litting.			
Dash Size	Thread Size	Straight Stud Torque (Ft-Lbs)	Adjustable Stud Torque (Ft-Lbs)
-5	1/2-20	14-19	10-14
-6	9/16-18	18-24	12-16
-8	3/4-16	27-43	20-30
-10	7/8-14	36-48	30-36
-12	1-1/16-12	65-75	44-54
-14	1-3/16-12	75-99	53-70
-16	1-5/16-12	85-123	59-80
-20	1-5/8"-12	115-161	75-100
-24	1-7/8"-12	125-170	105-125



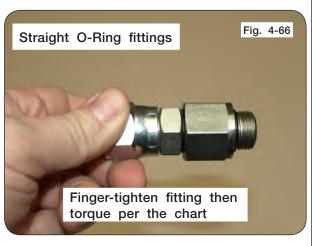

Hydraulic Fittings - Torque and Installation

Tightening JIC Fittings

- Inspect all components for damage or contamination. Do not connect any other type of fitting to a JIC fitting.
- 2. Lubricate the threads.
- 3. Turn the fitting into the port until it bottoms out.
- Use one wrench on the fixed hex on the hose to prevent twisting and a second on the swivel. Tighten the fitting another 60 degrees (or one flat)

NOTE: Never use a power tool to install a fitting.





Section V Parts


Please visit www.unverferth.com/parts/ for the most current parts listing.

Decals	
Touch Up Paint	
Front End Components	
Side Ladder Components	
Rear Ladder Components	
Rear Access Door Components	5-11
Hopper Cross Brace Components	
Clean Out Door Components	
Side Door Components	5-16
Track Axle Mounting Components	
Hopper Flow Door Components	
Front Flow Door Components	
Middle Flow Door Components	
Rear Flow Door Components	
Flow Door Indicator Assembly	
Vertical Auger Components	
Horizontal Auger Components	
Lower Auger Cleanout Door and Cover Components	
Lower Auger Shields, Pulleys, Bearings, and Belts	
Idler Assembly Components	
Lower Auger Retainer Components	
Auger Fold Linkage Components	5-40
Downspout Components	
Cut Out Clutch PTO Assembly	
Cut Out Clutch Assembly	
PTO and Bracket Assembly	
Gearbox Components	
Electric Over Hydraulic Valve Functions and Wire Locations 5 Spool	
Electric Over Hydraulic (EOH) Valve Assembly Components 5 Spool	
EOH Tractor Circuit Hydraulic Components	
Flow Door Hydraulic Circuit Components	
Auger Pivot Hydraulic Components	
Auger Fold Hydraulic Components	
EOH Spout Rotate Hydraulic Components	
EOH Spout Tilt Hydraulic Components	
Hydraulic Cylinders	
Electrical Components - 5 Function Control Grip	
Weather Guard Tarp Components	
Rear Drop Hitch Components	
Hydraulic Jack Components	
Video System Components	5-72

FOR SCALE, TRACK, UHARVEST, ELECTRIC TARP, AND / OR WATER DELIVERY SYSTEM INFORMATION, PLEASE REFER TO THE INDIVIDUAL MANUALS.


Decals

Please visit www.unverferth.com/parts/ for the most current parts listing.

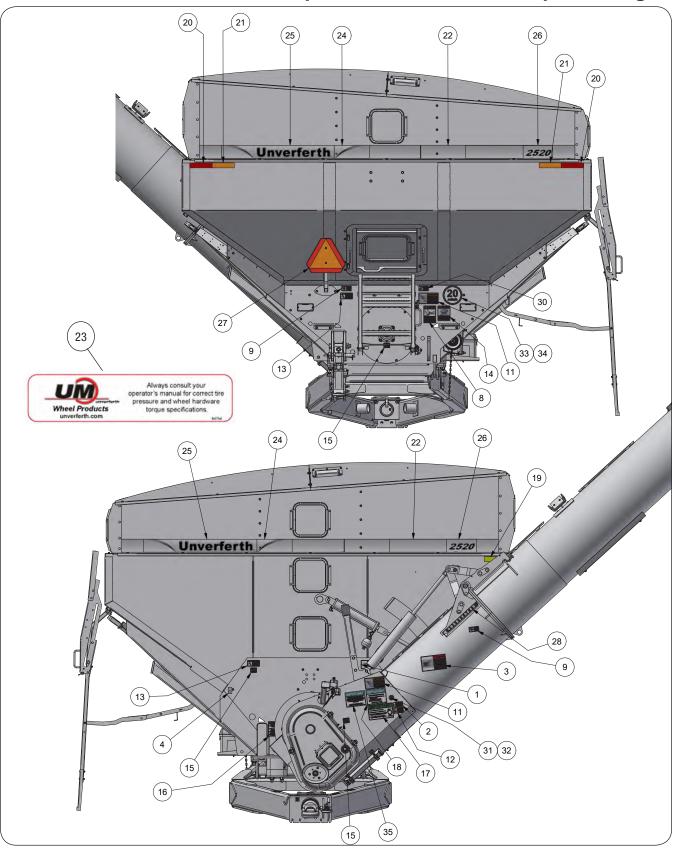

Decals (continued)

Please visit www.unverferth.com/parts/ for the most current parts listing.

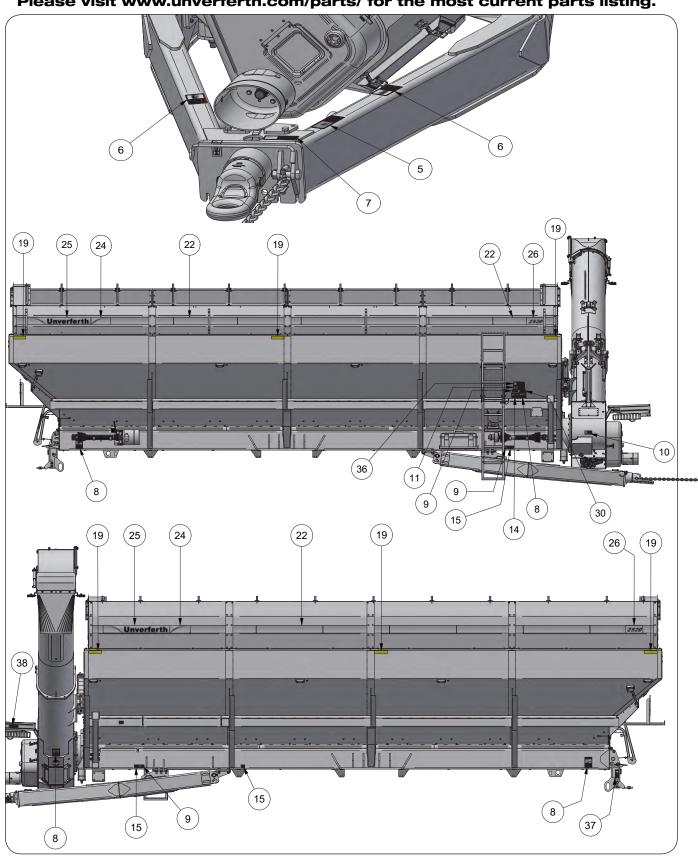


Unverferth 2520 — Parts

Decals (continued)


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	900024	Decal, WARNING (High Pressure Oil)	1	
2	97961	Decal, WARNING (Read Manual)	1	
3	9003474	Decal, DANGER (Electrical Lines)	1	
4	91605	Decal, FEMA	1	
5	94094	Decal, WARNING (Tongue Rise)	1	
6	95046	Decal, DANGER (Entanglement)	2	
7	97575	Decal, CAUTION (Transport Chains)	1	
8	9003475	Decal, DANGER (Cut & Crush)	4	
9	95839	Decal, WARNING (Pinch Point)	5	
10	95445	Decal, DANGER (Do Not Use Hands)	1	
11	9003476	Decal, WARNING (No Riders)	2	
12	TA1-906109-0	Decal, WARNING (Moving Parts Crush/Cut)	1	
13	98229	Det		<u></u>
14	9003478	Fix Numberir	חח	
15	9008947	Det I IX I VIII II DOI II	19	
16	9005971	Dec		
17	9003477	Dec		
18	9004966	Decal, IMPORTANT (Cart Loading)	1	
19	9003127	Reflector 2" x 9" =AMBER=	8	
20	9003126	Reflector 2" x 9" =RED=	2	
21	9003125	Decal, 2" x 9" =FLUORESCENT=	2	
22	9004035	Decal, Stripe	24	
23	94754	Decal, UM Wheel Systems	1	
24	9004213	Decal, Unverferth Logo Tail	4	
25	9004298	Decal, Unverferth Logo	4	
26	9009977	Decal, 2520	4	
27	TA510514	SMV Emblem	1	
28	9006601	Decal, Flow Control Indicator	1	
30	95008	Decal, CAUTION (Slippery Surface)	1	
31	9008715	Decal, Front SIS 20 MPH	1	
32	9008721	Decal, Front SIS 30 KPH	1	
33	9008714	Decal, Rear SIS 20 MPH	1	
34	9008720	Decal, Rear SIS 30 KPH	1	
35	9008151	Decal, IMPORTANT (PTO Engagement)	1	
36	9009168	Decal, WARNING (Ladder Lock Pin)	1	
37	9009646	Decal, WARNING (Towing Capacity)	1	
38	9010000	Hose Legend Decal	1	

Touch-Up Paint

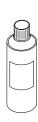

PAINT	SPRAY	
Black	97013	
Green	97015	
Red	97301	
Primer, Gray	9500082	
Silver Mist	97012	

Front End Components

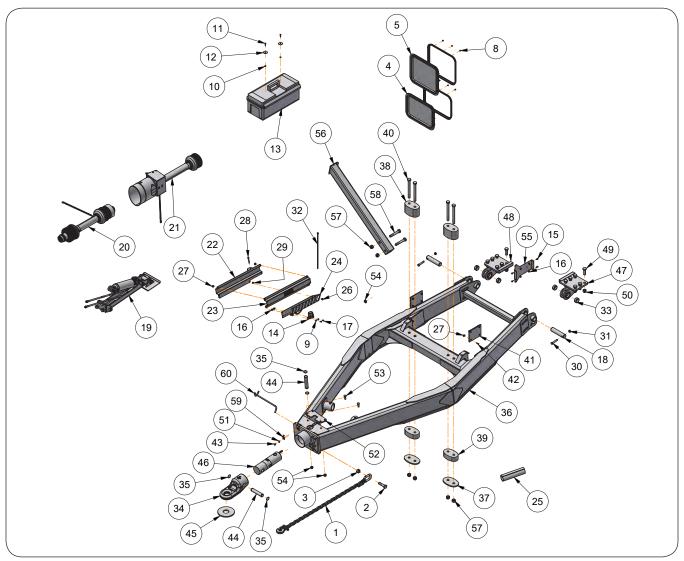


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9004898	Transport Chain 41,000#	1	Standard
1	PF1238-19	Transport Chain 61.000#	1	Replaces Standard Grain Cart Transport Chain If Equipped With Optional Rear Hitch
2	91299-191	Capscrew 1"-8UNC x 4" Grade 8	1	
3	92199	Locknut 1"-8UNC	1	
4	9007875	Window Trim	3	
5	9002544	Window	3	
6	9390-005	Capscrew 1/4"-20UNC x 1" Grade 5	4	
7	294121B	Window Bracket =Black=	2	(Rear Slope Only)
8	9008933	Pan Head Phillips Screw 8"-18UNC x 1/2"	36	
9	9405-064	Flat Washer 1/4"	4	
10	9936	Locknut 1/4"-20UNC	6	
11	9390-006	Capscrew 1/4"-20UNC x 1 1/4" Grade 5	2	
12	94763	Fender Washer 2"	2	
13	9008634	Toolbox - 26"	1	
14	9001968	Trailer Connector Holder	1	
15	97420	Flange Screw 1/4"-20UNC x 3/4" Grade 5	4	
16	97189	Flange Hex Nut 1/4"-20UNC	6	
17	9390-003	Capscrew 1/4"-20UNC x 3/4" Grade 5	2	
18	276335	Tongue Pin 2" Dia. x 8 7/8"	2	

Front End Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
19	276645B	Hydraulic Jack Kit (Black)	1	
20	9008417	Driveline Assembly Complete	1	1 3/4-20 Spline, W2500
21	276629B	PTO & Bracket Assembly (Black)	1	
22	295799B	Hose Caddy Weldment =Black=	1	
23	294085B	Hose Caddy Cover =Black=	1	
24	296159	Hose Retainer	1	
25	9003849	Hose Wrap 3"	1	Specify in Feet
26	91256	Capscrew 5/16"-18UNC x 3/4" Grade 5	6	opposity in 1 doc
27	91257	Flange Nut 5/16"-18UNC	14	
28	9390-062	Capscrew 3/8"-16UNC x 2 3/4"	1	
29	902875	Lock Nut/Ctr 3/8"-16UNC	1	
30	9390-130	Capscrew 5/8"-11UNC x 3 1/2" Grade 5	2	
31	95905	Lock Nut/Ctr 5/8"-11UNC	2	
32	9000104	Cable Tie, 21 1/2"	A/R	
33	9005473	Split Tension Bushing 2 3/8" OD x 2" ID x 1"	4	
34	282337B	Cast Hitch 4.5" Load Bar =Black= CAT 5	1	
35	97289	Retaining Ring 1 1/2"	4	
36	276310G	Tongue Weldment =Green=	1	
	276310R	Tongue Weldment =Red=		
37	271687B	Spring Retainer Plate =Black=	2	
38	9006456	Polyurethane Spring 4 3/4" Thick	2	
39	9006457	Polyurethane Spring 2 1/2" Thick	2	
40	9390-465	Capscrew 1"-8UNC x 10 1/2" Grade 5	4	
41	273237	Nylon Wear Pad	2	
42	903171-662	Screw Flat Screw Head Phillips 5/16"-18UNC x 1 1/4"	8	
43	903172-131	Pan Head Phillips Machine Screw #10-24UNC x 3/8"	2	
44	274864	Hitch Pin 1 1/2" Dia. x 7 3/8"	2	
45	281899	Wearshoe - Hitch, CAT 5	1	
46	9008023	Load Bar 4 1/2" Dia. with 16 ft. Cable CAT 5	1	
47	274818G	Tongue Pivot Weldment Left-Hand =Green=	1	
	274818R	Tongue Pivot Weldment Left-Hand =Red=	<u> </u>	
48	274819G	Tongue Pivot Weldment Right-Hand = Green=	1	
40	274819R 9390-409	Tonque Pivot Weldment Right-Hand =Red= Capscrew 1"-14UNS x 3" Grade 5	12	
49 50	9008441	Elastic Lock Nut 1"-14UNS	12	
	9100441	Star Washer #10-3/16" Dia.	2	
51 52	277012B		1	
52		Adapter Plate =Black=	2	
53 54	9390-123 9009602	Capscrew 5/8"-11UNC x 3/4" Grade 5 Rubber Grommet, 1 3/8" OD x 3/4" ID	1	
55	289382B	GCM Mounting Bracket =Black=	1	
56	276748B	Stand Weldment =Black=	2	
		Locknut 1"-8UNC	8	
57	9398-026			
58	9390-195	Capscrew 1"-8UNC x 6" Grade 5	4	
59	9009652	Snap Down Latch (SS)	1	
60	295880	Driveline Storage Rod	1	


Side Ladder Components

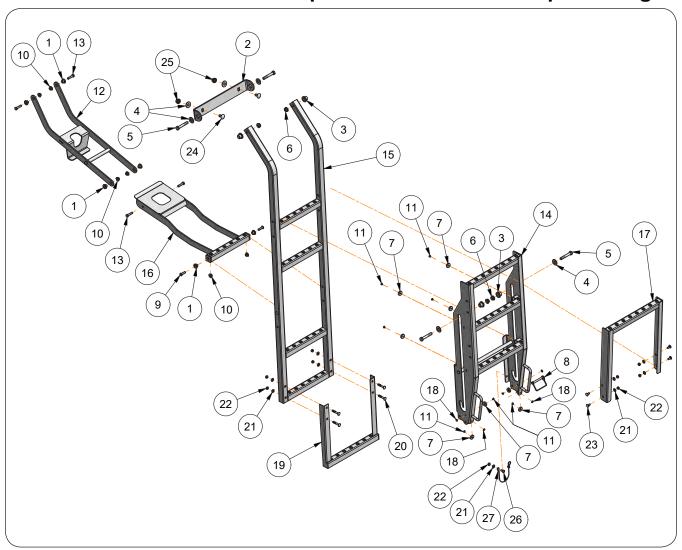

Side Ladder Components


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	2003029	Nylon Bushing, .625" OD x .406" ID x .380"	6	
2	289294B	Plate-Bracket, Ladder =Black=	1	
3	2003030	Nylon Bushing, .875" OD x .531" ID x .563"	4	
4	9405-088	Flat Washer, 1/2" USS	6	
5	9390-107	Capscrew, 1/2"-13UNC x 3" G5	4	
6	9003397	Lock Nut/Top, 1/2"-13UNC	4	
7	TA620384	Plastic Stop, 1" Dia. x .250"	8	
8	9005305	Lynch Pin 3/8" Dia. x 3"	1	
9	99985	Button Head Socket, 3/8"-16UNC x 1 1/4"	2	
10	9008159	Lock Nut/Top, 3/8"-16UNC	6	
11	9003503	Rivet 3/16" X 1/4"	8	
12	289717B	Ladder Link Weldment =Black=	1	
13	9390-057	Capscrew, 3/8"-16UNC x 1 1/2" G5	4	
14	289328B	Ladder Extension Weldment =Black=	1	
15	289326B	Ladder Weldment =Black=	1	
16	289280B	Step Weldment =Black=	1	
17	289707B	Ladder Extension Weldment =Black=	1	
18	9004998	Rivet Burr 3/16"	4	
19	289844B	Ladder Weldment =Black=	1	
20	9388-029	Carriage Bolt, 5/16"-18UNC x 2" G5	4	
21	9405-064	Flat Washer, 5/16" ID USS	9	
22	901527	Lock Nut/Center, 5/16"-18UNC	9	
23	9388-024	Carriage Bolt, 5/16"-18UNC x 3/4" G5	4	
24	9388-102	Carriage Bolt, 1/2"-13UNC x 1"	2	
25	91267	Flange Nut, 1/2"-13UNC	2	
26	9390-027	Capscrew, 5/16"-18UNC x 5/8" G5	1	
27	97879	Nylon Lanyard	1	

Rear Ladder Components

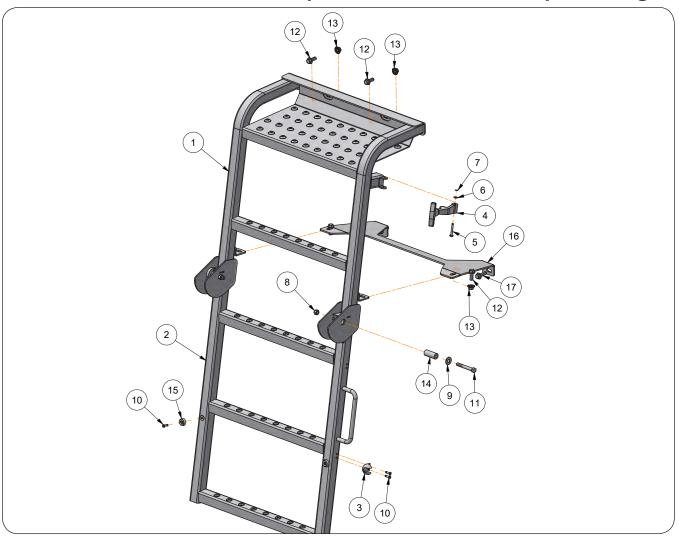


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	297804B	Upper Ladder Replacement Kit (Black)	1	Includes Upper Ladder, Items 3 and 10
2	297805B	Lower Ladder Replacement Kit (Black)	1	Includes Lower Ladder, Items 3 and 10
3	900059	Draw Latch Keeper	1	
4	900060	Draw Latch Handle	1	
5	900066	Pin 3/16" x 1 1/2"	1	
6	900067	Washer 1/2"	1	
7	900068	E-Ring	1	
8	9928	Lock Nut 3/8-16UNC"	2	
9	9405-076	Flat Washer 3/8" USS	2	
10	TA0-908386-0	3/16" Stainless Rivet	4	
11	9390-062	Capscrew 3/8"-16UNC x 2 3/4" Grade 5	2	
12	91262	Flange Screw 3/8"-16UNC x 1" Grade 5	4	
13	91263	Flange Nut 3/8"-16UNC	4	
14	295137	Pivot Bushing	2	
15	9003850	Bumper	2	
16	296586B	Ladder Bolt Plate =Black=	1	
17	9003259	Flange Screw 3/8"-16UNC x 1 1/4" Grade 5	2	

Rear Access Door Components

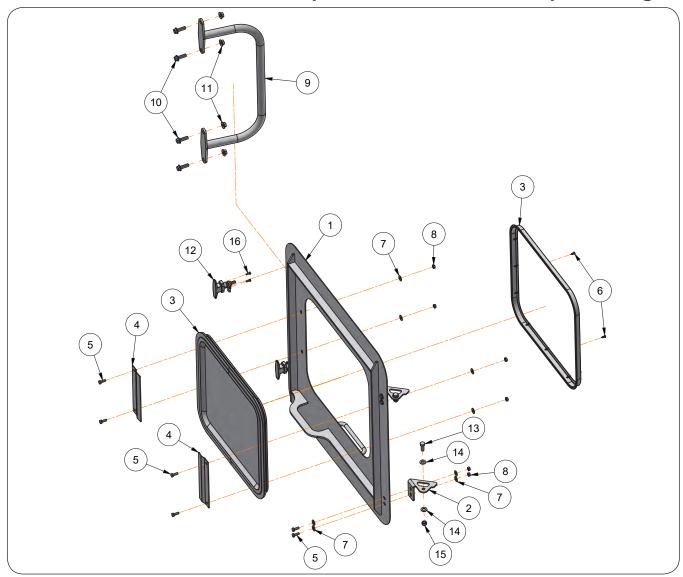

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	256527R	Rear Access Door Weldment =Red=	4	
1	256527G	Rear Access Door Weldment =Green=	1	
2	256670B	Rear Access Door Hinge =Black=	2	
3	9008680	Window and Trim Assembly	1	
4	294121B	Window Bracket =Black=	2	
5	9390-003	Capscrew 1/4"-20UNC x 3/4" Grade 5	8	
6	9008933	Phillips Head Screw #8-18 x 1/2" (Self Threading)	12	Sheet Metal Screw
7	9405-064	Flat Washer 1/4" USS	8	
8	9936	Locknut 1/4"-20UNC	8	
9	296534B	Handle Weldment =Black=	1	
10	9003259	Flange Screw 3/8"-16UNC x 1 1/4" Grade 5	4	
11	9008159	Locknut 3/8"-16UNC	4	
12	9009768	Draw Latch	2	
13	9390-055	Capscrew 3/8"-16UNC x 1" Grade 5	2	
14	9405-074	Flat Washer 3/8"	4	
15	9928	Top Locknut 3/8"-16UNC	2	
16	94917-012	Capscrew M4-0.7 x 12 mm	4	

Hopper Cross Brace Components

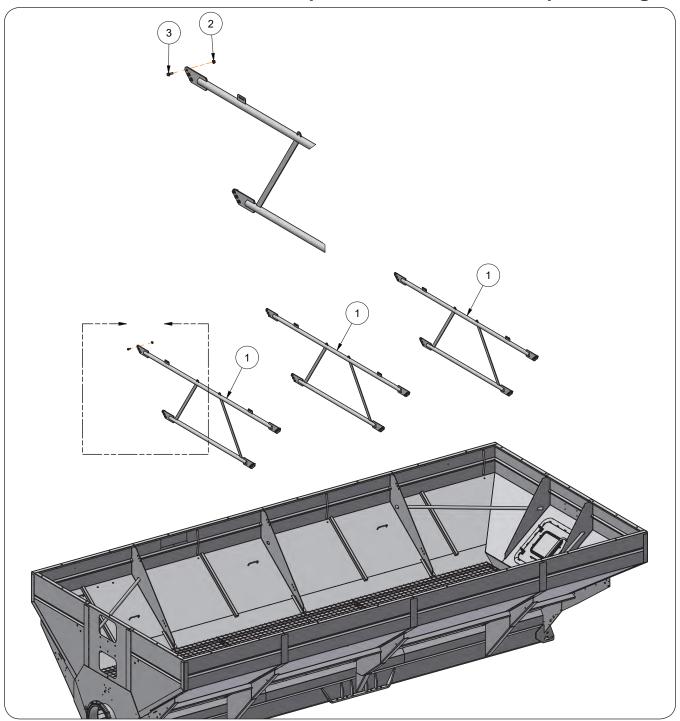


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	294359B	Cross Brace Weldment =Black=	3	
2	9003398	Top Lock Flange Nut 5/8"-11UNC	48	
3	903161-065	Flange Screw 5/8"-11UNC x 1 3/4"	48	

Unverferth 2520 — Parts

Notes


Clean Out Door Components

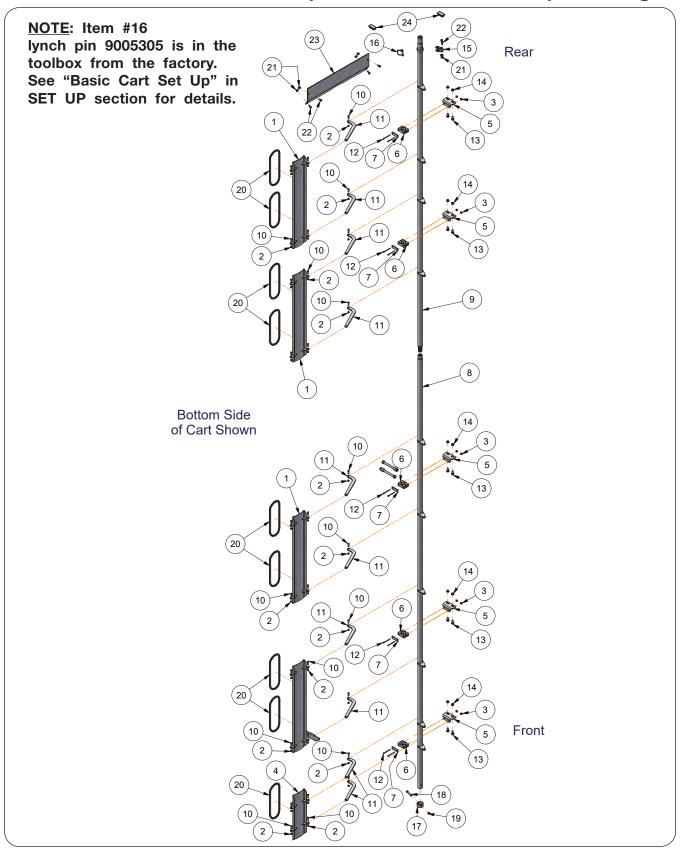

Clean Out Door Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	273730B	Cleanout Door Weldment =Black=	4	
2	9928	Locknut 3/8"-16UNC	30	
3	97189	Flange Hex Nut 1/4"-20UNC	10	
4	273748B	Cleanout Door Weldment =Black=	1	
5	273741B	Door Pivot Plate =Black=	5	
6	9006351	Clamp Pair	5	
7	9006352	Top Plate	5	
8	276295B	Front Link Arm Weldment =Black=	1	
9	276297B	Rear Link Arm Weldment =Black=	1	
10	9390-056	Capscrew 3/8"-16UNC x 1 1/4" Grade 5	30	
11	273734B	Door Linkage =Black=	10	
12	9390-015	Capscrew 1/4"-20UNC x 3 1/2" Grade 5	10	
13	91266	Flange Screw 1/2"-13UNC x 1 1/4" Grade 5	10	
14	91267	Flange Nut 1/2"-13UNC	10	
15	273753B	Door Latch Weldment =Black=	1	
16	9005305	Lynch Pin 3/8" Dia. x 3"	1	
17	271566B	Stop Bushing =Black=	1	
18	9390-108	Capscrew 1/2"-13UNC x 3 1/4" Grade 5	1	
19	94981	Locknut 1/2"-13UNC	1	
20	9007108	Gasket w/Adhesive Backing for Clean-Out Door	AR	Specify in Feet
21	91263	Flange Nut 3/8"-16UNC	6	
22	91262	Flange Screw 3/8"-16UNC x 1" G5	6	
23	276349B	Support Plate =Black=	1	
24	9009931	Plug, 1 1/2" x 3"	2	


Sideboard Components

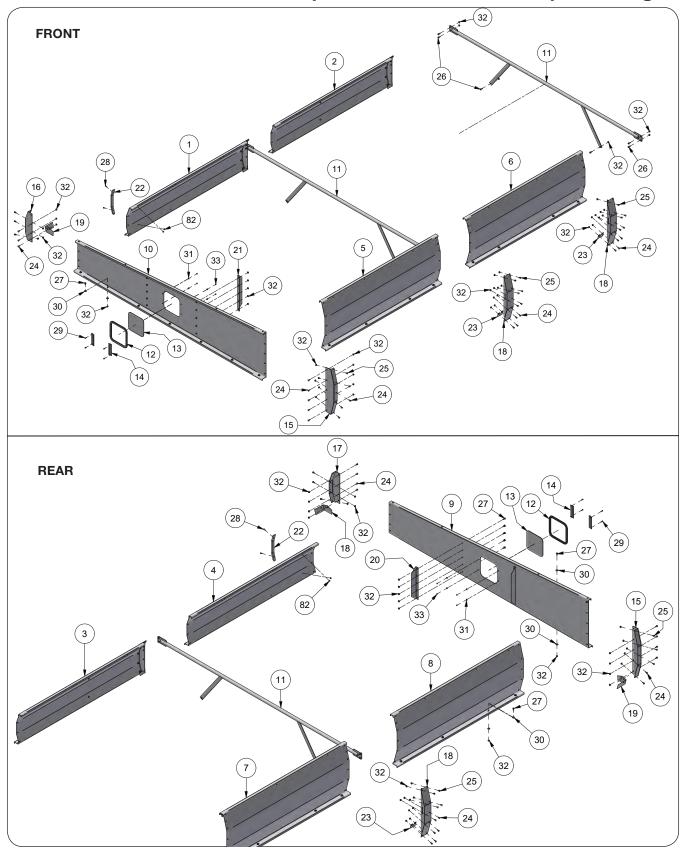

Sideboard Components

ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
4	297523G	Front Sideboard, RH =Green=	1	
1	297523R	Front Sideboard, RH =Red=	1	
	297524G	Second Sideboard, RH =Green=	1	
2	297524R	Second Sideboard, RH =Red=	1	
	297525G	Third Sideboard, RH =Green=	4	
3	297525R	Third Sideboard, RH =Red=	1	
4	297526G	Fourth Sideboard, RH =Green=	1	
4	297526R	Fourth Sideboard, RH =Red=		
5	297527G	Front Sideboard, LH =Green=	_ 1	
5	297527R	Front Sideboard, LH =Red=		
6	297528G	Second Sideboard, LH =Green=	_ 1	
0	297528R	Second Sideboard, LH =Red=	'	
7	297529G	Third Sideboard, LH =Green=	_ 1	
1	297529R	Third Sideboard, LH =Red=	'	
8	297530G	Fourth Sideboard, LH =Green=	_ 1	
O	297530R	Fourth Sideboard, LH =Red=		
9	297532G	Rear Sideboard =Green=	_ 1	
9	297532R	Rear Sideboard =Red=		
10	297531G	Front Sideboard =Green=	_ 1	
10	297531R	Front Sideboard =Red=		
11	297543B	Sideboard Brace	3	
12	9007875	Window Moulding	2	
13	9002544	Window	2	
14	250461B	Window Bracket =Black=	4	
15	297533G	Sideboard Bracket, LH =Green=	_ 2 _	
10	297533R	Sideboard Bracket, LH =Red=		
16	297542G	Front Sideboard Bracket, RH =Green=	_ 1	
10	297542R	Front Sideboard Bracket, RH =Red=	_ '	
17	297534G	Rear Sideboard Bracket, RH =Green=	1	
	297534R	Rear Sideboard Bracket, RH =Red=	_ '	
18	298224B	Sideboard Cover Plate, LH =Black=	2	
19	298223B	Sideboard Cover Plate, RH =Black=	2	
20	294365B	Sideboard Brace Plate, RH =Black=	2	
21	294264B	Sideboard Brace Plate, LH =Black=	2	
22	9008111	Tarp Deflector	4	
23	295124	Sideboard Cover Plate	4	
24	9388-051	Carriage Bolt, 3/8"-16UNC x 1" Grade 5	78	
25	9005312	Machine Screw, 3/8"-16UNC x 1"	16	
26	9003259	Flange Screw, 3/8"-16UNC x 1 1/4" Grade 5	18	
27	91262	Flange Screw, 3/8"- 16UNC x 1" Grade 5	66	
28	9004355	Self Threading Screw, 1/4"-20UNC x 1"	8	
29	9390-005	Capscrew, 1/4"-20UNC x 1" Grade 5	8	
30	9405-078	Flat Washer, 3/8"	92	
31	9405-064	Flat Washer, 1/4"	8	
32	9008159	Flanged Lock Nut, 3/8"-16UNC	176	
33	9936	Lock Nut, 1/4"-20UNC	8	
34	97189	Flanged Hex Nut, 1/4"-20UNC	8	

Track Axle Mounting Components

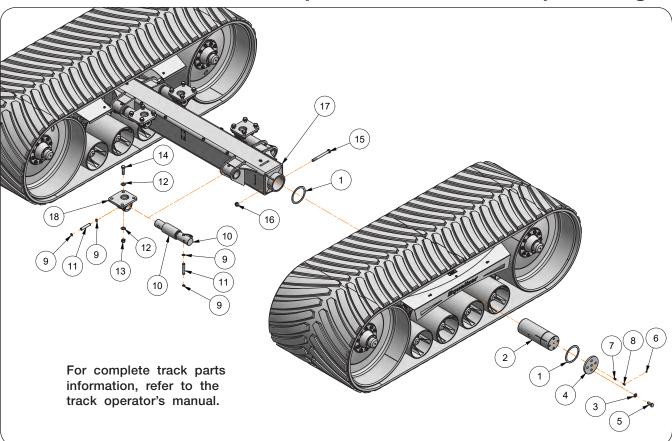


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	282690	Washer 8 1/2" OD	4	
2	282102	Track Pivot Shaft 7" Dia.	2	
3	9404-041	Lock Washer 1"	8	
4	282689B	Cover Plate	2	
5	9390-184	Capscrew 1"-8UNC x 2 1/4" Grade 5	8	
6	93426	Grease Zerk	2	
7	9006816	Adapter 1/8"NPT	2	
8	9006785	90° Adapter	2	
9	91192	Retaining Ring 1"	16	
10	9008448	Load Bar 3 1/2" Dia. w/ 30 Ft. Cable	4	
11	282876	Pin 1" Dia. x 5 1/2"	8	
12	804685	Hardened Flat Washer 1"	32	
13	9008441	Elastic Lock Nut 1"-14UNS	16	
14	91299-1458	Capscrew 1"-14UNS x 3 1/2" Grade 8	16	
15	9390-464	Capscrew 1"-8UNC x 10" Grade 5	2	
16	92199	Lock Nut 1-8UNC	2	
17	267797B	Axle Weldment =Black=	1	
18	268838B	Axle Mount Casting =Black=	4	

Unverferth 2520 — Parts

Notes


Hopper Flow Door Components

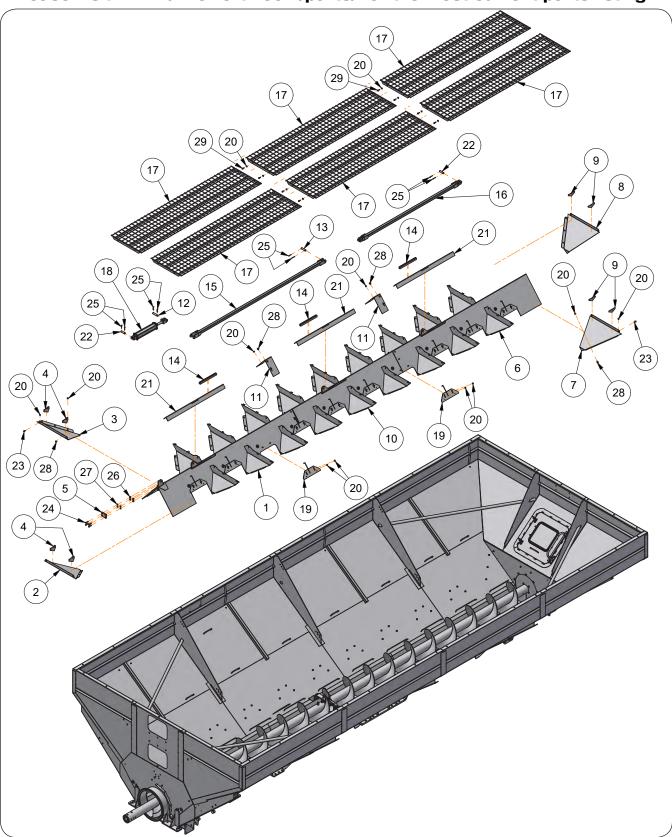

Hopper Flow Door Components


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	296311B	Front Tent Service Kit (Black)	1	Includes Items 2 - 5 & Front Tent Weldment
2	294753B	Front LH Baffle =Black=	1	
3	294754B	Front RH Baffle =Black=	1	
4	294375B	Front Screen Mount Plate =Black=	4	
5	N/A*	Cylinder Mount Plate	-	*Not for individual sale, see Item 1
6	296313B	Rear Tent Service Kit (Black)	1	Includes Items 7-9 & Rear Tent Weldment
7	294752B	Rear LH Baffle =Black=	1	
8	294751B	Rear RH Baffle =Black=	1	
9	294376B	Rear Screen Mount Plate =Black=	4	
10	296312B	Middle Tent Service Kit (Black)	1	Includes Item 11 & Middle Tent Weldment
11	272141B	Cover Plate =Black=	2	
12	266285	Idler Pin 1" Dia. x 4 1/2"	1	
13	271112	Idler Pin 1" Dia. x 4"	1	
14	N/A*	Seal Plate	6	*Not for individual sale, see Items 15, 16
15	274675B	Front Flow Door Linkage Weld't =Black=	1	
16	273314B	Rear Flow Door Linkage Weld't =Black=	1	
17	294372B	Screen Weldment =Black=	6	
18	9002575	Hydraulic Cylinder 3" x 16" (3000PSI)	1	3/4"-16 SAE O-Ring Ports
10	9003772	Seal Kit	-	
19	284721B	Baffle Weldment =Black=	4	
20	9008159	Locknut, 3/8"-16UNC	132	
21	282187B	Tent Hole Cover Plate =Black=	3	
22	804572	Hydraulic Cylinder Pin 1" Dia. x 3 1/2"	2	
23	91262	Flange Screw 3/8"-16UNC x 1" Gr.5	17	
24	9390-103	Capscrew 1/2"-13UNC x 2" Gr.5	4	
25	9391-046	Cotter Pin 3/16" Dia. x 2"	8	
26	9394-010	Hex Nut 1/2"-13UNC Gr.5	4	
27	9404-025	Lock Washer 1/2"	4	
28	95585	Large Flange Screw 3/8"-16UNC x 3/4" Gr.5	88	
29	9003259	Flange Screw 3/8"-16UNC x 1 1/4"	8	

Front Flow Door Components

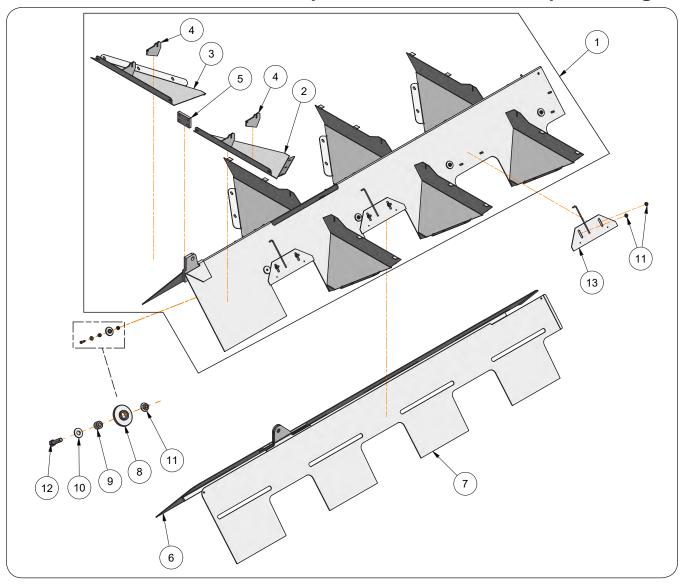


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	296311B	Front Tent Service Kit (Black)	1	Includes Items 2-5 & Front Tent Weldment
2	294753B	Front LH Baffle =Black=	1	
3	294754B	Front RH Baffle =Black=	1	
4	294375B	Front Screen Mount Plate =Black=	4	
5	N/A*	Cylinder Mount Plate	-	*Not for individual sale, see Item 1
6	294729B	Front RH Door Weldment =Black=	1	
7	294731B	Front LH Door Weldment =Black=	1	
8	284168	Bushing 2 1/4" OD x 49/64" ID x 0.500"	8	
9	284169	Bushing 3/4" OD x 7/16" ID x 0.531"	8	
10	9005471	Flat Washer 3/8" (Hardened)	8	
11	9008159	Lock Nut 3/8"-16UNC	20	
12	91299-057	Capscrew 3/8"-16UNC x 1 1/2" Gr.8	8	
13	284721B	Baffle Weldment =Black=	6	

Middle Flow Door Components

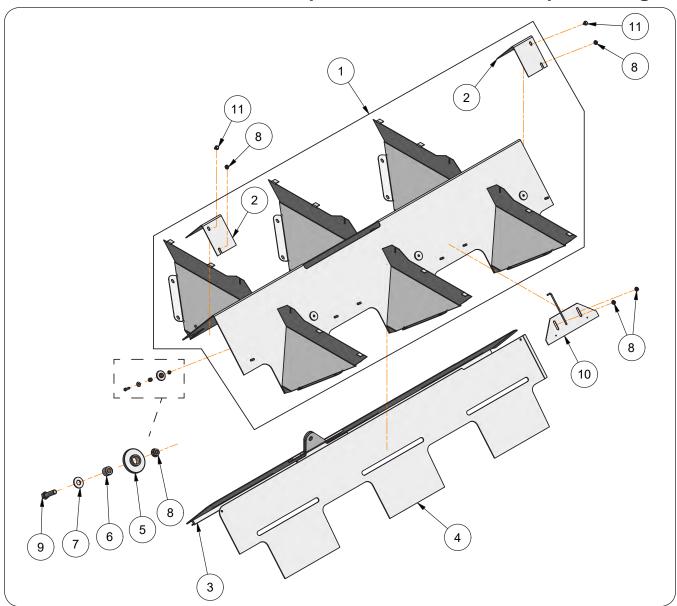

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	296312B	Middle Tent Service Kit (Black)	1	Includes Item 2 & Middle Tent Weldment
2	272141B	Cover Plate =Black=	2	
3	294737B	Middle RH Door Weldment =Black=	1	
4	294739B	Middle LH Door Weldment =Black=	1	
5	284168	Bushing 2 1/4" OD x 49/64" ID x 0.500"	6	
6	284169	Bushing 3/4" OD x 7/16" ID x 0.531"	6	
7	9005471	Flat Washer 3/8" (Hardened)	6	
8	9008159	Lock Nut 3/8"-16UNC	18	
9	91299-057	Capscrew 3/8"-16UNC x 1 1/2" Gr.8	6	
10	284721B	Baffle Weldment =Black=	4	
11	95585	Flange Screw 3/8"-16UNC x 3/4"	4	

Rear Flow Door Components

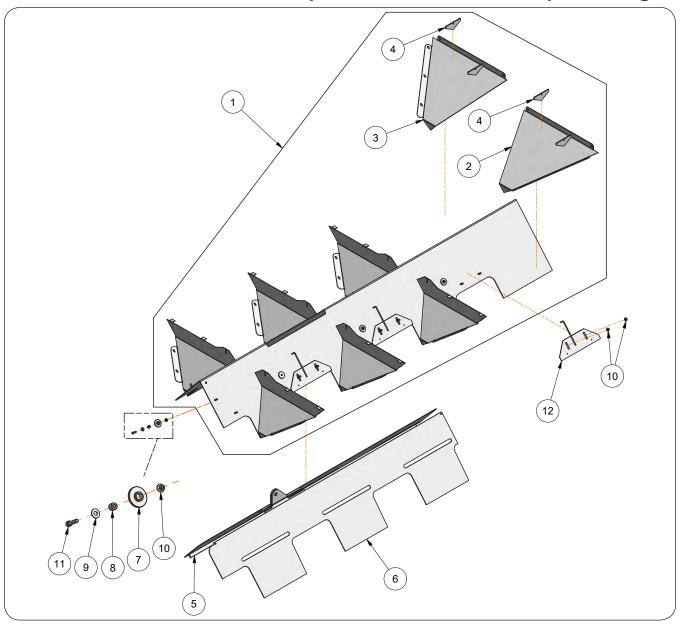


ITE	EM	PART NO.	DESCRIPTION	QTY	NOTES
1		296313B	Rear Tent Service Kit (Black)	1	Includes Items 2-4 & Rear Tent Weldment
	2	294752B	Rear LH Baffle =Black=	1	
	3	294751B	Rear RH Baffle =Black=	1	
	4	294376B	Rear Screen Mount Plate =Black=	4	
5	5	294744B	Rear RH Door Weldment =Black=	1	
6	3	294746B	Rear LH Door Weldment =Black=	1	
7	7	284168	Bushing 2 1/4" OD x 49/64" ID x 0.500"	6	
3	3	284169	Bushing 3/4" OD x 7/16" ID x 0.531"	6	
Ć)	9005471	Flat Washer 3/8" (Hardened)	6	
1	0	9008159	Lock Nut 3/8"-16UNC	20	
1	1	91299-057	Capscrew 3/8"-16UNC x 1 1/2" G8	6	
1	2	284721B	Baffle Weldment =Black=	6	

Unverferth 2520 — Parts

Notes


Flow Door Indicator Assembly

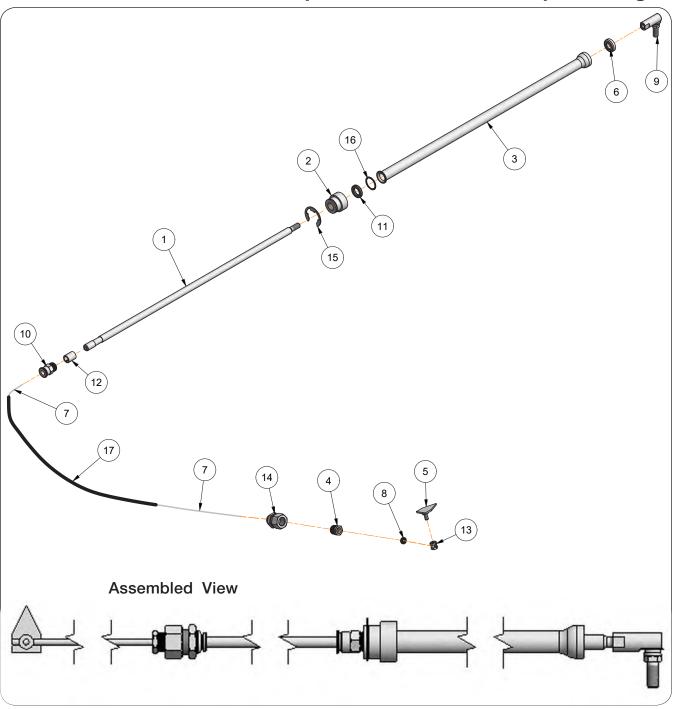

Flow Door Indicator Assembly

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	271584	Complete Indicator Assembly	1	Includes Items 1 through 17
1	271582	Push Rod Indicator	1	
2	271585	Bushing - Coupler	1	
3	271589	Cable Tube (Push Rod)	1	
4	271593	Reducer Bushing	1	
5	271595R	Flow Door Indicator =Red=	1	
6	9006610	Seal (Wiper)	1	
7	9006611	Inner Cable (Conduit) - 3/16"	1	
8	9008612	Seal (Shaft)	1	
9	9006630	Rod End, 3/8"	1	
10	9006634	Connector Fitting	1	
11	9006635	Quad Ring	1	
12	9006636	Wear Ring	1	
13	271597	Wire Stop	1	
14	9006640	Hose Fitting	1	
15	9006641	Snap Ring	1	
16	9006644	Retaining Ring - Internal	1	
17	271586	Plastic Tubing - 81"	1	


Vertical Auger Flighting Components

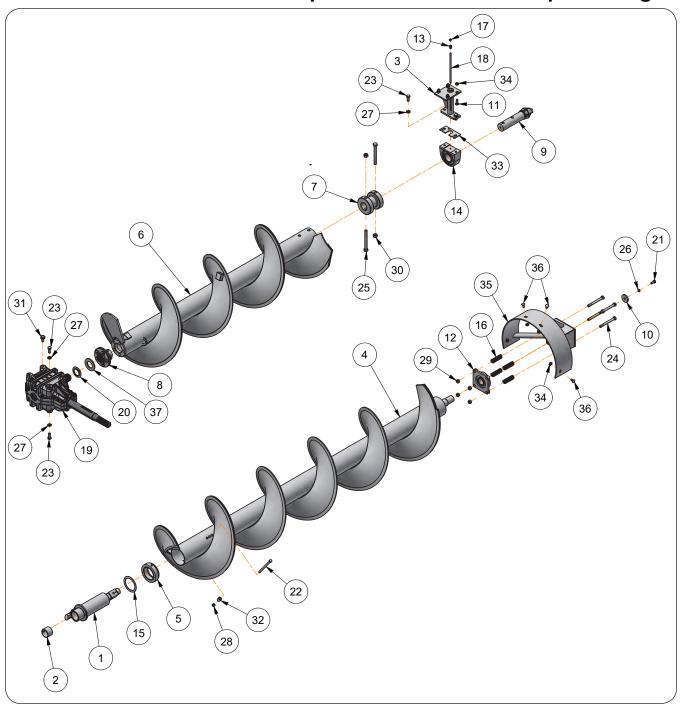

Vertical Auger Flighting Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	281283	Soft Start Assembly	1	
2	9003230	Split Bushing 2 3/4" OD x 2 1/2" ID x 2"	1	
3	273124B	Bearing Bracket Weldment =Black=	1	
4	298129B	Upper Auger Replacement Kit =Black=	1	Includes Item #35
5	284626	Flex Coupler Bushing Assembly	1	
6	298130B	Lower Auger Replacement Kit =Black=	1	Fits 1 3/4"-20 Spline Gearbox Shaft
7	283515	Auger Tube Adapter	1	
8	287802	Drive Plate Assembly (5-Pin)	1	
9	288813	Drive Dog Machined	1	
10	407699	Washer Plate, 2 1/2" Dia.	1	
11	9388-104	Carriage Bolt, 1/2"-13UNC x 1 1/2" Grade 5	4	
12	9002492	Bearing 2" Dia. Flanged	1	
13	9003949	Pipe Coupling, 1/8" NPT Female	1	
14	9004731	Pillow Block Bearing, 2 1/2" Bore	1	
15	9004878	Self Lubricating Washer	1	
16	9004899	Spring - 10 Coils	4	
17	9000875	Grease Zerk	1	
18	9005793	Grease Pipe	1	
19	9007366	Gearbox 1 3/4"-20 Spline Input Shaft 2 1/4"-17 Spline Output Shaft	1	See "Gearbox" in this section for parts.
20	9007377B	Dust Cover =Black=	1	
21	9390-100	Capscrew, 1/2"-13UNC x 1 1/4" Grade 5	1	
22	9390-119	Capscrew, 1/2"-13UNC x 8" Grade 5	1	Replacement Kit #293428 Includes Items 22, 28, 32
23	9390-122	Capscrew, 5/8"-11UNC x 1 1/2" Grade 5	8	
24	9390-136	Capscrew, 5/8"-11UNC x 6" Grade 5	4	
25	9390-159	Capscrew, 3/4"-10UNC x 7 Grade 5	2	
26	9404-025	Lock Washer, 1/2" Grade 5	1	
27	9404-030	Lock Washer, 5/8"	8	
28	9800	Locknut, 1/2"-13UNC Grade 5	1	
29	9801	Locknut, 5/8"-11UNC Grade 5	4	
30	9802	Locknut, 3/4"-10UNC Grade 5	2	
31	903161-063	Flange Screw, 5/8"-11UNC x 1 1/4" Grade 5	2	
32	410511	Spacer Bushing	1	
33	286419B	Bearing Shim Plate =Black=	1	
34	9003397	Lock Nut/Top, 1/2"-13UNC	8	
35	297216B	Hanger Bearing Weldment =Black=	1	
36	9388-102	Carriage Bolt, 1/2"-13UNC x 1" Grade 5	4	
37	297008	Gearbox Output Shaft Washer	1	Replacement Kit #297010


Horizontal Auger Components

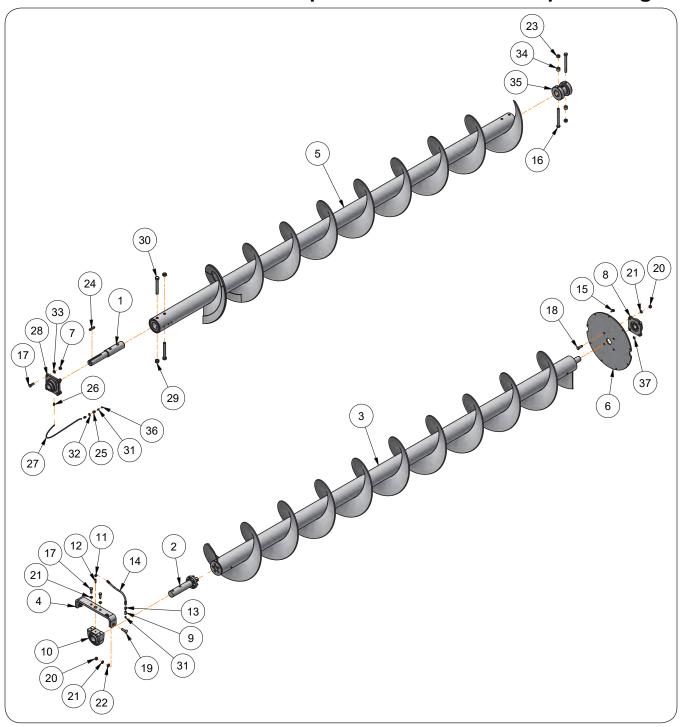

Horizontal Auger Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	273779	Auger Shaft 2 3/4" Dia. x 17 5/8"	1	
2	293957	Auger Coupler Shaft Weldment	1	
3	298326B	Rear Drag Auger Replacement Kit =Black=	1	
4	286382B	Bearing Mount Bar =Black=	1	
5	295618B	Front Drag Auger Replacement Kit (Black)	1	Includes Items 5, 16, 23, 29, 30, 34, 35
6	295926G	Cover Plate =Green=	1	
6	295926R	Cover Plate =Red=] '	
7	95905	Lock Nut/Center, 5/8"-11UNC Grade 5	4	
8	9002492	Bearing 2" Dia. Flanged	1	
9	9009171	Coupling Pipe 1/8NPT	1	
10	9004731	Bearing - Pillow Block	1	
11	9004764	90° Elbow Pipe	1	
12	9006964	Hex Pipe Nipple	1	
13	9002479	Adapter Pipe Union Swivel	1	
14	9006965	Grease Hose 1/8" x 15" (3000 PSI)	1	
15	91262	Flange Screw 3/8"-16UNC x 1" Grade 5	9	
16	91299-161	Capscrew, 3/4"-10UNC x 8" Grade 8	2	
17	9390-123	Capscrew 5/8"-11UNC x 1 3/4" Grade 5	4	
18	9390-124	Capscrew 5/8"-11UNC x 2" Grade 5	4	
19	9388-136	Carriage Bolt, 5/8"-11UNC x 2 1/4" Grade 5	2	
20	9394-014	Hex Nut, 5/8"-11UNC Grade 5	6	
21	9404-029	Lock Washer 5/8"	8	
22	9405-098	Flat Washer 5/8" SAE	2	
23	9802	Lock Nut/Top, 3/4"-10UNC	2	
24	9002562	Key 1/2" x 1/2" x 2 1/2"	1	
25	9003949	Pipe Coupling	1	
26	9005073	Quicklinc Fitting 1/4" Tube x 1/8NPT Straight	2	
27	9005074	Grease Hose 1/4" OD	1	
28	9005565	Flange Bearing 4-Bolt, 2 1/4" ID	1	
29	91141	Locknut 7/8"-9UNC	2	
30	91299-178	Capscrew 7/8"-9UNC x 7" Grade 8	2	
31	93426	Grease Zerk	1	
32	9405-076	Flat Washer 3/8" USS	1	
33	9404-030	Lock Washer 5/8" Heavy-Duty	4	
34	283895B	Spacer Bushing =Black=	2	
35	295031	Auger Adapter Casting	1	
36	9006849	Grease Zerk Cap	1	
37	9501279	Washer, 5/8" (18 Ga.)	4	


Lower Auger Cleanout Door & Cover Components

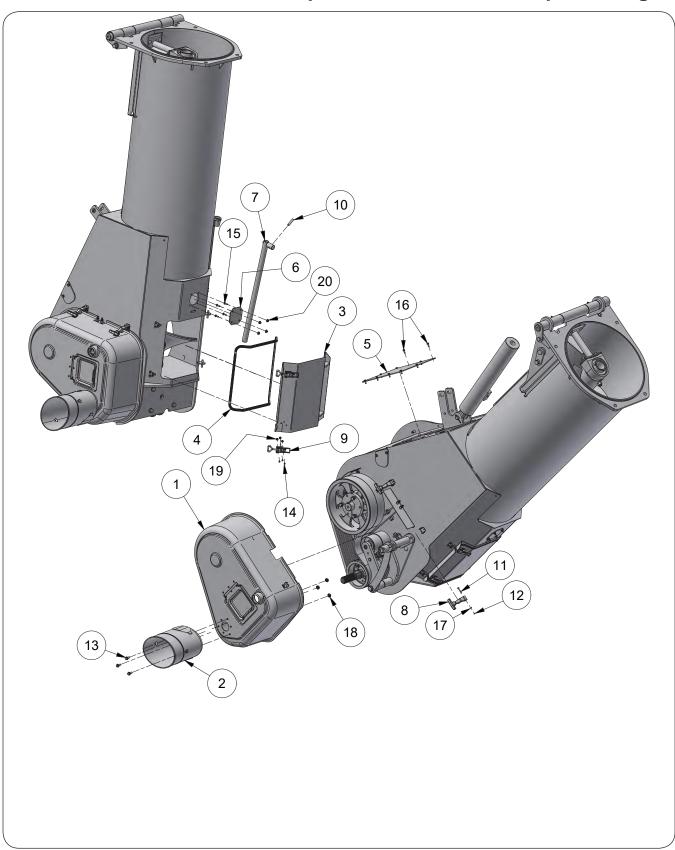

Lower Auger Cleanout Door & Cover Components

ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	9004729	Belt Cover	1	
2	9004918	PTO Cover	1	
3	273763B	Cleanout Door Assmebly =Black=	1	
4	9007108	Cleanout Door Gasket	1	
5	283518R	Cover Plate 14 1/4" x 15" =Green=	1	
5	283518G	Cover Plate 14 1/4" x 15" =Red=		
6	2001446B	Cover Plate, 4 1/2" x 4 1/2" =Black=	1	
7	284714B	Locking Pipe Weldment with Roll Pin =Black=	1	
8	900060	Handle for Draw Latch	2	
9	9006497	Latch Draw	2	
10	9392-208	Roll Pin 1/2" Dia. x 2"	1	
11	900066	Stud-Pin 3/16" Dia. x 1 1/2"	2	
12	900068	Retainer for Draw Latch	2	
13	91262	Capscrew, 3/8"-16UNC x 1" Grade 5	3	
14	903171-662	Flat Countersunk Screw #10-24UNC x 1/2"	6	
15	9388-003	Carriage Bolt, 1/4"-20UNC x 1" Grade 5	4	
16	97420	Flange Screw 1/4"-20UNC x 3/4" Grade 5	10	
17	900067	Washer, 7/32" ID x 1/2" OD	2	
18	91263	Flange Nut 3/8"-16UNC	3	
19	902331	Flange Hex Nut #10-24UNC	6	
20	97189	Flange Nut 1/4"-20UNC	4	


Lower Auger Shields, Pulleys, Bearings, & Belt Components

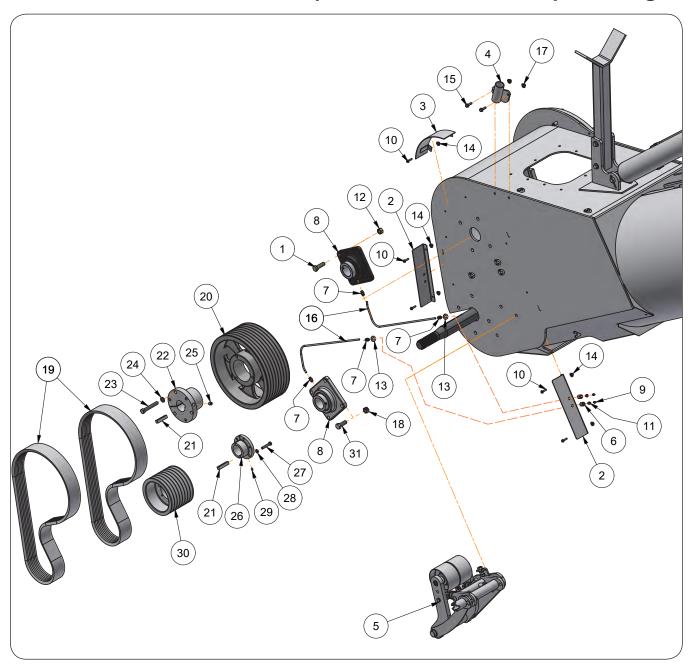

Lower Auger Shields, Pulleys, Bearings, & Belt Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	9390-124	Capscrew, 5/8"-11UNC x 2" G5	4	
2	273118B	Shield Plate =Black=	2	
3	273119B	Shield Weldment =Black=	1	
4	273121B	Bushing Weldment =Black=	1	
5	283600B	Idler Assembly (Black)	1	
6	9003949	Hex Pipe Coupling	2	
7	9005073	Quicklinc Fitting	4	
	9005565	Flanged Bearing, 2 1/4" ID	2	Includes Set Screw & Grease Zerk
8	9399-106	Set Screw, 1/2"-13UNC x 1/2"	2	
	91160	Grease Zerk, 1/4"-28 SST	2	
9	9006849	Grease Zerk Cap	2	
10	901101	Flange Screw, 1/4"-20UNC x 1" G5	6	
11	93426	Grease Zerk, 1/8" NPT	2	
12	9003398	Flange Lock Nut, 5/8"-11UNC	4	
13	9405-076	Flat Washer, 3/8" USS	2	
14	97189	Hex Nut/Large Flange, 1/4"-20UNC	6	
15	901044	Serrated Flange Bolt, 5/16"-18UNC x 1"	2	
16	9005074	Grease Hose, 1/4" OD	2.5	Specify Length in Feet
17	91257	Large Flange Hex Nut, 5/16"-18UNC	2	
18	95905	Lock Nut, 5/8"-11UNC	4	
19	281675	Drive Belt Set, 4 Strand (5V750)	1	Included As Matched Pair
20	9004590	Pulley, 15" Dia. x 5 13/16"	1	
21	9002562	Keystock, 1/2" x 1/2" x 2 1/2"	2	
22	9004813	Bushing, 6 5/8" OD x 2 1/4" ID x 3 3/4" w/ 1/2" Keyway & Capscrews	1	includes Items 23-25
23	9006263	Bolt, 9/16"-12UNC x 3 5/8" G5	3	
24	9404-027	Lock Washer, 9/16"	3	
25	9399-107	Set Screw, 1/2"-13UNC x 5/8"	1	
26	9007376	Bushing, 4 5/8" OD x 2 1/4" ID x 2 1/16" w/ 1/2 Keyway & Capscrews	1	includes Items 27-29
27	9006669	Capscrew, 3/8"-16UNC x 2" G5	3	
28	9404-021	Lock Washer, 3/8"	3	
29	9399-059	Set Screw, 1/4"-20UNC x 3/8"	1	
30	9004591	Pulley, 7 1/2" Dia. x 5 13/16"	1	
31	9390-123	Capscrew, 5/8"-11UNC x 2" G5	4	


Idler Assembly Components

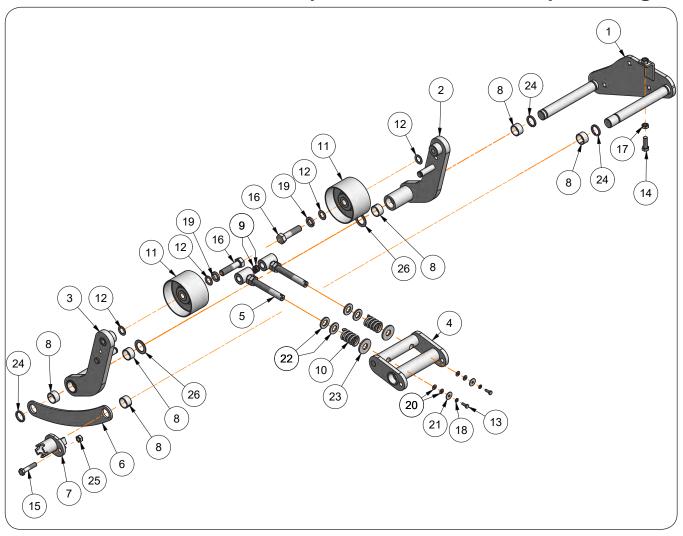

Idler Assembly Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	283600B	Idler Assembly =Black=	1	Includes items 1-26
1	283601B	Idler Mount Weldment =Black=	1	
2	283602B	Idler Arm Weldment =Black=	1	
3	283603B	Idler Arm Weldment =Black=	1	
4	283604B	Tensioner Weldment =Black=	1	
5	283605	Tensioner Rod Weldment	2	
6	283619B	Idler Brace Plate =Black=	1	
7	284703	Tensioner Bushing Weldment	1	
8	9003635	Self-Lubricating Bushing, 1.4" OD x 1.25" ID x 3/4"	6	
9	9003810	Snap Ring	2	
10	9005447	Compression Spring, 1.415" OD x 2 1/2"	2	
11	9005684	Idler Sub Assembly	2	Single Piece Item
	296744B	Idler Sub Assembly =Black=		Includes Ball Bearing W/Retaining Ring 2"
12	9005685	Machine Washer, 3/4"	4	
13	9390-003	Capscrew, 1/4-20UNC x 3/4" G5	2	
14	9390-101	Capscrew, 1/2"-13UNC x 1 1/2" G5	1	
15	9390-104	Capscrew, 1/2"-13UNC x 2 1/4" G5	1	
16	9390-149	Capscrew, 3/4"-10UNC x 3" G5	2	
17	9395-010	Hex Jam Nut, 1/2"-13UNC	1	
18	9404-017	Lock Washer, 1/4"	2	
19	9404-033	Lock Washer, 3/4"	2	
20	9405-062	Flat Washer, 1/4" SAE	4	
21	9405-066	Flat Washer, 1/4"	2	
22	9405-104	Flat Washer, 3/4" SAE	4	
23	9405-106	Flat Washer, 3/4" USS	2	
24	94144	Retaining Ring, 1 1/4"	4	
25	94981	Locknut, 1/2"-13UNC	1	
26	TA500397	Bushing, 1.875"D x .074"	2	


Lower Auger Retainer Components

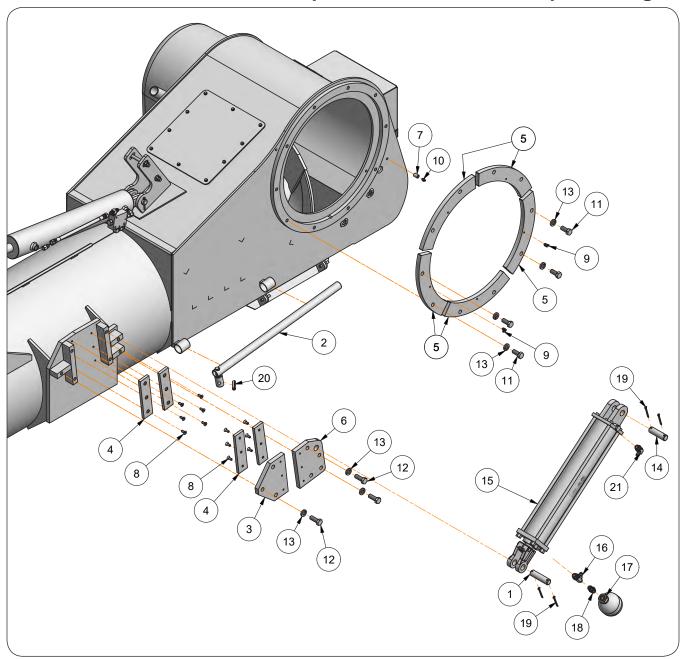

Lower Auger Retainer Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	250104	Pin, 1" Dia. x 4"	1	
2	284711B	Locking Pipe Weldment =Black=	1	
3	271119B	Fold Plate, 6 1/2" x 8" =Black=	1	
4	271124	Nylon Fold Slide, 2" x 8"	4	
5	295788B	Pivot Retainer Plate, 4 3/8" x 15 9/16" =Black=	5	
6	284518B	Fold Plate, 6" x 8" =Black=	1	
7	9002538	Pipe Coupling, 1/8" NPT	1	
8	9001688	Flat Head Hex Socket Capscrew, 5/16"-18UNC x 3/4"	12	
9	93415	90° Grease Zerk, 1/4"-28 NPT	5	
10	93426	Grease Zerk, 1/8"-27 NPT	1	
11	9390-122	Capscrew, 5/8"-11UNC x 1 1/2" G5	10	
12	9390-123	Capscrew, 5/8"-11UNC x 1 3/4" G5	7	
13	9404-030	Lock Washer, 5/8"	17	
14	804572	Pin, 1" Dia. x 3 1/2"	1	
15	9000933	Hydraulic Cylinder, 3 1/2" x 20"	1	
16	9002155	Tee, 9/16"-18 JIC Male x 3/4"-16 O-Ring Male x 9/16"-18 JIC Male	1	
17	9002719	Accumulator, 1800 PSI - Precharge Temp Range 14-176 Deg.	1	
18	9002720	Adapter, 3/4"-16 O-Ring Male x 9/16"-18 JIC Female Swivel Nut	1	
19	9391-046	Cotter Pin, 3/16" Dia. x 2"	4	
20	9392-208	Roll Pin, 1/2" Dia. x 2"	1	
21	9874	90° Elbow, 9/16"-18 JIC Male x 3/4"-16 O-Ring Male	1	


Auger Fold Linkage Components

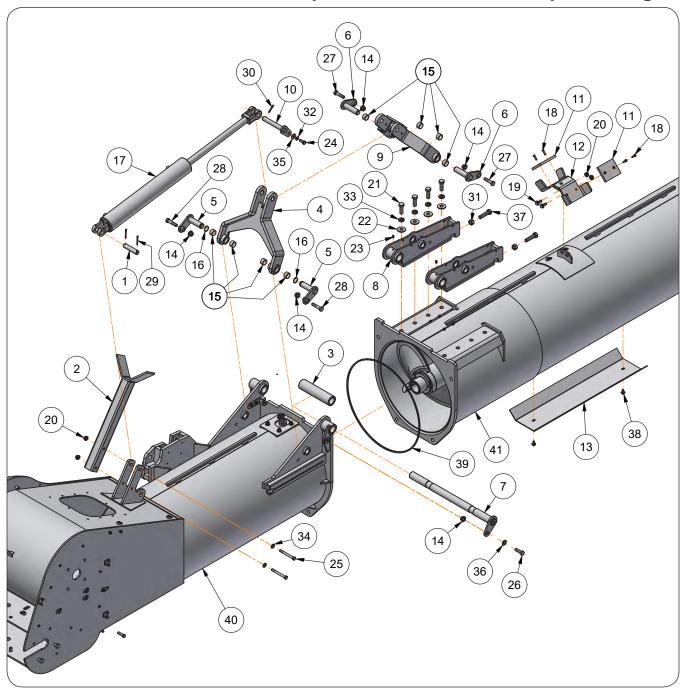

Auger Fold Linkage Components

ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	266285	Cylinder Pin 1" Dia. x 4 1/2"	1	
	273255G	Auger Rest Weld't =Green=		
2	273255R	Auger Rest Weld't =Red=	1	
	273374G	Spacer Bushing =Green=		
3	273374R	Spacer Bushing =Red=	1	
4	276479G	Fold Linkage Weldment =Green=	4	
4	276479R	Fold Linkage Weldment =Red=	1	
5	276483	Linkage Pin Weldment	1	
6	276493	Linkage Pin Weldment	2	
7	276561	Auger Pivot Pin Weldment	1	
8	276593G	Auger Hinge Weldment =Green=	2	
	276593R	Auger Hinge Weldment =Red=		
9	276940G	Fold Linkage Weldment =Green=	1	
	276940R	Fold Linkage Weldment =Red=	<u> </u>	
10	276941	Fold Linkage Pin Weldment	1	
11	283335	Poly Auger Stop Pad	2	
12	283340G	Auger Rest Weldment =Green=	1	
	283340R	Auger Rest Weldment =Red=	<u> </u>	
13	284141G	Strike Plate =Green=	1	
	284141R	Strike Plate =Red=	<u> </u>	
14	9003398	Lock Nut/Top, 5/8"-11UNC	7	
15	9004396	Self-Lubricating Bushing	8	
16	9006084	Retaining Ring, 1 1/4"	2	
17	9007639	Hydraulic Welded Cylinder 3 1/2" x 20" (3000 PSI)	1	
18	903171-660	Flat Countersunk Head/Machine Screw, 5/16"-18UNC x 1"		
19	91266	Flange Capscrew, 1/2"-13UNC x 1 1/4"	2	
20	91267	Nut / Flange, 1/2"-13UNC	4	
21 22	91299-146 9234PL	Capscrew, 3/4"-10UNC x 2 1/4" G8 Flat Washer, 13/16" (Hardened)	8	
23	93426	90° Zerk	5	
24	9390-100	Capscrew, 1/2"-13UNC x 1 1/4" G5	2	
25	9390-100	Capscrew, 1/2 -130NC x 1 1/4 d3	2	
26	9390-112	Capscrew, 1/2 -130NC x 4 1/2 d3	5	
27	9390-126	Capscrew, 5/8"-11UNC x 2 1/2" G5	2	
28	9390-127	Capscrew, 5/8"-11UNC x 2 3/4" G5	2	
29	9391-046	Cotter Pin, 3/16" Dia. x 2"	2	
30	9392-140	Roll Pin, 1/4" Dia. x 2"	1	
31	9394-016	Hex Nut, 3/4"-10UNC G5	2	
32	9404-025	Lock Washer, 1/2"	2	
33	9404-034	Lock Washer, 3/4"	8	
34	9405-086	Flat Washer, 1/2" SAE	3	
35	9405-088	Flat Washer, 1/2" USS	1	
36	9405-098	Flat Washer, 5/8" SAE	1	
37	94733	Capscrew, 3/4"-10UNC x 3" G5	2	
38	95585	Large Flange Capscrew, 3/8"-16UNC x 3/4" G5	2	
39	296290	Lower Auger Seal Kit	1	Includes Gasket & Instruction Sheet
	297420G	Lower Auger Housing Replacement Kit =Green=	4	
40	297420R	Lower Auger Housing Replacement Kit =Red=	1	
41	297743G	Upper Auger Housing Weldment =Green=	1	
41	297743R	Upper Auger Housing Weldment =Red=		

Downspout Components

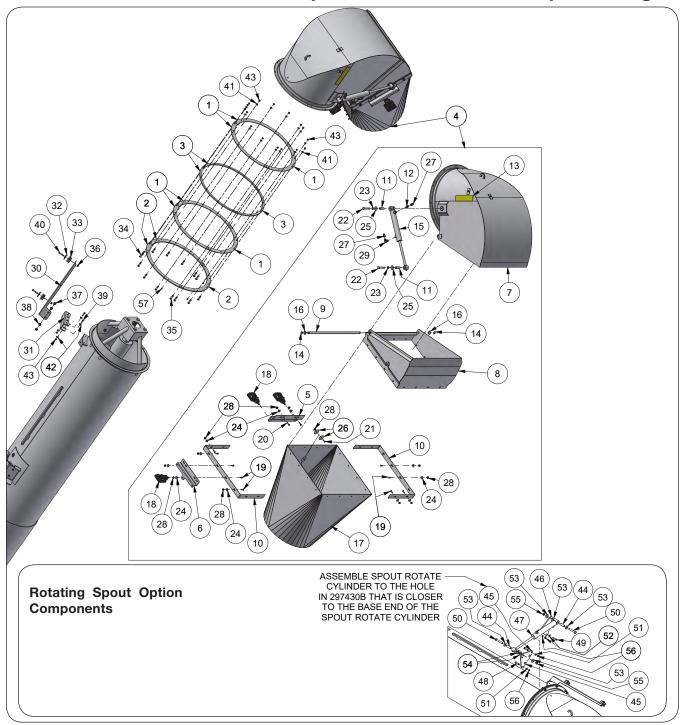


ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	276512	Pivot Pad	6	
2	276513B	Spout Pivot Plate =Black=	2	
3	276550B	Spacer Plate =Black=	3	
4	276999B	Spout Assembly (Black)	1	Includes Items 5-29
5	272646B	Light Bracket =Black=	1	
6	272841B	Light Bracket =Black=	1	

Downspout Components

ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
7	276515B	Upper Spout Weldment =Black=	1	
8	276526B	Lower Spout Weldment =Black=	1	
9	276530	Pivot Shaft 3/4" Dia. x 27"	1	
10	276531B	Chute Strap =Black=	2	
11	285290	Sleeve Bushing .75" OD x .532" ID x 1.938"	2	
12	9001495	Adapter 9/16"-18 JIC M x 9/16"-18 O-Ring	1	
13	9003127	Reflector 2" x 9" =AMBER=	2	
14	9003810	Snap Ring 3/4"	2	
15	9005135	Cylinder 1 1/2" x 8"	1	
16	9005685	Washer 3/4" Dia.	2	
17	9008318	Rubber Chute	1	
18	9008957	LED Work Light	3	
19	9388-003	Carriage Bolt 1/4"-20UNC x 1" G5	14	
20	9388-004	Carriage Bolt 1/4"-20UNC x 1 1/4" G5	2	
21	9390-005	Capscrew 1/4"-20UNC x 1" G5	8	
22	9390-107	Capscrew 1/2"-13UNC x 3" G5	2	
23	9404-025	Lock Washer 1/2"	2	
24	9405-066	Flat Washer 1/4"	16	
25	9405-088	Flat Washer 1/2" USS	2	
26	94763	Fender Washer 5/16" Dia.	16	
27	95193	Adapter, 9/16"-18 JIC F x 9/16"- 18 JIC M	2	With 0.030" Red Restrictor
28	97189	Hex Nut/Large Flange 1/4"-20UNC	24	
29	97445	Elbow, 90° 9/16"-18 JIC M x 9/16-18 O-Ring ADJ M	1	
30	297375B	Hose Bracket =Black=	1	
31	298096B	Spout Rotate Lock Bracket	1	
32	9003814	Clamp Top Plate	4	
33	9003816	Double Hose Clamp (Pair)	4	
34	9007837	Shoulder Bolt 3/8" Dia. Socket Head, 5/16"-18UNC x 1 1/4"	5	
35	9007843	Shoulder Bolt 3/8" Dia. Socket Head, 5/16"-18UNC x 1"	10	
36	91257	Hex Nut/Large Flange 5/16"-18UNC	4	
37	91262	Flange Screw 3/8"-16UNC x 1"	2	
38	91263	Nut/Large Flange, 3/8"-16UNC	8	
39	9390-031	Capscrew, 5/16"-18UNC x 1 1/4" G5	2	
40	9390-034	Capscrew, 5/16"-18UNC x 2" G5	2	
41	9405-064	Flat Washer, 1/4" USS	15	
42	9405-070	Flat Washer, 5/16" USS	2	
43	9807	Locknut/Top 5/16"-18UNC	15	
44	285290	Tube/Bushing, 3/4" OD x .532" ID x 1.938"	2	
45	297430B	Spout Lug Plate =Black=	1	
46	297432B	Lug Plate =Black=	1	
47	9005135	Cylinder 1 1/2" x 8"	1	
48	9007837	Shoulder Bolt 3/8" Dia. Socket Head, 5/16"-18UNC x 1 1/4"	2	
49	9390-032	Capscrew, 5/16"-18UNC x 1 1/2" G5	2	
50	9390-108	Capscrew, 1/2"-13UNC x 3 1/4" G5	2	
51	9405-064	Flat Washer, 1/4" USS	2	
52	9405-070	Flat Washer, 5/16" USS	2	
53	9405-088	Flat Washer, 1/2" USS	6	
54	9405-104	Flat Washer, 3/4" SAE	2	
55	94981	Locknut/Center, 1/2"-13UNC	2	
56	9807	Locknut/Top 5/16"-18UNC	3	
57	91160	Zerk 1/4"-28 STT	6	


Cut Out Clutch PTO Assembly

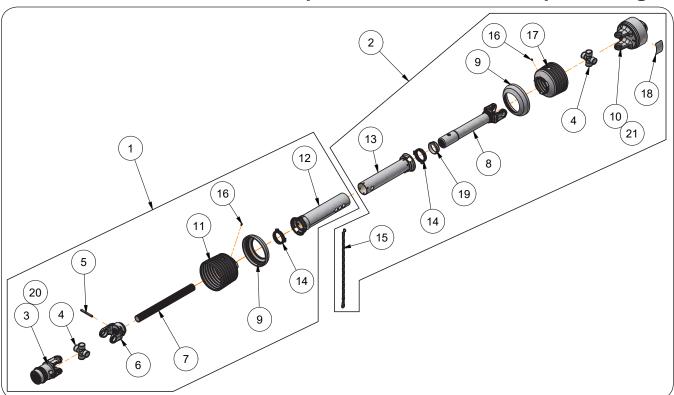

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9008417	PTO Assembly Complete, Front & Rear Half Assembly 1 3/4"-20 Spline	-	Includes Items 1-21
1	9010056	PTO Assembly Front Half W/Over-Running Clutch	1	Includes Items 3-7, 9, 11, 12, 16, 20
2	9010057	PTO Assembly Rear Half W/Cut Out Clutch (3200 N-m Setting)	1	Includes Items 4, 8-10, 13-19, 21
3	9005234	Over-Running PTO Clutch Assembly	1	
4	92529	Cross & Bearing Kit	2	
5	9002609	Spring Pin 10x90	2	
6	9008478	Inboard Yoke S4	1	
7	9008479	Inner Profile	1	
8	9008482	Inboard Yoke, Tube, & Sleeve	1	
9	9002513	Reinforcing Collar	2	
10	9005235	Cut Out Clutch (3200 N-m Setting)	1	1 3/4"-20 Spline 1000RPM
11	9008481	Shield Cone 8 Rib	1	
12	9008480	Outer Shield Tube Oval	1	
13	9008483	Inner Shield Tube Oval	1	
14	92373	Bearing Ring	2	
15	92374	Safety Chain	1	
16	92372	Screw	2	
17	93866	Shield Cone 6 Rib	1	
18	9005233	Decal K64	1	"Tighten to 75 FtLbs."
19	9008484	Support Bearing	1	
20	93856	Quick-Disconnect Kit	1	1 3/4"-20 Spline w/Metal Collar
21	9005253	Cut Out Clutch Lock Assembly	1	

Cut Out Clutch Components


Please visit www.unverferth.com/parts/ for the most current parts listing.

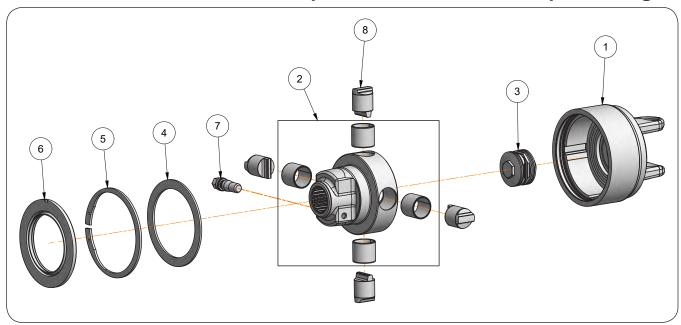

NOTE: Cut Out Clutch (9005235) must be used with the Complete PTO Assembly (9008417). This will not work with the Standard PTO Assembly (9005245).

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9005235	Cut Out Clutch (3200 N*m Setting)	-	Includes Items 1-8
1	9005247	Clutch Housing	1	
2	9005248	Clutch Hub 1 3/4-20 Spline	1	
3	9005249	Spring Pack	1	
4	9005250	Washer	1	
5	9005251	Retaining Ring	1	
6	9005252	Sealing Ring	1	
7	9005253	Clutch Clamp Cone Assembly	1	
8	9005254	Clutch Cam	4	


PTO & Bracket Assembly

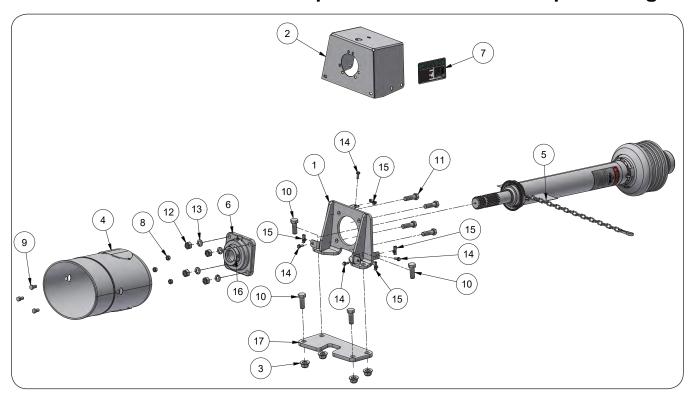

PTO & Bracket Assembly

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	276629B	PTO & Bracket Assembly (Black)	-	Includes Items 1-16
1	276401B	Bearing Bracket Weldment =Black=	1	
2	276409B	Bearing Cover Plate =Black=	1	
3	9003398	Lock Nut/Top 5/8"-11UNC	4	Only 2 Locknuts Included With PTO & Bracket Assembly
4	9004918	PTO Bell Cover	1	
5	9008362	Drive Shaft 1 3/4"-20 Splined Shaft, 1 3/4"-20 Female Splined U-Joint	1	
6	9008455	Bearing 5 3/8" Square x 2 1/16" - 4 Bolt	1	
7	9008470	Decal, IMPORTANT (Hitching Cart to Tractor)	1	
8	9928	Lock Nut, 3/8"-16UNC	3	
9	9390-053	Capscrew, 3/8"-16UNC x 3/4" G5	3	
10	9390-123	Capscrew, 5/8"-11UNC x 1 3/4" G5	4	Only 2 Capscrews Included With PTO & Bracket Assembly
11	9390-494	Capscrew, 9/16-12UNC x 2" G5	4	
12	9394-012	Hex Nut, 9/16"-12UNC	4	
13	9404-027	Lock Washer, 9/16"	4	
14	97420	Flange Screw, 1/4"-20UNC x 3/4" G5	5	
15	TA500592	Cage Nut-Clip On	5	
16	9008677	Lock Collar 1.75" Bore	1	
17	277012B	Adapter Plate =Black=	1	Not Included With PTO & Bracket Assembly


Gearbox Components

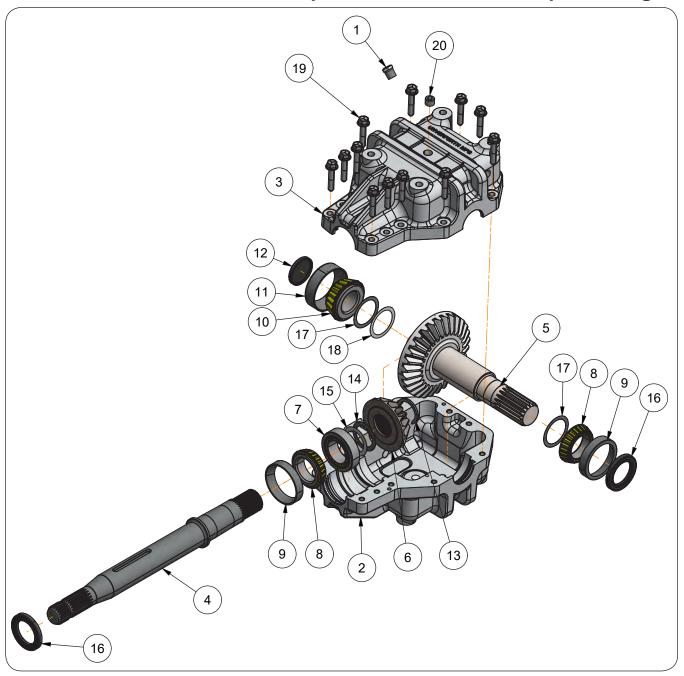

Gearbox Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9007366	Gearbox Complete	1	Includes Items 1 through 20
1	9006381	Glass Sight Plug	2	
2	9007492	Gearbox Housing Q800 w/Taped Holes	1	
3	9007493	Gearbox Housing Q800 w/Through Holes	1	
4	9007494	Gearbox Shaft 2 1/4" Dia.	1	
5	9007495	Gear Shaft Assembly 29 Tooth, 2 1/4"-17 Spline	1	
6	9007496	Gear 16 Tooth Splined	1	
7	9007497	Bearing Cup & Cone Set, 3.740" OD x 1 1/4"	1	
8	9007498	Bearing Cone 2 1/4" ID x 1"	2	
9	9007499	Bearing Cup 3.8437" OD x 0.7812"	2	
10	9007500	Bearing Cone 2" ID x 1.5312"	1	
11	9007501	Bearing Cup 4.125" OD	1	
12	9007502	End Cap	1	
13	9007503	Retaining Ring - External 2" Nominal Shaft Dia.	1	
14	9007504	Shim - 0.025"	1	
15	9007505	Shim - 0.030"	1	
16	9007508	Shaft Seal	2	
17	9007511	Shim - 0.005"	2	
18	9007512	Shim - 0.003"	1	
19	903161-060	Flange Screw 1/2"-13UNC x 2 1/2"	12	
20	95283	Plug	3	

Electric Over Hydraulic (EOH) Valve Functions and Wire Locations 5 Spool (Optional)

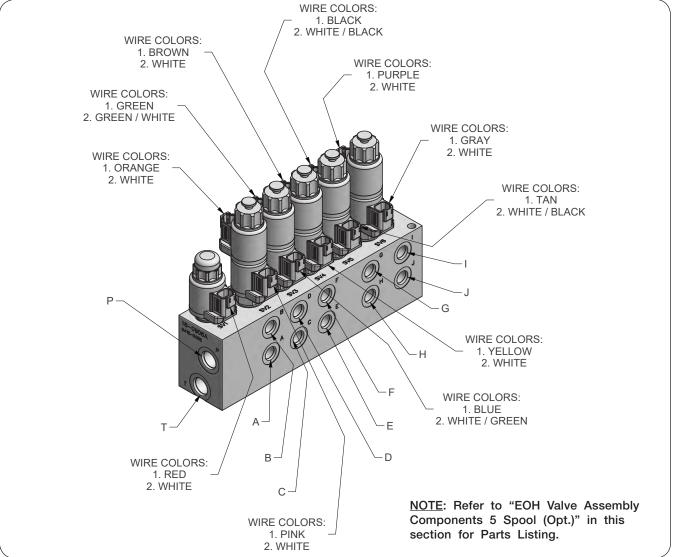


PORT	END OF CYLINDER	FUNCTION
А	BUTT END	Flow Door Close
В	RAM END	Flow Door Open
С	RAM END	Auger Unfold
D	BUTT END	Auger Fold
E	RAM END	Spout Tilt Out
F	BUTT END	Spout Tilt In
G	BUTT END	Joystick / Spout Rotate
Н	RAM END	Joystick / Spout Rotate
I	BUTT END	Auger Pivot Down
J	RAM END	Auger Pivot Up
Р		Tractor Pressure
T		Tractor Return

Unverferth 2520 — Parts

Notes


Electric Over Hydraulic (EOH) Valve Assembly Components 5 Spool (Optional)

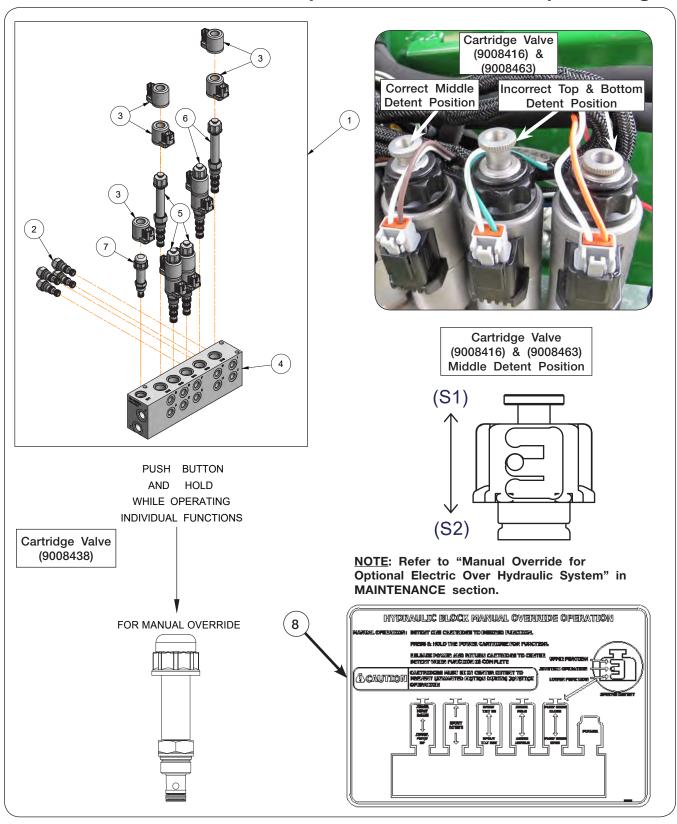

Electric Over Hydraulic (EOH) Valve Assembly Components 5 Spool (Optional)


ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	293416	EOH Block Assembly - 5 Spool Replacement Kit	1	Includes Items 2-7 and Instruction Sheet
2	9003856	Pilot Check Valve	4	
3	9005769	Coil - 12 VDC DN-40	11	
4	9008667	Manifold Block - 5 Spool	1	
5	9008416	Cartridge Valve - 4 Way, 3 Position - Closed Center w/Detented Manual Override	3	Includes Retaining Cap
	9003906	Seal Kit	-	
6	9008463	Cartridge Valve - 4 Way, 3 Position - Open Center w/Detented Manual Override	2	Includes Retaining Cap
	9003906	Seal Kit	-	
7	9008438	Cartridge Valve - 2 Way, 2 Position w/Push Type Manual Overide	1	
	9003904	Seal Kit	-	
8	9008564	Decal, CAUTION (Valve Block)	1	Located Inside Lower Auger Cover Plate

EOH Tractor Circuit Hydraulic Components (Optional)

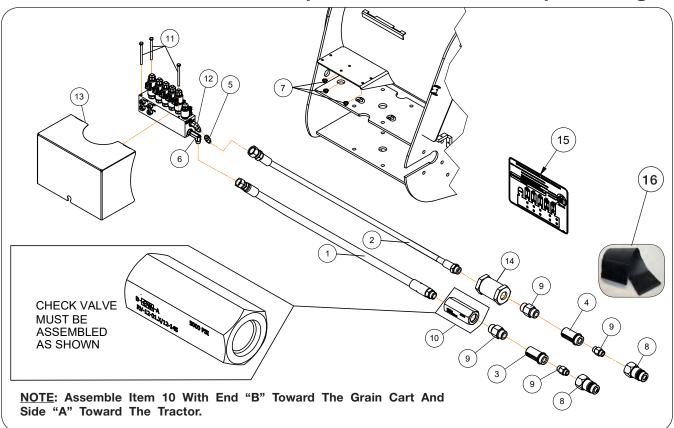


ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	95802	Hydraulic Hose, 1/2 x 205" - 3000 PSI	1	
2	9005574	Hydraulic Hose, 1/4 x 208" - 3000 PSI	1	
3	9009766	Hose Grips - Tan (- Cylinder Extend)	1	Spout Rotate Front (Joystick)
4	9009765	Hose Grips - Tan (+ Cylinder Retract)	1	Spout Rotate Back (Joystick)
5	9006527	JIC Tube Reducer 9/16-18 UNF Male x 9/16-UNF Female	1	
6	901568	Elbow, 90° Extra Long 3/4-16 JIC x 3/4-16 Male O-Ring	1	
7	91257	Large Flange Hex Nut, 5/16-18UNC Gr.5	3	
8	91383	Male Tip Coupling, 3/4-16	2	
9	98508	Adapter 3/4-16 O-Ring Male x 3/4-16 O-Ring Male	4	
10	9006994	Check Line Valve 145 PSI	1	
11	9390-043	Capscrew, 5/16-18UNC x 4 Gr.5	3	
12	9874	Elbow, 90° 9/16-18 JIC Male x 3/4-16 OR ADJ Male	1	
13	295569B	Valve Cover Plate =Black=	1	Also Order Item #15
14	9005403	120 Micron Hydraulic Filter	1	
15	9008564	Decal, CAUTION (Valve Block)	1	Located Inside Cover Plate #13
16	9003848	Velcro Hose Wrap, 2" ID x 127"	1	

Flow Door Circuit Hydraulic Components

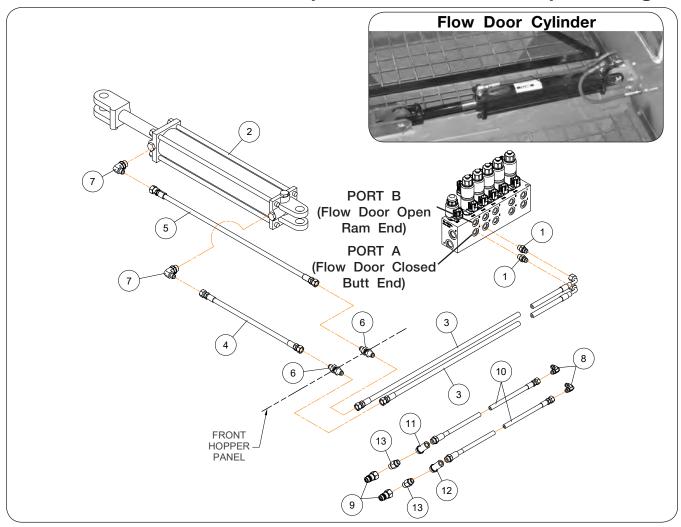


ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	9001495	Adapter, 9/16"-18 JIC Male x 9/16"-18 OR Male	2	Optional
2	9002575	Hydraulic Cylinder, 3" x 16" - 3000 PSI	1	
	9003772	Seal Kit	-	
3	9004442	Hydraulic Hose, 1/4" x 54" - 3000 PSI	2	
4	93472	Hydraulic Hose, 1/4" x 16" - 3000 PSI	1	
5	9002888	Hydraulic Hose, 1/4" x 27" - 3000 PSI	1	
6	95192	Bulkhead Union,	2	
0	93192	9/16"-18 JIC Male x 9/16"-18 JIC Male		
7	9874	Elbow, 90°	2	
,	3074	9/16"-18 JIC Male x 3/4"-16 OR ADJ Male		
8	9897	Elbow, 90°	2	
	3037	9/16"-18 JIC Male x 9/16"-18 JIC Male		
9	91383	Male Tip Coupling, 3/4"-16 OR Female	2	
10	9006587	Hydraulic Hose, 1/4" x 186" - 3000 PSI	2	
11	9009754	Hose Grips - Red (+ Cylinder Extend)	1	Flow Door Open
12	9009755	Hose Grips - Red (- Cylinder Retract)	1	Flow Door Close
13	98508	Adapter, 3/4"-16 OR Male x 3/4"-16 OR Male	2	

Auger Pivot Hydraulic Components

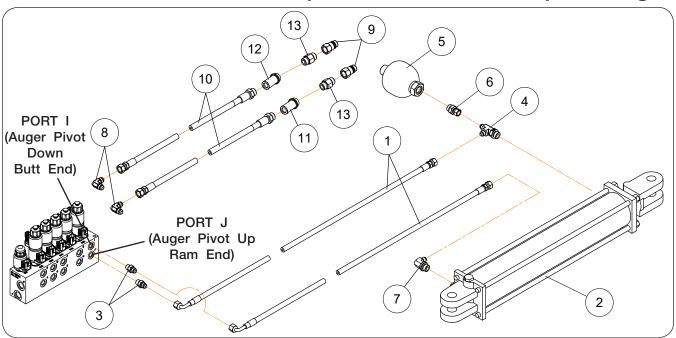


ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	9000925	Hydraulic Hose, 1/4" x 78" - 3000 PSI	2	
	9008456	Hydraulic Cylinder, 3 1/2" x 20" - 3000 PSI	1	
2	9001081	Seal Kit	-	
3	98435	Adapter, 9/16"-18 JIC Male x 9/16"-18 OR Male	2	Optional (Includes 0.030" Red Restrictor)
4	9002155	Tee, 9/16"-18 JIC Male x 3/4"-16 OR ADJ Male	1	
5	9002719	Accumulator - 1800 PSI	1	
6	9002720	Adapter, 3/4"-16 OR Male x 9/16"-18 JIC Female	1	
7	9874	Elbow, 90° 9/16"-18 JIC Male x 3/4"-16 OR ADJ Male	1	
8	9897	Elbow, 90° 9/16"-18 JIC Male x 9/16"-18 JIC Male	2	
9	91383	Male Tip Coupling, 3/4"-16 OR Female	2	
10	9006587	Hydraulic Hose, 1/4" x 186" - 3000 PSI	2	
11	9009761	Hose Grips - Orange (+ Cylinder Extend)	1	Auger Pivot Up
12	9009762	Hose Grips - Orange (- Cylinder Retract)	1	Auger Pivot Down
13	98508	Adapter, 3/4"-16 OR Male x 3/4"-16 OR Male	2	

Auger Fold Hydraulic Components

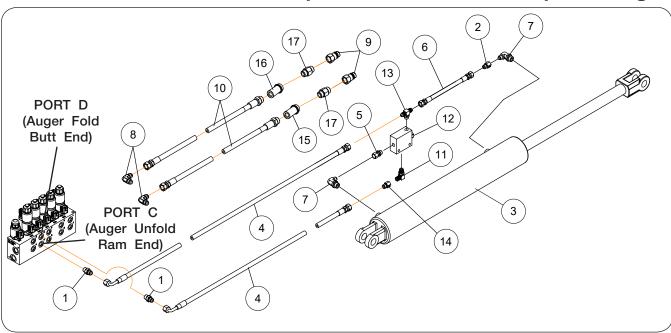

ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	9001495	Adapter, 9/16"-18 JIC Male x 9/16"-18 OR Male	2	Optional
2	9002199	Reducer, 9/16"-18 JIC Female x 9/16"-18 JIC Male	1	0.060" Yellow Restrictor
3	9009659	Hydraulic Cylinder, 3 1/2" x 20" - 3000 PSI	1	
J	9006942	Seal Kit	-	
4	9006608	Hydraulic Hose, 1/4" x 84" - 3000 PSI	2	
5	9002446	Adapter, 9/16"-18 Male O-Ring x 9/16"-18 JIC Female	1	
6	93472	Hydraulic Hose, 1/4" x 16" - 3000 PSI	1	
7	9874	Elbow, 90° 9/16"-18 JIC Male x 3/4"-16 OR ADJ Male	2	
8	9897	Elbow, 90° 9/16"-18 JIC Male x 9/16"-18 JIC Male	2	
9	91383	Male Tip Coupling, 3/4"-16 OR Female	2	
10	9006587	Hydraulic Hose, 1/4" x 186" - 3000 PSI	2	
11	97445	Elbow, 90° 9/16"-18 JIC Male x 9/16"-18 O-Ring ADJ Male	1	
12	9003990	Pilot Operated Check Valve with 3 Ports	1	
13	9001710	Tee 9/16"-18 JIC Male x 9/16"-18 JIC Male x 9/16"-18 0-Ring Male	1	
14	9006166	Reducer, 9/16"-18 JIC Female x 9/16"-18 JIC Male	1	0.090" Green Restrictor
15	9009751	Hose Grips - Green (+ Cylinder Extend)	1	Auger Unfold
16	9009752	Hose Grips - Green (- Cylinder Retract)	1	Auger Fold
17	98508	Adapter, 3/4"-16 OR Male x 3/4"-16 OR Male	2	


EOH Spout Rotate Hydraulic Components (Optional)

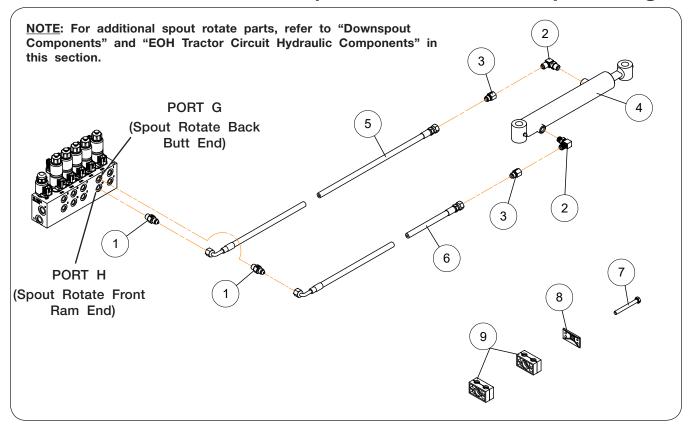

EOH Spout Rotate Hydraulic Components (Optional)

ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	98435	Adapter, 9/16"-18 JIC Male x 9/16"-18 0-Ring Male	2	Optional (Includes 0.030" Red Restrictor)
2	97445	Elbow, 90° 9/16"-18 JIC Male x 9/16"-18 O-Ring ADJ Male	2	
3	9003303	Adapter 9/16"-18 JICF x 9/16"-18 JICM	2	
4	9005135	Cylinder 1 1/2" x 8" (3000 PSI)	1	
4	9005419	Seal Kit	-	
5	9010075	Hydraulic Hose, 1/4" x 231" - 3000 PSI	1	
6	9009730	Hydraulic Hose, 1/4" x 238" - 3000 PSI	1	
7	9390-034	Capscrew, 5/16"-18UNC x 2" G5	2	
8	9003814	Clamp Top Plate, 1/4" x 1 1/8" x 2 1/16"	2	
9	9003816	Clamp, Polypropylene	2	

EOH Spout Tilt Hydraulic Components (Optional)

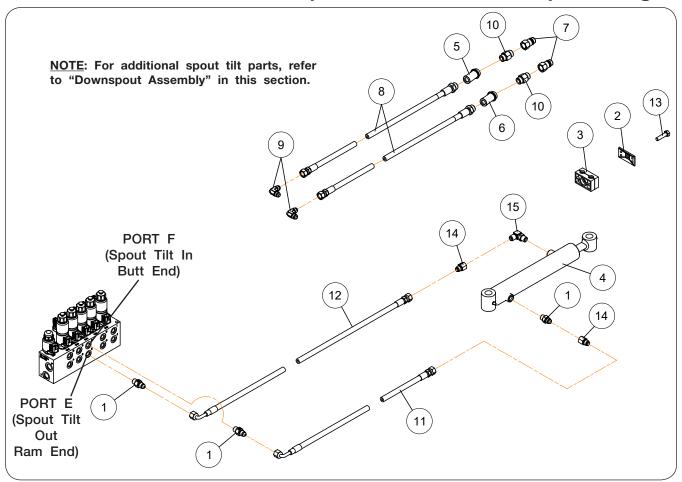

EOH Spout Tilt Hydraulic Components (Optional)

ITEM	PART NO.	DESCRIPTION	QTY.	NOTES
1	9001495	Adapter, 9/16"-18 JIC Male x 9/16"-18 0-Ring Male	3	
2	9003814	Clamp Top Plate, 1/4" x 1 1/8" x 2 1/16"	4	
3	9003816	Clamp, Polypropylene	4	
	9005135	Cylinder 1 1/2" x 8" (3000 PSI)	1	
4	9005419	Seal Kit	-	
5	9009759	Hose Grips - Yellow (+ Cylinder Extend)	1	Spout Out
6	9009760	Hose Grips - Yellow (- Cylinder Retract)	1	Spout In
7	91383	Male Tip Coupling, 3/4"-16 O-Ring Female	2	
8	9005574	Hydraulic Hose, 1/4" x 208" - 3000 PSI	2	
9	9897	Elbow, 90° 9/16"-18 JIC Male x 9/16"-18 JIC Male	2	
10	98508	Adapter, 3/4"-16 OR Male x 3/4"-16 OR Male	2	
11	9006694	Hydraulic Hose, 1/4" x 314" - 3000 PSI	1	
12	9006695	Hydraulic Hose, 1/4" x 324 1/2" - 3000 PSI	1	
13	9390-031	Capscrew, 5/16"-18UNC x 1 1/4" G5	2	
14	95193	Adapter, 9/16"-18 JIC Female x 9/16"-18 JIC Male	2	
15	97445	90° Elbow 9/16"-18 JIC Male x 9/16"-18 O-Ring Male	1	

Unverferth 2520 — Parts

Hydraulic Cylinders

Please visit www.unverferth.com/parts/ for the most current parts listing.

Auger Flow Door Cylinder - 3" x 16"


TEM	PART NO.	DESCRIPTION	QTY	NOTES
	9002575	Cylinder 3" x 16"	1	3/4"-16 O-Ring Ports (3000 PSI)
1	9003772	Seal Kit	1	

Auger Fold Cylinder - 3" x 22"

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9004730	Cylinder 3" x 22"	1	3/4"-16 O-Ring Ports (3000 PSI)
1	9003772	Seal Kit	1	

Auger Pivot Cylinder - 3 1/2" x 20"

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9008456	Cylinder 3 1/2" x 20"	1	3/4"-16 O-Ring Ports (3000 PSI)
1	9001081	Seal Kit	1	

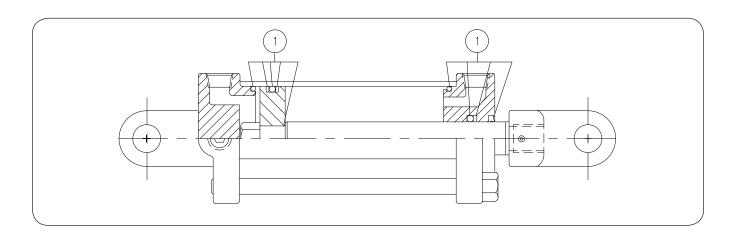

Hydraulic Cylinders

Please visit www.unverferth.com/parts/ for the most current parts listing.

Spout Tilt Cylinder - 1 1/2" x 8"


	ITEM	PART NO.	DESCRIPTION	QTY	NOTES
		9005135	Cylinder 1 1/2" x 8"	1	#6 9/16"-18 O-Ring Ports (3000 PSI)
ſ	1	9005419	Seal Kit	1	

Optional Spout Rotate Cylinder - 1 1/2" x 8"


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9005135	Cylinder, Complete - 3 1/2" x 8"	1	
1	9005419	Seal Kit	1	

Jack Cylinder - 3 1/2" x 8"

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	9009047	Cylinder, Complete - 3 1/2" x 8"	1	
1	9007880	Seal Kit	1	

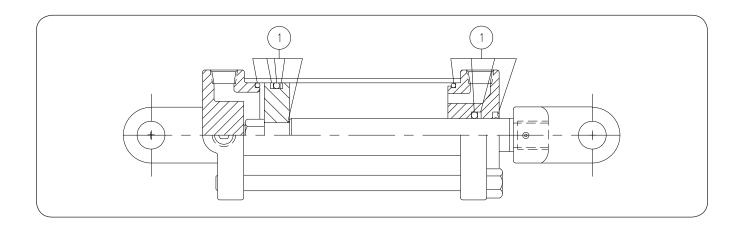


Electrical Components - 5 Function Control Grip

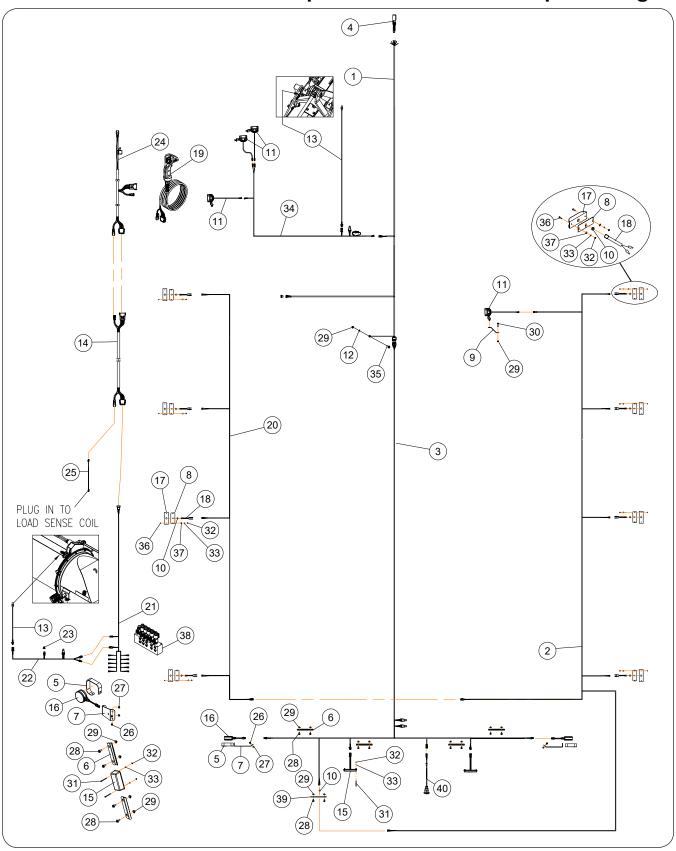

Electrical Components - 5 Function Control Grip

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	9008106	Front Harness - 260"	1	
2	9009032	RH Clearance Light Harness	1	
3	9009587	Rear Harness - 325 7/16"	1	
4	92450	7-Way Plug	1	
5	268678B	Light Guard Plate =Black=	2	
	273371G	Harness Cover =Green=	1	
6	273371R	Harness Cover =Red=	1 4	
7	296726B	Light Bracket =Black=	2	
8	273531B	Light Cover =Black=	8	
9	271574B	Lamp Mount Plate =Black=	1	
10	9001005	Rubber Grommet	9	İ
11	9008957	Work Flood Lamp (LED)	3	
12	9005688	External Tooth Lock Washer	1	
13	9007223	Proximity Switch	1	
14	9008252	Joystick Controller Extension Harness	1	
	9006345	LED Lamp - Red		
15	232169	LED Lamp - Red - Replacement Kit	2	Includes Lamp, & Items 31, 32, & 33
16	9005142	LED Lamp - Amber	2	Initiado Zamp, a temo o 1, o 2, a o o
17	9005529	Amber Light	8	
18	9005542	Light Harness - 2 Wire	8	
19	9008265	L-Series Control Grip - 5 Function	1	
20	9009070	LH Clearance Light Harness	1	
21	9010096	"T" Main Wiring Harness - 189"	1 1	
22	9007286	Wiring Harness - 205" EOH for Proximity Switch	1 1	
23	252386	Plug Assembly, 2 Pin Shroud	1	
24	9008251	Harness - Joystick Power	1	
25	9007266	Wire Harness, 218 5/16" (2 Pin Diverter)	1 1	
26	91256	Large Flange Screw 5/16"-18UNC x 3/4"	4	
27	91257	Flange Nut 5/16"-18UNC	4	
28	95585	Large flange Screw 3/8"-16UNC x 3/4" Grade 5	10	
29	91263	Large Flange Nut, 3/8"-16UNC Grade 5	12	
30	91262	Flange Screw 3/8"-16UNC x 1"	1	
31	903172-350	Pan Head Phillips Screw, #10-32UNF x 1 1/4"	4	
32	9830-016	Hex Nut, #10-32 Grade 2	20	
33	9404-013	Lock Washer, #10	20	
34	9008956	Switch Harness	1	
35	91262	Large Flange Screw, 3/8"-16UNC x 1" Grade 5	1	
36	903172-346	Pan Head Phillips Screw, #10-32UNF x 3/4"	16	
37	9405-052	Flat Washer, 3/16"	16	
38	293416	EOH Block Assembly - 5 Spool Replacement Kit	1	
	291169G	Rear Trim =Green=	1	
39	291169R	Rear Trim =Red=	1	
40		•	<u> </u>	Ontional Bear Hitch
40	9009843	7-Blade Connector	1	Optional Rear Hitch

Weather Guard Tarp Components

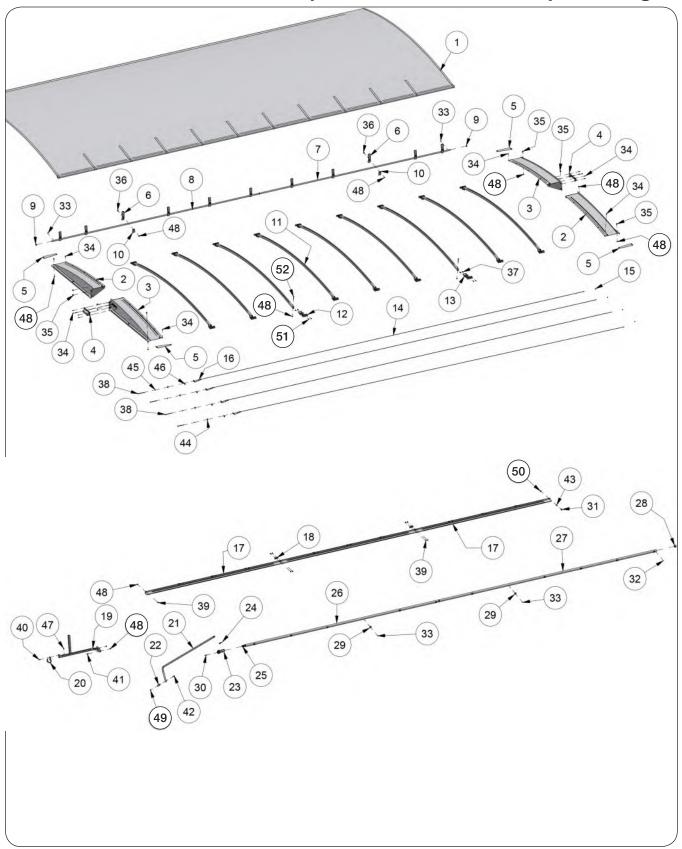

Weather Guard Tarp Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	9008175	Tarp, 188" x 385"	1	
1	9005581	Tarp Repair Kit	-	
2	273965B	End Cap Weldment, RH =Black=	2	
3	296116B	End Cap Weldment, LH =Black=	2	
4	9009504B	End Cap Vent Cover =Black=	2	
5	296355B	Sideboard Cover Plate	4	
6	291661B	Tarp Stop Plate =Black=	11	
7	274866	Tarp Stop Tube, Rear	1	
8	221567	Tarp Stop Tube, Front	1	
9	9005088	Plug, 1 1/8"	2	
10	295183B	Tarp Stop Spacer =Black=	11	
11	291135B	Tarp Bow	9	
12	294328B	Tarp Bow Doubler Plate =Black=	18	
13	283425B	Tarp Bow Bracket =Black=	18	
14	9008179	Tarp Cable Assembly, 373" x 3/32"	4	
15	9005727	Plug, 7/16"	4	
16	281711B	Tarp Cable Bracket =Black=	4	
17	9009716	Latch Plate, 129 1/2"	2	
18	295259B	Tarp Spacer Plate	2	
19	296595B	Tarp Crank Holder Weldment =Black=	1	
20	221771B	Tarp Crank Retainer Bracket	1	
21	287943	Tarp Crank Tube	1	
22	9004969	Tarp Crank Handle	1	
23	9004977	U-Joint Assembly	1	
24	9005305	Lynch Pin, 3/8" x 3"	1	
25	221568	Splined End Shaft	1	
26	274868	Tarp Tube, Front	1	
27	221563	Tarp Tube, Rear	1	
28	9004947	Plug, 1 7/8"	1	
29	9004949	U-Clamp, 1 9/16" x 1 1/2"	11	
30	9392-180	Roll Pin, 3/8" x 2"	1	
31	9004548	Eye Bolt, 3/8"-16UNC x 1 3/4"	1	
32	9001396	Self Drilling Screw, #10-16 x 1/2"	1	
33	9005197	Self Drilling Screw, #10-16 x 3/4"	13	
34	9512	Sefl Drilling Screw, 1/4"-14 x 1"	14	
35	91262	Flange Screw, 3/8"-16UNC x 1" Grade 5	14	
36	9003259	Flange Screw, 3/8"-16UNC x 1 1/4" Grade 5	11	


(Continued on next page)

Unverferth 2520 — Parts

Weather Guard Tarp Components (continued)


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
37	97604	Flange Screw, 5/16"-18UNC x 1" Grade 5	36	
38	9008315	Capscrew, 3/8"-16UNC x 6" Grade 5	4	
39	9009089	Truss Head Screw, 3/8"-16UNC x 1 1/4"	22	
40	9390-055	Capscrew, 3/8"-16UNC x 1" Grade 5	1	
41	9003259	Flange Screw, 3/8"-16UNC x 1 1/4" Grade 5	2	
42	903172-450	Phillips Machine Screw, 3/8"-16UNC x 4 1/2"	1	
43	9405-074	Flat Washer, 3/8" SAE	1	
44	9005696	Fender Washer, 3/8"	4	
45	9005688	External Tooth Lock Washer, 3/8"	4	
46	9005376	U-Nut, 3/8"-16UNC	4	
47	9928	Lock Nut, 3/8"-16UNC	1	
48	9008159	Flanged Lock Nut, 3/8"-16UNC	68	
49	9398-012	Elastic Lock Nut, 3/8"-16UNC	1	
50	91263	Flange Nut, 3/8"-16UNC	1	
51	9010154	Lock Nut, 5/16"-18UNC	36	
52	902703-046	Socket Capscrew, Flat Head, 3/8"-16UNC x 3"	18	

Rear Drop Hitch Components (Optional)

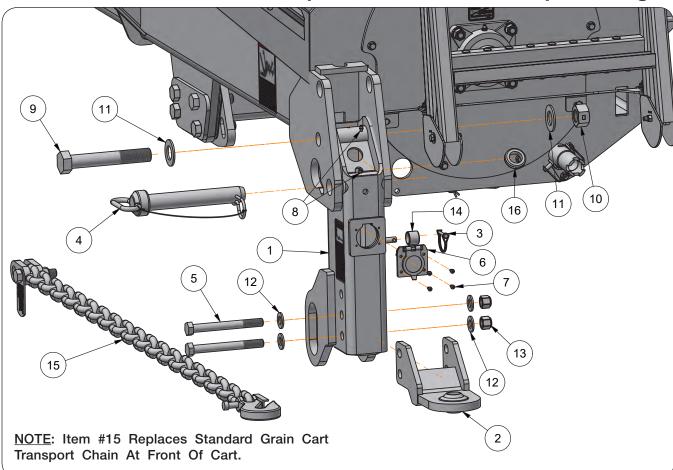

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	296960B	Rear Drop Hitch Kit (Black)	-	Includes Items 1-16. See "Front End Components" For Additional Details.
1	297128B	Rear Drop Hitch Assembly (Black)	1	Includes Decal, WARNING (Towing Capacity) 9009646
2	295978B	Rear Hitch Weldment =Black=	1	
3	9000936	Lynch Pin	1	
4	9009656	Pivot Pin	1	1 1/2" Dia. x 8 1/2" Usable Length
5	9390-159	Capscrew 3/4"-10UNC x 7" Grade 5	2	
6	9009843	7-Blade Connector	1	Adapter: AG to 7-Blade
7	903172-133	Phillips Head Screw #10-24 x 1/2"	4	
8	91160	Grease Zerk	2	
9	9390-225	Capscrew 1 1/4"-7UNC x 8" Grade 5	1	
10	93476	Lock Nut 1 1/4"-7UNC Grade 5	1	
11	9405-128	Flat Washer 1 1/4" SAE	2	
12	9405-104	Flat Washer 3/4" SAE	4	
13	9398-021	Lock Nut 3/4"-10UNC	2	
14	91268	Tension Bushing	1	
15	PF1238-19	Transport Chain #61,000	1	Replaces Standard Grain Cart Transport Chain If Equipped With Optional Rear Hitch
16	97840	Grommet, 1 1/2" OD x 1 1/4" ID	1	


Hydraulic Jack Components

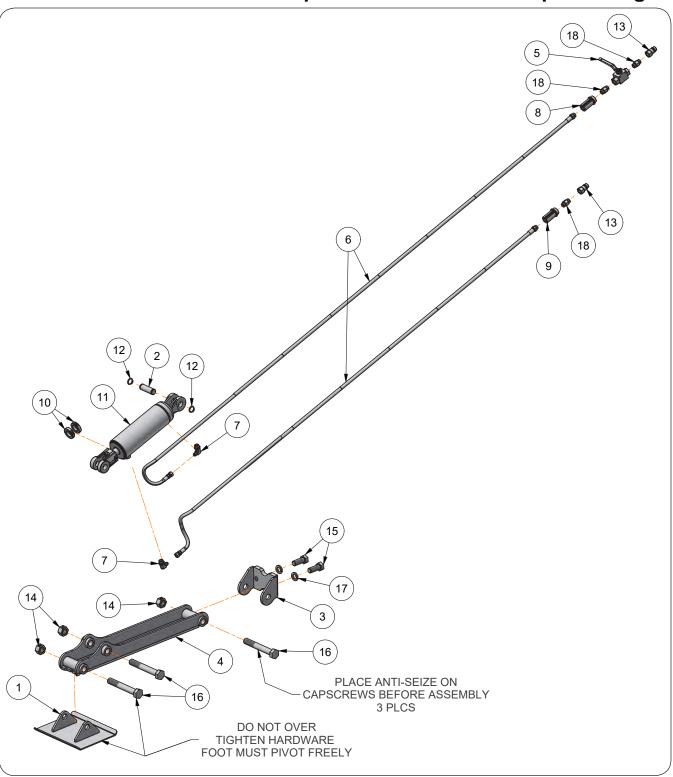

Hydraulic Jack Components

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	271723B	Jack Foot Weldment =Black=	1	
2	272587	Pin, 1" Dia. x 3 1/8"	1	
3	273808B	Jack Mount Weldment =Black=	1	
4	276380B	Jack Leg Weldment =Black=	1	
5	9005426	High Pressure Ball Valve	1	
6	9006068	Hydraulic Hose, 1/4" x 92" - 3000 PSI	2	
7	9006173	Elbow, 90°, 9/16" MFO x 3/4" MORB	2	
8	9009757	Hose Grips - Black (+ Cylinder Extend)	1	Raise Jack
9	9009758	Hose Grips - Black (- Cylinder Retract)	1	Lower Jack
10	9007301	Shaft Collar - 1.25" Bore	2	
11	9009047	Hydraulic Cylinder, 3 1/2" x 8" - 3000 PSI	1	
11	9007880	Seal Kit	-	
12	91192	Retaining Ring, 1"	2	
13	91383	Male Tip Coupling, 3/4"-16	2	
14	92199	Center Locknut, 1"-8UNC	3	
15	9390-165	Capscrew, 7/8"-9UNC x 2 1/4" Grade 5	2	
16	9390-197	Capscrew, 1"-8UNC x 7" Grade 5	3	
17	9404-037	Split Lock Washer, 7/8"	2	
18	98508	Adapter, 3/4"-16 OR Male x 3/4"-16 OR Male	3	

Video System Components (Optional)

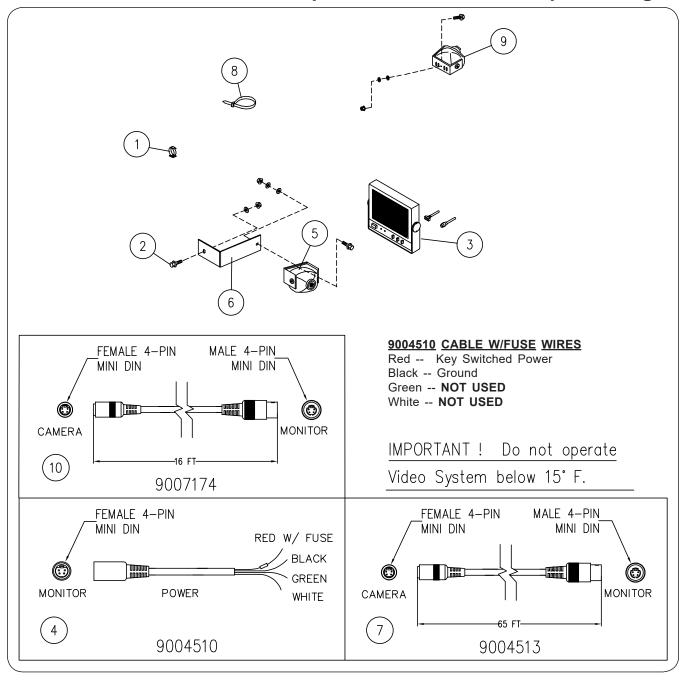

Video System Components (Optional)

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	265770	Video System Kit for Front View	1	Includes Items 1 - 8 and own Instruction Sheet
	9004506	Additional Camera for Rear View	1	Includes Items 6 & 7
1	TAAU14007	Snap Clip, Adhesive	10	
2	9512	Self-Drilling Screw 1/4"-14 x 1"	10	
3	9006273	Monitor, 7" LCD/LED	1	
4	9004510	Cable w/Fuse	1	
5	9006274	Camera	1	
6	265771B	Bracket	1	
7	9004513	Cable, 65'	1	
8	9000107	Cable Tie	AR	
9	9004506	Camera Kit for Rear View with 65' Cable	1	
10	9007174	Camera Cable, 16 ft.	1	



