



Seedbed Tillage

**Raptor™ Strip-Till Tool With
1200 Gallon Liquid Fertilizer Cart**

Models 2030LT & 2015LT
Beginning with Serial Number A62580100

Part No. 45616

Foreword



This symbol identifies important safety messages. When you see it, read the message that follows and be alert to the possibility of personal injury.

Remember, safety instructions stated in this manual are for your protection. Read them carefully and follow them closely when working around or using this machine.

Read and study this manual completely before attempting to operate this implement. Take this manual to the field for handy reference when operating, adjusting, or servicing your machine.

When referenced, “Right-Hand” (RH) and “Left-Hand” (LH) side of the machine are determined by standing behind the machine and facing in the direction of travel.

Pre-Operation Checklist

- Wheel bolts tightened (recheck after initial use)
- Tire pressures checked
- Hardware tightened
- Machine lubricated
- Safety and operating procedures reviewed
- Field adjustment information reviewed
- Hoses properly routed/fittings tight

IMPORTANT

The information, specifications, and illustrations in the manual are on the basis of information available at the time it was written. Due to continuing improvements in the design and manufacture of Unverferth products, all specifications and information contained herein are subject to change without notice.

Table Of Contents

SECTION I
Safety

General Hazard Information 1-2
Safety Decals 1-3
Following Safety Instructions 1-4
Before Servicing 1-4
Before Operating 1-5
During Operation 1-5
Before Transporting 1-5
During Transport 1-6
Pressurized Oil 1-6
Fertilizer and Chemical Hazards 1-7
Preparing for Emergencies 1-7
Wearing Protective Equipment 1-7

SECTION II
Set Up

Pre-Delivery Checklist 2-2
General Set Up Information 2-2
Basic Set Up 2-3
 Hydraulic System 2-3
 Wheel/Tire Set Up 2-3
 SMV Emblem & SIS Decal 2-3
 Transport Lighting and Markings 2-4
 Lamp Set Up 2-4
Pump Set Up 2-5
RCM Set Up 2-6
 PWM Pump Start Up Procedure (Rate Control Module) 2-12
Applicator Calibration 2-13

Table Of Contents

SECTION III
Operation

General Operation Information	3-2
Preparing Tractor.....	3-2
Preparing Raptor Strip-Till Tool	3-3
Hardware	3-3
Pins.....	3-3
Hydraulics	3-3
Lubrication	3-3
Tires/Wheels.....	3-3
Electrical Hook-Up	3-4
Hydraulic Hook-Up.....	3-4
Transporting.....	3-5
Filling Tank.....	3-6
Quick Fill	3-6
Inductor	3-7
Basic Operation	3-7
Tank Mixing.....	3-7
Jug and Inductor Tank Rinsing.....	3-8
Orifice and Nozzle Installation.....	3-9
Flow Ball Indicator.....	3-10

Table Of Contents

SECTION IV
Maintenance

Daily Service..... 4-2
 Beginning of Day 4-2
 End of Day..... 4-2
Annual Service..... 4-3
 Beginning of Season 4-3
 End of Season..... 4-3
 Seasonal Storage..... 4-3
Lubrication Points..... 4-4
Troubleshooting..... 4-5
Hydraulically Driven Centrifugal Pump..... 4-6
 ACE HYD 750 Barrier Fluid Charge..... 4-6
Filters 4-7
 Primary Filter 4-7
 Secondary Filter..... 4-8
Winterizing..... 4-9
Wheel, Hub & Spindle Disassembly and Assembly 4-10
Wheels and Tires..... 4-12
 Wheel Nut Torque..... 4-12
 Tire Pressure 4-12
 Tire Warranty 4-13
Complete Torque Chart 4-14
Hydraulic Fittings – Torque and Installation..... 4-16
Schematics - Electrical..... 4-17
Schematics - Plumbing..... 4-22

Table Of Contents

SECTION V
Parts

Decals	5-2
Axle, Extension, and Wheel Components.....	5-4
Hub Components.....	5-6
Frame Components	5-8
Tank & Baffle Components.....	5-10
Manifold Components.....	5-12
Undercarriage Plumbing Components	5-14
Pump Hydraulic and Plumbing Components	5-16
Strainer Components.....	5-18
Air Vent Components	5-19
Hydraulic Driven Centrifugal PWM Pump - ACE 750	5-20
Hydraulic Driven Centrifugal PWM Pump - ACE 755	5-22
Tank Volume Indicator Components.....	5-24
Water Tank Components.....	5-26
Liquid Fertilizer Kit	5-27
Flow Ball Valves	5-28
Electrical Components.....	5-30
Rate Control Module (RCM) ISO Rate Control Components.....	5-31

FOR INDUCTOR INFORMATION, PLEASE REFER TO YOUR INDUCTOR MANUAL.

SECTION I

Safety

General Hazard Information	1-2
Safety Decals	1-3
Following Safety Instructions	1-4
Before Servicing	1-4
Before Operating	1-5
During Operation	1-5
Before Transporting	1-5
During Transport	1-6
Pressurized Oil	1-6
Fertilizer and Chemical Hazards	1-7
Preparing for Emergencies	1-7
Wearing Protective Equipment	1-7

General Hazard Information

No accident-prevention program can be successful without the wholehearted cooperation of the person who is directly responsible for the operation of the equipment.

A large number of accidents can be prevented only by the operator anticipating the result before the accident is caused and doing something about it. No power-driven equipment, whether it be transportation or processing, whether it be on the highway, in the field, or in the industrial plant, can be safer than the person who is at the controls. If accidents are to be prevented--and they can be prevented--it will be done by the operators who accept the full measure of their responsibility.

It is true that the designer, the manufacturer, and the safety engineer can help; and they will help, but their combined efforts can be wiped out by a single careless act of the operator.

It is said that, "the best kind of a safety device is a careful operator." We, at Unverferth Mfg. Co., Inc. ask that you be that kind of operator.



REMEMBER:
THINK SAFETY
A CAREFUL OPERATOR IS THE
BEST INSURANCE AGAINST AN
ACCIDENT!

SIGNAL WORDS



INDICATES AN EXTREMELY HAZARDOUS SITUATION OR ACTION THAT WILL RESULT IN SERIOUS INJURY OR DEATH.



INDICATES A HAZARDOUS SITUATION OR ACTION THAT COULD RESULT IN SERIOUS INJURY OR DEATH.



INDICATES AN UNSAFE SITUATION OR ACTION THAT MAY RESULT IN PERSONAL INJURY.



Is used for instruction on operating, adjusting, or servicing a machine.

Safety Decals

WARNING

- REPLACE LOST, DAMAGED, PAINTED, OR UNREADABLE DECALS IMMEDIATELY. IF PARTS THAT HAVE DECALS ARE REPLACED, ALSO MAKE SURE TO INSTALL NEW DECALS. THESE DECALS INFORM AND REMIND THE OPERATOR WITH OPERATIONAL INFORMATION AND SAFETY MESSAGES.





PART NO. 9003125
Fluorescent Strip



PART NO. 9003126
Reflector RED




PART NO. 9003127
Reflector AMBER

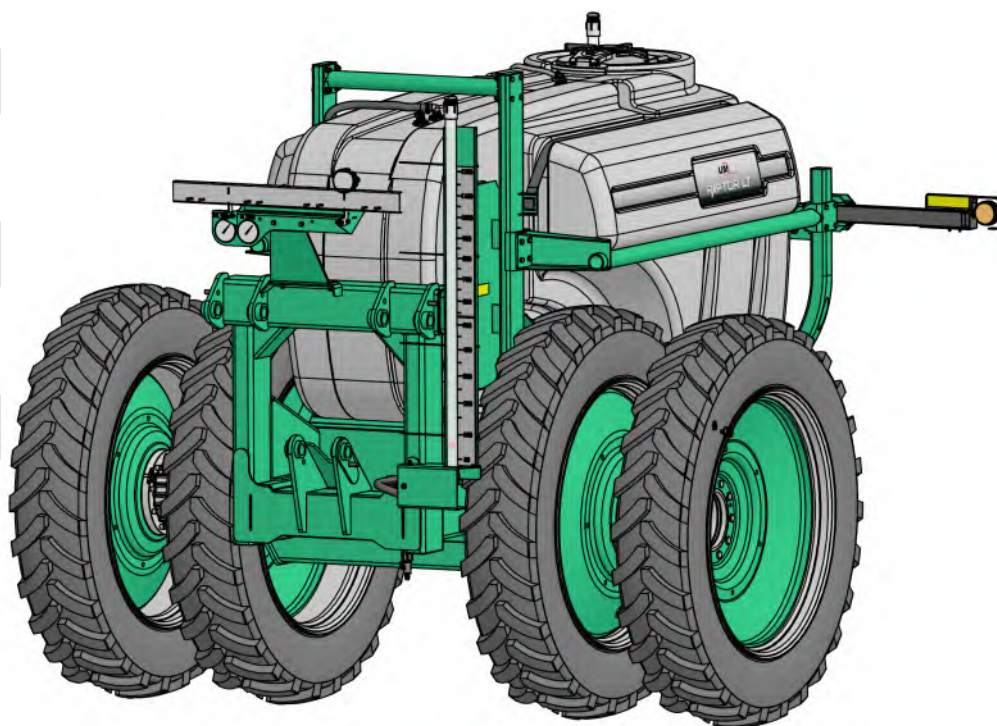


94754

SMV EMBLEM
PART NO. TA510514

 PART NO.
9008714

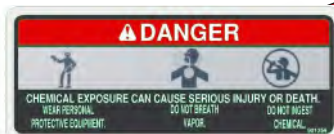

PART NO. 901256

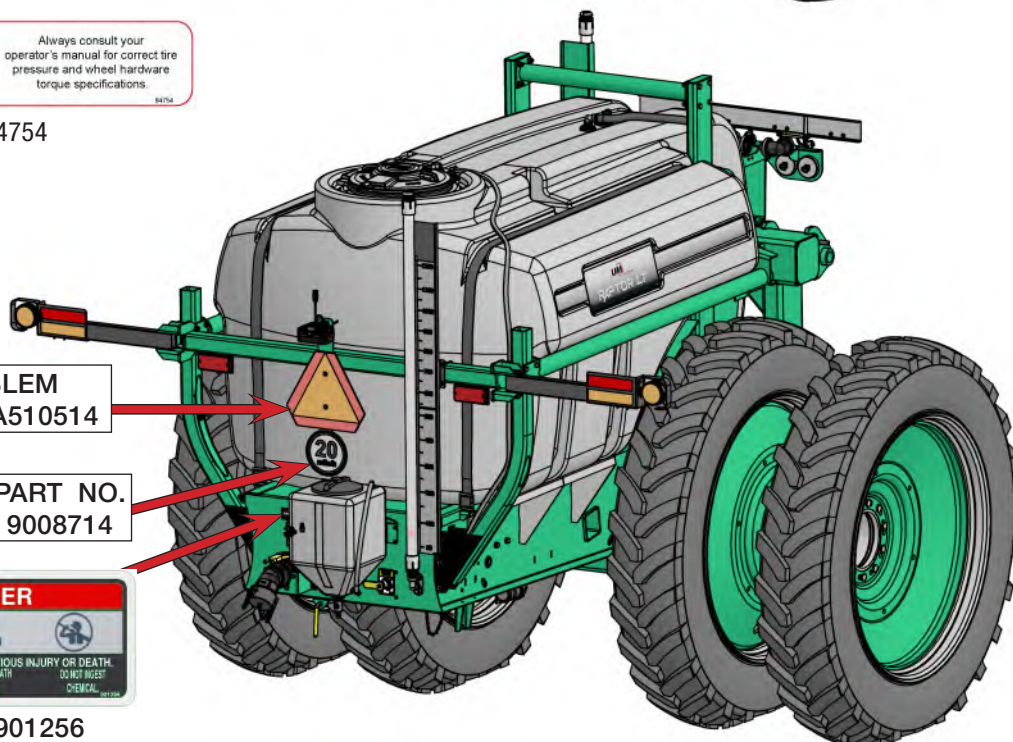

1200 GALLON LIQUID FERTILIZER CART — Safety

Following Safety Instructions

- Read and understand this operator's manual before operating.



- All machinery should be operated only by trained and authorized personnel.
- To prevent machine damage, use only attachments and service parts approved by the manufacturer.

- Always shut tractor engine off and remove key before servicing.



- Avoid personal attire such as loose fitting clothing, shoestrings, drawstrings, pants cuffs, long hair, etc., that may become entangled in moving parts.

- Do not allow anyone to ride on the implement. Make sure everyone is clear before operating machine or towing vehicle.



- Never attempt to operate implement unless you are in driver's seat.

Before Servicing

- Avoid working under an implement; however, if it becomes absolutely unavoidable, make sure the implement is safely blocked.



- Ensure that all applicable safety decals are installed and legible.
- When working around the implement, be careful not to be cut by sharp edges.
- To prevent personal injury or death, always ensure that there are people who remain outside the applicator to assist the person working inside, and that all safe workplace practices are followed. There are restricted mobility and limited exit paths when working inside the implement.
- Secure drawbar pin with safety lock and lock tractor drawbar in fixed position.
- Check equipment for leaks. Repair any leaks before beginning or resuming operation.
- Explosive separation of a tire and rim can cause serious injury or death. Only properly trained personnel should attempt to service a tire and wheel assembly.
- Add sufficient ballast to tractor to maintain steering and braking control at all times. Do not exceed tractor's lift capacity or ballast capacity.

Before Operating

- Do not stand between towing vehicle and implement during hitching.

- Verify that all safety shields are in place and properly secured.

- Always make certain everyone and everything is clear of the machine before beginning operation.

- Ensure that all applicable safety decals are installed and legible.

- When working around the implement, be careful not to be cut by sharp edges.

- Secure drawbar pin with safety latch and lock tractor drawbar in fixed position.

- This applicator is intended to apply only agricultural fertilizers. Attempting to apply other liquids may cause equipment damage and introduce unexpected personal hazards.

- Ensure that the towing vehicle drawbar has sufficient strength to support the draft and vertical tongue load of a fully-loaded applicator.

- Hitch applicator to towing vehicle and clear all personnel from the surrounding area before folding and unfolding wings.

- Ensure tank access covers are fully closed before beginning or resuming operation.

- Residual pressure may exist in applicator plumbing even when unit is not in use. Remove pressure before servicing any plumbing.

- Add sufficient ballast to tractor to maintain steering and braking control at all times. Do not exceed tractor's lift capacity or ballast capacity.

During Operation

- Comply with all laws and product label directions governing safe product application.

- Regulate speed to field conditions. Maintain complete control at all times.

- Never service or lubricate equipment when in operation.

- Keep away from overhead power lines. Electrical shock can cause serious injury or death.

- Use extreme care when operating close to ditches, fences, or on hillsides.

- Do not leave towing vehicle unattended with the engine running.

1200 GALLON LIQUID FERTILIZER CART — Safety

Before Transporting

- Check for proper function of all available transport lights. Make sure that all reflectors are clean and in place on machine. Make sure the SMV emblem and SIS decals are visible to approaching traffic.

- This applicator is not equipped with brakes. Ensure that the towing vehicle has adequate weight and braking capacity to tow this unit.

During Transport

- Comply with all laws governing highway safety when moving machinery.

- Use transport lights as required by all laws to adequately warn operators of other vehicles.


- Use good judgement when transporting equipment on highways. Regulate speed to road conditions and maintain complete control.

- Maximum transport speed of this implement should never exceed 20 mph as indicated on the machine. Maximum transport speed of any combination of implements must not exceed the lowest specified speed of the implements in combination. Do not exceed 10 mph during off-highway travel.

- Slow down before making sharp turns to avoid tipping. Drive slowly over rough ground and side slopes.

- It is probable that this implement is taller, wider and longer than the towing vehicle. Become aware of and avoid all obstacles and hazards in the travel path of the equipment, such as power lines, ditches, etc.

Pressurized Oil

- Relieve the hydraulic system of all pressure before adjusting or servicing. See hydraulic power unit manual for procedure to relieve pressure.
- High-pressure fluids can penetrate the skin and cause serious injury or death. Use cardboard or wood to detect leaks in the hydraulic system. Seek medical treatment immediately if injured by high-pressure fluids. 
- Hydraulic system must be purged of air before operating to prevent serious injury or death.
- Do not bend or strike high-pressure lines. Do not install bent or damaged tubes or hoses.
- Repair all oil leaks. Leaks can cause fires, personal injury, and environmental damage.
- Route hoses and lines carefully to prevent premature failure due to kinking and rubbing against other parts. Make sure that all clamps, guards and shields are installed correctly.
- Check hydraulic hoses and tubes carefully. Replace components as necessary if any of the following conditions are found:
 - End fittings damaged, displaced, or leaking.
 - Outer covering chafed/cut or wire reinforcing exposed.
 - Outer covering ballooning locally.
 - Evidence of kinking or crushing of the flexible part of a hose.

Fertilizer and Chemical Hazards

- Always wear personal protective equipment when working with or near fertilizers and/or chemicals. This equipment includes, but is not limited to: protective eye wear, gloves, shoes, socks, long-sleeved shirt, and long pants. Additional protection may be required for many types of fertilizers and/or chemicals.
- Applicator tanks may contain residual toxic chemicals. **DO NOT ENTER APPLICATOR TANK FOR ANY REASON WITHOUT WEARING PROPER VENTILATION EQUIPMENT.** Failure to do so may result in asphyxiation and death.
- Seek and receive fertilizer and/or chemical product training prior to using agricultural fertilizers and/or chemicals.
- Read and understand the entire label of every fertilizer and/or chemical being applied with this dry spreader.
- Avoid breathing spray mist or vapor.
- Wash hands before eating, drinking, chewing gum, or using the toilet.
- Remove clothing immediately if fertilizers and/or chemicals penetrate clothing and contact skin. Wash thoroughly and put on clean clothing.
- Dispose of unused fertilizer and/or chemical in accordance with fertilizer and/or chemical label directions and local/national regulations.

1200 GALLON LIQUID FERTILIZER CART — Safety

Clean Water Tank

- A clean water tank is provided as standard equipment. It is equipped with a spigot for general washing and a hose for emergency eye washing.
- Always keep clean water in tank. Water in clean water tank is not suitable for human consumption.
- For emergency eyewash, pull hose off of the top fitting and flush affected area.

Preparing for Emergencies

- Keep a first aid kit and properly rated fire extinguisher nearby.



- Keep emergency numbers for fire, rescue, and poison control personnel near the phone.



Wearing Protective Equipment

- Wear clothing and personal protective equipment appropriate for the job.



- Wear steel-toed shoes when operating.



- Wear hearing protection when exposed to loud noises.



- Do not wear additional hearing impairing devices such as radio headphones, etc.



SECTION II

Set Up

Pre-Delivery Checklist.....	2-2
General Set Up Information.....	2-2
Basic Set Up.....	2-3
Hydraulic System.....	2-3
Wheel/Tire Set Up.....	2-3
SMV Emblem & SIS Decal.....	2-3
Transport Lighting and Markings.....	2-4
Lamp Set Up.....	2-4
Pump Set Up.....	2-5
RCM Set Up.....	2-6
PWM Pump Start Up Procedure (Rate Control Module).....	2-12
Applicator Calibration.....	2-13

1200 GALLON LIQUID FERTILIZER CART — Set Up

Pre-Delivery Checklist

- Power wash any road salt off this unit to help prevent corrosion.
- Torque wheel nuts and check tire pressure as specified in MAINTENANCE section.
- All grease fittings have been lubricated.
- Check to be sure all safety decals are correctly located and legible. Replace if damaged.
- Check to be sure all reflective decals are correctly located.
- Check to be sure SMV emblem and SIS decals are in place and shipping film is removed.
- Check to be sure transport lights are working properly.
- Check hydraulic components for leaks.
- Check all plumbing components for leaks.
- Paint all parts scratched during shipment and dealer set up.

General Set Up Information

For your safety, and the safety of others, use proper tools and equipment and always use safe working procedures. Refer to these instructions before starting any work on your machine.

WARNING

- **READ AND UNDERSTAND SAFETY RULES BEFORE OPERATING OR SERVICING THIS MACHINE. REVIEW "SAFETY" SECTION IN THIS MANUAL IF NECESSARY.**
- **TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE THE MACHINE IS SECURELY BLOCKED.**
- **MOVING PARTS CAN CRUSH AND CUT. KEEP AWAY FROM MOVING PARTS.**
- **KEEP HANDS CLEAR OF PINCH POINT AREAS.**
- **FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 8,000 LBS. SPECIFIC LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.**
- **EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING THE IMPLEMENT.**

Basic Set Up

Due to shipping requirements and various dealer-installed options, some initial implement set up may be required after it arrives from the factory. Use the following procedures as needed for initial implement set up.

Hydraulic System

Check all hoses and cylinders for signs of leakage. Hoses should not be kinked, twisted or rubbing against sharp edges. Re-route or repair hoses as necessary. Refer to SAFETY section for additional information on safe repair and inspection of hydraulic components.

Wheel/Tire Set Up

Tire Pressure

Tire pressure must be verified before first use and adjusted as necessary. Refer to MAINTENANCE section of this manual for information on tire pressure.

Wheel Nuts

CAUTION


- IMPROPERLY TORQUED WHEEL NUTS/BOLTS CAN CAUSE A LOSS OF IMPLEMENT CONTROL AND MACHINE DAMAGE. WHEEL NUTS/BOLTS MUST BE CHECKED REGULARLY. SEE TORQUE PAGE IN THE "MAINTENANCE" SECTION FOR PROPER WHEEL NUT/BOLT SPECIFICATIONS. WARRANTY DOES NOT COVER FAILURES CAUSED BY IMPROPERLY TORQUED WHEEL NUTS/BOLTS.

SMV Emblem & SIS Decal

Before the implement is used the reflective surface of the SMV must face rearward. This may require removal of film protecting the reflective surface or removing and reinstallation of the SMV.

When reinstalling the SMV make sure that it is mounted with the wide part of the SMV at the bottom.

Ensure the SIS decals (one on the front and one on the rear of the implement) are clean and visible.

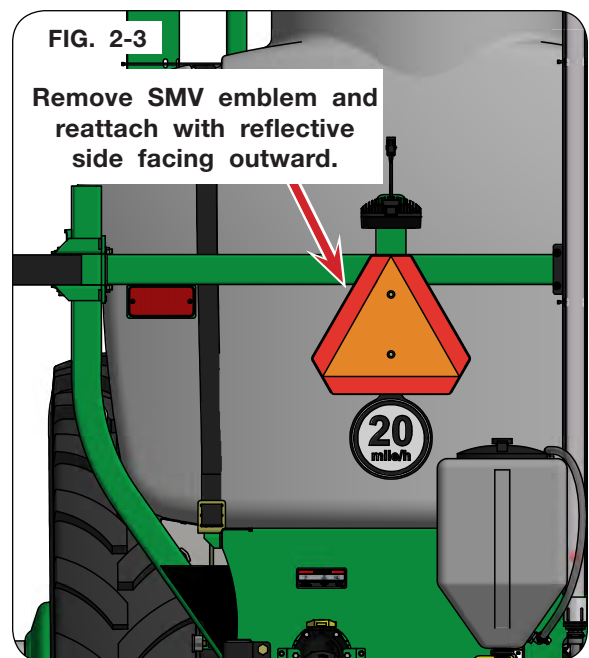

1200 GALLON LIQUID FERTILIZER CART — Set Up

Basic Set Up (continued)

Transport Lighting and Markings

Compliance with all lighting and marking laws is the responsibility of the operator at the time of travel.


See federal regulation 49 CFR 562; available at www.govinfo.gov for US federal law requirements.

See your Unverferth dealer for additional brackets, reflectors, or lights to meet your requirements.

Lamp Set Up

Pivot lamp extension arms into position at sides of implement. Be sure that the red reflector and orange fluorescent decal are facing the rear of the implement.

FIG. 2-5

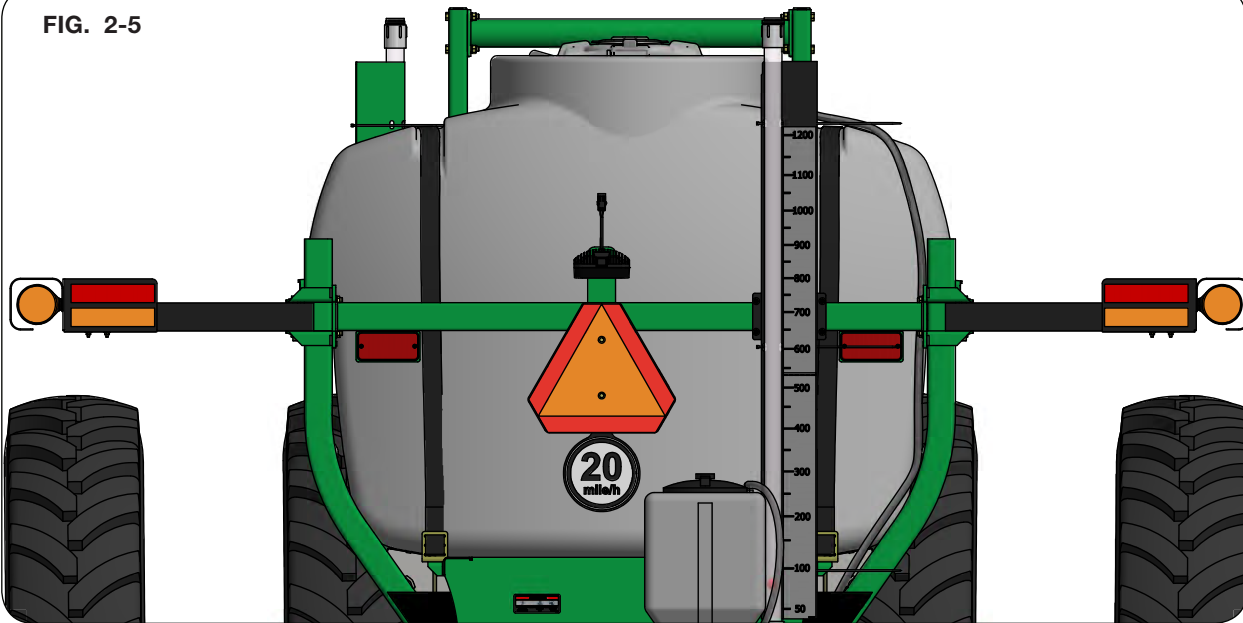

1200 GALLON LIQUID FERTILIZER CART — Set Up

Pump Set Up

For set up of a PWM (Pulse Width Modulated) or non-PWM pump, refer to your Rate controller manual for details. For specific details related to your product pump, please refer to your pump manual.

NOTE: Foot switch must be installed and connected to ISO harness behind the ISO plug at the rear of the tractor for PWM pump to function properly. Extension harness (9503390) may also be required.

IMPORTANT

- Do not run pump for extended periods with outlet flow fully blocked. Overheating and pump damage can result.
- Liquid must be in the Solution Tank. Refer to Filling Applicator in the OPERATION Section.
- Toolbar should be unfolded when setting the pump pressure. Refer to toolbar operation in the OPERATION Section.
- The Pump Inlet valve should be open.



FIG. 2-18

Setting the Pump Pressure (PWM Pump)

1. Rate controller must be calibrated. Refer to your RCM manual.
2. Select manual control on the console and turn the master switch on. Press and hold the Inc. button for 5 seconds to verify cartridge valve is fully open.
3. Turn off section valves and agitation valve if equipped.
4. Turn the tractor's hydraulic flow dial to 100%. The PWM cartridge valve is sized to divert a maximum of 11 GPM to the pump. Decrease the tractor's hydraulic flow until Nutrimax system pressure starts to drop, to approximately 100 PSI.

NOTE: The agitation valve is manually controlled at the rear of the tank.

5. Increase the agitation until the pump pressure drops an additional 5 PSI.

RCM Set Up

Whenever the tractor is turned off or the ECU for the applicator loses power, the following steps will have to be performed in order for the RCM to function properly right away.




NOTE: Before programming the RCM, ensure the RCM monitor is connected to the battery.

1. Initial start-up screen. At “Profile Name” box, name as “UM Raptor”. Click “Machine Type” and select “Liquid Fert. Tool”. Next, enter 30 ft. or 40 ft. for “Application Width” depending on machine size and configuration. Click next arrow. (FIG 2-19)

NOTE: Highest value for “Application Width” is 480 in.


2. Default for “ECU” box is 1. Click “Number of Products” box and enter 1. Click next. (FIG 2-20)

3. Under “Application Type”, select “Liquid”. Click next. (FIG 2-21)

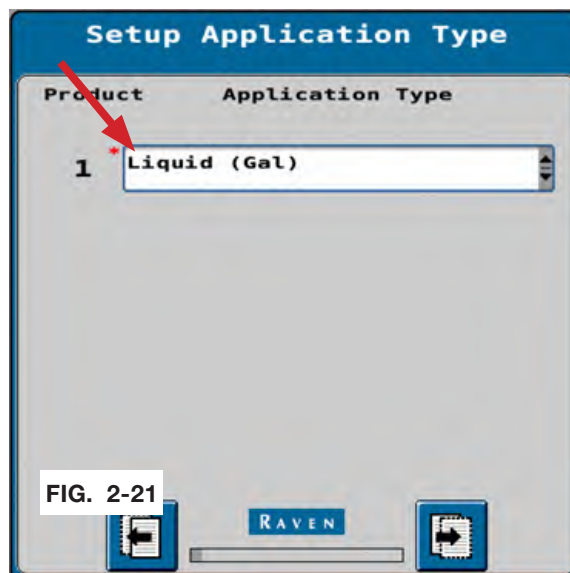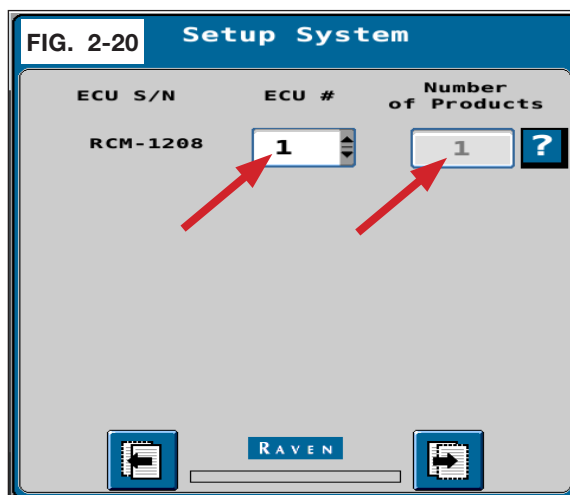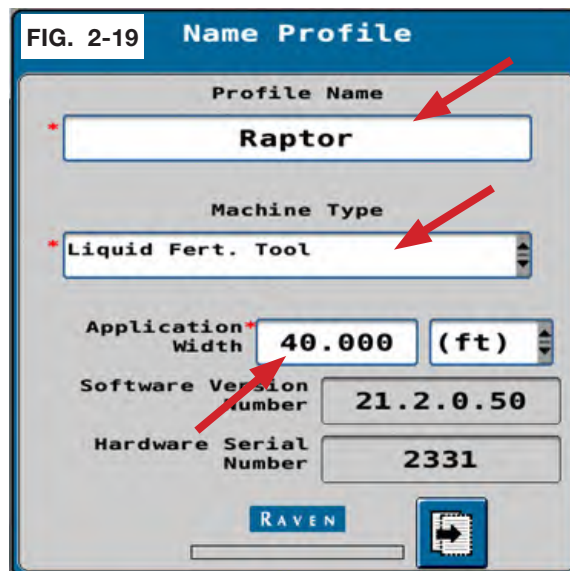

RCM Set Up (continued)


- Under “Number of Sections”, select 4 for 30 FT. - 40 FT. units. Default for “Section Valve Type” is 3-Wire. Uncheck “Equal Width Sections” box. Click next. (FIG 2-22)

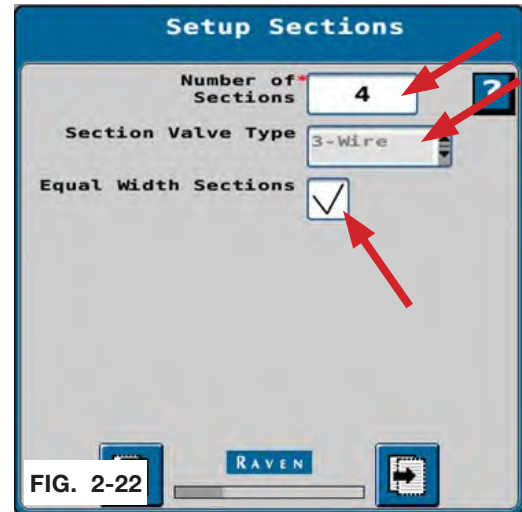

NOTE: Each section is listed in feet and will equal total application width.

NOTE: See Controller Calibration Settings on page 2-19 for specific toolbar lengths.

- Enter values for each section. Click next. (FIG 2-23).

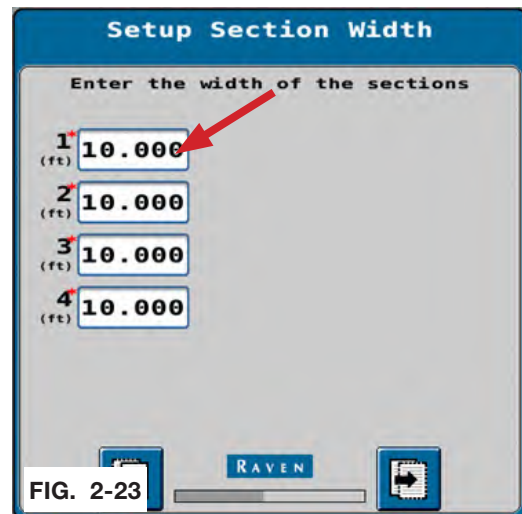


- Ensure all the appropriate boxes are selected as “None”. (FIG 2-24)




1200 GALLON LIQUID FERTILIZER CART — Set Up

RCM Set Up (continued)


7. No action required on this screen. Make sure this matches toolbar size and section widths. Continue to next page. (FIG 2-25)

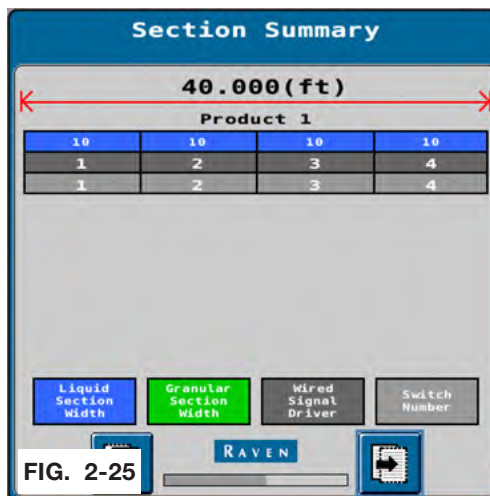

8. Under "Pressure Sensor 1", select "0-250 psi (1-5V)". Under "Pressure Sensor 2", select "None". Click next. (FIG 2-26)

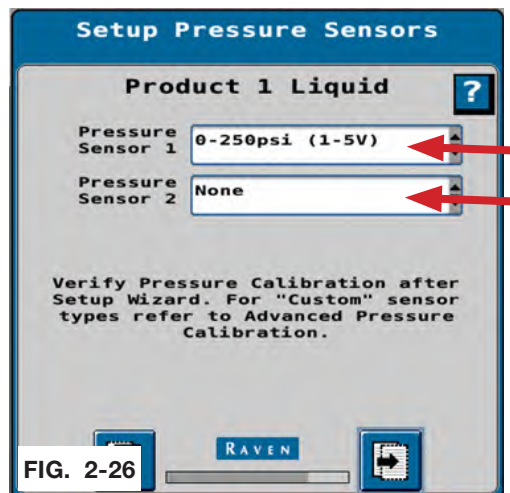


9. Under "Pressure 1", set minimum and maximum pressures. Recommend starting at 10 psi and 150 psi. Check box if alarm is desired when above max or below min. Click next. (FIG 2-27)

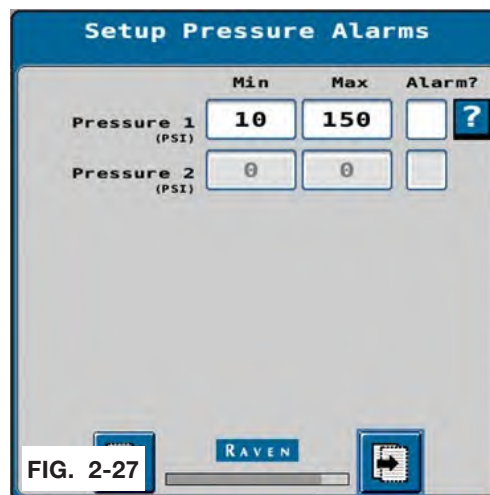

RCM Set Up (continued)


10. For the auxiliary functions: uncheck both boxes. Click next page. (FIG. 2-28)

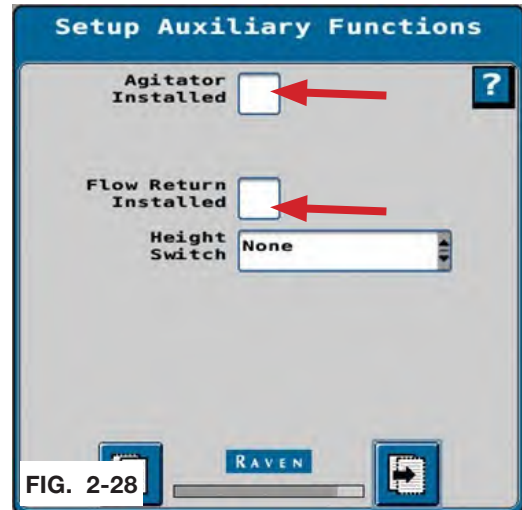

11. “Product 1” is the set up for the liquid. For “Control Valve Type”, always select “PWM”. (FIG. 2-29)


12. For “Valve Response Rate”, enter 40. This is how fast the valve responds.

13. Default for “Control Deadband %” box is 3 and “Valve Delay” box is 0.

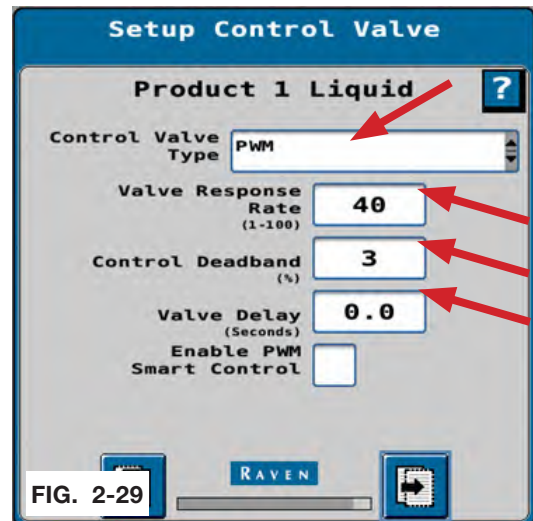

14. For the PWM valve “Coil Frequency”, ensure the value is set at 122. (FIG. 2-30)

15. Set the “PWM High Limit” at 100, “PWM Low Limit” at 10 and “PWM Standby” at 0. Click next page. (FIG. 2-30)

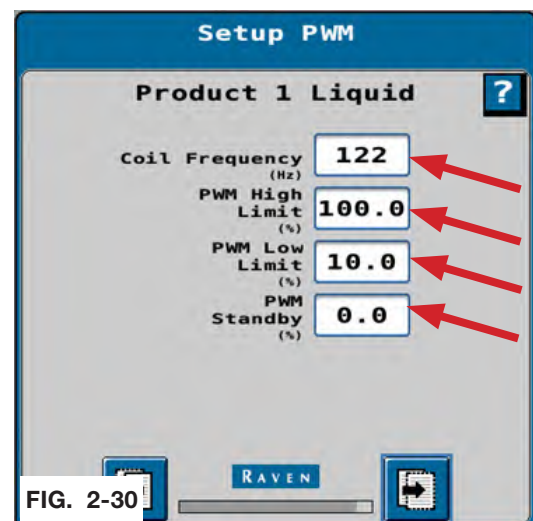


1200 GALLON LIQUID FERTILIZER CART — Set Up

RCM Set Up (continued)

16. For “Flowmeter Calibration”, check the tag on the flowmeter and enter the value. (FIG. 2-31)

NOTE: Flowmeter is located on top of the toolbar behind the flow ball monitor assembly.

17. Under “Flowmeter Pulse/Units” enter 10 gal. Click next page. (FIG. 2-31)

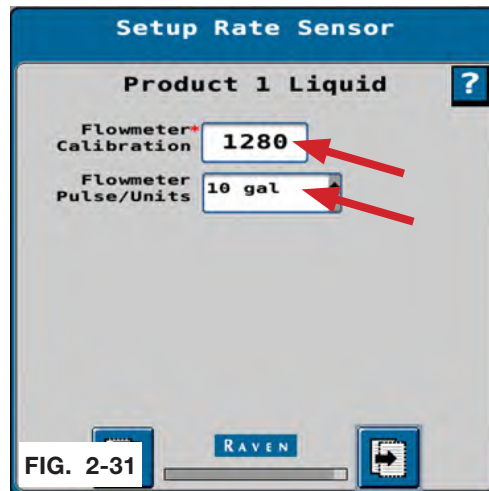


18. For “Tank Fill/Level Sensor”, select “None”. (FIG. 2-32)

19. Enter gallon capacity of unit for “Tank Capacity”.

20. Enter current gallons in unit for “Current Tank Level”.

21. “Low Tank Level” is the value an alarm is set off for a low bin level.

NOTE: Recommended setting is 250 and ensure the “Alarm” box is checked.

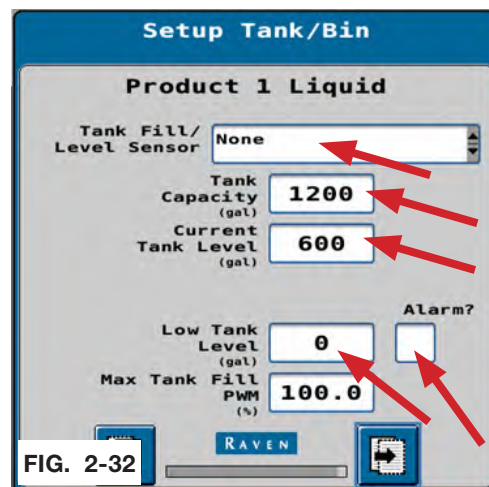


22. “Set Up Rates” page controls the application rates for speed and determines how much product is being applied for “Product 1”. Enter three “Preset Rate Values”, as desired, which can be clicked between on the home screen. On the home screen, target rates can be entered as well. (FIG. 2-33)

23. Enter “Rate Bump” value in an increment as desired.

24. For “Rate Selection”, manually input a selection or import an “Rx”.

25. “Display Smoothing” needs to be checked and “Decimal Shift” remains at 0.


26. “Standby Pressure” remains at 0. Standby PWM valve is used instead. Click next page. (FIG. 2-33)

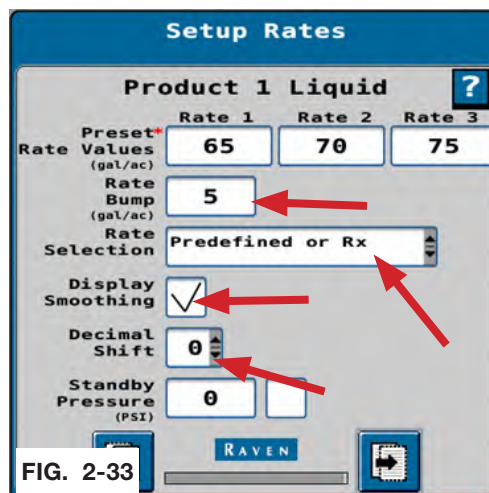

RCM Set Up (continued)


27. Enter 20 for “Off Rate Alarm” and check box. Click next page. (FIG. 2-34)

NOTE: Alarm prompts when over 20% off target rate.

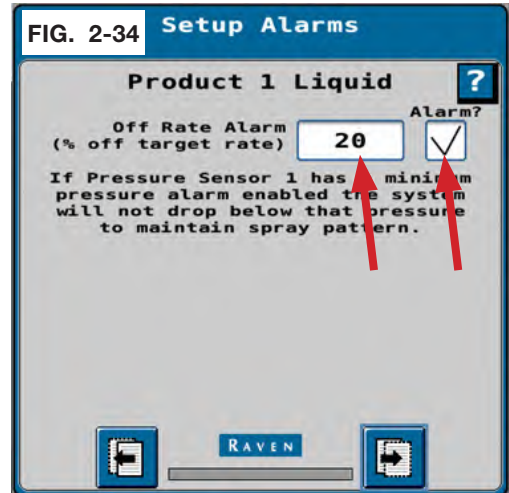

NOTE: “Number of Products” corresponds to liquid application. (FIG. 2-35)

28. No action required on this screen. Shows the set up summary. Make sure all values are correct. Continue to next page. (FIG. 2-35)

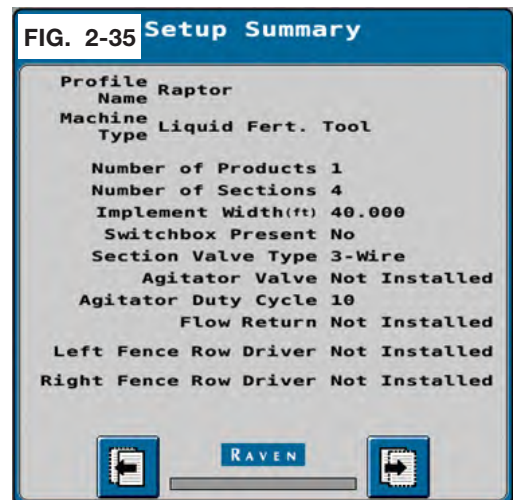

1200 GALLON LIQUID FERTILIZER CART — Set Up

RCM Set Up (continued)

PWM Pump Start Up Procedure (Rate Control Module)



Whenever the tractor is turned off or the ECU for the PWM Pump loses power, the following steps will have to be performed in order for the PWM Pump to function properly right away.

1. Fill solution tank with desired product and reduce the flow on the SCV to lowest setting for the PWM pump before engaging.


Initial start-up screen (FIG. 2-36).

2. Switch the system from Auto to Manual (FIG. 2-36).

3. Cycle the system from Off to On. (FIG. 2-37)

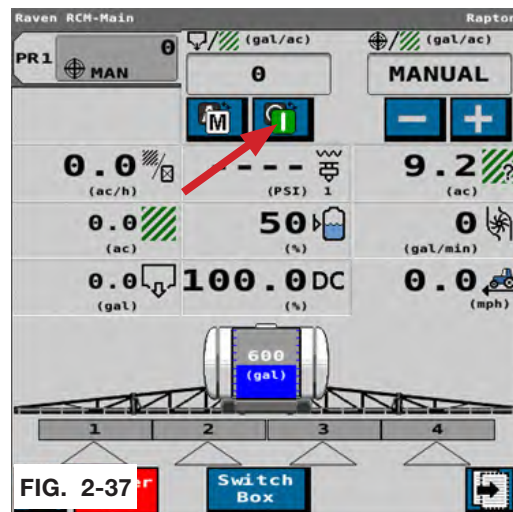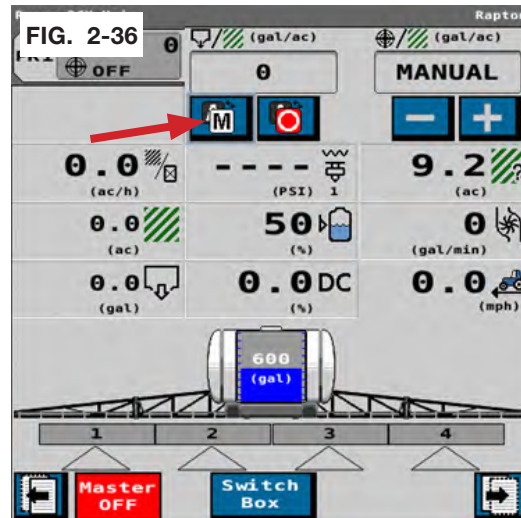

4. Engage the SCV in continuous flow for the pump on the tractor.
5. Click the manual “+” button to increase the DC value to 100%. (FIG. 2-38)
6. Increase the hydraulic flow on the tractor until the pressure reaches 100 psi.
7. Switch the system from Manual back to Auto. The pump will go into Standby mode, and the pressure should drop.

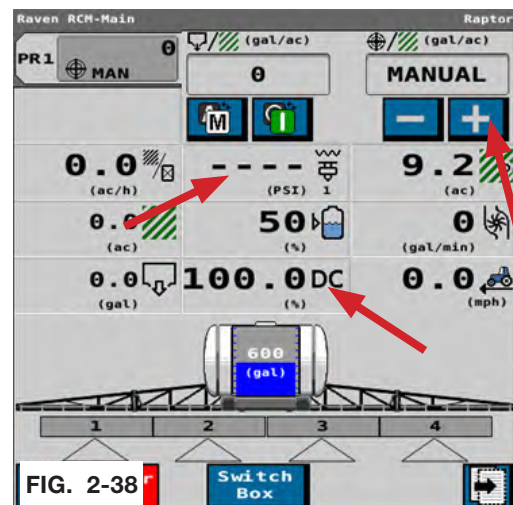

Applicator Calibration

Determine Required Nozzle Size

Use the following procedure to assist with sizing the nozzle and calibrating the applicator. Additional information can be found in the rate controller owner's manual and also obtained from nozzle manufacturers.

The following procedure assumes that an electronic rate controller is being used.

1. Determine the typical operating speed (in MPH) and coverage rate (in GPA) that will be used.
2. Calculate nozzle flow:

$$\text{Nozzle GPM} = \frac{\text{MPH} \times \text{GPA} \times \text{Nozzle Spacing} \times \text{DCF}^*}{5940}$$

*DCF = Density Conversion Factor

Weight of Solution	Density Conversion Factor (DCF)
8.34 lb./gal. (Water)	1.00
10.65 lb./gal. (28% Nitrogen)	1.13
11.05 lb./gal. (32% Nitrogen)	1.15

Example:

Speed = 8 miles per hour
 Rate = 10 gallons per acre
 Nozzle Spacing = 30 inches
 Liquid = Water

$$\text{Nozzle GPM} = \frac{8 \times 10 \times 30 \times 1.00^*}{5940} = 0.40 \text{ GPM}$$

3. Go to the PARTS section, "Injector Nozzles and Injector Knives" to select a nozzle tip.

Choose a nozzle that will provide the calculated GPM within the nozzle's operating pressure range. Typically, 2 or 3 nozzle sizes will be found that meet the calculated GPM. However, it is usually a good practice to choose a flow size that lists this GPM in the mid-portion of the nozzle's advertised ratings.

4. Go to the PARTS section, "Injector Nozzles and Injector Knives" to select a nozzle and knife orifice size. Choose a type of nozzle or orifice for the given application.

INJECTOR NOZZLE & ORIFICE GUIDE			
Nozzle Size	Knife Orifice Size	P.S.I.	Approx. G.P.A. at 30" Rows at 10 M.P.H.
#0004	#57	30 P.S.I.	7
#0006	#70		10
#0008	#80		14
#0010	#89		17
#0015	#107		26
#0020	#125		34
#0030	#151		51
#0040	#177		69

1200 GALLON LIQUID FERTILIZER CART — Set Up

Notes

SECTION III

Operation

General Operation Information	3-2
General Operation Information	3-2
Preparing Tractor.....	3-2
Preparing Raptor Strip-Till Tool	3-3
Hardware	3-3
Pins.....	3-3
Hydraulics	3-3
Lubrication	3-3
Tires/Wheels.....	3-3
Electrical Hook-Up	3-4
Hydraulic Hook-Up.....	3-4
Transporting.....	3-5
Filling Tank.....	3-6
Quick Fill	3-6
Inductor	3-7
Basic Operation	3-7
Tank Mixing	3-7
Jug and Inductor Tank Rinsing.....	3-8
Orifice and Nozzle Installation.....	3-9
Flow Ball Indicator.....	3-10

General Operation Information

WARNING

- **READ AND UNDERSTAND SAFETY RULES BEFORE OPERATING OR SERVICING THIS MACHINE. REVIEW "SAFETY" SECTION IN THIS MANUAL IF NECESSARY.**

Read this operation section thoroughly. Acquaint yourself with the adjustments required to obtain efficient and trouble-free operations.

Preparing Tractor

Before operating implement refer to tractor operator's manual for information concerning safe methods of operation, hydraulics, hitch adjustment, tire inflation, wheel adjustments, and tractor weights.

Check tractor brakes and transport lights. Make sure they are in proper working order.

Check tractor hydraulic oil reservoir and add oil if needed.

Be sure tractor drawbar has sufficient capacity to operate the implement.

Preparing Raptor Strip-Till Tool

Perform the service checks as outlined below. Repair or replace any damaged or worn parts before operating.

Hardware

Before going to the field, check all hardware for tightness. Recheck all bolts for tightness, after the unit has been operated for several hours.

Pins

Before going to the field, check that all pins are in place and are in good condition. Replace any worn, damaged, or missing pins.

Check that locking hardware for pins are in place and tight.

Hydraulics

Check routing of all hydraulic hoses. Hoses should not be kinked, twisted, or rubbing against sharp edges. Hoses should be secure with tie straps.

Check hoses and fittings for hydraulic leaks. Tighten or replace as required.

Lubrication

Lubricate unit as outlined in MAINTENANCE section.

Tires/Wheels

Check tire pressure, see MAINTENANCE section for recommended air pressure. Be sure tire pressure is equal in all tires.

For questions regarding new tire warranty, please contact your local original equipment tire dealer. Used tires carry no warranty. Tire manufacturers' phone numbers and web sites are listed in the MAINTENANCE section of this manual for your convenience.

CAUTION

- IMPROPERLY TORQUED WHEEL NUTS/BOLTS CAN CAUSE A LOSS OF IMPLEMENT CONTROL AND MACHINE DAMAGE. WHEEL NUTS/BOLTS MUST BE CHECKED REGULARLY. SEE TORQUE PAGE IN THE “MAINTENANCE” SECTION FOR PROPER WHEEL NUT/BOLT SPECIFICATIONS. WARRANTY DOES NOT COVER FAILURES CAUSED BY IMPROPERLY TORQUED WHEEL NUTS/BOLTS.

Preparing Raptor Strip-Till Tool (continued)

Electrical Hook-Up

NOTE: Unverferth Manufacturing has designed the transport lighting and marking kit to meet United States federal law and ASABE standards at the time of manufacture. Machine modifications, including additional features or changes to the intended configurations, may require updates to the lighting and marking as well.

Compliance with all lighting and marking laws is the responsibility of the operator at the time of travel.

See federal regulation 49 CFR 562; available at www.govinfo.gov for US federal law requirements.

See your Unverferth dealer for additional brackets, reflectors, or lights to meet your requirements.

Connect the main, light harness to the tractor.

Fertilizer cart requires ISO connection to tractor. Connect ISO harness, and route foot switch harness into tractor cab.

Hydraulic Hook-Up

WARNING

- **ALWAYS RELIEVE HYDRAULIC SYSTEM PRESSURE BEFORE DISCONNECTING HOSES FROM TRACTOR OR SERVICING HYDRAULIC SYSTEM. SEE TRACTOR OPERATOR'S MANUAL FOR PROPER PROCEDURES.**

NOTE: Refer to MAINTENANCE section when checking hydraulic circuit operation.

After cleaning hydraulic hose couplers, connect to tractor hydraulic circuits as follows:

Cart Solution Pump Hydraulics

IMPORTANT

- *The cart pump is hydraulically driven, and needs to be configured correctly to match the type of hydraulic system on the tractor (closed center, open center, load-sensing, etc.). Failure to configure the pump correctly may permanently damage the pump through over-speeding and over-pressurizing. Refer to the SET UP SECTION of this manual for guidelines on configuring the cart pump.*

Connect hoses from the cart pump to a tractor selective control valve (SCV) circuit. The pump inlet (marked PUMP PRESSURE) should be connected to the RETRACT port and the pump outlet (marked PUMP RETURN) to a low-pressure return port at the tractor (recommended) or to the EXTEND port. If connected to the EXTEND port, it is recommended to shut the pump down in float to preserve pump life.

NOTE: It is recommended to pressurize all hydraulic circuits using the retract outlets on the SCVs. This allows all circuits to be shut-off by engaging the hydraulic float feature of the tractor hydraulic system.

Filling Tank

Quick Fill

CAUTION

- NEVER LEAVE CART UNATTENDED WHILE FILLING. TANK CONTENTS MAY SPILL OUT OF AIR VENTS IF OVERFILLED.

IMPORTANT

- The tank is designed with additional air expansion space in excess of the rated capacity. The full capacity can be reached with the level approximately 6"- 8" below the top surface of the tank access hatch (lid opened).

The QUICK-FILL VALVE and indicator level are shown in FIG. 3-2 for reference.

1. Assure that QUICK-FILL VALVE and drain valve are <OFF>.
2. To fill the tank, remove the cap and attach the supply hose to the 3" quick fill coupler. Turn quick-fill valve on the tank <ON>.
3. Fill cart solution tank to desired level.
4. Return valve to <OFF> when desired fill level is reached.
5. Disconnect supply hose and reinstall the cap when finished.

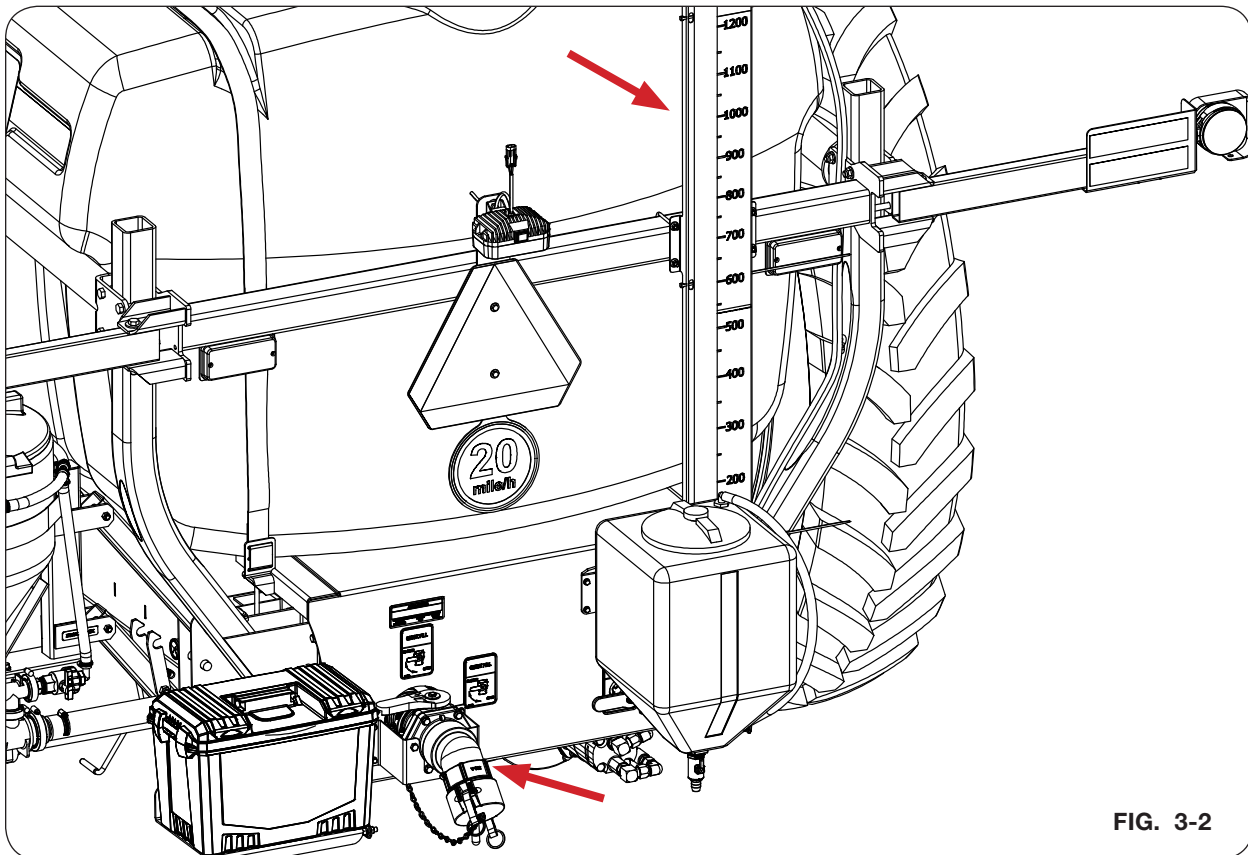


FIG. 3-2

Inductor

Tank Mixing

Fertilizer additives can be added to the solution tank through the use of the optional inductor. Before adding fertilizer additives, ensure that the tank contains at least 50 gallons of liquid.

⚠ WARNING

- ALWAYS WEAR PERSONAL PROTECTIVE EQUIPMENT WHEN WORKING WITH OR NEAR CHEMICALS. THIS EQUIPMENT INCLUDES, BUT IS NOT LIMITED TO: PROTECTIVE EYE WEAR, GLOVES, SHOES, SOCKS, LONG-SLEEVED SHIRT, AND LONG PANTS. ADDITIONAL PROTECTION MAY BE REQUIRED FOR MANY TYPES OF CHEMICALS.

Basic Operation

IMPORTANT

- The main solution tank should contain at least 50 gallons of liquid.

The INDUCTION VALVE, INDUCTOR MIX VALVE, and tank are shown in FIG. 3-3 and 3-4 for reference.

1. Assure INDUCTION VALVE on the bottom of the inductor tank is in the <OFF> position.
2. Push on the inductor release latch lever, and lower the inductor to fill position.
3. Set valves:

VALVE SETTINGS

PUMP INLET VALVE	OPEN
INDUCTOR RINSE VALVE (OPT.)	OFF
AGITATION CONTROL (100 PSI)	PARTIALLY OPEN 1/4
INDUCTION VALVE	OFF

4. Start pump.
5. Open lid and pour chemical into inductor tank. (If using dry chemical, open INDUCTOR MIX valve to mix chemical, using care not to overfill inductor tank.) See jug rinsing instructions on following page if jug rinsing is desired.
6. Close the lid.
7. Open INDUCTION VALVE on the bottom of the inductor tank to evacuate the inductor tank.
8. Close INDUCTION VALVE when the inductor tank is empty and rinse.
9. Raise the tank to storage position.

⚠ WARNING

- WHEN USING JUG RINSER, BE CAREFUL NOT TO SPRAY SOLUTION INTO EYES OR FACE.

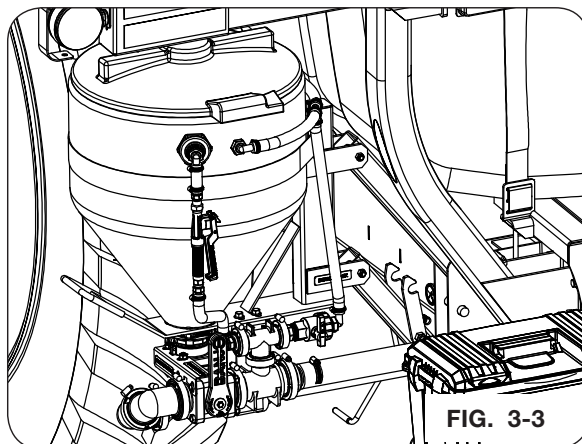


FIG. 3-3

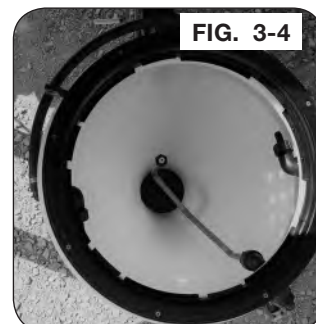


FIG. 3-4

Inductor (continued)

Jug and Inductor Tank Rinsing

⚠ WARNING

- ALWAYS WEAR PERSONAL PROTECTIVE EQUIPMENT WHEN WORKING WITH OR NEAR CHEMICALS. THIS EQUIPMENT INCLUDES, BUT IS NOT LIMITED TO: PROTECTIVE EYE WEAR, GLOVES, SHOES, SOCKS, LONG-SLEEVED SHIRT, AND LONG PANTS. ADDITIONAL PROTECTION MAY BE REQUIRED FOR MANY TYPES OF CHEMICALS.

IMPORTANT



- Do not allow pump to run dry. Pump damage will result.
- Rinse the jug, nozzle, or tank with the product in the main solution tank.

The INDUCTION VALVE, INDUCTOR RINSE VALVE, and tank are shown in FIG. 3-5 and 3-6 for reference.

1. To rinse a chemical container, place container upside down on rinse nozzle and squeeze handle on rinse wand.
2. To rinse inductor tank, close lid, open INDUCTOR RINSE valve and squeeze rinse wand handle for approximately 10 seconds.
3. To rinse out container nozzle, close lid, and activate jug rinser for approximately 10 seconds.
4. Repeat steps 2 and 3 for additional rinsing, if desired.
5. Close INDUCTOR RINSE valve and release rinse wand when rinsing is complete.
6. When inductor tank is empty, close INDUC-TOR DRAIN valve.
7. Close INDUCTOR FLOW valve then set AGITATION CONTROL to proper settings.
8. Raise tank to storage position.

⚠ WARNING

- WHEN USING JUG RINSER, BE CAREFUL NOT TO SPRAY SOLUTION INTO EYES OR FACE.

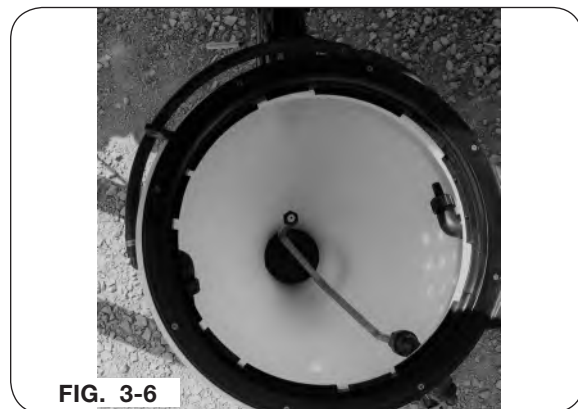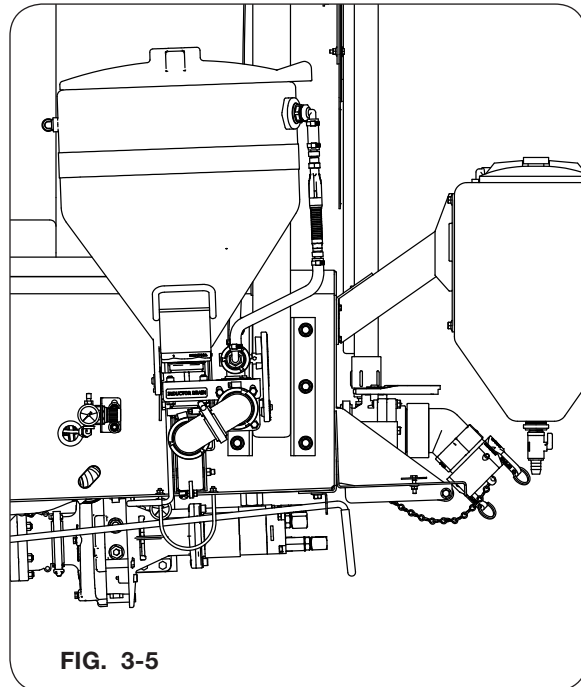


Orifice and Nozzle Installation

WARNING

- **KEEP HANDS CLEAR OF PINCH POINT AREAS.**

1. Attach the nozzle body to the nozzle mount plates at the top of the shank assembly using two 1/4" flange nuts (9004720) and two 1/4" x 3/4" capscrews (900900-003) (FIG. 3-7).
2. Install the desired orifice plate into each hose quick connect cap prior to attaching the hose to the nozzle body tee.
3. Route the 3/8" EPDM hose along the front of the vertical coulter post and attach each hose to the nozzle body tee (FIG. 3-7). Secure with hose clamps.

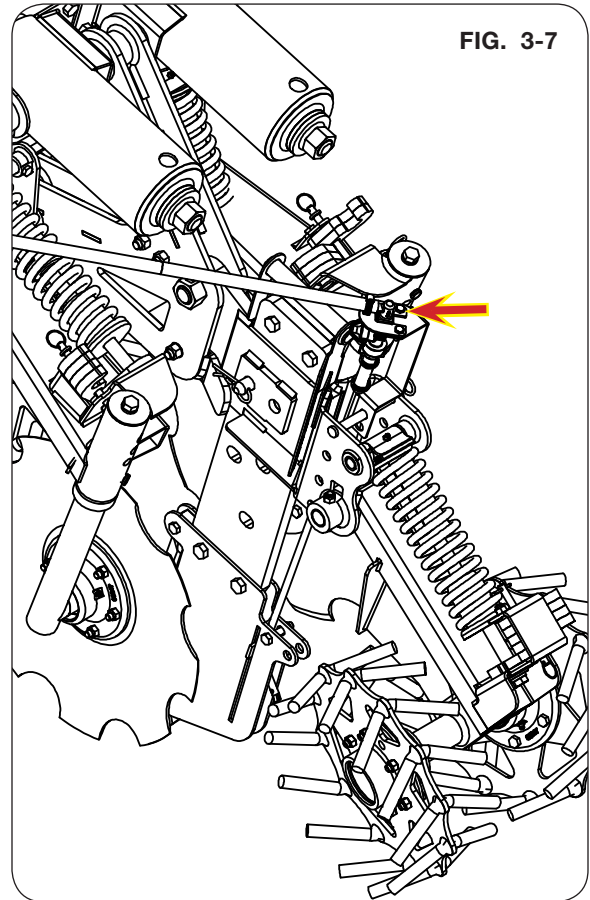


Flow Ball Indicator

⚠ WARNING

- ALWAYS WEAR PERSONAL PROTECTIVE EQUIPMENT WHEN WORKING WITH OR NEAR CHEMICALS. THIS EQUIPMENT INCLUDES, BUT IS NOT LIMITED TO: PROTECTIVE EYE WEAR, GLOVES, SHOES, SOCKS, LONG-SLEEVED SHIRT, AND LONG PANTS. ADDITIONAL PROTECTION MAY BE REQUIRED FOR MANY TYPES OF CHEMICALS.
- WASH HANDS AND EXPOSED SKIN IMMEDIATELY AFTER CONTACT WITH SPRAY/FERTILIZER SOLUTION AND APPLICATION EQUIPMENT.
- REMOVE CLOTHING IMMEDIATELY IF CHEMICALS PENETRATE CLOTHING AND CONTACT SKIN. WASH THOROUGHLY AND PUT ON CLEAN CLOTHING.

The Flow Ball Indicator plumbing kit allows the operator to easily determine changes occurring in the hoses. It operates by utilizing hoses of equal length and size allowing for the ball to float at equal levels.

1. When liquid is flowing evenly all balls hover at the same level.
2. A ball that is lower than the others indicates the flow is too low due to a restriction or blockage.
3. A ball that is higher than the others indicates the flow is too high due to a leaking fitting or hose.

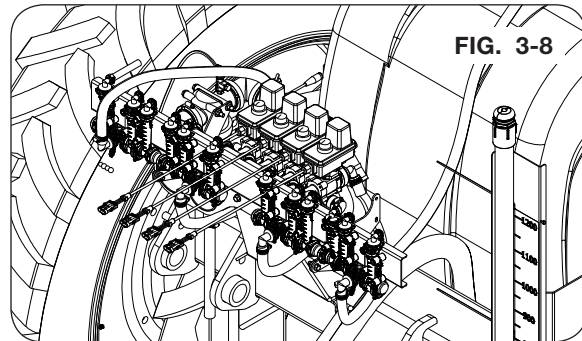

Selecting the Correct Flow Ball

1. Calculate the flow rate required per flow indicator with the following formula:

$$\text{Flow Rate} = \frac{\text{MPH} \times \text{GPA} \times \text{Nozzle Spacing (in)} \times \text{DCF}^*}{5940}$$

*DCF = Density Conversion Factor

Weight of Solution	Density Conversion Factor (DCF)
8.34 lb./gal. (Water)	1.00
10.65 lb./gal. (28% Nitrogen)	1.13
11.05 lb./gal. (32% Nitrogen)	1.15

Example:

Speed = 8 miles per hour
 Rate = 10 gallons per acre
 Nozzle Spacing = 20 inches
 Liquid = 28% Nitrogen

$$\text{Flow Rate } 0.456 = \frac{8 \text{ MPH} \times 10 \text{ GPA} \times 30'' \text{ Nozzle Spacing (in)} \times 1.13 \text{ DCF}^*}{5940}$$

Flow Ball Indicator (continued)

2. Select the flow indicator ball required for you application using the calculated flow rate and the guide below.

Flow Indicator Ball Selector Guide		
Part Number	Color	Flow Rate - U.S. GPM Range
9007782	Green Polypropylene	0.05 to 0.18
9007781	Red Celcon	0.09 to 0.30
9007780	Maroon Glass	0.31 to 0.72
9007779	1/2" Stainless Steel	0.40 to 1.33
9007883	7/16" Stainless Steel	1.00 to 2.70

Ball Removal/Replacement

NOTE: Flush the system with clean water before servicing.

1. Remove the fittings from the top of the flow ball manifold by removing the retaining clip (Fig. 3-9)

NOTE: During operation in the event of a blockage, each hose has been connected in order, beginning with the left most coulter nozzle representing the left most flow ball indicator. It is recommended the fittings, be removed to access the ball, be reinstalled in the same location to maintain similar visual troubleshooting capabilities.



FIG. 3-9


2. Remove the rear capscrews from the flow ball manifold mounting brackets. This will allow the flow ball manifold assembly to be rotated (Fig. 3-10).



FIG. 3-10

Flow Ball Indicator (continued)

3. Rotate the manifold assembly down carefully to avoid any residual liquid that may be in the manifold to avoid coming in contact with exposed skin, eyes, or other sensitive areas. (Fig. 3-11)

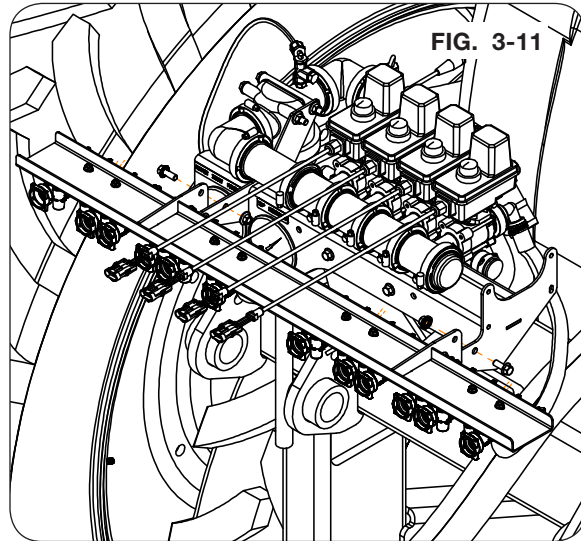

4. Fully tilt manifold bracket down and remove plastic ball stop. This will allow indicator balls to roll out of flow monitors. (Fig. 3-12)



5. Rotate bracket up completely, align capscrew holes, reinsert hardware removed in Step 2, and insert indicator ball into the flow monitors.
6. Reinsert the fittings removed in step 1 ensuring that the hoses marked with the gray sleeves are inserted on the flow monitors that have the balls selected for the half rate nozzles. Reinsert retaining clips.

SECTION IV

Maintenance

Daily Service.....	4-2
Beginning of Day	4-2
End of Day.....	4-2
Annual Service.....	4-3
Beginning of Season	4-3
End of Season.....	4-3
Seasonal Storage.....	4-3
Lubrication Points.....	4-4
Troubleshooting.....	4-5
Hydraulically Driven Centrifugal Pump.....	4-6
ACE HYD 750/755 Barrier Fluid Charge.....	4-6
Filters	4-7
Primary Filter	4-7
Secondary Filter.....	4-8
Winterizing.....	4-9
Wheel, Hub & Spindle Disassembly and Assembly	4-10
Wheels and Tires.....	4-12
Wheel Nut Torque.....	4-12
Tire Pressure	4-12
Tire Warranty	4-13
Complete Torque Chart	4-14
Hydraulic Fittings – Torque and Installation.....	4-16
Schematics - Electrical.....	4-17
Schematics - Plumbing.....	4-22

Daily Service

Beginning of Day

NOTE: Before initial use, ensure all lubrication points have been greased.

Check all U-bolts and bolts for tightness. This is especially important during the first days of operation. See “Torque Chart” in this section.

IMPORTANT

- *Inspect mast pins for any wear or damage. Replace any worn or damaged pins.*

Perform any daily lubrication outlined in “Lubrication” in this section.

Check stabilizer tire air pressure and inflate to correct pressure, if necessary.

IMPORTANT

- *To assure level penetration of shanks, both tires must be inflated to the same pressure.*

End of Day

Clean off dirt and residue which may have accumulated on implement during operation.

Check implement for damage which could have occurred during operation, and repair.

Annual Service

Beginning of Season

WARNING

- **READ AND UNDERSTAND SAFETY RULES BEFORE OPERATING OR SERVICING THIS MACHINE. REVIEW "SAFETY" SECTION IN THIS MANUAL IF NECESSARY.**

Check all bolts, U-bolts, and wheel bolts for tightness. Refer to “Torque Chart” in this section.

Lubricate implement (see “Lubrication” in this section).

Check air pressure in tires and inflate to correct pressure if necessary (see “Daily Service” in this section).

End of Season

Your implement is an important investment. Spend a little time to protect it from destructive rust and corrosion. You will be repaid in longer service life and better performance.

Perform the following before placing the implement in storage:

1. Remove dirt and residue which could cause rusting.
2. Repaint any chipped or scraped areas.
3. Lubricate implement (see “Lubrication” in this section).
4. Coat all earth moving surfaces with grease or suitable rust preventatives.
5. Inspect for damaged parts. Replace before next season.
6. Store implement inside, away from livestock.
7. Use support stands to keep implement tires and points up off bare ground.
8. Replace all worn, torn or faded decals and reflectors.

Seasonal Storage

Always open all valves to remove any fluids and to allow moisture to dry.

Immediately after season is finished, completely wash machine to remove corrosive fertilizer inside and out before storing. When using pressure washers maintain an adequate distance so not to force water into bearings, hydraulic seals, or electrical connections.

1200 GALLON LIQUID FERTILIZER CART — Maintenance


Lubrication Points

To keep your implement in top operating condition and to assure its proper performance and reliability for a long period of time, periodic inspection and lubrication is a must.

Use EP-2 lubricant at the locations described in the chart.

The lubrication locations and recommended schedule are as follows:

ITEM	DESCRIPTION	POINT	QTY	HOURS
A	Hubs	2	1 Shot	Weekly

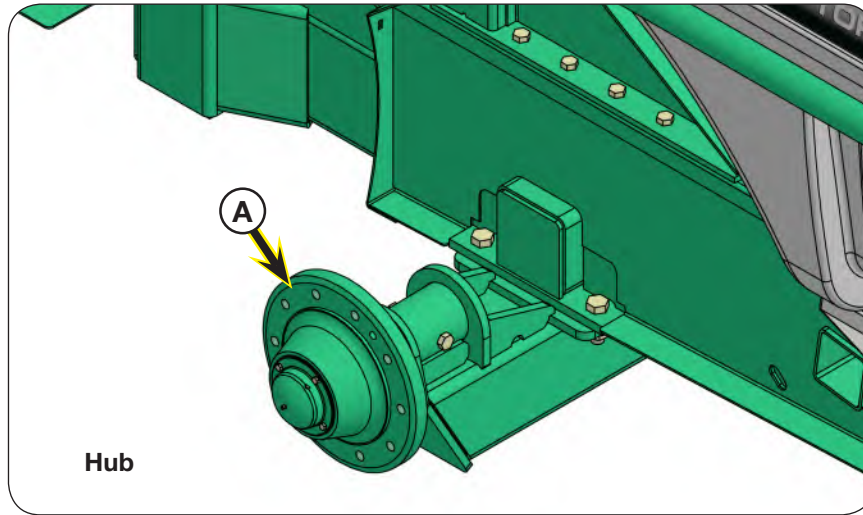

1200 GALLON LIQUID FERTILIZER CART — Maintenance

Troubleshooting

Problem	Possible Cause	Corrective Action
Pressure too Low	Valve has an obstruction	Open all valves to pump and check for obstruction.
	Filter plugged	Clean or replace filters
	Hydraulic flow on tractor set too low	Increase hydraulic flow on tractor.
	Agitation is not set properly	Close agitation completely and slightly open the valve so the pump pressure decreases by 5 psi.
	Impeller has obstruction	Separate pump housing. Remove and clean the impeller.
	Impeller is not turning	Separate pump housing. Verify that shaft and impeller turn together.
Pressure too High	Hydraulic flow on tractor set too high	Decrease hydraulic flow on tractor.
	Improper nozzle size	Verify Nozzle Size.
Rate control console will not turn on	No power coming to the console	Check power source connections.
	Bad console	Check for 12 volts of power on Pin #16 with Pin #1 being ground on the cable coming into the console if equipped with 450 controller.
Do not have a rate	Not getting a speed	Press the speed button on the console to see if there is a speed.
	Not getting a flow	Press the vol/min button on the console to see if there is a flow.
Do not have a speed	Orange wire is unplugged	Verify the orange wire is plugged in to the speed sensor.
	Defective cable or sensor	Program a self test into the console and then check for a rate.
Speed is inaccurate	Loosen cable connection	Wiggle the connections for the speed cable. If accurate speed is displayed tighten connection.
	Cut in cable	Check speed cable for cuts in the cable. Fix the cable or replace the cable.
Do not have a flow	Regulating valve is not operating or PWM cartridge is not functioning	Check and remove debris from valve or PWM cartridge.
	Defective cable	Unplug the flow meter. With the plug keyway at the 12 o'clock position, check voltage between pins at the 2 o'clock and 6 o'clock positions (2 o'clock is ground). Should have 5 volts. Also check voltage between pins at the 2 o'clock and 10 o'clock positions (2 o'clock is ground). Should have 5 volts.
	Defective flow meter	Unplug the flow meter. Check for 5 volts across the 2 wires and getting voltage.
Rate is Unstable	Console is in manual	Put console into either rate 1 or rate 2 and check to see if rate becomes stable.
	Speed is inaccurate	Refer to "Speed is Inaccurate Section".
	Console is not programmed	Verify all numbers programed into console are correct.
Cannot adjust pressure when console is in manual	Defective cable or console	Unplug regulating valve or PWM cartridge. Check for 12 volts across the two wires.
	Defective Valve	Unplug regulating valve or PWM cartridge. Check for 12 volts across the two wires.

Hydraulically Driven Centrifugal Pump

ACE HYD 750/755 Barrier Fluid Charge

IMPORTANT

- Inflation valve must be assembled in the “IN” port of the regulating valve.

1. Turn regulating valve adjusting knob counterclockwise until it is at the minimum pressure setting. (FIG. 4-1)
2. Attach air chuck to air valve.
3. Turn adjusting knob on regulating valve clockwise until gauge reads 30 psi. (FIG. 4-1)
4. Remove the air pressure before disconnecting the hose. To add barrier fluid to the fluid chamber, disconnect the hose from the fitting on top of the hydraulically driven centrifugal pump. Remove the fitting on top of the pump. (FIG. 4-2)
5. Fill the fluid chamber by attaching a 1/8” hose to the barrier fluid and using the hose to fill the fluid chamber where the fitting was removed. (FIG. 4-3)
6. Add fluid until level is half-way up the sight gauge and then pressurize.

NOTE: Any 1/8” hose will attach to the nipple of the barrier fluid bottle (9005518) to ease filling of the sight gauge. (FIG. 4-3)

At the end of each season, it is recommended to change/check the barrier fluid and seal. Follow the guidelines below.

- The pump requires pressure and/or fluid more frequently. Change barrier fluid and seal.
- The barrier fluid becomes cloudy, discolored, or water mixes with barrier fluid. Change barrier fluid and seal.
- The barrier fluid is clear. No service needed. Refill and store for the winter.

Refer to ACE pump manual and operating instructions.



FIG. 4-1

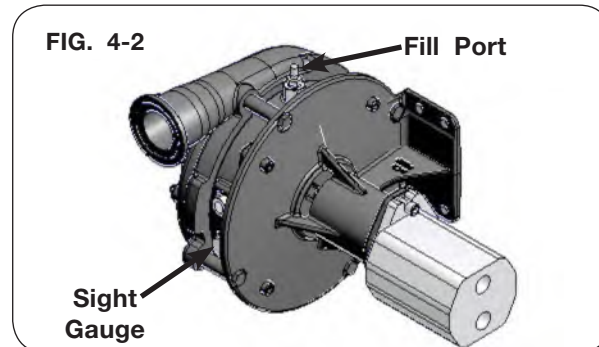


FIG. 4-2



FIG. 4-3

Filters

This applicator uses two filters to help ensure proper operation. These filters will need to be cleaned periodically during use and prior to applicator storage.

⚠ WARNING

- ALWAYS WEAR PERSONAL PROTECTIVE EQUIPMENT WHEN WORKING WITH OR NEAR CHEMICALS. THIS EQUIPMENT INCLUDES, BUT IS NOT LIMITED TO: PROTECTIVE EYE WEAR, GLOVES, SHOES, SOCKS, LONG-SLEEVED SHIRT, AND LONG PANTS. ADDITIONAL PROTECTION MAY BE REQUIRED FOR MANY TYPES OF CHEMICALS.
- RESIDUAL PRESSURE MAY EXIST IN APPLICATOR PLUMBING EVEN WHEN UNIT IS NOT IN USE. RELIEVE PRESSURE BEFORE SERVICING ANY PLUMBING.

Primary Filter

To clean the filter located towards the front of the frame underneath the tongue, (FIG. 4-4):

1. Rotate the pump inlet valve to <OFF>.
2. Drain the strainer.
3. Unscrew the filter housing by turning counter-clockwise and remove the filter screen.
4. Clean filter by flushing strainer element with water.
5. Reassemble filter, open pump inlet valve, and check for leaks.


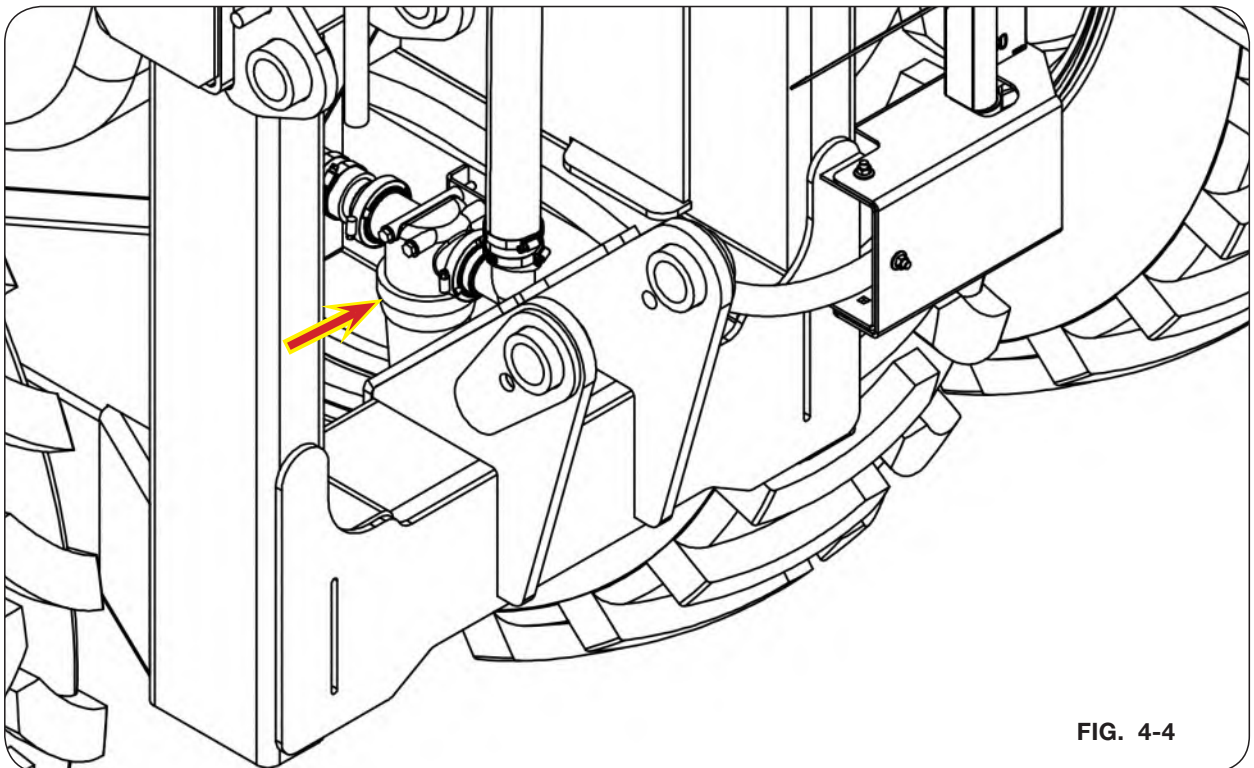


FIG. 4-4

Filters (continued)

Secondary Filter

A secondary filter is located on near the electric valves. This filter, similar in construction to the primary filter, is used to eliminate the need for strainers at the tips. To clean this filter, first drain the filter housing. Then unscrew the filter housing and remove the screen. Flush the strainer element with water. After cleaning, reassemble filter and check for leaks. (FIG. 4-5)

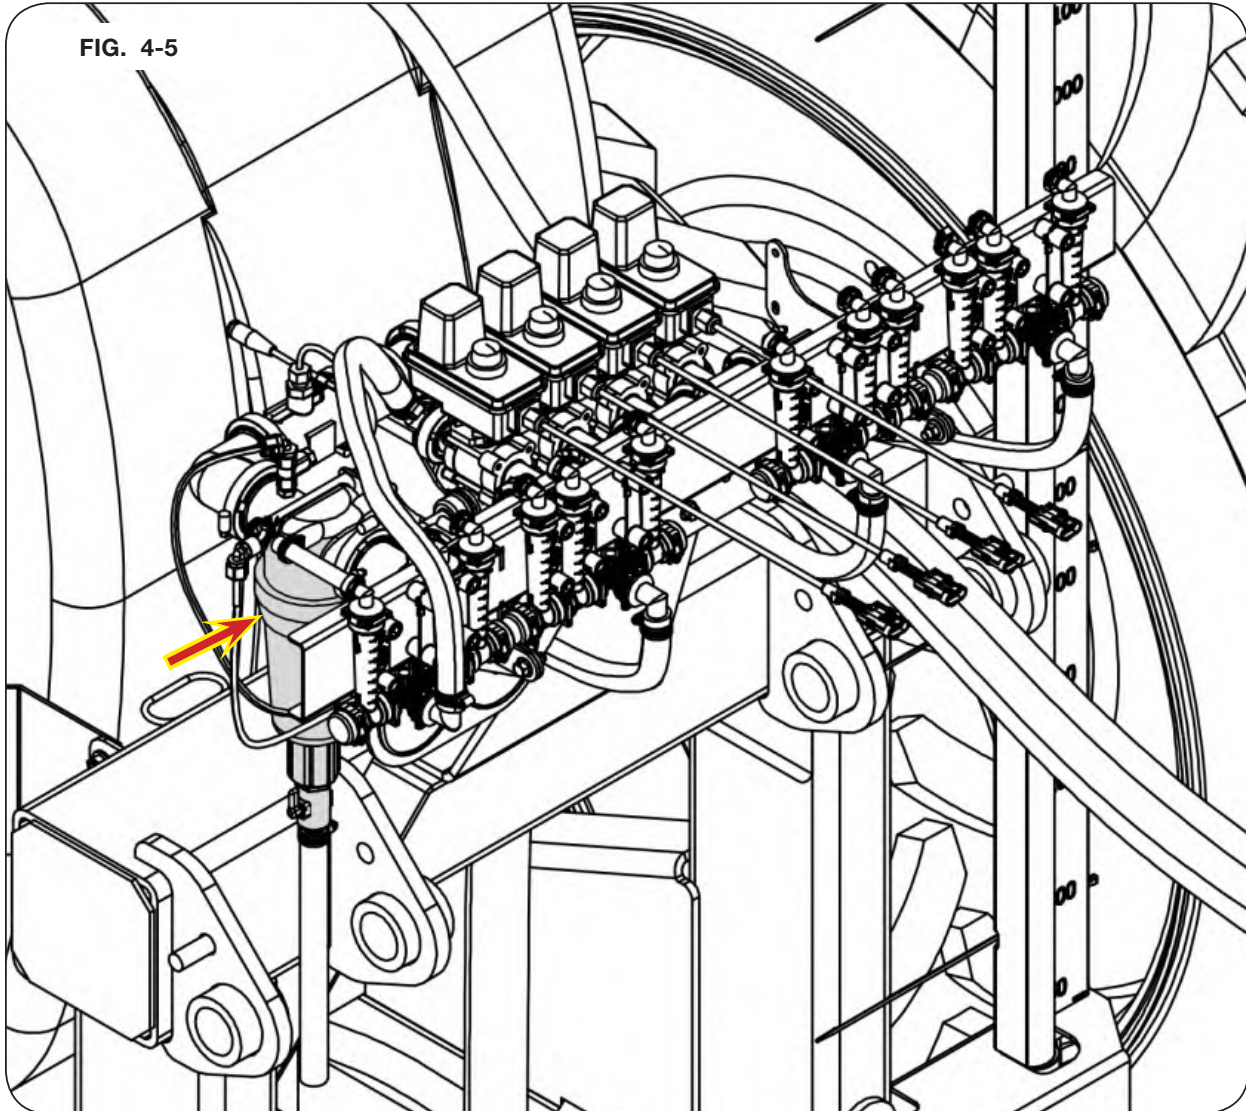

Winterizing

WARNING

- ALWAYS WEAR PERSONAL PROTECTIVE EQUIPMENT WHEN WORKING WITH OR NEAR CHEMICALS. THIS EQUIPMENT INCLUDES, BUT IS NOT LIMITED TO: PROTECTIVE EYE WEAR, GLOVES, SHOES, SOCKS, LONG-SLEEVED SHIRT, AND LONG PANTS. ADDITIONAL PROTECTION MAY BE REQUIRED FOR MANY TYPES OF CHEMICALS.

IMPORTANT

- *Do not allow pump to run dry. Pump damage will result.*

Before storing the tank in freezing climates, perform the following winterizing procedure:

1. Perform a complete system rinse using procedure in the “OPERATION SECTION, INDUCTOR - Chemical Container and Inductor Tank Rinsing” of this manual.
2. Wash the applicator thoroughly inside and out with a high-pressure washer.
3. Remove as much solution from the main tank as possible. Close drain valve on main tank after draining.
4. Pour approximately 50 gallons of R.V. antifreeze into main tank.

NOTE: If equipped with an inductor, the applicator can circulate the R.V. antifreeze.

5. Loosen diaphragm caps on nozzle bodies to relieve pressure and allow excess antifreeze to drain from wings.
6. Repaint any exposed metal. Coat ground engaging parts with a rust preventative.

Wheel, Hub & Spindle Disassembly and Assembly

WARNING

- TIPPING OR MOVEMENT OF THE MACHINE CAN CAUSE SERIOUS INJURY OR DEATH. BE SURE MACHINE IS SECURELY BLOCKED.
- FALLING OBJECTS CAN CAUSE SERIOUS INJURY OR DEATH. DO NOT WORK UNDER THE MACHINE AT ANY TIME WHILE BEING HOISTED. BE SURE ALL LIFTING DEVICES AND SUPPORTS ARE RATED FOR THE LOADS BEING HOISTED. THESE ASSEMBLY INSTRUCTIONS WILL REQUIRE SAFE LIFTING DEVICES UP TO 8,000 LBS. SPECIFIC LOAD RATINGS FOR INDIVIDUAL LOADS WILL BE GIVEN AT THE APPROPRIATE TIME IN THE INSTRUCTIONS.
- EYE PROTECTION AND OTHER APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN WHILE SERVICING IMPLEMENT.
- KEEP HANDS CLEAR OF PINCH POINT AREAS.

CAUTION

- IMPROPERLY TORQUED WHEEL NUTS/BOLTS CAN CAUSE A LOSS OF IMPLEMENT CONTROL AND MACHINE DAMAGE. TORQUE WHEEL NUTS/BOLTS TO VALUES IN TABLE. CHECK TORQUE BEFORE USE, AFTER ONE HOUR OF UNLOADED USE OR AFTER FIRST LOAD, AND EACH LOAD UNTIL WHEEL NUTS/BOLTS MAINTAIN TORQUE VALUE. CHECK TORQUE EVERY 10 HOURS OF USE THERE-AFTER. AFTER EACH WHEEL REMOVAL START TORQUE PROCESS FROM BEGINNING. WARRANTY DOES NOT COVER FAILURES CAUSED BY IMPROPERLY TORQUED WHEEL NUTS/BOLTS.

1. Hitch unit to tractor. Park the empty unit on a firm, level surface. Block the tires to keep the machine from moving. Set the tractor's parking brake, shut off engine and remove key from tractor.



2. Use a safe lifting device rated at 8,000 lbs. to support the weight of your liquid applicator cart. Place the safe lifting device under the axle closest to the tire.
3. Use a minimum of 1,500 lbs. safe lifting device to support the wheel and tire during removal.

WARNING

- ON UNITS WITH DUAL WHEELS, INNER WHEEL AND TIRE MAY FALL FROM HUB CAUSING SERIOUS INJURY OR DEATH. ALWAYS SUPPORT INNER WHEEL WHEN REMOVING OUTER WHEEL AND/OR THE WHEEL EXTENSION.

4. If only changing wheel and tire, skip to Step 8; otherwise continue with Step 4.

Remove the hardware retaining the hubcap. Next, remove the hubcap, gasket, capscrew, castle nut, and spindle washer. Remove hub with bearings from old spindle using a 200 lbs. lifting device.

Wheel, Hub & Spindle Disassembly and Assembly (continued)

5. Inspect the spindle and replace if necessary. If spindle does not need to be replaced, skip to Step 6; otherwise continue with Step 5.

Remove the bolt and lock nut that retain the spindle to the axle. Using a safe lifting device rated for 150 lbs., replace the old spindle with a new spindle. Coat axle contact length of spindle shaft with anti-seize lubricant prior to installation. Reuse bolt and lock nut to retain spindle to axle. Tighten as outlined in MAINTENANCE Section.

6. Remove seal and inspect bearings, spindle washer, castle nut and cotter pin. Replace if necessary. Pack both bearings with approved grease and reinstall inner bearing. Install new seal in hub with garter spring facing the hub by tapping on flat plate that completely covers seal while driving it square to hub. Install until flush with back face of hub. Using a 200 lb rated lifting device, install hub assembly onto spindle. Install outer bearing, spindle washer and castle nut.

IMPORTANT

- *Do not use an impact wrench!*

7. Slowly tighten castle nut while spinning the hub until drag causes the hub to stop freely spinning. Turn castle nut counterclockwise until the hole in the spindle aligns with the next notch in castle nut. Hub should spin smoothly with little drag and no end play. If play exists, tighten to next notch of castle nut. If drag exists, then back castle nut to next notch of castle nut. Spin and check again. Install bolt and nut. Clean face for hub cap gasket and install gasket, grease filled hub cap and retain hubcap with hardware removed. Tighten hubcap hardware in alternating pattern.
8. Attach the wheel(s) and tire(s) to the hub using the same rated safe lifting device for removal. Tighten wheel nuts to appropriate requirements and recheck as outlined in the Wheel and Tire section of this manual.
9. Raise dry applicator cart, remove lifting device and lower unit to the ground.

Wheels and Tires


Wheel Nut Torque

CAUTION

- IMPROPERLY TORQUED WHEEL NUTS/BOLTS CAN CAUSE A LOSS OF IMPLEMENT CONTROL AND MACHINE DAMAGE. TORQUE WHEEL NUTS/BOLTS TO VALUES IN TABLE. CHECK TORQUE BEFORE USE, AFTER ONE HOUR OF USE, AND EACH HOUR UNTIL WHEEL NUTS/BOLTS MAINTAIN TORQUE VALUE. CHECK TORQUE EVERY 10 HOURS OF USE THERE-AFTER. AFTER EACH WHEEL REMOVAL START TORQUE PROCESS FROM BEGINNING. WARRANTY DOES NOT COVER FAILURES CAUSED BY IMPROPERLY TORQUED WHEEL NUTS/BOLTS.

Failure to check torque before first use may damage wheel nut/bolt seats. Once seats are damaged, it will become impossible to keep nuts/bolts tight. Tighten nuts/bolts to applicable torque value shown in table. Start all nuts/bolts by hand to prevent cross threading. Torque nuts/bolts in the recommended sequence as shown in Diagram 1.

WHEEL HARDWARE	
SIZE	FOOT-POUNDS
M22-2.5P	450 Ft.-Lbs.
7/8"-14 (UNF)	450 Ft.-Lbs.

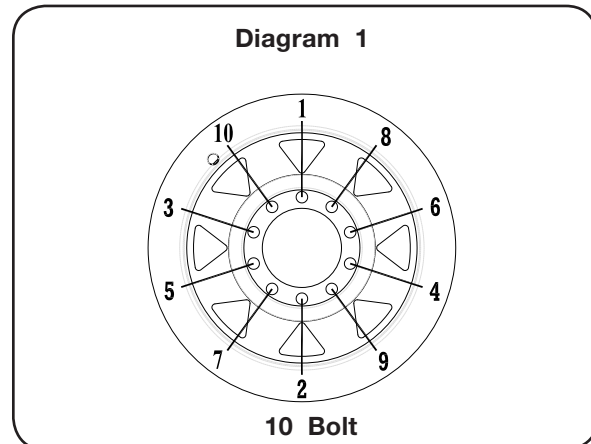

Tire Pressure

- The following is to be used as a general guide for tire inflation and figures can vary depending on specific brand of tire used. It is important that tires are inspected after unit is loaded. Start with minimum pressure indicated. The tire should stand up with no side-wall buckling or distress as tire rolls. Record the pressure needed to support the full load and maintain this pressure to achieve proper tire life. Do not exceed maximum recommended tire pressure.

TIRE	INFLATION
380/90R46 R-1W - 159A8	max. 58 PSI

(All tire pressures in psi)

Wheels and Tires

Tire Warranty

For questions regarding new tire warranty, please contact your local original equipment tire dealer. Used tires carry no warranty. Following are phone numbers and Websites for your convenience:

Firestone www.firestoneag.com
Phone 800-847-3364

Continental/Mitas www.mitas-tires.com
Phone 704-542-3422
Fax 704-542-3474

Titan www.titan-intl.com
or Phone 800-USA-BEAR
Goodyear Fax 515-265-9301

Carlisle/Ironman www.carlisletire.com
Phone 800-260-7959
Fax 800-352-0075

1200 GALLON LIQUID FERTILIZER CART — Maintenance

Complete Torque Chart - Capscrews - Grade 5

NOTE: Grade 5 capscrews can be identified by three radial dashes on head.

NOTE: For wheel torque requirements, refer to **Wheels and Tires**.

NOTE: Tighten U-bolts to have the same number of threads exposed on each end.

SIZE	FOOT POUNDS	NEWTON METERS
1/4-20 1/4-28	8-10 9-11	11-13 12-15
5/16-18 5/16-24	15-17 17-19	20-23 23-26
3/8-16 3/8-24	25-28 28-31	34-38 38-42
7/16-14 7/16-20	40-45 45-50	54-61 61-68
1/2-13 1/2-20	62-68 68-75	84-92 92-102
9/16-12 9/16-18	90-98 100-110	122-133 134-148
5/8-11 5/8-18	120-135 124-137	162-183 168-186
3/4-10 3/4-16	200-220 210-230	270-300 285-310
7/8-9 7/8-14	330-350 360-380	425-475 460-515
1-8 1-14	500-525 540-560	675-710 730-760
1 1/8-7 1 1/8-12	600-635 665-700	815-860 920-950
1 1/4-7 1 1/4-12	850-895 940-990	1150-1215 1275-1340
1 3/8-6 1 3/8-12	1125-1175 1280-1335	1525-1590 1735-1810
1 1/2-6 1 1/2-12	1500-1560 1685-1755	2035-2115 2285-2380

Complete Torque Chart - Stainless Steel Capscrews

IMPORTANT


- Stainless steel fasteners tend to gall, especially with long run downs, prevailing torque fasteners, impact drivers, and lack of lubrication. It is highly encouraged to use a lubricant such as graphite-based anti-seize or molybdenum disulfide based anti-seize or other commercially available anti-galling compounds and assemble with a slow and continuously applied torque to avoid galling.

SIZE	INCH POUNDS	NEWTON METERS
1/4-20	62	7
1/4-28	71	8
5/16-18	128	15
5/16-24	142	16
3/8-16	19	26
3/8-24	21	29
7/16-14	30	41
7/16-20	34	46
1/2-13	46	63
1/2-20	52	71
9/16-12	67	91
9/16-18	74	100
5/8-11	92	125
5/8-18	104	141
3/4-10	113	153
3/4-16	126	171
7/8-9	182	247
7/8-14	201	273
1-8	273	370
1-14	306	415
1 1/4-7	545	739
1 1/4-12	604	819
1 3/8-6	715	970
1 3/8-12	813	1102
1 1/2-6	949	1287
1 1/2-12	1067	1447

Hydraulic Fittings - Torque and Installation


SAE FLARE CONNECTION (J. I. C.)

1. Tighten nut with finger until it bottoms the seat.
2. Using a wrench, rotate nut to tighten. Turn nut 1/3 turn to apply proper torque.

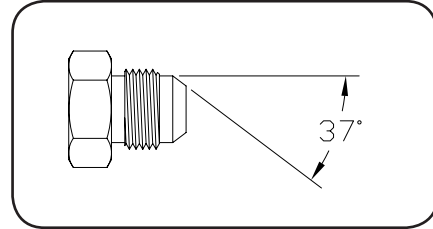


SAE STRAIGHT THREAD O-RING SEAL

1. Insure jam nut and washer are backed up to the back side of smooth portion of elbow adapter.
2. Lubricate o-ring -- VERY IMPORTANT!
3. Thread into port until washer bottoms onto spot face.
4. Position elbows by backing up adapter.
5. Tighten jam nut.

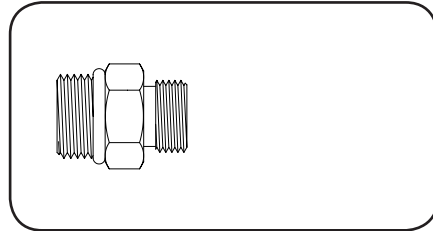


Schematics - Electrical

Electrical Harness - Main 480" (45000)

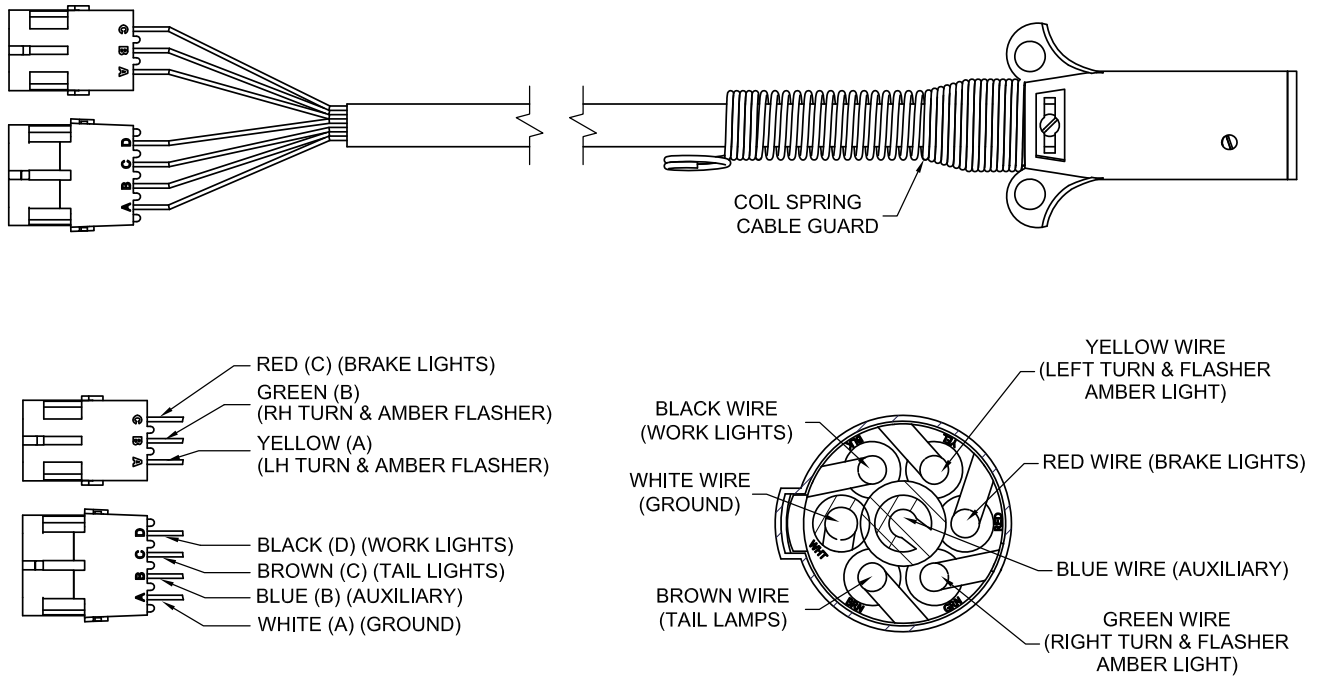


Electrical Harness - Light 418" (44999)

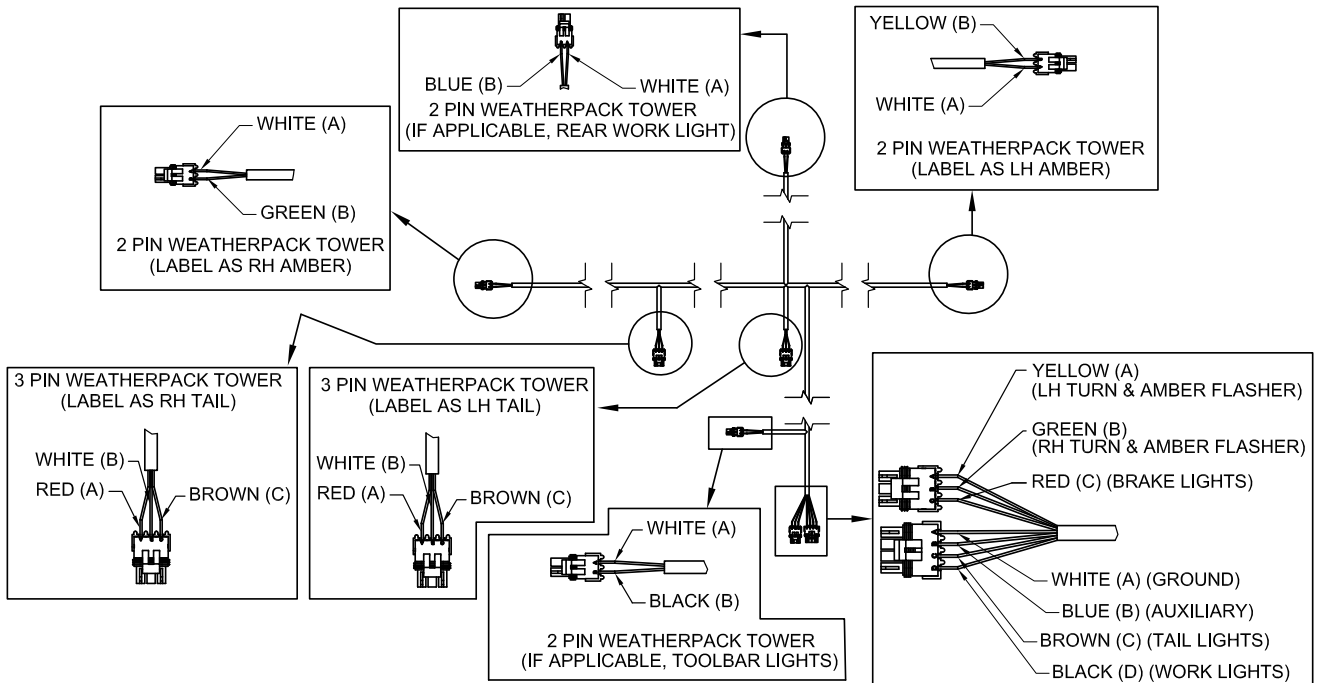

Schematics - Electrical


Foot Switch (9005916)

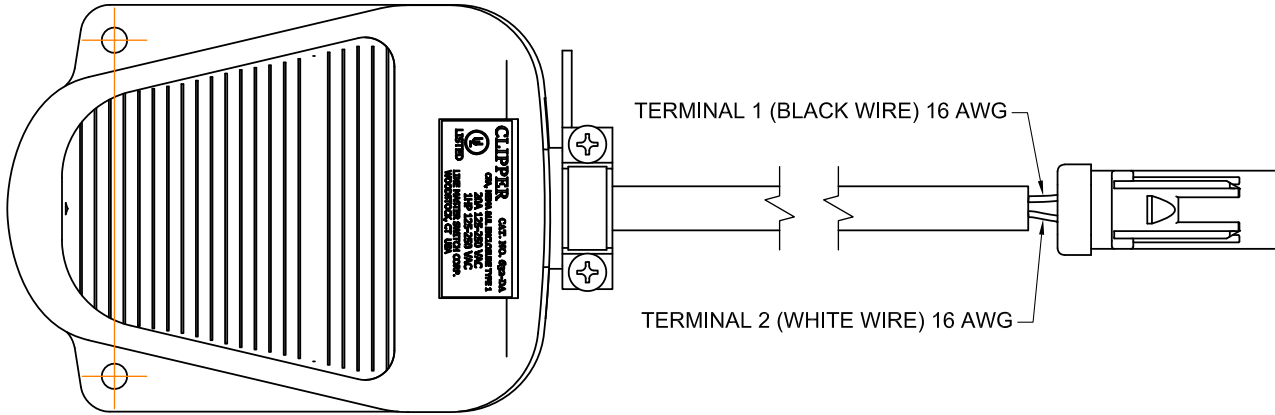

Foot Switch Cable (9503390)

PIN A - BLACK
PIN B - RED
PIN C - BLUE

PIN 1 - BLACK
PIN 2 - BLUE

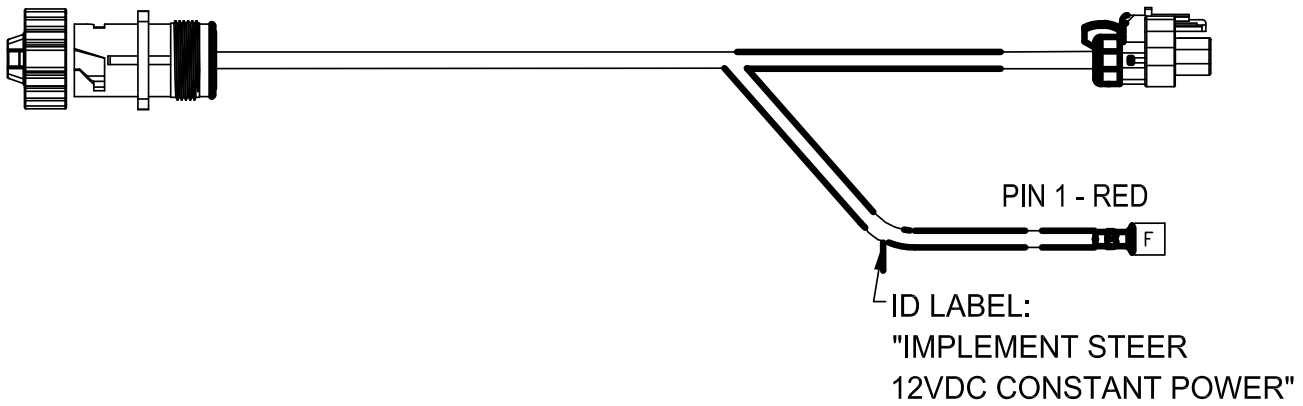

Schematics - Electrical

Node Cable, RCM ECU (9008095)

CONNECTOR - J1	
PIN	COLOR
1	Red
2	Red
3	Red
4	Black
5	Black
6	Black
7	Black
8	Red/White
9	Red
10	NONE
11	White/Brown
12	Blue
13	Gray
14	Black
15	NOTE
16	Black
17	NONE
18	Green
19	Yellow
20	Brown/White
21	White/Brown
22	Brown/White
23	Red/White

CONNECTOR - J4	
PIN	COLOR
1	Black
2	Red

CONNECTOR - J5	
PIN	COLOR
1	Black
2	Red
3	CBL-Black
4	CBL-Yellow
5	NONE
6	Blue
7	NONE
8	Red
9	CBL-Red
10	CBL-Green
11	NONE
12	NONE

CONNECTOR - J6	
PIN	COLOR
1	Black
2	Red

CONNECTOR - J7	
PIN	COLOR
1	Black
2	Red
3	CBL-Black
4	CBL-Yellow
5	NONE
6	Blue
7	NONE
8	Red
9	CBL-Red
10	CBL-Green
11	NONE
12	NONE


CONNECTOR - PM1	
PIN	COLOR
A	Red
B	Red
C	NONE
D	NONE
E	Red
F	Red
G	Red
H	Red

CONNECTOR - J3	
PIN	COLOR
1	Gray
2	Brown
3	Blue
4	Black/White
5	Brown/White
6	Blue/White
7	White/Black
8	White/Brown
9	White/Blue
10	Violet
11	Brown/White
12	Blue/White
13	Yellow
14	Blue
15	Blue/White
16	Gray
17	Brown
18	Violet

CONNECTOR - J3	
PIN	COLOR
19	Yellow
20	White/Blue
21	White/Blue
22	Black
23	Yellow
24	Green
25	Gray
26	Brown
27	Blue
28	Black/White
29	Orange
30	NONE
31	Blue
32	Blue
33	Blue
34	Blue/White
35	Green


CONNECTOR - J8	
PIN	COLOR
1	Black
2	Black
3	Black
4	Black
5	Red
6	Red
7	Gray
8	Brown
9	Brown/White
10	White/Brown
11	Brown/White
12	Blue
13	Blue/White
14	Blue
15	Blue/White
16	Blue
17	Blue
18	Violet
19	White/Blue
20	White/Blue
21	White/Brown
22	Orange
23	Green
24	Yellow

CONNECTOR - J8	
PIN	COLOR
25	Green
26	Yellow
27	Blue
28	Black/White
29	Brown/White
30	Blue/White
31	Gray
32	Red/White
33	Red/White
34	Black
35	Yellow
36	Gray
37	Brown
38	Blue
39	Black/White
40	Brown/White
41	Blue/White
42	White/Black
43	White/Brown
44	White/Blue
45	Violet
46	Gray
47	Brown

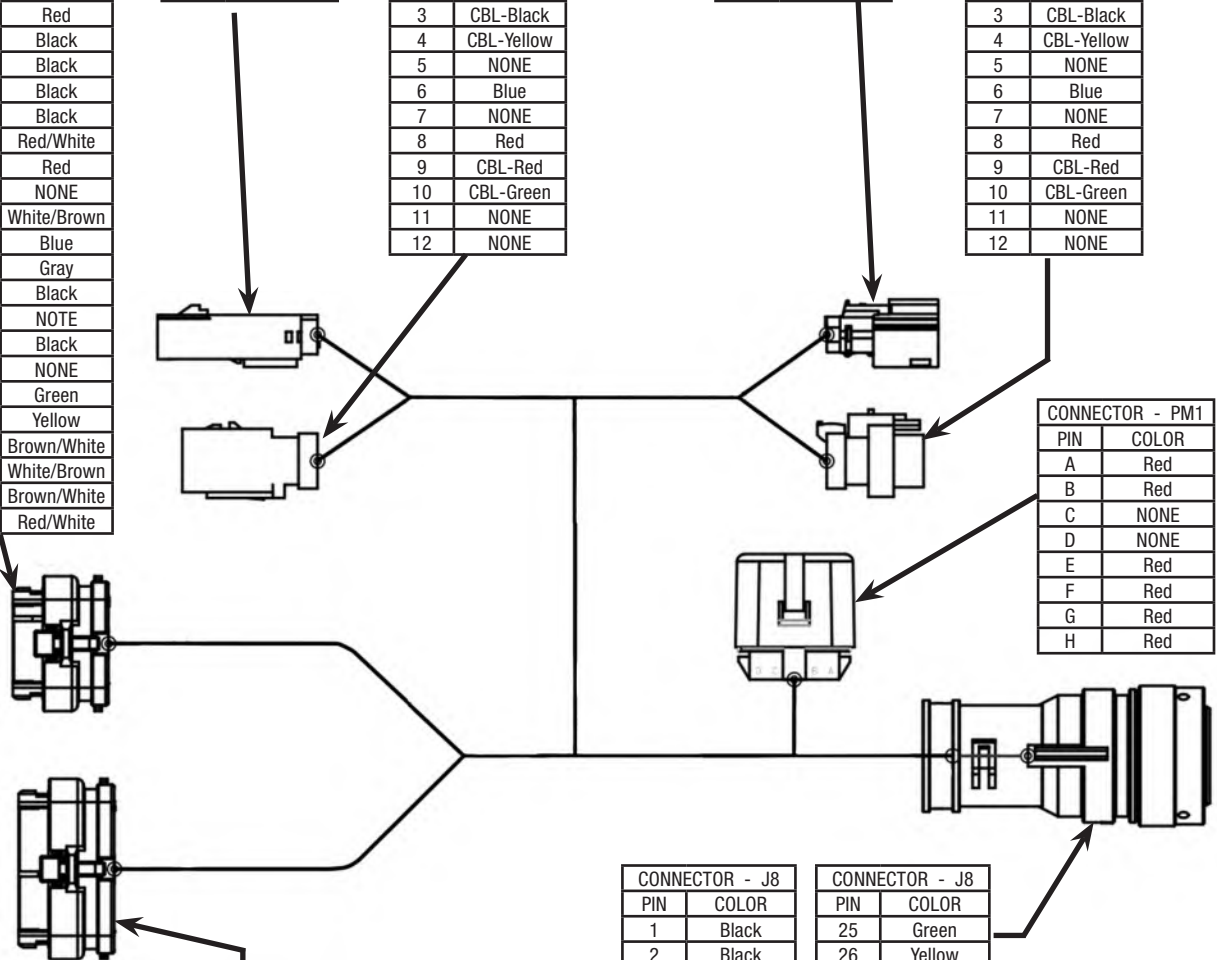


Schematics - Electrical

Extension Cable (9007524)




GEN 1 ISO To IBIC Hitch Cable (9503926)

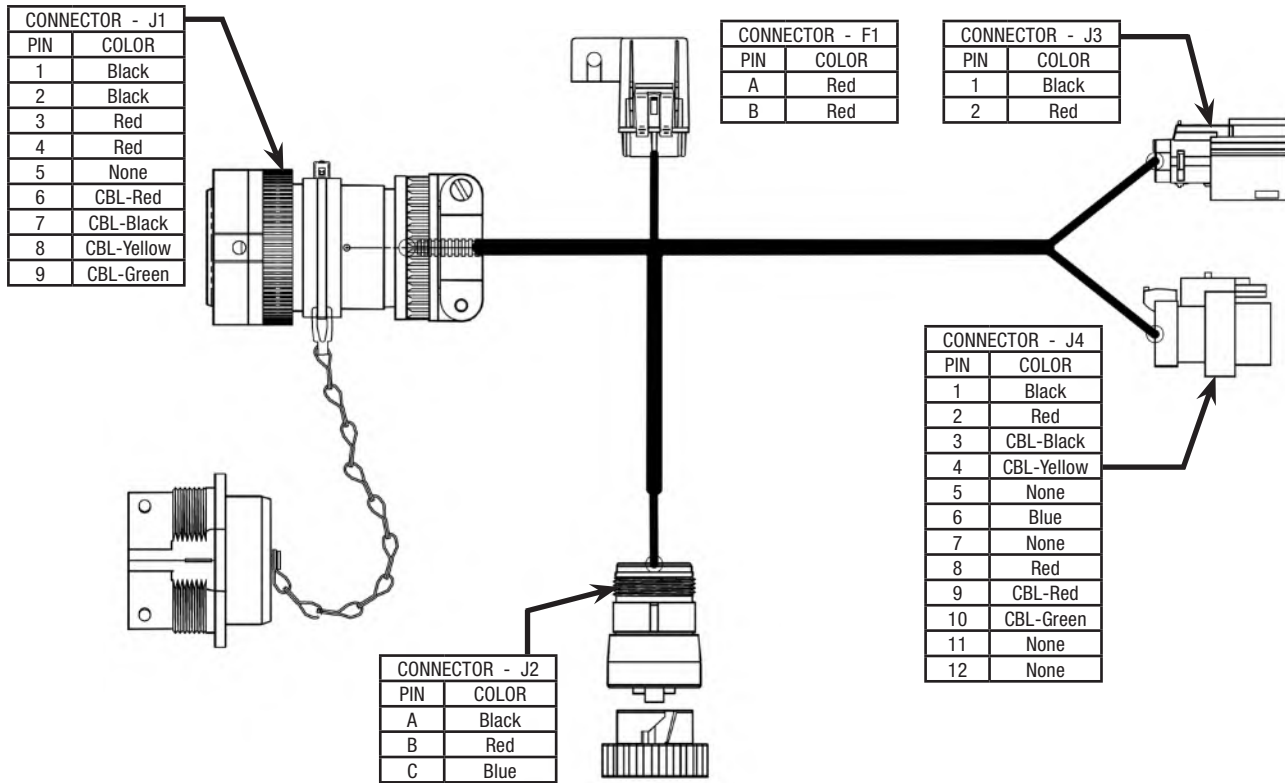


Schematics - Electrical

Flow Cable, 6 Section (9503472)

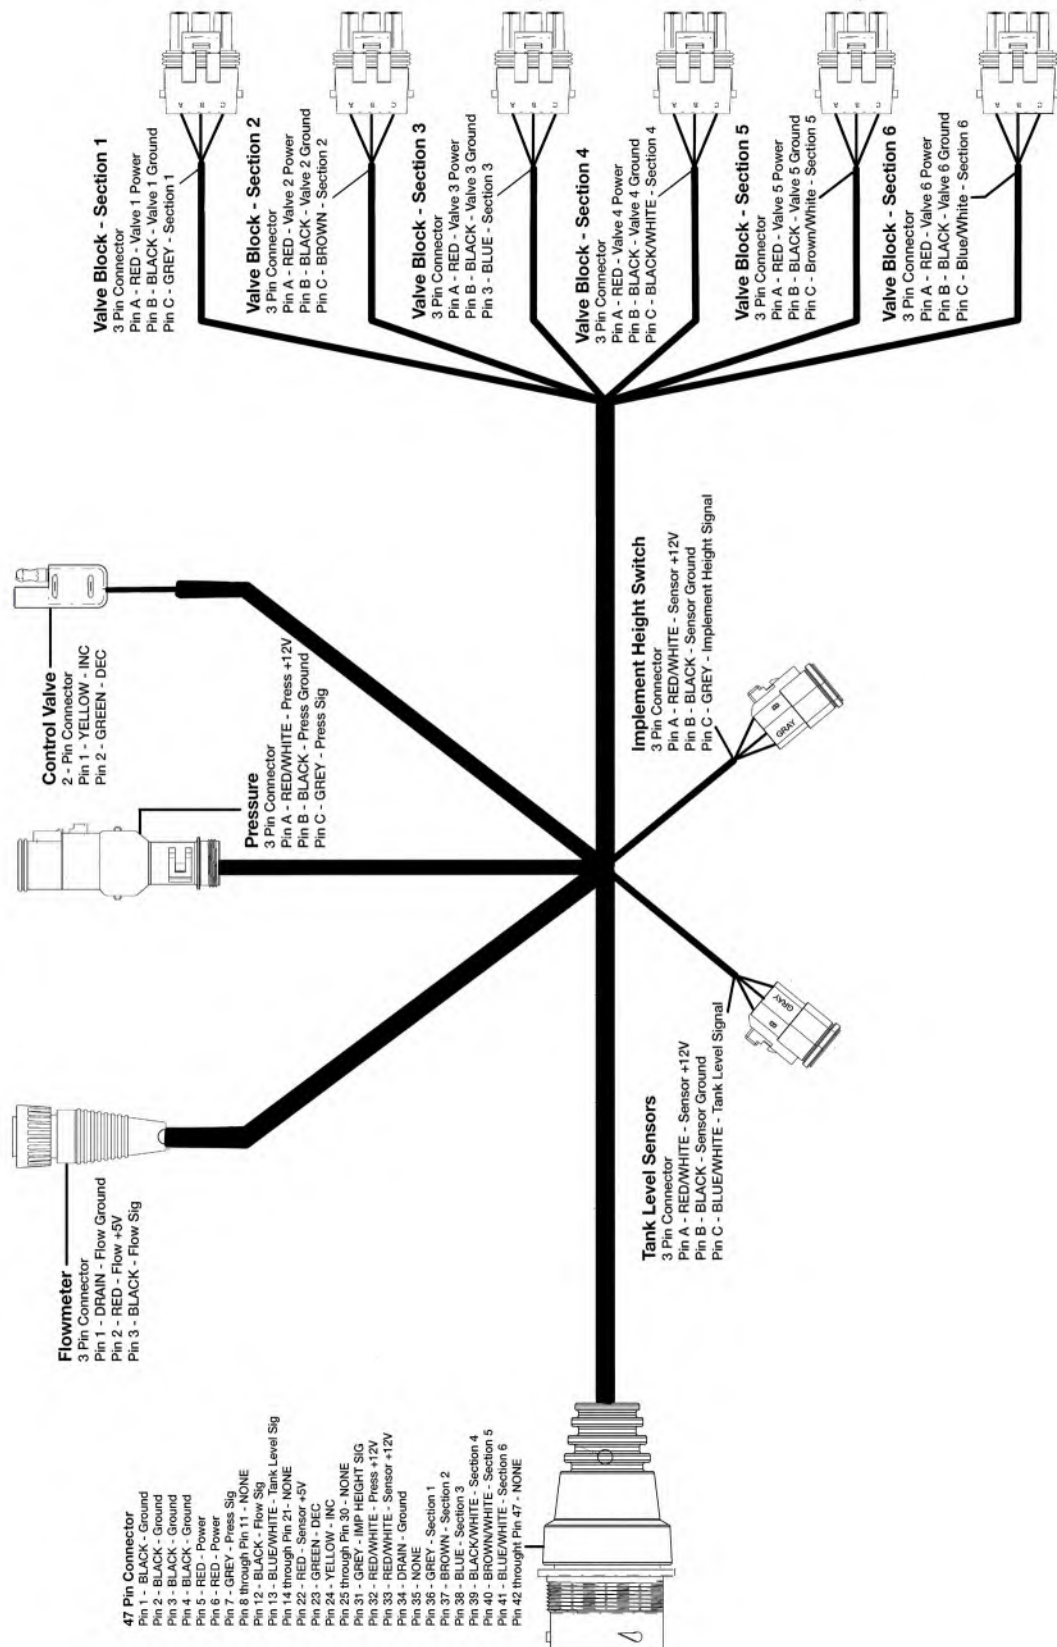

1200 GALLON LIQUID FERTILIZER CART — Maintenance

Schematics - Plumbing

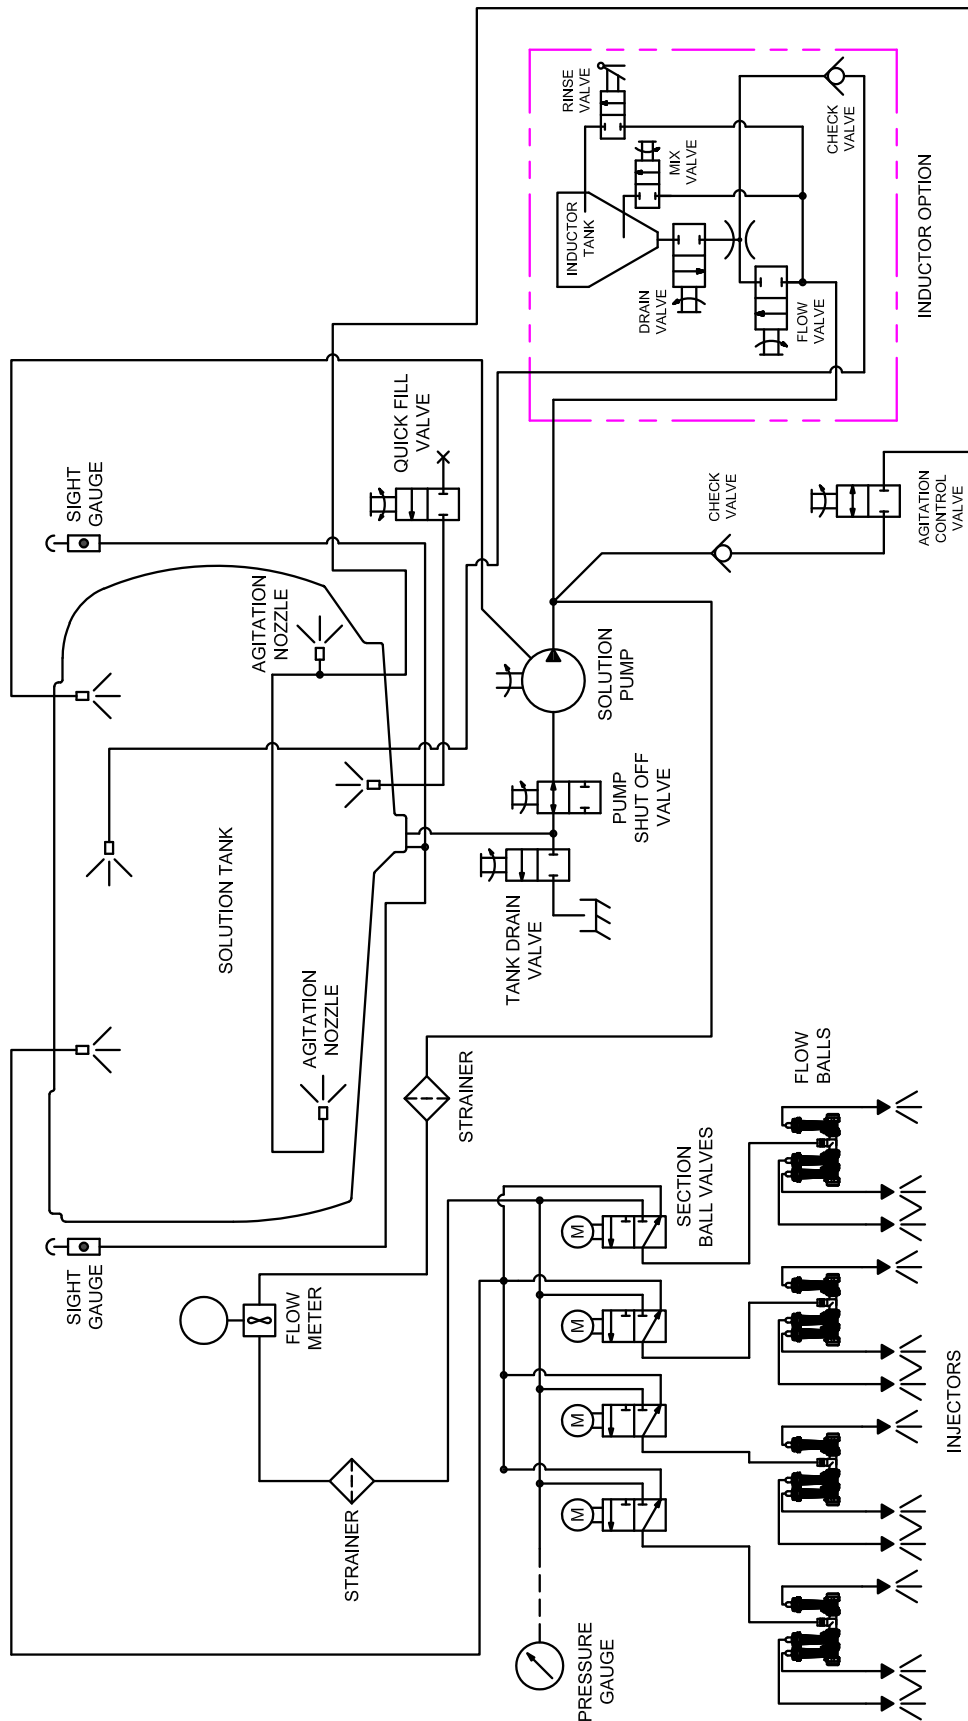

SECTION V

Parts

Decals	5-2
Axle, Extension, and Wheel Components.....	5-4
Hub Components.....	5-6
Frame Components	5-8
Tank & Baffle Components.....	5-10
Manifold Components.....	5-12
Undercarriage Plumbing Components	5-14
Pump Hydraulic and Plumbing Components	5-16
Strainer Components.....	5-18
Air Vent Components	5-19
Hydraulic Driven Centrifugal PWM Pump - ACE 750	5-20
Hydraulic Driven Centrifugal PWM Pump - ACE 755	5-22
Tank Volume Indicator Components.....	5-24
Water Tank Components.....	5-26
Liquid Fertilizer Kit	5-27
Flow Ball Valves	5-28
Electrical Components.....	5-30
Rate Control Module (RCM) ISO Rate Control Components.....	5-31

FOR INDUCTOR INFORMATION, PLEASE REFER TO YOUR INDUCTOR MANUAL.

1200 GALLON LIQUID FERTILIZER CART — Parts

Decals


Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	9004817	Decal, Volume Indicator 1200	2	
2	79342@	Plate with 20MPH Decal	1	
	9008714	Decal, Rear SIS 20MPH	1	
3	9003125	Decal, Fluorescent Orange	2	
4	9003126	Reflector, RED	2	
5	9003127	Reflector, AMBER	4	
6	9004361	Decal, Agitation Control	1	
7	901256	Decal, DANGER (Chemical Exposure...)	1	
8	9503788	Decal, RAPTOR LT	2	
9	9503789	Decal, Faded Stripe (3" x 31.75")	2	
10	9503790	Decal, Faded Stripe (3" x 10.75")	2	
11	TA510514	SMV Emblem	1	
12	9003687	Decal, Gauge Pressure	1	
13	9003841	Decal, Tip Pressure	1	
14	9004784	Decal,Quick Fill	1	

1200 GALLON LIQUID FERTILIZER CART — Parts

Axle, Extension, and Wheel Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

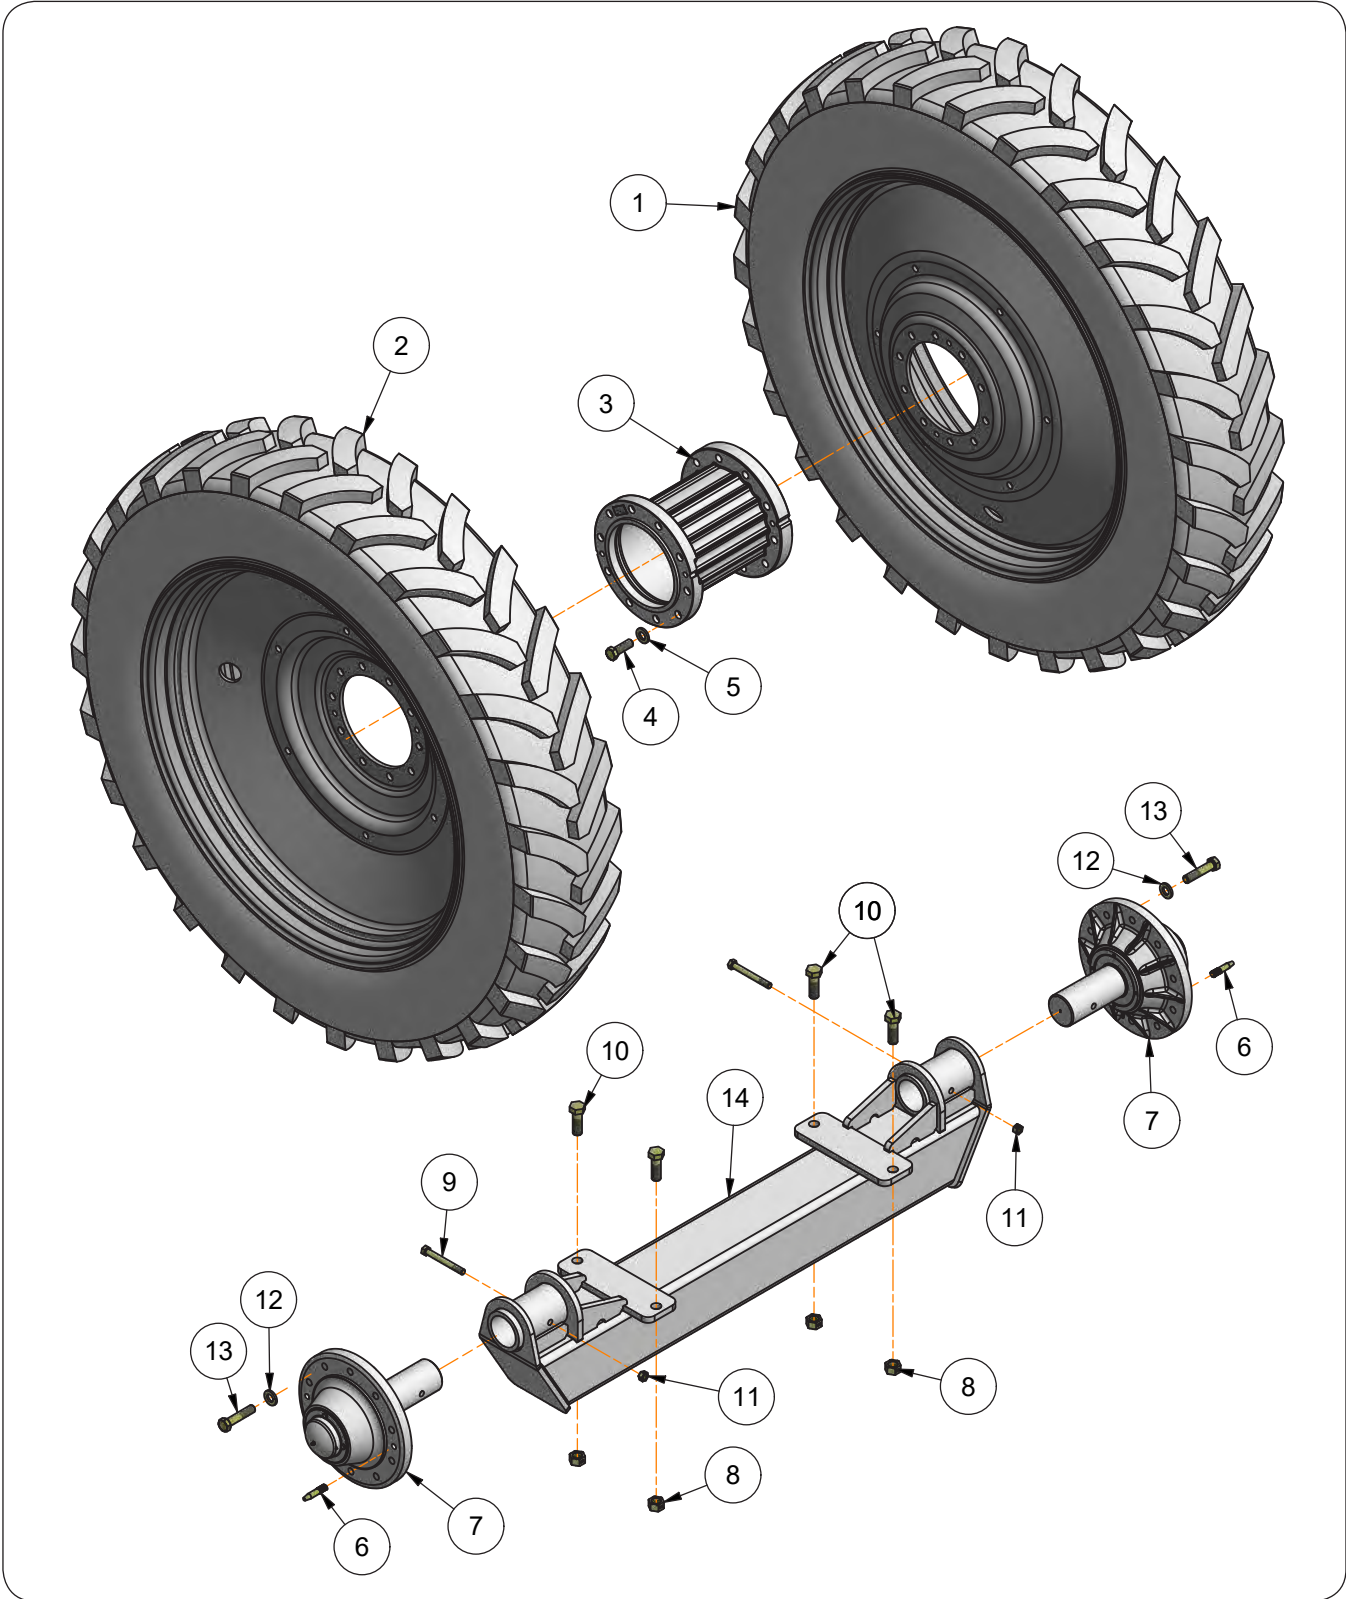

1200 GALLON LIQUID FERTILIZER CART — Parts

Axle, Extension, and Wheel Components


Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	16366SM/902519	Mounted Wheel & Tire (TL380/90R46 R-1W)	2	Inner Mounted Wheel & Tire
	16366SM	13 x 46 Formed Plate Wheel w/10" Outset		
	93300	Valve Stem		
2	16477SM/902519	Mounted Wheel & Tire (TL380/90R46 R-1W)	2	Outside Mounted Wheel & Tire
	16477SM	13 x 46 Formed Plate Wheel w/5" Outset		
	93300	Valve Stem		
3	17043B	15" 10 Bolt Hub Extension w/Hardware	2	
4	95657	Capscrew, M22 x 2.5P C10.9 Full Threaded	20	
5	97041	Flat Washer, 7/8" NOM.	20	
6	19293	Guide Pin, .625" Dia. x 3.125"	2	
7	401593B	Hub & Spindle Assembly	2	
8	92199	Lock Nut/Center, 1"-8UNC	4	
9	9390-135	Capscrew, 5/8"-11UNC x 5 1/2" G5	2	
10	9390-187	Capscrew, 1"-8UNC x 3" G5	4	
11	95905	Lock Nut/Center, 5/8"-11UNC	2	
12	97041	Flat Washer, 7/8" NOM	20	
13	97043	Capscrew, 7/8"-14UNF x 4" G8	20	
14	44642G	Axle Weldment, 70 1/2" =Green=	1	
	44642R	Axle Weldment, 70 1/2" =Red=		

1200 GALLON LIQUID FERTILIZER CART — Parts

Hub Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

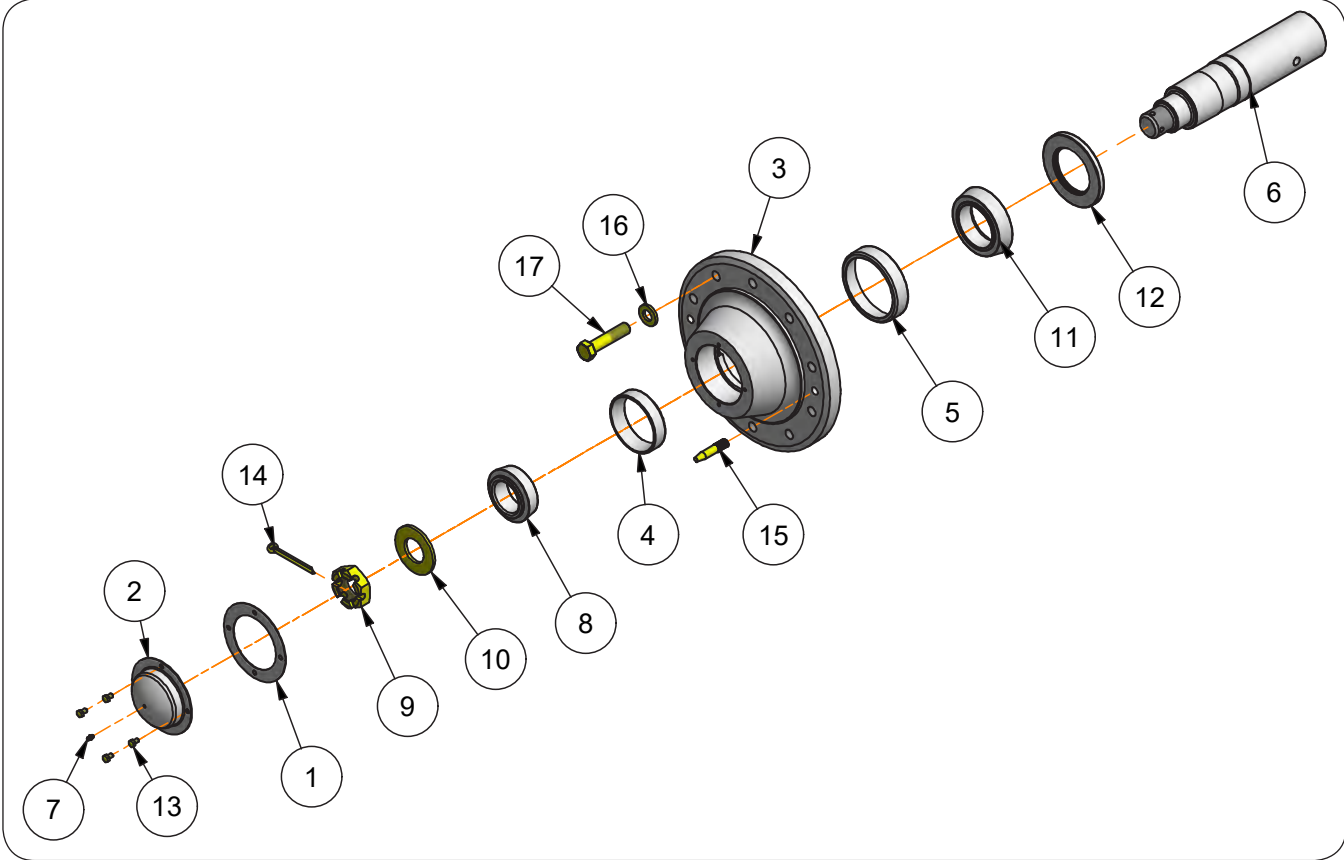

1200 GALLON LIQUID FERTILIZER CART — Parts

Hub Components


Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
	401593B	Hub & Spindle Assembly	2	Includes Items 1-14
1	284230	Hub Cap Gasket 6 1/2" Dia.	1	
2	286171B	Hub Cap	1	
3	401144B	Hub with Bearing Cups	1	Includes Items 4 & 5
4	92462	Bearing Cup, 4.8125" Dia. (HM212011)	1	
5	92476	Bearing Cup, 5.786" Dia. (HM218210)	1	
6	401580	Spindle, 3 3/4" Dia. x 17 3/16"	1	
7	91160	Grease Zerk	1	
8	92464	Bearing Cone, 2.625" Bore (HM212049)	1	
9	92470	Hex Castle Nut, 2"-12UNF	1	
10	92472	Spindle Washer, 4" OD x 2 1/16" ID (Hardened)	1	
11	92545	Bearing Cone (HM218248)	1	
12	92565	Seal, Single Lip w/Garter Spring	1	
13	9390-026	Capscrew, 5/16"-18UNC x 1/2" G5	4	
14	9391-090	Cotter Pin, 3/8" Dia. x 4"	1	
15	19293	Guide Pin, .625" Dia. x 3.125"	1	
16	97041	Flat Washer, 7/8" NOM	10	
17	97043	Capscrew, 7/8"-14UNF x 4" G8	10	

1200 GALLON LIQUID FERTILIZER CART — Parts

Frame Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

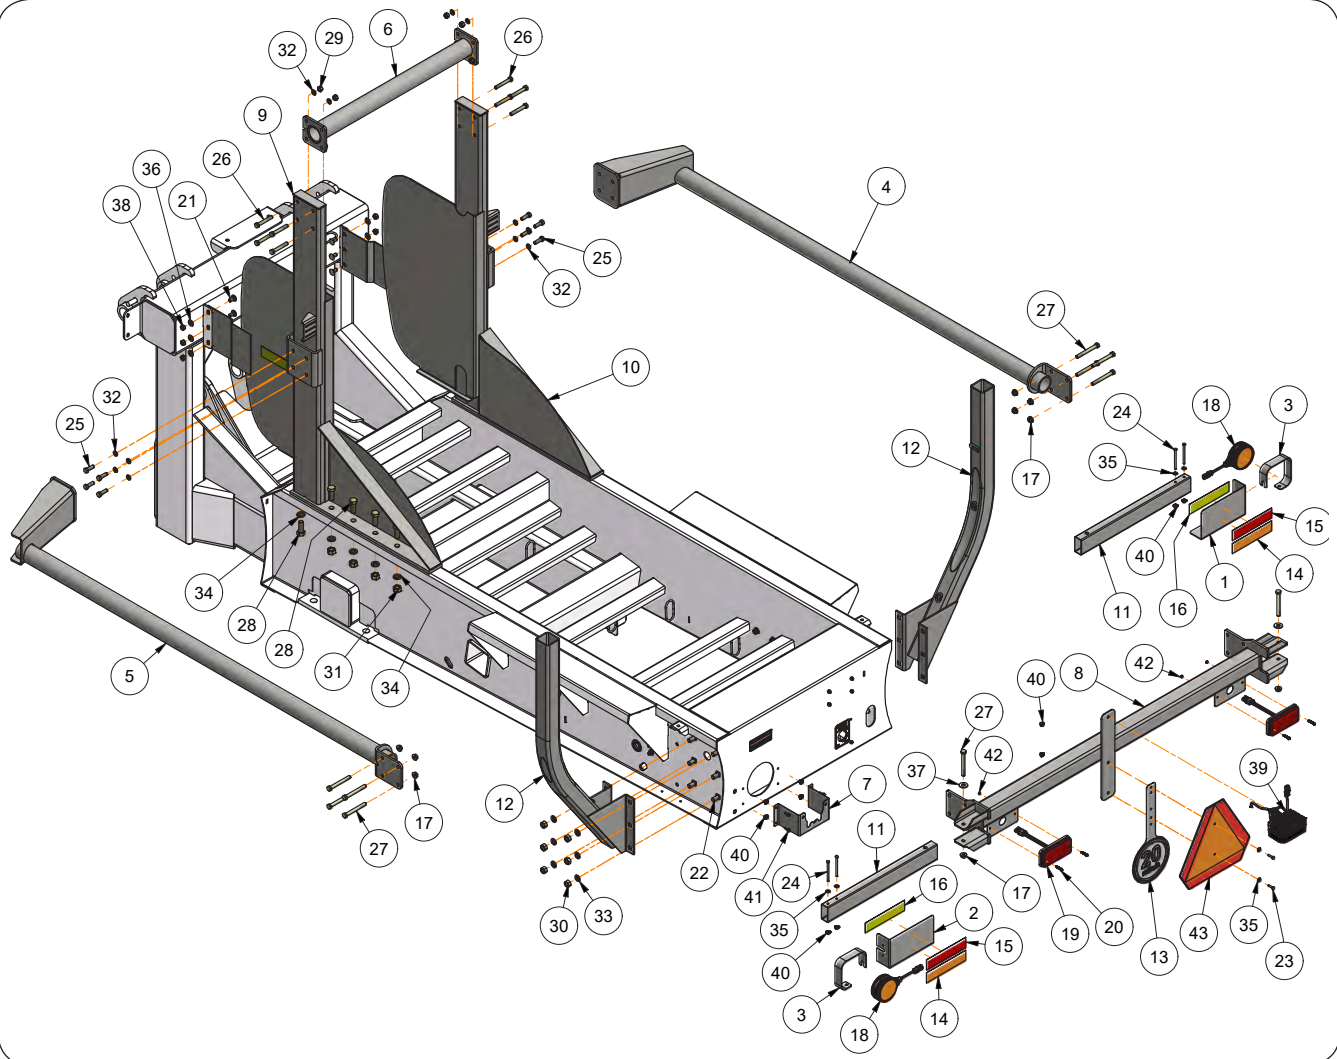

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	252303B	Light Bracket, Right-Hand =Black=	1	
2	252304B	Light Bracket, Left-Hand =Black=	1	
3	268678B	Light Guard Bracket =Black=	2	
4	406041G	Perimeter Weldment, Left-Hand =Green=	1	
	406041R	Perimeter Weldment, Left-Hand =Red=		
5	406042G	Perimeter Weldment, Right-Hand =Green=	1	
	406042R	Perimeter Weldment, Right-Hand =Red=		
6	406965G	Cross Tube Weldment =Green=	1	
	406965R	Cross Tube Weldment =Red=		
7	410419B	Valve Bracket =Black=	1	
8	42887G	Tube Weldment =Green=	1	
	42887R	Tube Weldment =Red=		

1200 GALLON LIQUID FERTILIZER CART — Parts

Frame Components


Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
9	42928G	Mast Weldment, Right-Hand =Green=	1	
	42928R	Mast Weldment, Right-Hand =Red=		
10	42929G	Mast Weldment, Left-Hand =Green=	1	
	42929R	Mast Weldment, Left-Hand =Red=		
11	42936B	Light Tube =Black=	2	
12	42946G	Upright Weldment =Green=	2	
	42946R	Upright Weldment =Red=		
13	79342B	Mounting Plate & Decal 20MPH	1	
14	9003125	Decal, Fluorescent Orange	2	
15	9003126	Reflector, 2" x 9" =RED=	2	
16	9003127	Reflector, 2" x 9" =AMBER=	4	
17	9003397	Lock Nut/Top, 1/2"-13UNC	10	
18	9005142	Lamp, Amber LED Double Face	2	
19	9006282	Red LED Light, Tail/Turn	2	
20	903172-350	Pan Head, Phillips Machine Screw, #10-32UNF x 1 1/4"	4	
21	9388-102	Carriage Bolt, 1/2"-13UNC x 1" G5	6	
22	9388-133	Carriage Bolt, 5/8"-11UNC x 1 1/2" G5	12	
23	9390-005	Capscrew, 1/4"-20UNC x 1" G5	2	
24	9390-016	Capscrew, 1/4"-20UNC x 3 3/4" G5	4	
25	9390-101	Capscrew, 1/2"-13UNC x 1 1/2" G5	10	
26	9390-108	Capscrew, 1/2"-13UNC x 3 1/4" G5	8	
27	9390-112	Capscrew, 1/2"-13UNC x 4 1/2" G5	10	
28	9390-145	Capscrew, 3/4"-10UNC x 2" G5	10	
29	9394-010	Hex Nut, 1/2"-13UNC	8	
30	9394-014	Hex Nut, 5/8"-11UNC	12	
31	9394-016	Hex Nut, 3/4"-10UNC	12	
32	9404-025	Lock Washer, 1/2"	16	
33	9404-029	Lock Washer, 5/8"	12	
34	9404-033	Lock Washer, 3/4"	14	
35	9405-064	Flat Washer, 1/4" USS	8	
36	9405-086	Flat Washer, 1/2" SAE	6	
37	9405-088	Flat Washer, 1/2" USS	2	
38	94981	Lock Nut/Center, 1/2-13UNC	6	
39	9500801	Work Light with Switch	1	
40	97189	Hex Nut/Large Flange, 1/4"-20UNC	21	
41	97420	Flange Screw, 1/4"-20UNC x 3/4"	11	
42	9830-016	Hex Nut, #10-32UNF	4	
43	TA510514	SMV Emblem	1	

1200 GALLON LIQUID FERTILIZER CART — Parts

Tank & Baffle Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

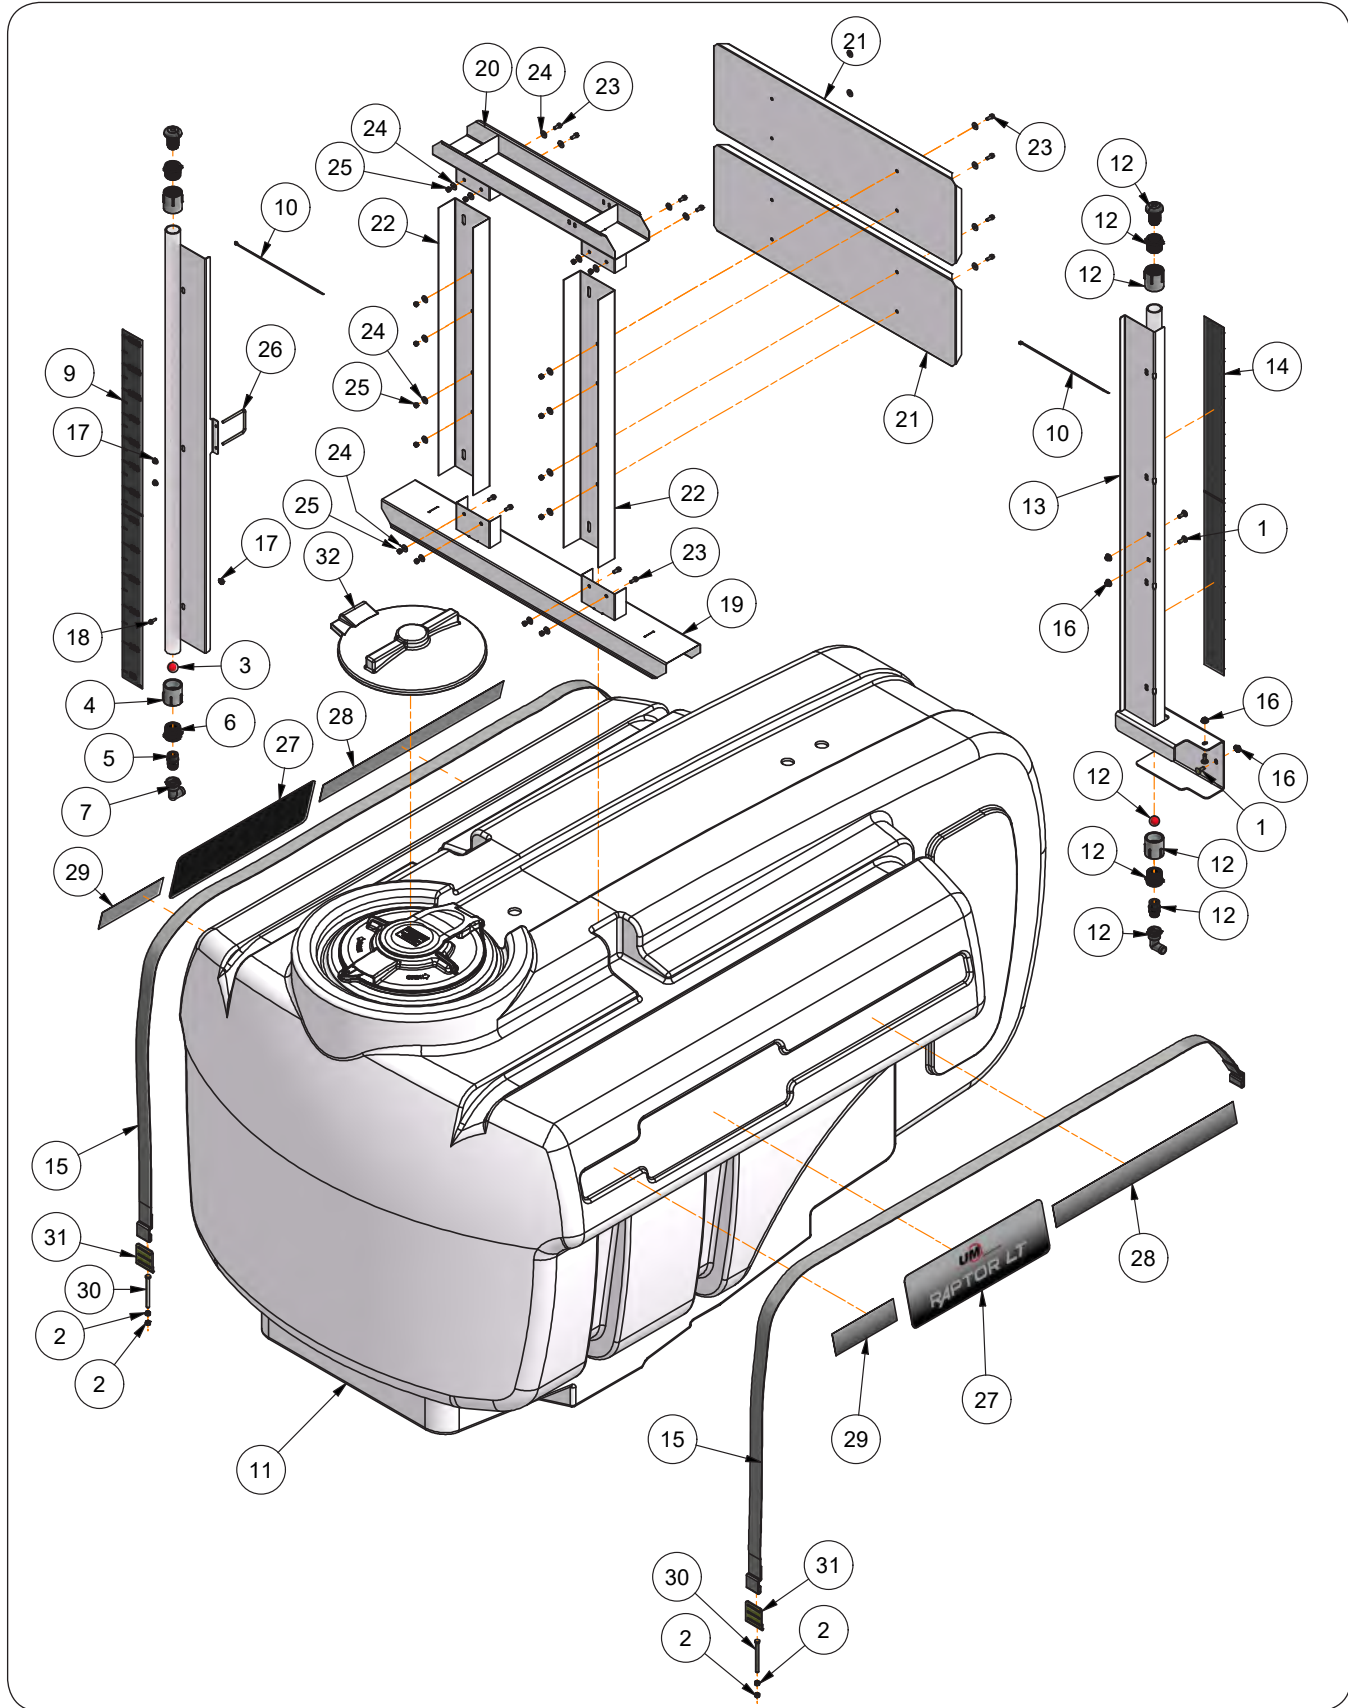

1200 GALLON LIQUID FERTILIZER CART — Parts

Tank & Baffle Components


Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	PART NO.	DESCRIPTION	QTY
1	9388-051	Carriage Bolt, 3/8"-16UNC x 1" G5	4
2	9394-006	Hex Nut, 3/8"-16UNC	4
3	9003683	Indicator Ball 1 1/4", RED	1
4	9004547	Adapter, 1 1/2" SCH40 Female x 1 1/2" NPT Female	2
5	9006477	Adapter, 1" Male Pipe to Quick Connect	1
6	TA814661	Reducer Bushing Poly, 1 1/2-11 1/2 NPTF Male x 1-11 1/2 NPTF Female	2
7	TA854886	Hosebarb 1" 90° Quick Connect Kit	1
8	42931B	Volume Indicator Plate =Black=	1
9	9004817	Decal, Volume Indicator 1200	1
10	94037	Cable Tie 15 1/2"	3
11	42966	Tank, 1200 Gallon (Gray) w/Holes	1
12	412450	Sight Gauge Tube Assembly	1
13	45172B	Volume Indicator Weldment =Black=	1
14	9004817	Decal, Volume Indicator 1200	1
15	45591	Polyester Strap, 2" x 160"	2
16	91263	Nut/Large Flange, 3/8"-16UNC	4
17	97189	Hex Nut/Large Flange, 1/4"-20UNC	5
18	97420	Flange Screw, 1/4"-20UNC x 3/4" G5	1
19	401817	Lower Baffle Weldment	1
20	401818	Upper Baffle Weldment	1
21	401820	Panel Baffle	2
22	402696	Upright Baffle	2
23	900900-028	Capscrew, 5/16"-18UNC x 3/4" (Stainless Steel)	16
24	900902-035	Flat Washer, 5/16" USS (Stainless Steel)	32
25	900906-004	Lock Nut/Center, 5/16"-18UNC (Stainless Steel)	16
26	9004454	U-Bolt, 1/4"-20UNC x 3 3/4", 3 5/16" C/C	2
27	9503788	Decal, Raptor LT (7.35" x 24.125")	2
28	9503789	Decal, Faded Stripe (3" x 31.75")	2
29	9503790	Decal, Faded Stripe (3" x 10.75")	2
30	TA0-907131-0	Capscrew, 3/8"-16UNC x 4 1/2" G5	2
31	TA510025	Tank Strap Clip	2
32	TA805210	Vented 16" Hinged Tank Lid	1

1200 GALLON LIQUID FERTILIZER CART — Parts

Manifold Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

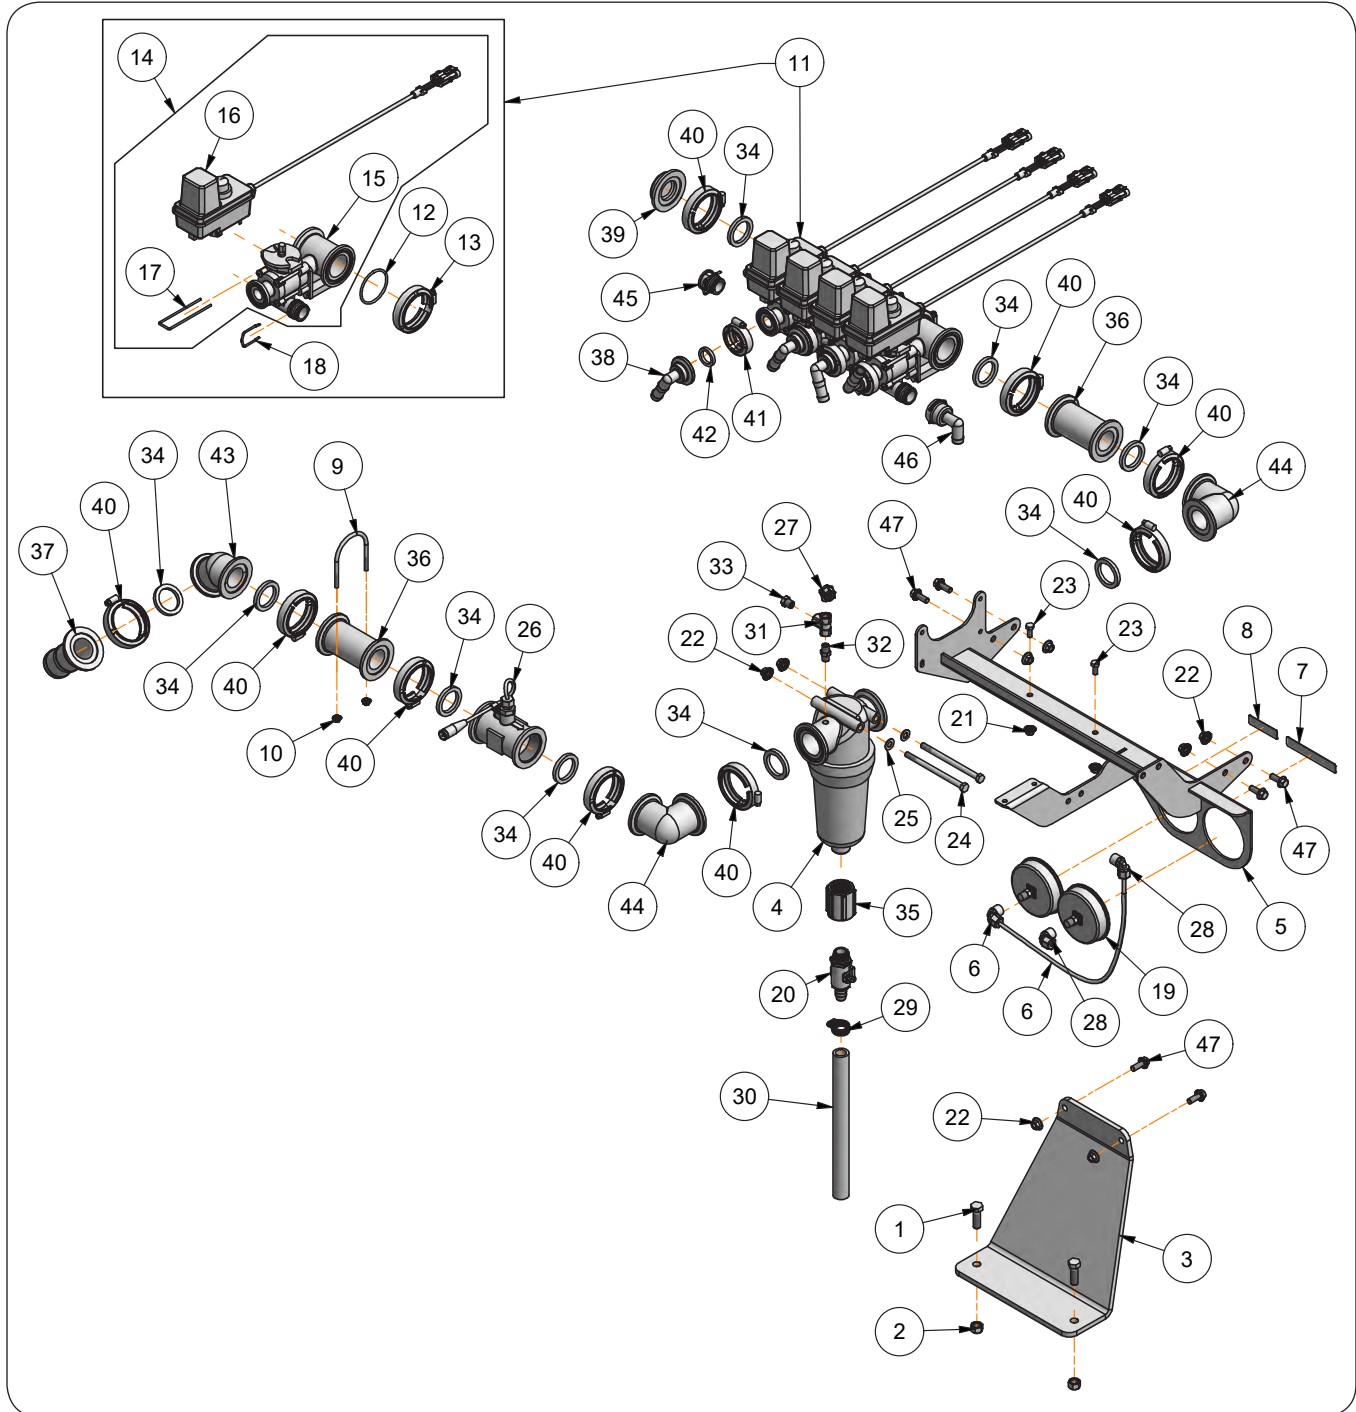

1200 GALLON LIQUID FERTILIZER CART — Parts

Manifold Components


Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	9390-101	Capscrew, 1/2"-13UNC x 1 1/2" G5	2	
2	9800	Lock Nut/Top, 1/2"-13UNC	2	
3	42903B	Mounting Plate =Black=	1	
4	402255	Strainer, 2" Flanged Line	1	
5	45385B	Ball Valve Mount Weldment =Black=	1	
6	45584	Gauge Tubing , 1/4" Dia. x 18"	2	
7	9003687	Decal, Gauge Pressure	1	
8	9003841	Decal, Pressure Tip	1	
9	9004681	U-Bolt, 1/4"-20UNC x 3 1/2", 2 7/8" C/C	1	
10	9004720	Flange Nut, 1/4"-20UNC (Stainless Steel)	2	
11	9006628	Valve Assembly	1	Includes Items 12-18
12	9006626	O-Ring, 2 5/8" OD	3	
13	TA815025	2" Flange Clamp/Worm Screw Clamp (Stainless Steel)	3	
14	TA854881	Ball Valve, 450 Flo-Bak, Single Manifold	4	Includes Items 15-17
15	TA854882	Ball Valve, 450 Flo-Bak, Less Valve	1	
16	TA854874	Shutoff Ball Valve, Motor Head	1	
17	TA854875	Wire Clip Retainer	1	
18	TA854883	Wire Clip Retainer, (Stainless Steel)	3	
19	9007569	Pressure Gauge (0-160 PSI)	2	
20	9007699	Valve-Poly, Micro 3/4" MPT x HB	1	
21	91257	Hex Nut/Flange Flange, 5/16"-18UNC	2	
22	91263	Nut/Large Flange, 3/8"-16UNC	8	
23	9390-028	Capscrew, 5/16"-18UNC x 3/4" G5	2	
24	9390-070	Capscrew, 3/8"-16UNC x 5 1/2" G5	2	
25	9405-074	Flat Washer, 3/8" SAE	2	
26	TA720365	Flow Meter Complete (1-60 GPM)	1	
27	TA720802	Elbow, 1/4" NPT x 1/4" Gauge Tube)	1	
28	TA720812	Elbow, 1/4" EPT x 1/4" Tube	3	
39	TA815023	Plug, 2" Flange	1	
40	TA815025	2" Flange Clamp/Worm Screw Clamp (Stainless Steel)	9	
41	TA815026	1" Flange Clamp/Worm Screw Clamp (Stainless Steel)	4	
42	TA815029	Gasket/Seal, 1 3/8" x 1/4" (1" EPDM Flange)	4	
43	TA816004	45° Elbow, 2" Flange x 2" Flange	1	
44	TA816017	90° Elbow, 2" Flange x 2" Flange (Short)	2	
45	TA854884	Plug (Includes Wire Clip Retainer & O-Ring)	1	
	TA854883	Wire Clip Retainer, (Stainless Steel)	1	
	TA854887	O-Ring	1	
46	TA854885	90° Elbow, 3/4" Hose Barb (Includes Wire Clip Retainer & O-Ring)	1	
	TA854883	Wire Clip Retainer, (Stainless Steel)	1	
	TA854887	O-Ring	1	
47	91262	Flange Screw, 3/8"-16UNC x 1" G5	6	

1200 GALLON LIQUID FERTILIZER CART — Parts

Undercarriage Plumbing Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

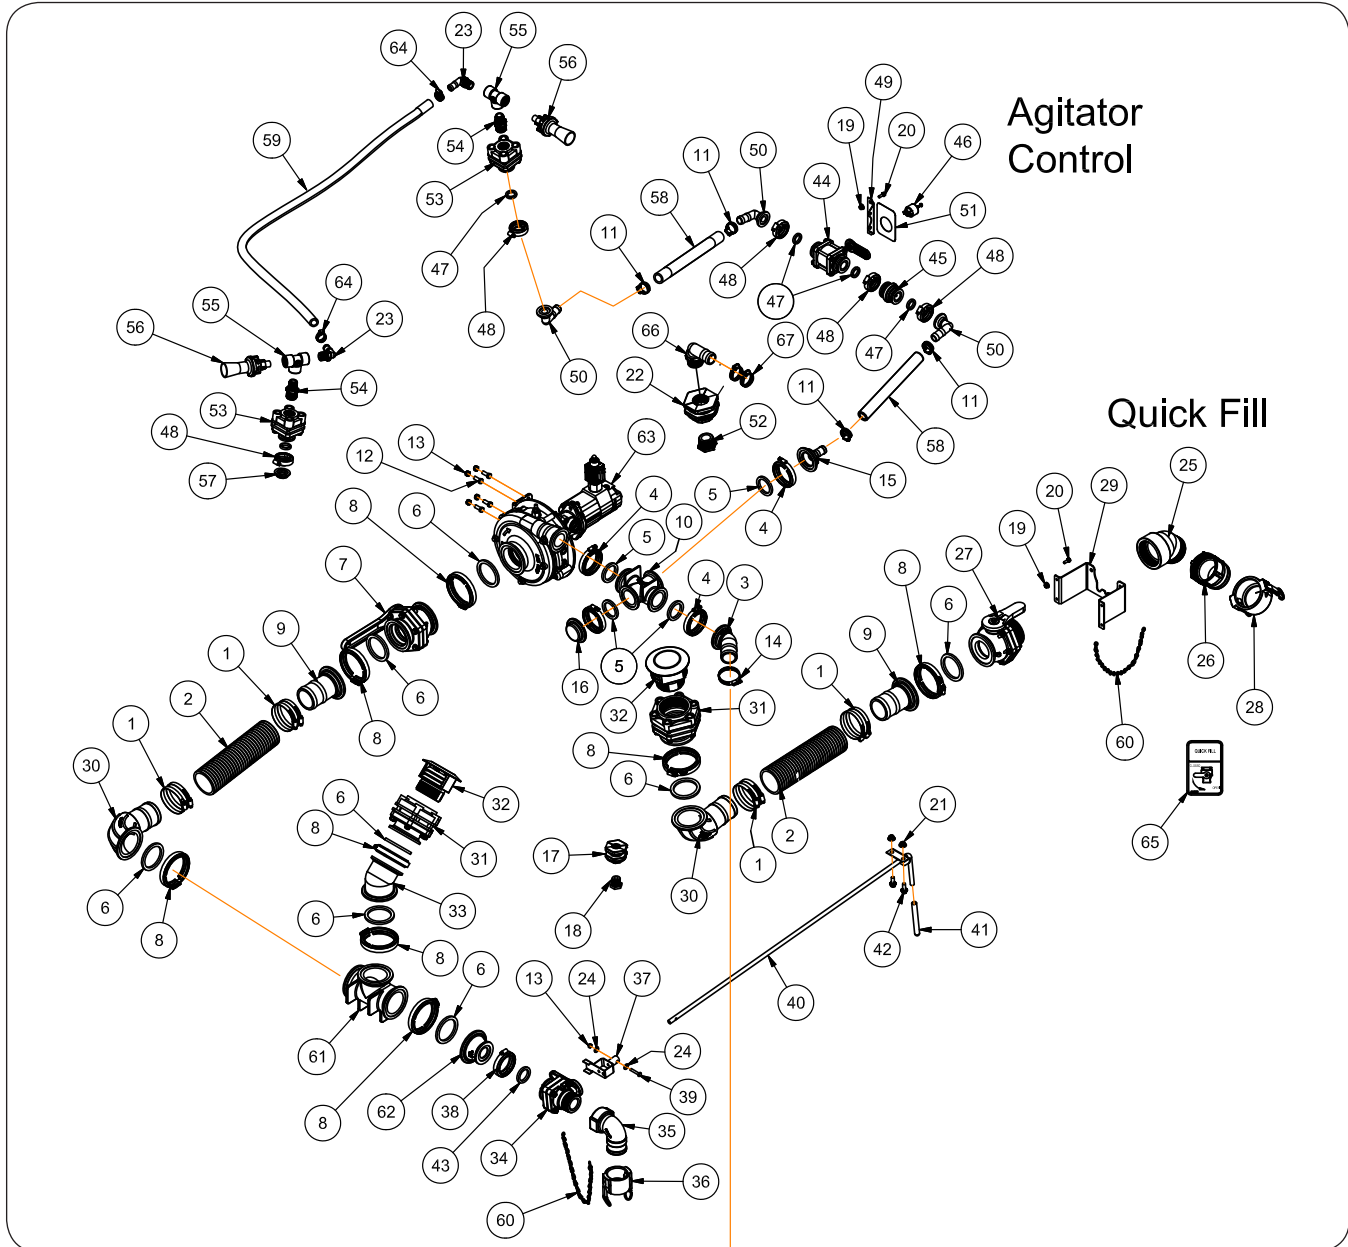

ITEM	PART NUMBER	DESCRIPTION	QTY	NOTES
1	TA800926	Hose Clamp, Worm Drive (SC-52)	8	
2	TA806334	Fertilizer Hose 3"	AR	
3	9005845	45° Elbow 2" Flange x 2" Hose Barb	1	
4	TA816000	Clamp 2" Full Port Flange	4	
5	TA816001	Gasket 2" Full Port Flange EPDM	4	
6	TA816038	Gasket 3" EPDM	8	
7	9007196	Stubby Valve 3" Flange x 3" Flange	1	
8	TA816039	3" Flange Worm Screw Clamp	8	
9	TA816047	Hose Barb 3" Flange x 3" Hose Shank	2	
10	9007194	2" Full Port Flange Cross	1	
11	TA800912	Hose Clamp, SAE #16	4	
12	9390-055	Capscrew, 3/8"-16UNC x 1" G5	4	
13	9928	Lock Nut/Top, 3/8"-16UNC	5	

1200 GALLON LIQUID FERTILIZER CART — Parts

Undercarriage Plumbing Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	PART NUMBER	DESCRIPTION	QTY	NOTES
14	TA800922	Worm Drive Hose Clamp	1	
15	9007335	Hose Barb, 2" Flange x 1" Hose Shank	1	
16	TA816013	Manifold Plug 2" Full Port Flange	1	
17	TA805408	Manifold Fitting	1	
18	TA814751	Pipe Plug	1	
19	97189	Hex Nut/Large Flange 1/4-20UNC	4	
20	97420	Flange Screw 1/4-20UNC x 3/4 (Grade 5)	4	
21	91263	Nut/Large Flange 3/8-16UNC	2	
22	TA805422	Tank Fitting, 1 1/2"	1	
23	TA814961	90° Elbow, 3/4" x 3/4"-14NPT Male	2	
24	9405-064	Flat Washer 1/4" USS	2	
25	TA814730	45° Elbow Poly 3" MPT x 3" FPT	1	
26	TA811810	Poly Fitting 3" Male Quick Coupler x 3" FPT	1	
27	TA816041	Ball Valve Poly 3" Flange x 3" NPT Adapter	1	
28	TA811816	Cap Poly 3" Female Quick Coupler	1	
29	410419B	Valve Bracket =Black=	1	
30	9007117	90° Elbow, Sweep 3" Flange x 3" Hose Barb	2	
31	TA816042	Tank Flange 3" Manifold	2	
32	TA816053	Plug 3" Anti-Vortex	2	
33	TA816049	45° Elbow, 3" Flange x 3" Flange	1	
34	TA816022	Stubby Valve 2" Flange x 2" MPT	1	
35	TA811828	90° Elbow Poly Coupling 2" Male Adapter x 2" NPTF Female	1	
36	TA811500	Cap Coupler Poly 2"	1	
37	402611B	Handle Weldment	1	
38	TA815025	2" Flange Worm Screw Clamp	3	
39	9390-007	Capscrew 1/4-20UNC x 1 1/2 (Grade 5)	1	
40	410208B	Valve Dump Handle =Black=	1	
41	9004015	Yellow Grip	1	
42	91262	Flange Screw 3/8-16UNC x 1 (Grade 5)	2	
43	TA811944	Gasket 1 5/8" EPDM	3	
44	TA815040	Ball Valve, Flange 1"	1	
45	9006665	1" Flange Check Valve	1	
46	9007360	Handle Riser	1	
47	TA815029	Gasket/Seal, 1 3/8" x 1" x 1/4"	5	
48	TA815026	1" Flange Clamp / Worm Screw Clamp	5	
49	TA620369B	Ball Valve Bracket	1	
50	TA815018	90° Elbow, 1" Flange x 1" Hose Barb	3	
51	9004361	Decal, Agitation Control	1	
52	TA814754	Plug, 1 1/2" NPT	1	
53	TA815077	Tank Fitting 1"	2	
54	TA814815	Reducer Nipple, 1" NPT Male x 3/4" NPT Male	2	
55	TA814781	Tee, 3/4"-14 NPTF Female x 3/4"-14 NPTF Female x 3/4"-14 NPTF Female	2	
56	TA816012	Agitation Nozzle, 3/4" MPT	2	
57	TA815022	Plug, 1" Flange	1	
58	45577	Hose, 1" Dia. x 14" EPDM	2	
59	45589	Hose, 3/4" Dia. x 60" EPDM	1	
60	45655	End Fill Chain, 18"	2	
61	TA816051	Tee 3" Flange x 3" Flange x 3" Flange	1	
62	9007201	Reducer Coupler, 3" Flange x 2" Flange	1	
63	9008132	ACE 750 PWM Pump	1	
64	TA800910	Hose Clamp, 1/2" SAE SZ12	2	
65	9004784	Decal,Quick Fill	1	
66	TA814975	90° Elbow 1 1/2"-11 1/2 NPTF Male x 1 1/2" Hose Shank	1	
67	TA800918	Hose Clamp 1 1/4" to 2 1/2"	4	

1200 GALLON LIQUID FERTILIZER CART — Parts

Pump Hydraulic and Plumbing Components


Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	PART NUMBER	DESCRIPTION	QTY	NOTES
1	45585	Gauge Tubing, 1/4" Dia. x 36" (300PSI)	1	
2	9002443	Adapter, 7/8"-14 JIC Male x 7/8"-14 O-Ring Male	2	
3	9005789	Bulkhead Union, 7/8"-14UNF	2	
4	9005845	45° Elbow 2" Flange x 2" Hose Barb	1	
5	9007182	Nipple, Hex Male, 1/4" NPT to 1/8" NPT	1	
6	9007194	2" Full Port Flange Cross	1	
7	9007335	Hose Barb, 2" Flange x 1" Hose Shank	1	
8	9007341	Plastic Push-In Fitting, 3/4" Push To Connect x 1/4" FNPT	1	
9	91511	Dust Cap	2	
10	9503648	Hose, 5/8" Dia. x 108", 7/8"-14 JIC Female x 7/8"-14 JIC Female (3000 PSI)	2	
11	9503761	Hose, 5/8" Dia. x 552", 7/8"-14 JIC Female x 7/8"-14 JIC Female (3000 PSI)	2	
12	95477	Pioneer Male Tip, SAE 7/8"-14 Female O-Ring	2	
13	95540	90° Elbow, 7/8"-14 JIC Male x 7/8"-14 O-Ring Male	2	
14	96559	90° Elbow, 7/8"-14 JIC Male x 7/8"-14 JIC Female	2	
15	TA720812	90° Elbow, 1/4" FPT x 1/4" Tube	1	
16	TA750051	Hose/Airline, 1/4" ID x 3/8" OD	1	Specify By Feet
17	TA800922	Worm Drive Hose Clamp, Adjusts From 3/4" To 2 5/8"	8	
18	TA809325	Hex Pipe Nipple, 1/4"	1	
19	TA816000	Clamp 2" Full Port Flange	4	
20	TA816001	Gasket 2" Full Port Flange EPDM	4	
21	9008132	ACE 750 PWM Pump	1	
22	99928	Adapter, 3/4"-16 O-Ring Male x 1/4"-18 NPTF Female	1	
23	9005507	Air Valve, Clamp In Style	1	
24	407597B	Regulator Bracket Plate =Black=	1	
25	411078	Air Vent Assembly	1	
26	412433B	Vent Bracket	1	
27	45571	Hose, 2" Dia. x 144" EPDM (200PSI)	1	
28	45572	Hose, 2" Dia. x 93" EPDM (200PSI)	1	
29	45582	Hose, 1/2" Dia. x 132" EPDM (200PSI)	1	
30	9000107	Cable Tie, 14 1/2"	2	
31	9001529	Flange Screw, 1/2"-13UNC x 1" G5	2	
32	9006050	Air Regulator	1	
33	9006213	Metal Cable Clamp, 2" x 3/4" Wide	2	
34	9007699	Micro Valve, 3/4" MPT x 3/4" Hose Barb	1	
35	9008866	Pump Pressure Gauge	1	
36	91262	Flange Screw 3/8-16UNC x 1 (Grade 5)	10	
37	91263	Nut/Large Flange 3/8-16UNC	14	
38	91267	Flange Nut, 1/2"-13UNC	2	
39	97840	Grommet, 1/4W x 1 1/2" Dia. Groove, 1 1/4" ID	4	
40	TA720802	90° Elbow, 1/4" NPT x 1/4" Gauge Tube	1	
41	TA800902	Hose Clamp M-6, 7/8" (Stainless Steel)	16	
42	TA816013	Manifold Plug 2" Full Port Flange	1	
43	TA805408	Manifold Fitting	4	
44	TA811944	Gasket 1 5/8" EPDM	3	
45	TA814710	Reducer Coupling, 1" x 3/4"	1	
46	TA814960	90° Elbow, 3/4"-14 NPTF Male x 1/2" Hose Shank	1	
47	TA815016	Hose Barb, 2" Flange x 2" Hose Shank	1	
48	TA815021	90° Elbow, 2" Flange x 2" Hose Barb	1	
49	TA815025	2" Flange Worm Screw Clamp	3	
50	TA855650	Strainer, 2" Flanged Line	1	

1200 GALLON LIQUID FERTILIZER CART — Parts

Strainer Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

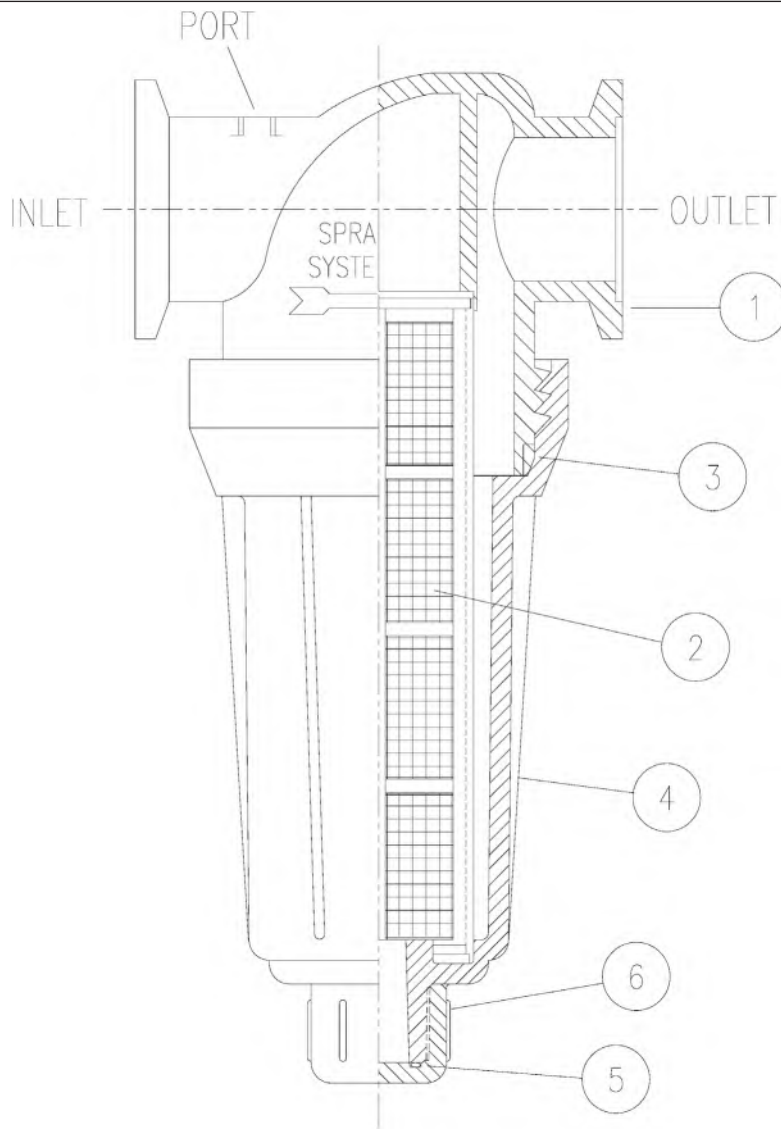


ITEM	DESCRIPTION	PART NO.		QTY.	NOTES
			With Inlet Port		
	Strainer Complete	TA855650	402255	1	2" Flange
1	Strainer Head	TA868841	403257	1	
2	Screen, 50 Mesh (Gentain Blue)	TA869070	>	1	
3	Gasket, EPDM	TA867486	>	1	
4	Bowl, Polypropylene	TA868842	>	1	
5	O-Ring, Viton	TA868843	>	1	
6	Cap, Polypropylene	TA868844	>	1	

1200 GALLON LIQUID FERTILIZER CART — Parts

Air Vent Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

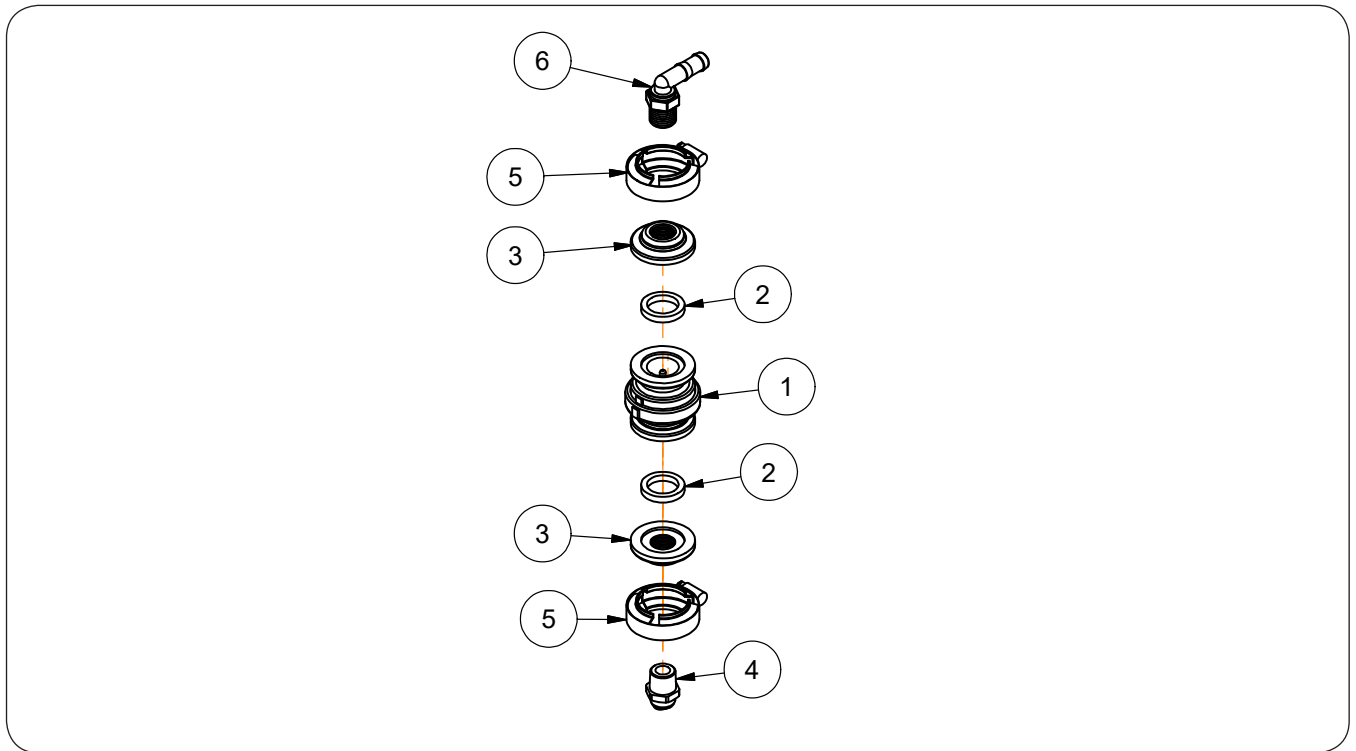


ITEM	PART NUMBER	DESCRIPTION	QTY	NOTES
1	9007339	1" Flange Check Valve	1	
2	TA815029	Gasket/Seal, 1 3/8" x 1" x 1/4"	2	
3	TA816023	Plug, 1" Flange x 1/2" FPT	2	
4	9007340	Plastic Push-In Fitting, 3/8" Push To Connect x 1/2" MNPT	1	
5	TA815026	1" Flange Clamp/Worm Screw Clamp (Stainless Steel)	2	
6	TA814956	90° Elbow, 1/2"-14NPTF Male x 1/2" Hose Shank	1	

1200 GALLON LIQUID FERTILIZER CART — Parts

Hydraulically Driven Centrifugal PWM Pump - ACE 750

Please visit www.unverferth.com/parts/ for the most current parts listing.

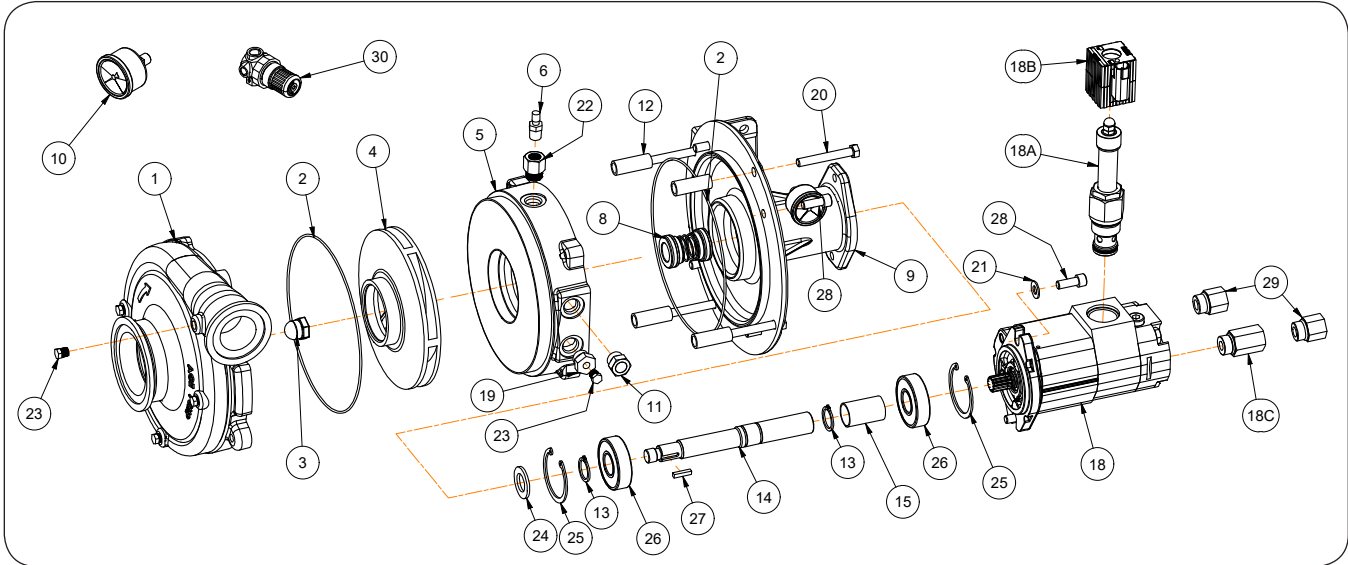

1200 GALLON LIQUID FERTILIZER CART — Parts

Hydraulically Driven Centrifugal PWM Pump - ACE 750


Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	DESCRIPTION	PART NO.	QTY.	NOTES
	PWM Pump, 750	9008132	1	
	750 Pump Seal Repair Kit	9005519	-	Includes Items 2, 8, and 16
1	Volute, 300 x 220 Flange	9005502	1	
2	O-Ring	9005503	2	
3	Acorn Nut, 5/8-11 SS	9005504	1	
4	Impeller	9005505	1	
5	Seal Plate	9005506	1	
6	Air Valve, Clamp-In (for Tubeless Tire)	9005507	1	
7	Plug	9005508	1	Not Shown
8	Dual Seal Assembly	9005509	1	
9	Pump Mounting Frame	9005510	1	
10	Pump Pressure Gauge	9005511	1	
11	Oil Level Sight Gauge	9005512	1	
12	Spacer Tube	9005513	4	
13	Snap Ring	9005514	2	
14	Pump Shaft	9005515	1	
15	Shaft Spacer	9005516	1	
16	Royal Purple Barrier Fluid (Quart)	9005518	1.32	Qty. in quarts
17	Pump Repair Kit, ACE 750	9005519	1	Not Shown
18	PWM Hydraulic Motor Assembly	9008148	1	
18A	Valve	9008228	1	
18B	Coil	9008229	1	
18C	Reverse Check Assembly	9007530	1	
19	Adapter Plug, 3/4 x 1/8	9008257	1	
20	Capscrew, 3/8-16UNC x 2 3/4	9390-062	4	Grade 5
21	Flat Washer, 3/8	900902-037	3	
22	Adapter, 3/4 x 1/4	99928	1	
23	ACE Pipe Plug	TA826325	5	
24	Slinger, 7/8" Shaft	TA831022	1	
25	Snap Ring	TA831024	2	
26	Bearing	TA831026	2	
27	Key, .188 x .188 x .875	TA831030	1	
28	Capscrew, 3/8"NC x 1	TA831034	6	
29	Reducer 7/8-14 O-Ring Male x 3/4-16 O-Ring Female	98801	2	
30	Air Regulator	9006050	1	

1200 GALLON LIQUID FERTILIZER CART — Parts

Hydraulically Driven Centrifugal PWM Pump - ACE 755

Please visit www.unverferth.com/parts/ for the most current parts listing.

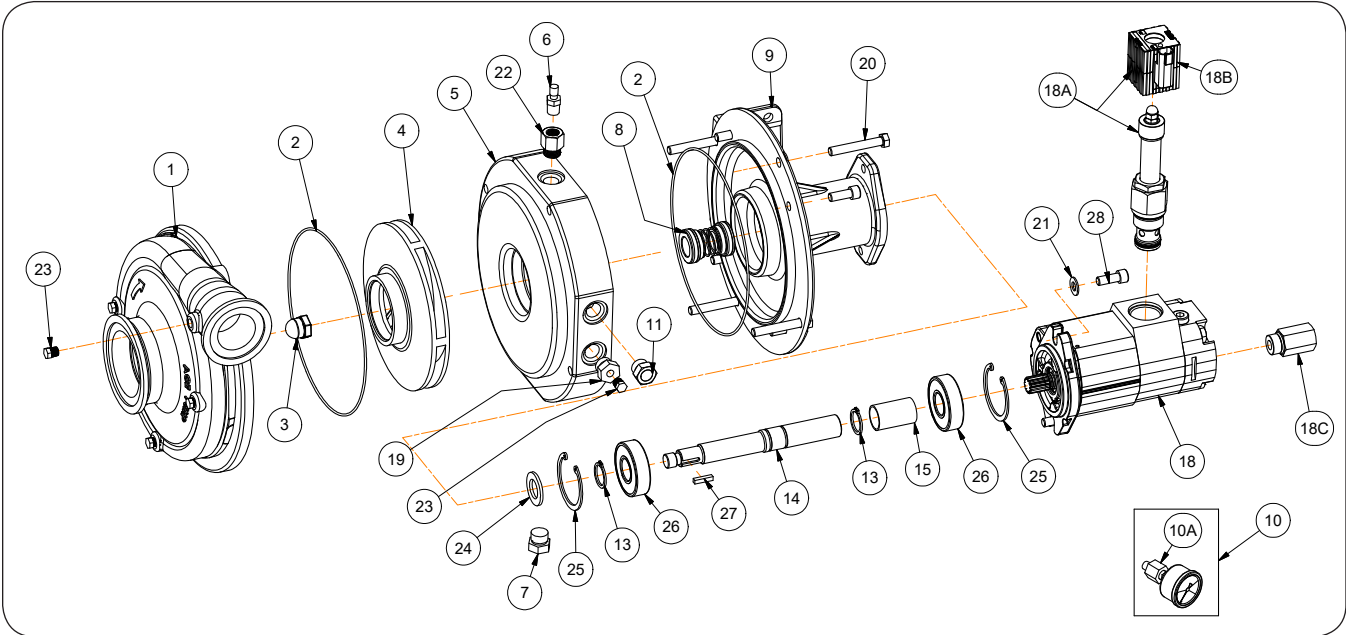

1200 GALLON LIQUID FERTILIZER CART — Parts

Hydraulically Driven Centrifugal PWM Pump - ACE 755

Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	DESCRIPTION	PART NO.	QTY.	NOTES
	PWM Pump, 755 (Stainless Steel)	9008739	1	
	755 Pump Seal Repair Kit	9005519	-	Includes Items 2, 8, and 16
1	Volute, 300 x 220 Flange	9008855	1	
2	O-Ring	9005503	2	
3	Acorn Nut, 5/8-11 SS	9005504	1	
4	Impeller	9008856	1	
5	Seal Plate	9008853	1	
6	Air Valve, Clamp-In (for Tubeless Tire)	9005507	1	
7	Plug	9005508	1	
8	Dual Seal Assembly	9005509	1	
9	Pump Mounting Frame	9005510	1	
10	Pump Pressure Gauge	9008866	1	
10A	Adapter, 1/4" NPT to 1/8" NPT	9008860	1	
11	Oil Level Sight Gauge	9005512	1	
13	Snap Ring	9005514	2	
14	Pump Shaft	9005515	1	
15	Shaft Spacer	9005516	1	
16	Royal Purple Barrier Fluid (Quart)	9005518	1.32	Qty. in quarts Not Shown
17	Pump Repair Kit, ACE 750	9005519	1	Not Shown
18	PWM Hydraulic Motor Assembly	9008148	1	Includes Items 18A-18C
18A	Valve	9008228	1	
18B	Coil	9008229	1	
18C	Reverse Check Assembly	9007530	1	
19	Adapter Plug, 3/4 x 1/8	9008257	1	
20	Capscrew, 3/8"-16UNC x 2 1/2"	900900-061	4	Grade 5
21	Flat Washer, 3/8"	900902-037	3	
22	Adapter, 3/4" x 1/4"	99928	1	
23	ACE Pipe Plug	TA826325	5	
24	Slinger, 7/8" Shaft	TA831022	1	
25	Snap Ring	TA831024	2	
26	Bearing	TA831026	2	
27	Key, .188" x .188" x .875"	TA831030	1	
28	Capscrew, 3/8"-16UNC x 1" Socket Head	TA831034	6	

1200 GALLON LIQUID FERTILIZER CART — Parts

Tank Volume Indicator Components


Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	PART NUMBER	DESCRIPTION	QTY	NOTES
1	42932B	Volume Indicator Assembly, Rear =Black=	1	
2	9004817	Decal, 1200 Volume Indicator	1	
3	42931B	Volume Indicator Plate =Black=	1	
4	412450	Sight Gauge Tube Assembly	1	
5	9004547	Adapter, 1 1/2" SCH40 Female x 1 1/2" NPT Female	2	
6	TA814661	Reducer Bushing, 1 1/2"-11 1/2 NPTF Male x 1"-11 1/2 NPTF Female	2	
7	9005558	Tank Breather Vent	1	
8	9006477	Adapter, 1" Male Pipe to Quick Connect	1	
9	TA854886	90° Hose Barb x Quick Connect Kit	1	
10	9003683	Indicator Ball, 1 1/4" =Red=	1	
11	94037	Cable Tie, 15 1/2"	3	
12	45171@	Volume Indicator Assembly, Front =Black=	1	
13	9004817	Decal, 1200 Volume Indicator	1	
14	412450	Sight Gauge Tube Assembly	1	
15	9004547	Adapter, 1 1/2" SCH40 Female x 1 1/2" NPT Female	2	
16	TA814661	Reducer Bushing, 1 1/2"-11 1/2 NPTF Male x 1"-11 1/2 NPTF Female	2	
17	9005558	Tank Breather Vent	1	
18	9006477	Adapter, 1" Male Pipe to Quick Connect	1	
19	TA854886	90° Hose Barb x Quick Connect Kit	1	
20	9003683	Indicator Ball, 1 1/4" =Red=	1	
21	45172@	Volume Indicator Weldment =Black=	1	
22	94037	Cable Tie, 15 1/2"	4	
23	45573	Hose, 1" Dia. x 132" EPDM (200 PSI)	1	
24	45578	Hose, 1" Dia. x 40" EPDM (200 PSI)	1	
25	9004454	U-Bolt, 1/4"-20UNC x 3 3/4" , 3 5/16" C/C	2	
26	9007389	Tee, 1" Hose Barb x 1" Hose Barb x 1" MPT	1	
27	91263	Nut/Large Flange 3/8-16UNC	14	
28	9388-051	Carriage Bolt, 3/8"-16UNC x 1" G5	4	
29	97189	Hex Nut/Large Flange 1/4-20UNC	21	
30	97420	Flange Screw 1/4-20UNC x 3/4 (Grade 5)	11	
31	97840	Grommet, 1/4W x 1 1/2" Dia. Groove, 1 1/4" ID	4	
32	TA800912	Hose Clamp, SAE #16	7	
33	TA805412	Tank Fitting, 1" Double Threaded	1	

1200 GALLON LIQUID FERTILIZER CART — Parts

Clean Water Tank Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

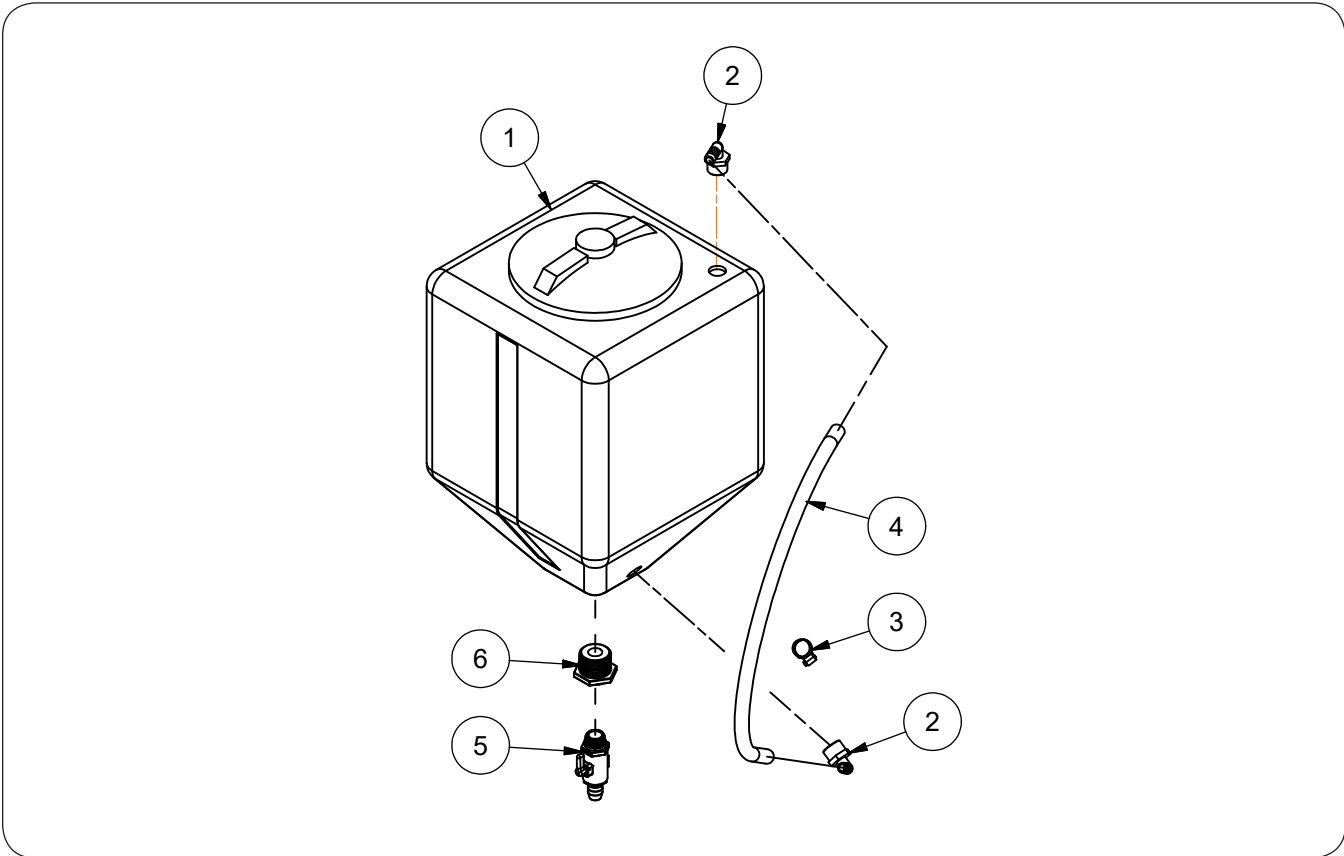


ITEM	PART NUMBER	DESCRIPTION	QTY	NOTES
	410942	10 Gallon Clean Water Tank Assembly (Gray)	-	Includes Items 1-6
1	9007237	10 Gallon Tank (Gray)	1	
2	TA808275	Poly 90° Elbow Hose Barb 3/4" MPT x 1/2"	2	
3	TA800906	Hose Clamp SC-8 (Stainless Steel)	1	
4	TA806554	1/2" Clear Vinyl Tubing	1	
5	9007699	Poly Valve, 3/4" MPT x 3/4" HB	1	
6	TA814657	Reducer Bushing, 1 1/4-11 1/2 NPTF Male x 3/4-14 NPTF Female	1	

1200 GALLON LIQUID FERTILIZER CART — Parts

Flow Ball Valves

Please visit www.unverferth.com/parts/ for the most current parts listing.

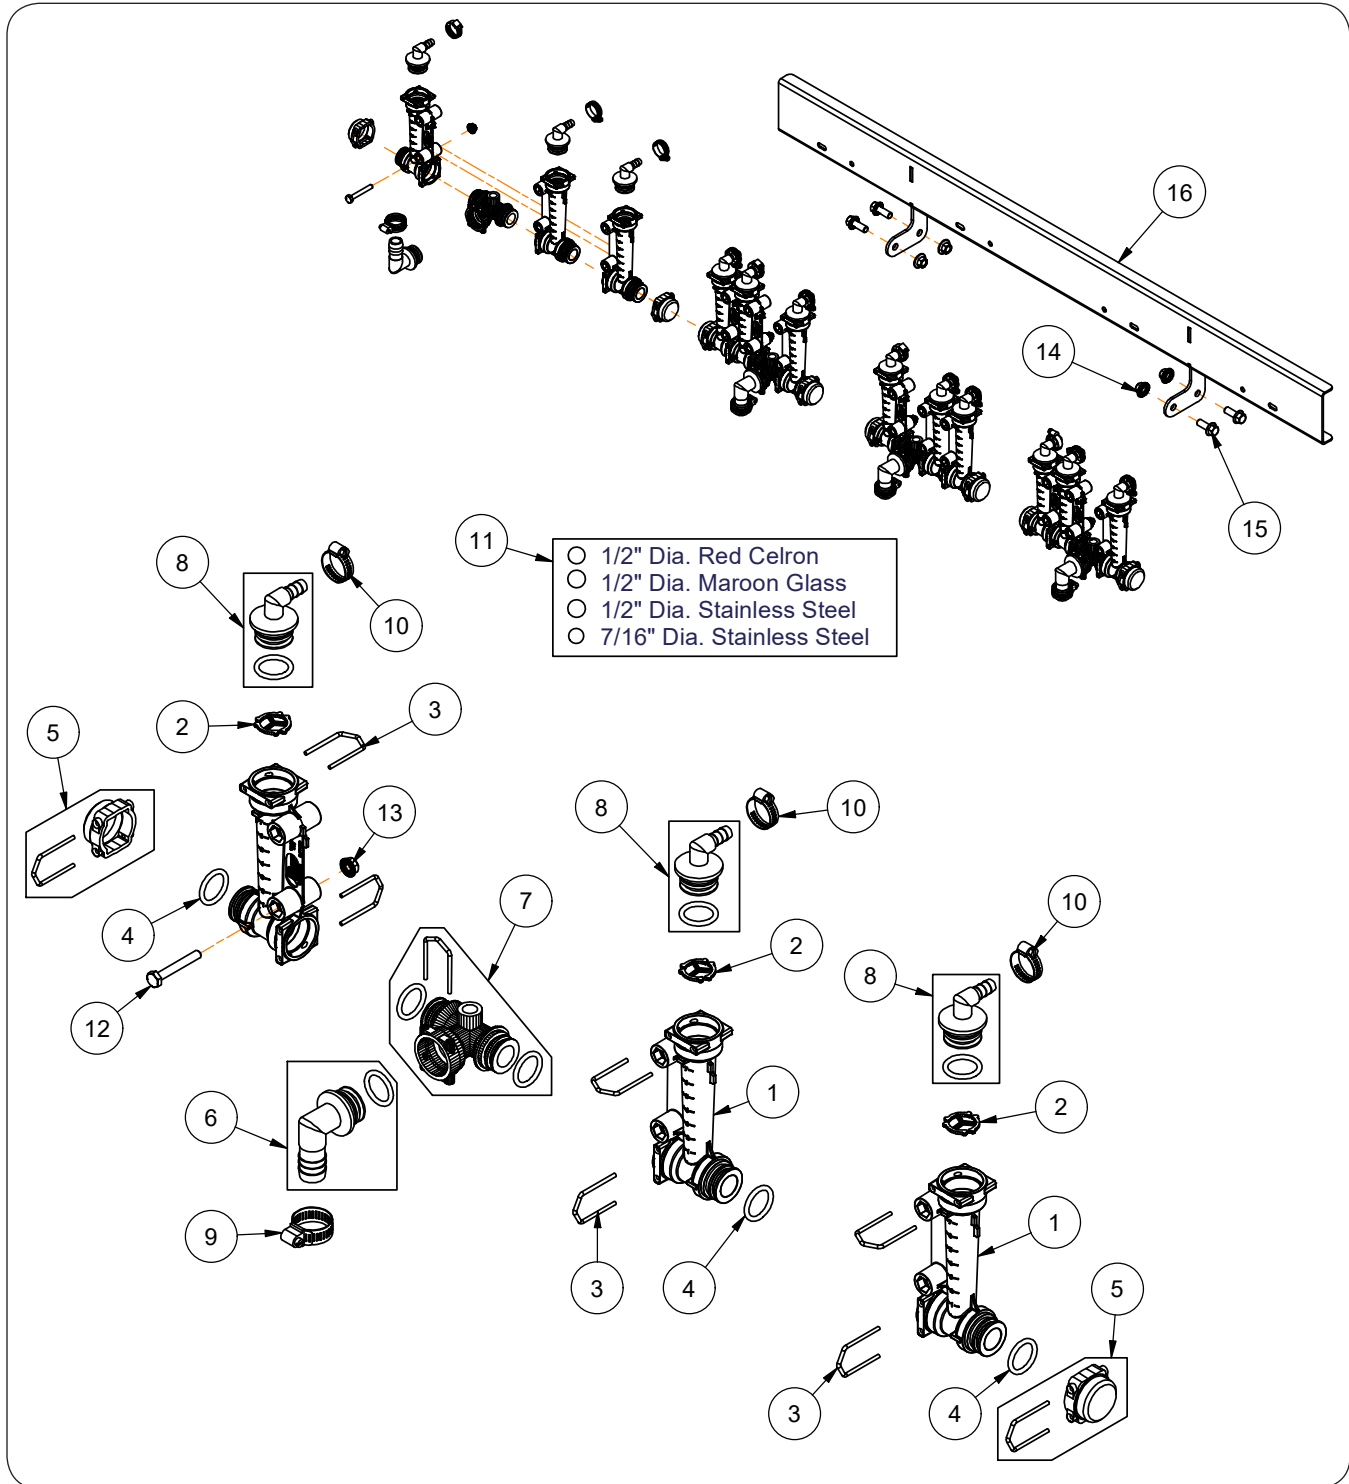

1200 GALLON LIQUID FERTILIZER CART — Parts

Flow Ball Valves


Please visit www.unverferth.com/parts/ for the most current parts listing.

ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	9008659	Flow Indicator Body	13	
2	9007704	Ball Retainer Indicator	12	
3	9007705	Locking Clip	24	
4	9007706	O-Ring	12	
5	9007707	Flow Cap Indicator with Locking Clip	8	
	9007705	Locking Clip	-	
6	9007713	Elbow Fitting Indicator, 3/4" with O-Ring	4	
	9007706	O-Ring	-	
7	9007778	Tee Fitting Indicator, 3/4" with O-Ring & Locking Clip	4	
	9007706	O-Ring	-	
	9007705	Locking Clip	-	
8	9007710	Elbow Fitting Indicator, 3/8" with O-Ring	12	
	9007706	O-Ring	-	
9	TA800910	Hose Clamp, 1/2" to 1 1/4" (Stainless Steel)	4	
10	TA800902	Hose Clamp, 7/8" (Stainless Steel) M-6	12	
11	9007708	Indicator Flow Balls Assembly (Includes all 4 Balls)	12	
	9007781	Indicator Flow Ball 1/2" Dia. =Red Celron=	-	
	9007780	Indicator Flow Ball 1/2" Dia. =Maroon Glass=	-	
	9007779	Indicator Flow Ball 1/2" Dia. =Stainless Steel=	-	
	9007883	Indicator Flow Ball 7/16" =Stainless Steel=	-	
12	900900-008	Capscrew, 1/4"-20UNC x 1 3/4" (Stainless Steel)	8	
13	9004720	Flange Nut, 1/4"-20UNC (Stainless Steel)	8	
14	91263	Large Flange Nut, 3/8"-16UNC	8	
15	91262	Flange Screw, 3/8"-16UNC x 1" G5	8	
16	45344SM	Flow Monitor Panel Weldment =Silver Mist=	1	

1200 GALLON LIQUID FERTILIZER CART — Parts

Electrical Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

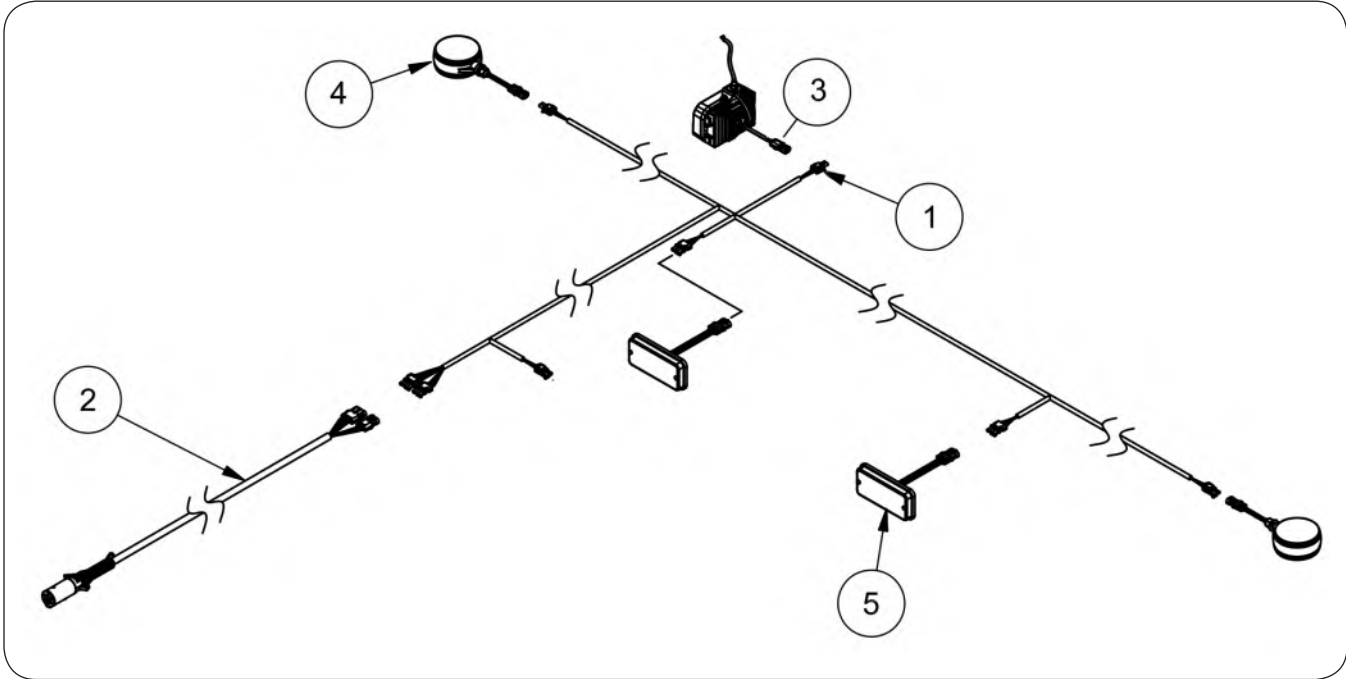


ITEM	PART NO.	DESCRIPTION	QTY	NOTES
1	44999	Light, Wiring Harness, 418"	1	
2	45000	Main, Wiring Harness, 480"	1	
3	9500801	Work Light	1	
4	9005142	AMBER Lamp, LED Double Face	2	
5	9006282	RED Light, Tail/Turn	2	

1200 GALLON LIQUID FERTILIZER CART — Parts

Rate Control Module (RCM) ISO Rate Control Components

Please visit www.unverferth.com/parts/ for the most current parts listing.

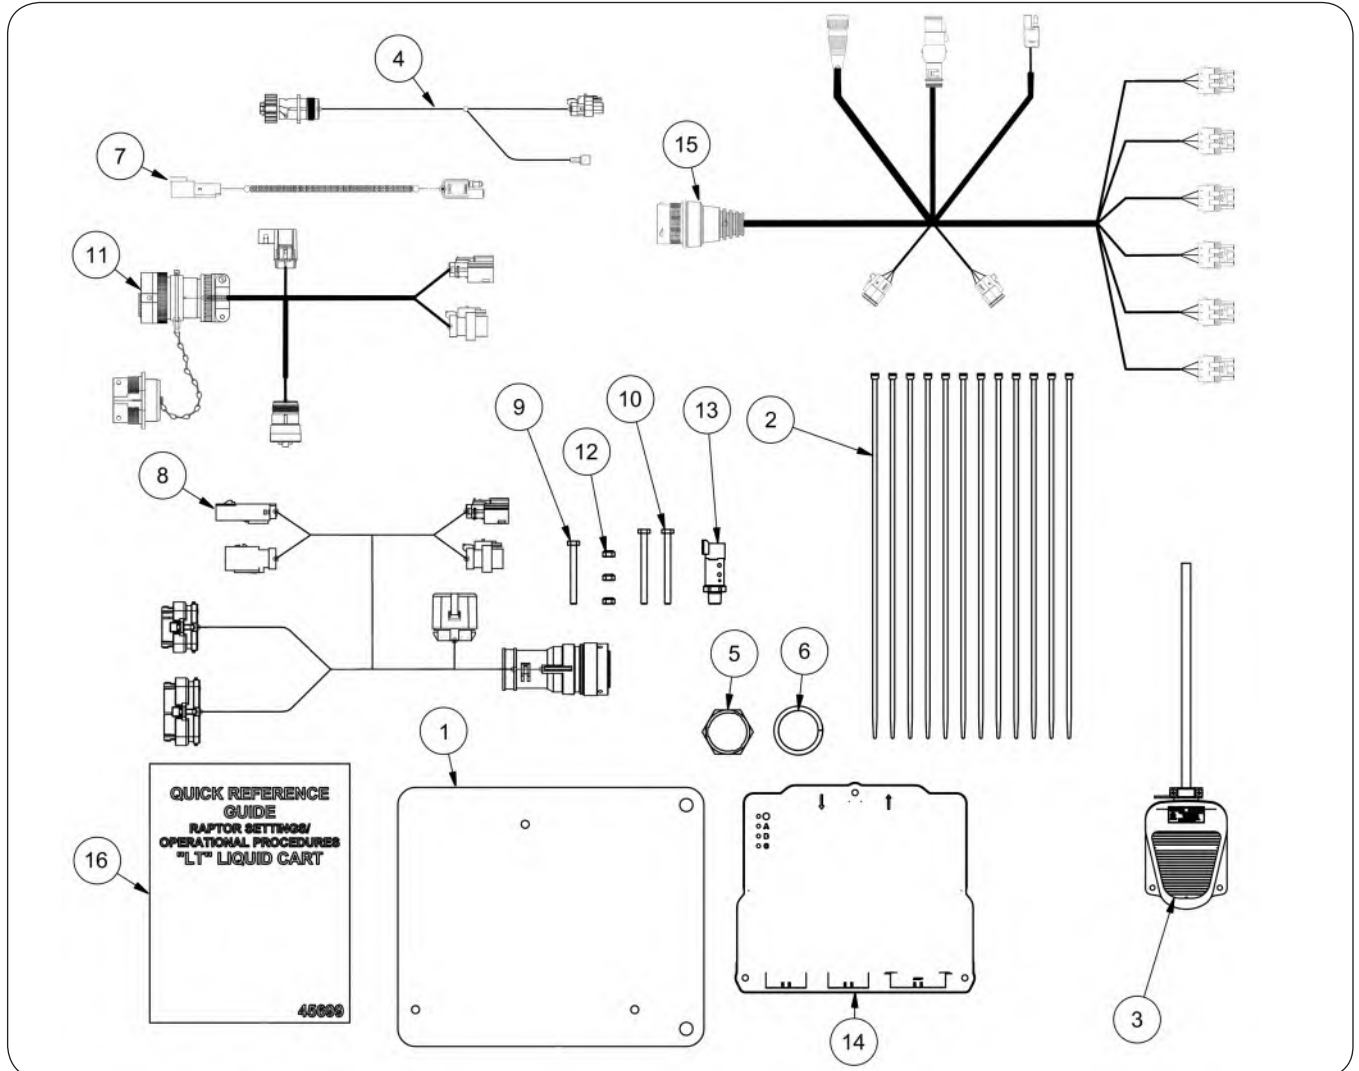

ITEM	PART NUMBER	DESCRIPTION	QTY.	NOTES
1	45672B	RCM Mounting Plate =Black=	1	
2	94037	Cable Tie, 15 1/2"	12	
3	9005916	Foot Switch ISO Note w/Harness	1	
4	9503390	Switch Extension Cable 23 FT	1	
5	9006885	Panel Nut (Size 24)	1	
6	9006886	Lock Washer Connector (Size 24)	1	
7	9007524	Extension Harness	1	
8	9008095	Raven Control Module Cable	1	
9	9390-011	Capscrew 1/4"-20UNC x 2 1/2" G5	1	
10	9390-013	Capscrew 1/4"-20UNC x 3" G5	2	
11	9503926	GEN 1 ISO TO IBIC Hitch - 36 Ft. Cable	1	
12	9936	Lock Nut, 1/4"-20UNC	3	
13	9503299	Pressure Transducer	1	
14	9503386	Rate Control Module	1	
15	9503472	Wire Harness 6 Ft. Flow Cable 6 Section	1	
16	45699	Raptor Quick Reference Guide	1	



Unverferth[®]
Manufacturing Company, Inc.

www.unverferth.com